

MiCOM P40 Agile P841B

Technical Manual

Dual-CB Autoreclose IED

Hardware Version: M

Software Version: 82

Publication Reference: P841B-TM-EN-1

Contents

Chapter 1	Introduction	1
1	Chapter Overview	3
2	Foreword	4
2.1	Target Audience	4
2.2	Typographical Conventions	4
2.3	Nomenclature	5
2.4	Compliance	5
3	Product Scope	6
3.1	Product Versions	6
3.2	Ordering Options	7
4	Features and Functions	9
4.1	Protection Functions	9
4.2	Control Functions	9
4.3	Measurement Functions	10
4.4	Communication Functions	10
5	Logic Diagrams	11
6	Functional Overview	13
Chapter 2	Safety Information	15
1	Chapter Overview	17
2	Health and Safety	18
3	Symbols	19
4	Installation, Commissioning and Servicing	20
4.1	Lifting Hazards	20
4.2	Electrical Hazards	20
4.3	UL/CSA/CUL Requirements	21
4.4	Fusing Requirements	21
4.5	Equipment Connections	22
4.6	Protection Class 1 Equipment Requirements	23
4.7	Pre-energisation Checklist	23
4.8	Peripheral Circuitry	24
4.9	Upgrading/Servicing	24
5	Decommissioning and Disposal	25
6	Standards Compliance	26
6.1	EMC Compliance: 2004/108/EC	26
6.2	Product Safety: 2006/95/EC	26
6.3	R&TTE Compliance	26
6.4	UL/CUL Compliance	26
6.5	ATEX Compliance	26
Chapter 3	Hardware Design	29
1	Chapter Overview	31
2	Hardware Architecture	32
3	Mechanical Implementation	33
3.1	Housing Variants	33
3.2	List of Boards	34
4	Front Panel	35
4.1	Front Panel	35
4.1.1	Top compartment with hinged cover	35
4.1.2	Keypad	36
4.1.3	Front Serial Port (SK1)	36

4.1.4	Front Parallel Port (SK2)	37
4.1.5	Fixed Function LEDs	37
4.1.6	Function Keys	37
4.1.7	Programable LEDs	38
5	Rear Panel	39
6	Boards and Modules	41
6.1	PCBs	41
6.2	Subassemblies	41
6.3	Main Processor Board	42
6.4	Power Supply Board	43
6.4.1	Watchdog	45
6.4.2	Rear Serial Port	46
6.5	Input Module - 1 Transformer Board	47
6.5.1	Input Module Circuit Description	48
6.5.2	Transformer Board	49
6.5.3	Input Board	50
6.6	Standard Output Relay Board	51
6.7	IRIG-B Board	52
6.8	Fibre Optic Board	53
6.9	Rear Communication Board	54
6.10	Ethernet Board	55
6.11	Redundant Ethernet Board	56

Chapter 4 Configuration 59

1	Chapter Overview	61
2	Settings Application Software	62
3	Using the HMI Panel	63
3.1	Navigating the HMI Panel	64
3.2	Getting Started	64
3.3	Default Display	65
3.4	Default Display Navigation	66
3.5	Password Entry	67
3.6	Processing Alarms and Records	68
3.7	Menu Structure	68
3.8	Changing the Settings	69
3.9	Direct Access (The Hotkey menu)	70
3.9.1	Setting Group Selection	70
3.9.2	Control Inputs	71
3.9.3	Circuit Breaker Control	71
3.10	Function Keys	72
4	Line Parameters	73
4.1	Tripping Mode	73
4.2	Residual Compensation	73
4.3	Mutual Compensation	74
5	Date and Time Configuration	75
5.1	Using an SNTP Signal	75
5.2	Using an IRIG-B Signal	75
5.3	Using an IEEE 1588 PTP Signal	75
5.4	Without a Timing Source Signal	76
5.5	Time Zone Compensation	76
5.6	Daylight Saving Time Compensation	77
6	Settings Group Selection	78

Chapter 5 Autoreclose 79

1	Chapter Overview	81
----------	-------------------------	-----------

2	Introduction to Autoreclose	82
3	Autoreclose Implementation	83
3.1	Autoreclose Logic Inputs from External Sources	84
3.1.1	Circuit Breaker Healthy Input	84
3.1.2	Inhibit Autoreclose Input	84
3.1.3	Block Autoreclose Input	84
3.1.4	Reset Lockout Input	85
3.1.5	Pole Discrepancy Input	85
3.1.6	External Trip Indication	85
3.2	Autoreclose Logic Inputs	85
3.2.1	Trip Initiation Signals	85
3.2.2	Circuit Breaker Status Inputs	85
3.2.3	System Check Signals	85
3.3	Autoreclose Logic Outputs	85
3.4	Autoreclose Operating Sequence	86
3.4.1	AR Timing Sequence - Transient Fault	86
3.4.2	AR Timing Sequence - Evolving/Permanent Fault	86
3.4.3	AR Timing Sequence - Evolving/Permanent Fault Single-phase	87
3.4.4	AR Timing Sequence - Transient Fault Dual CB	87
3.4.5	AR Timing Sequence - Evolving/Permanent Fault Dual CB	88
3.4.6	AR Timing Sequence - Persistent Fault	89
4	Autoreclose System Map	91
4.1	Autoreclose System Map Diagrams	93
4.2	Autoreclose Internal Signals	102
4.3	Autoreclose DDB Signals	107
5	Logic Modules	119
5.1	Circuit Breaker Status Monitor	119
5.1.1	CB State Monitor	120
5.2	Circuit Breaker Open Logic	121
5.2.1	Circuit Breaker Open Logic Diagram	121
5.3	Circuit Breaker in Service Logic	121
5.3.1	Circuit Breaker in Service Logic Diagram	122
5.4	Autoreclose Enable Logic	122
5.4.1	Autoreclose Enable Logic Diagram	122
5.5	Autoreclose Leader/Follower	123
5.5.1	Leader/Follower CB Selection Logic Diagram	123
5.5.2	Leader Follower Logic Diagram	124
5.6	Autoreclose Modes	125
5.6.1	Single-Phase and Three-Phase Autoreclose	125
5.6.2	Autoreclose Modes Enable Logic Diagram	126
5.7	AR Force Three-Phase Trip Logic	127
5.7.1	Force Three-Phase Trip Logic Diagram	128
5.8	Autoreclose Initiation Logic	128
5.8.1	Autoreclose Initiation Logic Diagram	130
5.8.2	Autoreclose Trip Test Logic Diagram	130
5.8.3	External Trip Logic Diagram for CB1	131
5.8.4	External Trip Logic Diagram for CB2	132
5.8.5	Protection Reoperation and Evolving Fault Logic Diagram	133
5.8.6	Fault Memory Logic Diagram	133
5.9	Autoreclose In Progress	133
5.9.1	Autoreclose In Progress Logic Diagram for CB1	134
5.9.2	Autoreclose In Progress Logic Diagram for CB2	135
5.10	Sequence Counter	135
5.10.1	Autoreclose Sequence Counter Logic Diagram	136
5.11	Autoreclose Cycle Selection	136
5.11.1	Single Phase Autoreclose Cycle Selection Logic Diagram	137
5.11.2	3-phase Autoreclose Cycle Selection	138
5.12	Dead Time Control	138

5.12.1	Dead Time Start Enable Logic Diagram	140
5.12.2	Single-phase Leader Dead Time Logic Diagram	141
5.12.3	3-phase Leader Dead Time Logic Diagram	142
5.12.4	Follower Enable Logic Diagram	143
5.12.5	Single-phase Follower Timing Logic Diagram	144
5.12.6	Three-phase Follower Timing Logic Diagram	145
5.13	Circuit Breaker Autoclose	145
5.13.1	Circuit Breaker Autoclose Logic Diagram	146
5.14	Reclaim Time	147
5.14.1	Prepare Reclaim Initiation Logic Diagram	147
5.14.2	Reclaim Time Logic Diagram	148
5.14.3	Successful Autoreclose Signals Logic Diagram	149
5.14.4	Autoreclose Reset Successful Indication Logic Diagram	150
5.15	CB Healthy and System Check Timers	150
5.15.1	CB Healthy and System Check Timers Logic Diagram	152
5.16	Autoreclose Shot Counters	152
5.16.1	Autoreclose Shot Counters Logic Diagram	154
5.17	Circuit Breaker Control	155
5.17.1	CB Control Logic Diagram	155
5.18	Circuit Breaker Trip Time Monitoring	156
5.18.1	CB Trip Time Monitoring Logic Diagram	158
5.19	Autoreclose Lockout	159
5.19.1	CB Lockout Logic Diagram	160
5.20	Reset Circuit Breaker Lockout	162
5.20.1	Reset CB Lockout Logic Diagram	163
5.21	Pole Discrepancy	163
5.21.1	Pole Discrepancy Logic Diagram	164
5.22	Circuit Breaker Trip Conversion	164
5.22.1	CB Trip Conversion Logic Diagram	165
5.23	Monitor Checks for CB Closure	165
5.23.1	Voltage Monitor for CB Closure	166
5.23.2	Check Synchronisation Monitor for CB Closure	167
5.24	Synchronisation Checks for CB Closure	169
5.24.1	Three-phase Autoreclose Leader Check Logic Diagram	170
5.24.2	Three-phase Autoreclose Follower Check Logic Diagram	172
5.24.3	CB Manual Close System Check Logic Diagram	174
6	Setting Guidelines	175
6.1	De-ionising Time Guidance	175
6.2	Dead Timer Setting Guidelines	175
6.2.1	Example Dead Time Calculation	175
6.3	Reclaim Time Setting Guidelines	176
6.4	Autoreclose Shot Counters	176

Chapter 6 CB Fail Protection **179**

1	Chapter Overview	181
2	Circuit Breaker Fail Protection	182
3	Circuit Breaker Fail Implementation	183
3.1	Circuit Breaker Fail Timers	183
3.2	Zero Crossing Detection	183
4	Circuit Breaker Fail Logic	185
4.1	Circuit Breaker Fail Logic - Part 1	185
4.2	Circuit Breaker Fail Logic - Part 2	186
4.3	Circuit Breaker Fail Logic - Part 3	187
4.4	Circuit Breaker Fail Logic - Part 4	188
5	Application Notes	189
5.1	Reset Mechanisms for CB Fail Timers	189
5.2	Setting Guidelines (CB fail Timer)	189

5.3	Setting Guidelines (Undercurrent)	190
-----	-----------------------------------	-----

Chapter 7 Current Protection Functions 191

1	Chapter Overview	193
2	Phase Fault Overcurrent Protection	194
2.1	POC Implementation	194
2.2	Directional Element	194
2.3	POC Logic	196
3	Negative Sequence Overcurrent Protection	197
3.1	Negative Sequence Overcurrent Protection Implementation	197
3.2	Directional Element	197
3.3	NPSOC Logic	198
3.4	Application Notes	198
3.4.1	Setting Guidelines (Current Threshold)	198
3.4.2	Setting Guidelines (Time Delay)	198
3.4.3	Setting Guidelines (Directional element)	199
4	Earth Fault Protection	200
4.1	Earth Fault Protection Implementation	200
4.2	IDG Curve	200
4.3	Directional Element	201
4.3.1	Residual Voltage Polarisation	201
4.3.2	Negative Sequence Polarisation	202
4.4	Earth Fault Protection Logic	203
4.5	Application Notes	203
4.5.1	Residual Voltage Polarisation Setting Guidelines	203
4.5.2	Setting Guidelines (Directional Element)	204
5	Sensitive Earth Fault Protection	205
5.1	SEF Protection Implementation	205
5.2	EPATR B Curve	205
5.3	Sensitive Earth Fault Protection Logic	207
5.4	Application Notes	207
5.4.1	Insulated Systems	207
5.4.2	Setting Guidelines (Insulated Systems)	209
6	High Impedance REF	211
6.1	High Impedance REF Principle	211
7	Thermal Overload Protection	213
7.1	Single Time Constant Characteristic	213
7.2	Dual Time Constant Characteristic	213
7.3	Thermal Overload Protection Implementation	214
7.4	Thermal Overload Protection Logic	214
7.5	Application Notes	214
7.5.1	Setting Guidelines for Dual Time Constant Characteristic	214
7.5.2	Setting Guidelines for Single Time Constant Characteristic	216
8	Broken Conductor Protection	218
8.1	Broken Conductor Protection Implementation	218
8.2	Broken Conductor Protection Logic	218
8.3	Application Notes	219
8.3.1	Setting Guidelines	219

Chapter 8 Voltage Protection Functions 221

1	Chapter Overview	223
2	Undervoltage Protection	224
2.1	Undervoltage Protection Implementation	224
2.2	Undervoltage Protection Logic	225
2.3	Application Notes	226

2.3.1	Undervoltage Setting Guidelines	226
3	Overvoltage Protection	227
3.1	Overvoltage Protection Implementation	227
3.2	Overvoltage Protection Logic	228
3.3	Application Notes	229
3.3.1	Overvoltage Setting Guidelines	229
4	Compensated Overvoltage	230
5	Residual Overvoltage Protection	231
5.1	Residual Overvoltage Protection Implementation	231
5.2	Residual Overvoltage Logic	232
5.3	Application Notes	232
5.3.1	Calculation for Solidly Earthed Systems	232
5.3.2	Calculation for Impedance Earthed Systems	233
5.3.3	Setting Guidelines	234

Chapter 9 Frequency Protection Functions 235

1	Chapter Overview	237
2	Frequency Protection	238
2.1	Underfrequency Protection	238
2.1.1	Underfrequency Protection Implementation	238
2.1.2	Underfrequency Protection logic	239
2.1.3	Application Notes	239
2.2	Overfrequency Protection	239
2.2.1	Overfrequency Protection Implementation	239
2.2.2	Overfrequency Protection logic	240
2.2.3	Application Notes	240
3	Independent R.O.C.O.F Protection	241
3.1	Independent R.O.C.O.F Protection Implementation	241
3.2	Independent R.O.C.O.F Protection Logic	241

Chapter 10 Monitoring and Control 243

1	Chapter Overview	245
2	Event Records	246
2.1	Event Types	246
2.1.1	Opto-input Events	247
2.1.2	Contact Events	247
2.1.3	Alarm Events	247
2.1.4	Fault Record Events	248
2.1.5	Maintenance Events	248
2.1.6	Protection Events	249
2.1.7	Security Events	249
2.1.8	Platform Events	249
3	Disturbance Recorder	250
4	Measurements	251
4.1	Measured Quantities	251
4.2	Measurement Setup	251
4.3	Fault Locator	251
4.4	Opto-input Time Stamping	251
5	CB Condition Monitoring	252
5.1	Broken Current Accumulator	253
5.2	CB Trip Counter	254
5.3	CB Operating Time Accumulator	255
5.4	Excessive Fault Frequency Counter	256
5.5	Reset Lockout Alarm	257
5.6	CB Condition Monitoring Logic	258
5.7	Reset Circuit Breaker Lockout	259

5.7.1	Reset CB Lockout Logic Diagram	261
5.8	Application Notes	262
5.8.1	Setting the Thresholds for the Total Broken Current	262
5.8.2	Setting the thresholds for the Number of Operations	262
5.8.3	Setting the thresholds for the Operating Time	262
5.8.4	Setting the Thresholds for Excessive Fault Frequency	262
6	CB State Monitoring	263
6.1	CB State Monitor	264
7	Circuit Breaker Control	265
7.1	CB Control using the IED Menu	265
7.2	CB Control using the Hotkeys	266
7.3	CB Control using the Function Keys	267
7.4	CB Control using the Opto-inputs	267
7.5	Remote CB Control	267
7.6	CB Healthy Check	268
7.7	Synchronisation Check	268
7.8	CB Control AR Implications	268
7.9	CB Control Logic Diagram	269
8	Pole Dead Function	271
8.1	Pole Dead Logic	271
9	System Checks	273
9.1	System Checks Implementation	273
9.1.1	VT Connections	273
9.1.2	Voltage Monitoring	274
9.1.3	Check Synchronisation	274
9.1.4	Check Synchronisation Vector Diagram	274
9.2	Voltage Monitor for CB Closure	276
9.3	Check Synchronisation Monitor for CB Closure	277
9.4	System Check PSL	279
9.5	Application Notes	279
9.5.1	Slip Control	279
9.5.2	Use of Check Sync 2 and System Split	280
9.5.3	Predictive Closure of Circuit Breakers	280
9.5.4	Voltage and Phase Angle Correction	280

Chapter 11 Supervision 283

1	Chapter Overview	285
2	Voltage Transformer Supervision	286
2.1	Loss of One or Two Phase Voltages	286
2.2	Loss of all Three Phase Voltages	286
2.3	Absence of all Three Phase Voltages on Line Energisation	286
2.4	VTS Implementation	287
2.5	VTS Logic	288
3	Current Transformer Supervision	290
3.1	CTS Implementation	290
3.2	Standard CTS Logic	291
3.3	CTS Blocking	291
3.4	Application Notes	291
3.4.1	Setting Guidelines	291
4	Trip Circuit Supervision	293
4.1	Trip Circuit Supervision Scheme 1	293
4.1.1	Resistor Values	293
4.1.2	PSL for TCS Scheme 1	294
4.2	Trip Circuit Supervision Scheme 2	294
4.2.1	Resistor Values	295
4.2.2	PSL for TCS Scheme 2	295

4.3	Trip Circuit Supervision Scheme 3	295
4.3.1	Resistor Values	296
4.3.2	PSL for TCS Scheme 3	296

Chapter 12 Digital I/O and PSL Configuration 297

1	Chapter Overview	299
2	Configuring Digital Inputs and Outputs	300
3	Scheme Logic	301
3.1	PSL Editor	302
3.2	PSL Schemes	302
3.3	PSL Scheme Version Control	303
4	Configuring the Opto-Inputs	304
5	Assigning the Output Relays	305
6	Fixed Function LEDs	306
6.1	Trip LED Logic	306
7	Configuring Programmable LEDs	307
8	Function Keys	309
9	Control Inputs	310

Chapter 13 Electrical Teleprotection 311

1	Chapter Overview	313
2	Introduction	314
3	Teleprotection Scheme Principles	315
3.1	Direct Tripping	315
3.2	Permissive Tripping	315
4	Implementation	316
5	Configuration	317
6	Connecting to Electrical InterMiCOM	319
6.1	Short Distance	319
6.2	Long Distance	319
7	Application Notes	320

Chapter 14 Communications 323

1	Chapter Overview	325
2	Communication Interfaces	326
3	Serial Communication	327
3.1	EIA(RS)232 Bus	327
3.2	EIA(RS)485 Bus	327
3.2.1	EIA(RS)485 Biasing Requirements	328
3.3	K-Bus	328
4	Standard Ethernet Communication	330
4.1	Hot-Standby Ethernet Failover	330
5	Redundant Ethernet Communication	331
5.1	Supported Protocols	331
5.2	Parallel Redundancy Protocol	332
5.3	High-Availability Seamless Redundancy (HSR)	333
5.3.1	HSR Multicast Topology	333
5.3.2	HSR Unicast Topology	334
5.3.3	HSR Application in the Substation	334
5.4	Rapid Spanning Tree Protocol	335
5.5	Self Healing Protocol	336
5.6	Dual Homing Protocol	337
5.7	Configuring IP Addresses	339
5.7.1	Configuring the IED IP Address	340

5.7.2	Configuring the REB IP Address	340
5.8	PRP/HSR Configurator	343
5.8.1	Connecting the IED to a PC	343
5.8.2	Installing the Configurator	344
5.8.3	Starting the Configurator	344
5.8.4	PRP/HSR Device Identification	345
5.8.5	Selecting the Device Mode	345
5.8.6	PRP/HSR IP Address Configuration	345
5.8.7	SNTP IP Address Configuration	345
5.8.8	Check for Connected Equipment	345
5.8.9	PRP Configuration	345
5.8.10	HSR Configuration	346
5.8.11	Filtering Database	346
5.8.12	End of Session	347
5.9	RSTP Configurator	347
5.9.1	Connecting the IED to a PC	347
5.9.2	Installing the Configurator	348
5.9.3	Starting the Configurator	348
5.9.4	RSTP Device Identification	348
5.9.5	RSTP IP Address Configuration	349
5.9.6	SNTP IP Address Configuration	349
5.9.7	Check for Connected Equipment	349
5.9.8	RSTP Configuration	349
5.9.9	End of Session	350
5.10	Switch Manager	350
5.10.1	Installation	351
5.10.2	Setup	352
5.10.3	Network Setup	352
5.10.4	Bandwidth Used	352
5.10.5	Reset Counters	352
5.10.6	Check for Connected Equipment	352
5.10.7	Mirroring Function	353
5.10.8	Ports On/Off	353
5.10.9	VLAN	353
5.10.10	End of Session	353
6	Simple Network Management Protocol (SNMP)	354
6.1	SNMP Management Information Bases	354
6.2	Main Processor MIBS Structure	354
6.3	Redundant Ethernet Board MIB Structure	355
6.4	Accessing the MIB	359
6.5	Main Processor SNMP Configuration	359
7	Data Protocols	361
7.1	Courier	361
7.1.1	Physical Connection and Link Layer	361
7.1.2	Courier Database	362
7.1.3	Settings Categories	362
7.1.4	Setting Changes	362
7.1.5	Event Extraction	362
7.1.6	Disturbance Record Extraction	364
7.1.7	Programmable Scheme Logic Settings	364
7.1.8	Time Synchronisation	364
7.1.9	Courier Configuration	365
7.2	IEC 60870-5-103	366
7.2.1	Physical Connection and Link Layer	366
7.2.2	Initialisation	367
7.2.3	Time Synchronisation	367
7.2.4	Spontaneous Events	367
7.2.5	General Interrogation (GI)	367
7.2.6	Cyclic Measurements	367

7.2.7	Commands	368
7.2.8	Test Mode	368
7.2.9	Disturbance Records	368
7.2.10	Command/Monitor Blocking	368
7.2.11	IEC 60870-5-103 Configuration	368
7.3	DNP 3.0	369
7.3.1	Physical Connection and Link Layer	370
7.3.2	Object 1 Binary Inputs	370
7.3.3	Object 10 Binary Outputs	370
7.3.4	Object 20 Binary Counters	371
7.3.5	Object 30 Analogue Input	371
7.3.6	Object 40 Analogue Output	372
7.3.7	Object 50 Time Synchronisation	372
7.3.8	DNP3 Device Profile	372
7.3.9	DNP3 Configuration	380
7.4	IEC 61850	382
7.4.1	Benefits of IEC 61850	382
7.4.2	IEC 61850 Interoperability	382
7.4.3	The IEC 61850 Data Model	382
7.4.4	IEC 61850 in MiCOM IEDs	383
7.4.5	IEC 61850 Data Model Implementation	384
7.4.6	IEC 61850 Communication Services Implementation	384
7.4.7	IEC 61850 Peer-to-peer (GOOSE) communications	384
7.4.8	Mapping GOOSE Messages to Virtual Inputs	384
7.4.9	Ethernet Functionality	385
7.4.10	IEC 61850 Configuration	385
7.4.11	IEC 61850 Edition 2	386
8	Read Only Mode	390
8.1	IEC 60870-5-103 Protocol Blocking	390
8.2	Courier Protocol Blocking	390
8.3	IEC 61850 Protocol Blocking	391
8.4	Read-Only Settings	391
8.5	Read-Only DDB Signals	391
9	Time Synchronisation	392
9.1	Demodulated IRIG-B	392
9.1.1	IRIG-B Implementation	393
9.2	SNTP	393
9.2.1	Loss of SNTP Server Signal Alarm	393
9.3	IEEE 1588 Precision time Protocol	393
9.3.1	Accuracy and Delay Calculation	393
9.3.2	PTP Domains	394
9.4	Time Synchronisation using the Communication Protocols	394

Chapter 15 Cyber-Security 395

1	Overview	397
2	The Need for Cyber-Security	398
3	Standards	399
3.1	NERC Compliance	399
3.1.1	CIP 002	400
3.1.2	CIP 003	400
3.1.3	CIP 004	400
3.1.4	CIP 005	400
3.1.5	CIP 006	400
3.1.6	CIP 007	401
3.1.7	CIP 008	401
3.1.8	CIP 009	401
3.2	IEEE 1686-2007	401

4	Cyber-Security Implementation	403
4.1	NERC-Compliant Display	403
4.2	Four-level Access	404
4.2.1	Blank Passwords	405
4.2.2	Password Rules	406
4.2.3	Access Level DDBs	406
4.3	Enhanced Password Security	406
4.3.1	Password Strengthening	406
4.3.2	Password Validation	407
4.3.3	Password Blocking	407
4.4	Password Recovery	408
4.4.1	Password Recovery	408
4.4.2	Password Encryption	409
4.5	Disabling Physical Ports	409
4.6	Disabling Logical Ports	409
4.7	Security Events Management	410
4.8	Logging Out	412

Chapter 16 Installation **413**

1	Chapter Overview	415
2	Handling the Goods	416
2.1	Receipt of the Goods	416
2.2	Unpacking the Goods	416
2.3	Storing the Goods	416
2.4	Dismantling the Goods	416
3	Mounting the Device	417
3.1	Flush Panel Mounting	417
3.2	Rack Mounting	419
4	Cables and Connectors	422
4.1	Terminal Blocks	422
4.2	Power Supply Connections	423
4.3	Earth Connection	423
4.4	Current Transformers	423
4.5	Voltage Transformer Connections	424
4.6	Watchdog Connections	424
4.7	EIA(RS)485 and K-Bus Connections	424
4.8	IRIG-B Connection	424
4.9	Opto-input Connections	424
4.10	Output Relay Connections	425
4.11	Ethernet Metallic Connections	425
4.12	Ethernet Fibre Connections	425
4.13	RS232 connection	425
4.14	Download/Monitor Port	425
4.15	GPS Fibre Connection	425
4.16	Fibre Communication Connections	426
5	Case Dimensions	427
5.1	Case Dimensions 40TE	427
5.2	Case Dimensions 60TE	428
5.3	Case Dimensions 80TE	429

Chapter 17 Commissioning Instructions **431**

1	Chapter Overview	433
2	General Guidelines	434
3	Commissioning Test Menu	435
3.1	Opto I/P Status Cell (Opto-input Status)	435

3.2	Relay O/P Status Cell (Relay Output Status)	435
3.3	Test Port Status Cell	435
3.4	Monitor Bit 1 to 8 Cells	435
3.5	Test Mode Cell	436
3.6	Test Pattern Cell	436
3.7	Contact Test Cell	436
3.8	Test LEDs Cell	437
3.9	Test Autoreclose Cell	437
3.10	Static Test Mode	437
3.11	Loopback Mode	437
3.12	IM64 Test Pattern	438
3.13	IM64 Test Mode	438
3.14	Red and Green LED Status Cells	438
3.15	Using a Monitor Port Test Box	438
4	Commissioning Equipment	439
4.1	Minimum Equipment Required	439
4.2	Optional Equipment Required	439
5	Product Checks	440
5.1	Product Checks with the IED De-energised	440
5.1.1	Visual Inspection	441
5.1.2	Current Transformer Shorting Contacts	441
5.1.3	Insulation	441
5.1.4	External Wiring	442
5.1.5	Watchdog Contacts	442
5.1.6	Power Supply	442
5.2	Product Checks with the IED Energised	442
5.2.1	Watchdog Contacts	443
5.2.2	Test LCD	443
5.2.3	Date and Time	443
5.2.4	Test LEDs	444
5.2.5	Test Alarm and Out-of-Service LEDs	444
5.2.6	Test Trip LED	444
5.2.7	Test User-programmable LEDs	444
5.2.8	Test Field Voltage Supply	444
5.2.9	Test Opto-inputs	445
5.2.10	Test Output Relays	445
5.2.11	Test Serial Communication Port RP1	445
5.2.12	Test Serial Communication Port RP2	447
5.2.13	Test Ethernet Communication	447
5.3	Secondary Injection Tests	447
5.3.1	Test Current Inputs	448
5.3.2	Test Voltage Inputs	448
6	Electrical Intermicom Communication Loopback	449
6.1	Setting up the Loopback	449
6.2	Loopback Test	449
6.2.1	InterMicom Command Bits	450
6.2.2	InterMicom Channel Diagnostics	450
6.2.3	Simulating a Channel Failure	450
7	Setting Checks	451
7.1	Apply Application-specific Settings	451
7.1.1	Transferring Settings from a Settings File	451
7.1.2	Entering settings using the HMI	451
8	Protection Timing Checks	453
8.1	Overcurrent Check	453
8.2	Connecting the Test Circuit	453
8.3	Performing the Test	453
8.4	Check the Operating Time	453
9	System Check and Check Synchronism	455

9.1	Check Synchronism Pass	455
9.2	Check Synchronism Fail	455
10	Check Trip and Autoreclose Cycle	456
11	Onload Checks	457
11.1	Confirm Voltage Connections	457
11.2	Confirm Current Connections	458
11.3	On-load Directional Test	458
12	Final Checks	459

Chapter 18 Maintenance and Troubleshooting **461**

1	Chapter Overview	463
2	Maintenance	464
2.1	Maintenance Checks	464
2.1.1	Alarms	464
2.1.2	Opto-isolators	464
2.1.3	Output Relays	464
2.1.4	Measurement Accuracy	464
2.2	Replacing the Device	465
2.3	Repairing the Device	466
2.4	Removing the front panel	467
2.5	Replacing PCBs	467
2.5.1	Replacing the main processor board	468
2.5.2	Replacement of communications boards	469
2.5.3	Replacement of the input module	469
2.5.4	Replacement of the power supply board	470
2.5.5	Replacement of the I/O boards	470
2.6	Recalibration	471
2.7	Changing the battery	471
2.7.1	Post Modification Tests	471
2.7.2	Battery Disposal	471
2.8	Cleaning	472
3	Troubleshooting	473
3.1	Self-Diagnostic Software	473
3.2	Power-up Errors	473
3.3	Error Message or Code on Power-up	473
3.4	Out of Service LED on at power-up	474
3.5	Error Code during Operation	475
3.5.1	Backup Battery	475
3.6	Mal-operation during testing	475
3.6.1	Failure of Output Contacts	475
3.6.2	Failure of Opto-inputs	475
3.6.3	Incorrect Analogue Signals	476
3.7	Coprocessor board failures	476
3.7.1	Signalling failure alarm (on its own)	476
3.7.2	C diff failure alarm (on its own)	476
3.7.3	Signalling failure and C diff failure alarms together	476
3.7.4	Incompatible IED	477
3.7.5	Comms changed	477
3.7.6	IEEE C37.94 fail	477
3.8	PSL Editor Troubleshooting	477
3.8.1	Diagram Reconstruction	477
3.8.2	PSL Version Check	477
3.9	Repair and Modification Procedure	478

Chapter 19 Technical Specifications **479**

1	Chapter Overview	481
----------	-------------------------	------------

2	Interfaces	482
2.1	Front Serial Port	482
2.2	Download/Monitor Port	482
2.3	Rear Serial Port 1	482
2.4	Fibre Rear Serial Port 1	482
2.5	Rear Serial Port 2	483
2.6	Optional Rear Serial Port (SK5)	483
2.7	IRIG-B (Demodulated)	483
2.8	IRIG-B (Modulated)	483
2.9	Rear Ethernet Port Copper	484
2.10	Rear Ethernet Port Fibre	484
2.10.1	100 Base FX Receiver Characteristics	484
2.10.2	100 Base FX Transmitter Characteristics	485
3	Protection Functions	486
3.1	Autoreclose and Check Synchroism	486
3.2	Three-phase Overcurrent Protection	486
3.2.1	Transient Overreach and Overshoot	486
3.2.2	Three-phase Overcurrent Directional Parameters	486
3.3	Earth Fault Protection	486
3.3.1	Earth Fault Directional Parameters	487
3.4	Sensitive Earth Fault Protection	487
3.4.1	Sensitive Earth Fault Protection Directional Element	487
3.5	High Impedance Restricted Earth Fault Protection	488
3.6	Negative Sequence Overcurrent Protection	488
3.6.1	NPSOC Directional Parameters	488
3.7	Circuit Breaker Fail and Undercurrent Protection	488
3.8	Broken Conductor Protection	489
3.9	Thermal Overload Protection	489
4	Monitoring, Control and Supervision	490
4.1	Voltage Transformer Supervision	490
4.2	Standard Current Transformer Supervision	490
4.3	Differential Current Transformer Supervision	490
4.4	CB State and Condition Monitoring	490
4.5	PSL Timers	491
5	Measurements and Recording	492
5.1	General	492
5.2	Disturbance Records	492
5.3	Event, Fault and Maintenance Records	492
5.4	Fault Locator	492
6	Ratings	493
6.1	AC Measuring Inputs	493
6.2	Current Transformer Inputs	493
6.3	Voltage Transformer Inputs	493
6.4	Auxiliary Supply Voltage	493
6.5	Nominal Burden	494
6.6	Power Supply Interruption	494
6.7	Battery Backup	495
7	Input / Output Connections	496
7.1	Isolated Digital Inputs	496
7.1.1	Nominal Pickup and Reset Thresholds	496
7.2	Standard Output Contacts	496
7.3	High Break Output Contacts	497
7.4	Watchdog Contacts	497
8	Mechanical Specifications	498
8.1	Physical Parameters	498
8.2	Enclosure Protection	498
8.3	Mechanical Robustness	498

8.4	Transit Packaging Performance	498
9	Type Tests	499
9.1	Insulation	499
9.2	Creepage Distances and Clearances	499
9.3	High Voltage (Dielectric) Withstand	499
9.4	Impulse Voltage Withstand Test	499
10	Environmental Conditions	500
10.1	Ambient Temperature Range	500
10.2	Temperature Endurance Test	500
10.3	Ambient Humidity Range	500
10.4	Corrosive Environments	500
11	Electromagnetic Compatibility	501
11.1	1 MHz Burst High Frequency Disturbance Test	501
11.2	Damped Oscillatory Test	501
11.3	Immunity to Electrostatic Discharge	501
11.4	Electrical Fast Transient or Burst Requirements	501
11.5	Surge Withstand Capability	501
11.6	Surge Immunity Test	502
11.7	Immunity to Radiated Electromagnetic Energy	502
11.8	Radiated Immunity from Digital Communications	502
11.9	Radiated Immunity from Digital Radio Telephones	502
11.10	Immunity to Conducted Disturbances Induced by Radio Frequency Fields	502
11.11	Magnetic Field Immunity	503
11.12	Conducted Emissions	503
11.13	Radiated Emissions	503
11.14	Power Frequency	503
12	Standards Compliance	504
12.1	EMC Compliance: 2004/108/EC	504
12.2	Product Safety: 2006/95/EC	504
12.3	R&TTE Compliance	504
12.4	UL/CUL Compliance	504

Chapter 20 Wiring Diagrams **505**

1	Chapter Overview	507
2	Communication Connections	508
3	P841B: External Connection Diagram	509
4	P841B: Model C - External Connection Diagram	510
5	P841B: Model C - Default Mapping	511
6	P841B: Model D - External Connection Diagram	512
7	P841B: Model D - Default Mapping	513
8	P841B: Model E - External Connection Diagram	514
9	P841B: Model E - Default Mapping	515

Appendix A Ordering Options **517**

Appendix B Settings and Signals **519**

Table of Figures

Figure 1:	P40L family - version evolution	7
Figure 2:	Key to logic diagrams	12
Figure 3:	Functional Overview	13
Figure 4:	Hardware architecture	32
Figure 5:	Exploded view of IED	33
Figure 6:	Front panel (60TE)	35
Figure 7:	Rear view of populated case	39
Figure 8:	Terminal block types	40
Figure 9:	Rear connection to terminal block	41
Figure 10:	Main processor board	42
Figure 11:	Power supply board	43
Figure 12:	Power supply assembly	44
Figure 13:	Power supply terminals	45
Figure 14:	Watchdog contact terminals	46
Figure 15:	Rear serial port terminals	47
Figure 16:	Input module - 1 transformer board	47
Figure 17:	Input module schematic	48
Figure 18:	Transformer board	49
Figure 19:	Input board	50
Figure 20:	Standard output relay board - 8 contacts	51
Figure 21:	IRIG-B board	52
Figure 22:	Fibre optic board	53
Figure 23:	Rear communication board	54
Figure 24:	Ethernet board	55
Figure 25:	Redundant Ethernet board	56
Figure 26:	Navigating the HMI	64
Figure 27:	Default display navigation	66
Figure 28:	Autoreclose sequence for a Transient Fault	86
Figure 29:	Autoreclose sequence for an evolving or permanent fault	87
Figure 30:	Autoreclose sequence for an evolving or permanent fault - single-phase operation	87
Figure 31:	Dual CB Autoreclose Sequence for a Transient Fault	88
Figure 32:	Autoreclose Sequence for an evolving/permanent fault on a dual CB application	89
Figure 33:	Autoreclose Sequence for a persistent fault on a multishot dual CB application set for single-phase operation	90
Figure 34:	Key to logic diagrams	92
Figure 35:	Autoreclose System Map - part 1	93
Figure 36:	Autoreclose System Map - part 2	94
Figure 37:	Autoreclose System Map - part 3	95

Figure 38:	Autoreclose System Map - part 4	96
Figure 39:	Autoreclose System Map - part 5	97
Figure 40:	Autoreclose System Map - part 6	98
Figure 41:	Autoreclose System Map - part 7	99
Figure 42:	Autoreclose System Map - part 8	100
Figure 43:	Autoreclose System Map - part 9	101
Figure 44:	Autoreclose System Map - part 10	102
Figure 45:	CB State logic diagram (Module 1)	120
Figure 46:	Circuit Breaker Open logic diagram (Module 3)	121
Figure 47:	CB In Service logic diagram (Module 4)	122
Figure 48:	Autoreclose Enable logic diagram (Module 5)	122
Figure 49:	Leader/Follower CB Selection Logic Diagram (Module 6)	123
Figure 50:	Leader/Follower logic diagram (Module 7 & 8)	124
Figure 51:	Autoreclose Modes Enable logic diagram (Module 9)	127
Figure 52:	Force three-phase trip logic diagram (Module 10)	128
Figure 53:	Autoreclose Initiation logic diagram (Module 11)	130
Figure 54:	Autoreclose Trip Test logic diagram (Module 12)	130
Figure 55:	Autoreclose initiation by internal single and three phase trip or external trip for CB1 (Module 13)	131
Figure 56:	Autoreclose initiation by internal single and three phase trip or external trip for CB2 (Module 14)	132
Figure 57:	Protection Reoperation and Evolving Fault logic diagram (Module 20)	133
Figure 58:	Fault Memory logic diagram (Module 15)	133
Figure 59:	Autoreclose In Progress logic diagram for CB1 (Module 16)	134
Figure 60:	Autoreclose In Progress logic diagram for CB2 (Module 17)	135
Figure 61:	Autoreclose Sequence Counter logic diagram (Module 18)	136
Figure 62:	Single-phase Autoreclose Cycle Selection logic diagram (Module 19)	137
Figure 63:	Three-phase Autoreclose Cycle Selection logic diagram (Module 21)	138
Figure 64:	Dead time Start Enable logic diagram (Module 22)	140
Figure 65:	Single-phase Leader Dead Time logic diagram (Module 24)	141
Figure 66:	Three-phase Leader CB Dead Time logic diagram (Module 25)	142
Figure 67:	Follower Enable logic diagram (Module 27)	143
Figure 68:	Single-phase Follower CB timing logic diagram (Module 28)	144
Figure 69:	Three-phase Follower CB timing logic diagram (Module 29)	145
Figure 70:	Circuit Breaker Autoclose Logic Diagram (Modules 32 & 33)	147
Figure 71:	Prepare Reclaim Initiation logic diagram (Module 34)	147
Figure 72:	Reclaim Time logic diagram (Module 35)	148
Figure 73:	Successful Autoreclose Signals logic diagram (Module 36)	149
Figure 74:	Autoreclose Reset Successful Indication logic diagram (Modules 37 & 38)	150
Figure 75:	Circuit Breaker Healthy and System Check Timers Healthy logic diagram (Module 39)	152

Figure 76:	Autoreclose Shot Counters logic diagram (Modules 41 & 42)	154
Figure 77:	CB1 Control Logic (Module 43)	155
Figure 78:	CB2 Control Logic (Module 44)	156
Figure 79:	Circuit Breaker Trip Time Monitoring logic diagram (Modules 53 & 54)	159
Figure 80:	CB1 Lockout Logic Diagram (Module 55)	160
Figure 81:	CB2 Lockout Logic Diagram (Module 56)	161
Figure 82:	Reset Circuit Breaker Lockout Logic Diagram (Modules 57 & 58)	163
Figure 83:	Pole Discrepancy Logic Diagram (Module 62)	164
Figure 84:	Circuit Breaker Trip Conversion Logic Diagram (Module 63)	165
Figure 85:	Voltage Monitor for CB Closure (Module 59)	166
Figure 86:	Check Synchronisation Monitor for CB1 closure (Module 60)	167
Figure 87:	Check Synchronisation Monitor for CB2 closure (Module 61)	168
Figure 88:	Three-phase AR System Check logic diagram for CB1 as leader (Module 45)	170
Figure 89:	Three-phase AR System Check logic diagram for CB2 as leader (Module 46)	171
Figure 90:	Three-phase AR System Check logic d for CB1 as follower (Module 47)	172
Figure 91:	Three-phase AR System Check logic diagram for CB2 as follower (Module 48)	173
Figure 92:	CB Manual Close System Check Logic Diagram (Modules 51 & 52)	174
Figure 93:	Circuit Breaker Fail logic - part 1	185
Figure 94:	Circuit Breaker Fail logic - part 2	186
Figure 95:	Circuit Breaker Fail logic - part 3	187
Figure 96:	Circuit Breaker Fail logic - part 4	188
Figure 97:	CB Fail timing	190
Figure 98:	Phase Overcurrent Protection logic diagram	196
Figure 99:	Negative Phase Sequence Overcurrent Protection logic diagram	198
Figure 100:	IDG Characteristic	201
Figure 101:	Earth Fault Protection logic diagram	203
Figure 102:	EPATR B characteristic shown for TMS = 1.0	206
Figure 103:	Sensitive Earth Fault Protection logic diagram	207
Figure 104:	Current distribution in an insulated system with C phase fault	208
Figure 105:	Phasor diagrams for insulated system with C phase fault	209
Figure 106:	Positioning of core balance current transformers	210
Figure 107:	High Impedance REF principle	211
Figure 108:	High Impedance REF Connection	212
Figure 109:	Thermal overload protection logic diagram	214
Figure 110:	Spreadsheet calculation for dual time constant thermal characteristic	215
Figure 111:	Dual time constant thermal characteristic	215
Figure 112:	Broken conductor logic	218
Figure 113:	Undervoltage - single and three phase tripping mode (single stage)	225
Figure 114:	Overvoltage - single and three phase tripping mode (single stage)	228
Figure 115:	Residual Overvoltage logic	232

Figure 116:	Residual voltage for a solidly earthed system	233
Figure 117:	Residual voltage for an impedance earthed system	234
Figure 118:	Underfrequency logic (single stage)	239
Figure 119:	Overfrequency logic (single stage)	240
Figure 120:	Rate of change of frequency logic (single stage)	241
Figure 121:	Fault recorder stop conditions	248
Figure 122:	Broken Current Accumulator logic diagram	253
Figure 123:	CB Trip Counter logic diagram	254
Figure 124:	Operating Time Accumulator	255
Figure 125:	Excessive Fault Frequency logic diagram	256
Figure 126:	Reset Lockout Alarm logic diagram	257
Figure 127:	CB1 Condition Monitoring logic diagram	258
Figure 128:	CB2 Condition Monitoring logic diagram	259
Figure 129:	Reset Circuit Breaker Lockout Logic Diagram (Modules 57 & 58)	261
Figure 130:	CB State logic diagram (Module 1)	264
Figure 131:	Hotkey menu navigation	266
Figure 132:	Default function key PSL	267
Figure 133:	Remote Control of Circuit Breaker	268
Figure 134:	CB1 Control Logic (Module 43)	269
Figure 135:	CB2 Control Logic (Module 44)	270
Figure 136:	Pole Dead logic	271
Figure 137:	Check Synchronisation vector diagram	275
Figure 138:	Voltage Monitor for CB Closure (Module 59)	276
Figure 139:	Check Synchronisation Monitor for CB1 closure (Module 60)	277
Figure 140:	Check Synchronisation Monitor for CB2 closure (Module 61)	278
Figure 141:	System Check PSL	279
Figure 142:	VTS logic	288
Figure 143:	Standard CTS	291
Figure 144:	TCS Scheme 1	293
Figure 145:	PSL for TCS Scheme 1	294
Figure 146:	TCS Scheme 2	295
Figure 147:	PSL for TCS Scheme 2	295
Figure 148:	TCS Scheme 3	296
Figure 149:	PSL for TCS Scheme 3	296
Figure 150:	Scheme Logic Interfaces	302
Figure 151:	Trip LED logic	306
Figure 152:	Example assignment of InterMiCOM signals within the PSL	318
Figure 153:	Direct connection	319
Figure 154:	Indirect connection using modems	319
Figure 155:	RS485 biasing circuit	328

Figure 156:	Remote communication using K-Bus	329
Figure 157:	IED attached to separate LANs	332
Figure 158:	HSR multicast topology	333
Figure 159:	HSR unicast topology	334
Figure 160:	HSR application in the substation	335
Figure 161:	IED attached to redundant Ethernet star or ring circuit	335
Figure 162:	IED, bay computer and Ethernet switch with self healing ring facilities	336
Figure 163:	Redundant Ethernet ring architecture with IED, bay computer and Ethernet switches	336
Figure 164:	Redundant Ethernet ring architecture with IED, bay computer and Ethernet switches after failure	337
Figure 165:	Dual homing mechanism	338
Figure 166:	Application of Dual Homing Star at substation level	339
Figure 167:	IED and REB IP address configuration	340
Figure 168:	Connection using (a) an Ethernet switch and (b) a media converter	344
Figure 169:	Connection using (a) an Ethernet switch and (b) a media converter	348
Figure 170:	Control input behaviour	371
Figure 171:	Data model layers in IEC61850	383
Figure 172:	Edition 2 system - backward compatibility	387
Figure 173:	Edition 1 system - forward compatibility issues	387
Figure 174:	Example of Standby IED	388
Figure 175:	Standby IED Activation Process	389
Figure 176:	GPS Satellite timing signal	392
Figure 177:	Timing error using ring or line topology	394
Figure 178:	Default display navigation	404
Figure 179:	Location of battery isolation strip	417
Figure 180:	Rack mounting of products	420
Figure 181:	Terminal block types	422
Figure 182:	40TE case dimensions	427
Figure 183:	60TE case dimensions	428
Figure 184:	80TE case dimensions	429
Figure 185:	RP1 physical connection	446
Figure 186:	Remote communication using K-bus	446
Figure 187:	InterMicom loopback testing	449
Figure 188:	Possible terminal block types	466
Figure 189:	Front panel assembly	468
Figure 190:	Communication boards (when fitted for single or redundant applications only)	508
Figure 191:	P841B Autoreclose Protection IED power system connections	509
Figure 192:	P841B Autoreclose Protection IED with 24 inputs and 32 outputs	510
Figure 193:	P841B Autoreclose Protection IED with 24 inputs and 32 outputs	511

Figure 194:	P841B Autoreclose Protection IED with 24 inputs and 16 outputs (including 8 high break)	512
Figure 195:	P841B Autoreclose Protection IED with 24 inputs and 16 outputs (including 8 high break)	513
Figure 196:	P841B Autoreclose Protection IED with 24 inputs and 8 outputs and 12 high break	514
Figure 197:	P841B Autoreclose Protection IED with 24 inputs and 8 outputs and 12 high break	515

INTRODUCTION

CHAPTER 1

1 CHAPTER OVERVIEW

This chapter provides some general information about the technical manual and an introduction to the device(s) described in this technical manual.

This chapter contains the following sections:

Chapter Overview	3
Foreword	4
Product Scope	6
Features and Functions	9
Logic Diagrams	11
Functional Overview	13

2 FOREWORD

This technical manual provides a functional and technical description of Alstom Grid's P841B, as well as a comprehensive set of instructions for using the device. The level at which this manual is written assumes that you are already familiar with protection engineering and have experience in this discipline. The description of principles and theory is limited to that which is necessary to understand the product. For further details on general protection engineering theory, we refer you to Alstom's publication NPAG, which is available online or from our contact centre.

We have attempted to make this manual as accurate, comprehensive and user-friendly as possible. However we cannot guarantee that it is free from errors. Nor can we state that it cannot be improved. We would therefore be very pleased to hear from you if you discover any errors, or have any suggestions for improvement. Our policy is to provide the information necessary to help you safely specify, engineer, install, commission, maintain, and eventually dispose of this product. We consider that this manual provides the necessary information, but if you consider that more details are needed, please contact us.

All feedback should be sent to our contact centre via the following URL:

<http://www.alstom.com/grid/contactcentre/>

2.1 TARGET AUDIENCE

This manual is aimed towards all professionals charged with installing, commissioning, maintaining, troubleshooting, or operating any of the products within the specified product range. This includes installation and commissioning personnel as well as engineers who will be responsible for operating the product.

The level at which this manual is written assumes that installation and commissioning engineers have knowledge of handling electronic equipment. Also, system and protection engineers have a thorough knowledge of protection systems and associated equipment.

2.2 TYPOGRAPHICAL CONVENTIONS

The following typographical conventions are used throughout this manual.

- The names for special keys appear in capital letters.
For example: ENTER
- When describing software applications, menu items, buttons, labels etc as they appear on the screen are written in bold type.
For example: Select **Save** from the file menu.
- Filenames and paths use the courier font
For example: `Example\File.txt`
- Special terminology is written with leading capitals
For example: Sensitive Earth Fault
- If reference is made to the IED's internal settings and signals database, the menu group heading (column) text is written in upper case italics
For example: The *SYSTEM DATA* column
- If reference is made to the IED's internal settings and signals database, the setting cells and DDB signals are written in bold italics
For example: The ***Language*** cell in the *SYSTEM DATA* column
- If reference is made to the IED's internal settings and signals database, the value of a cell's content is written in the Courier font
For example: The ***Language*** cell in the *SYSTEM DATA* column contains the value `English`

2.3 NOMENCLATURE

Due to the technical nature of this manual, many special terms, abbreviations and acronyms are used throughout the manual. Some of these terms are well-known industry-specific terms while others may be special product-specific terms used by Alstom Grid. The first instance of any acronym or term used in a particular chapter is explained. In addition, a separate glossary is available on the Alstom Grid website, or from the Alstom Grid contact centre.

We would like to highlight the following changes of nomenclature however:

- The word 'relay' is no longer used to describe the device itself. Instead, the device is referred to as the 'IED' (Intelligent Electronic Device), the 'device', or the 'product'. The word 'relay' is used purely to describe the electromechanical components within the device, i.e. the output relays.
- British English is used throughout this manual.
- The British term 'Earth' is used in favour of the American term 'Ground'.

2.4 COMPLIANCE

The device has undergone a range of extensive testing and certification processes to ensure and prove compatibility with all target markets. A detailed description of these criteria can be found in the Technical Specifications chapter.

3 PRODUCT SCOPE

The MICOM P841 is a multifunctional line terminal IED for control and back-up protection in transmission feeder bays. It is suitable for single and dual breaker applications. It is used in applications such as breaker-and-a-half, or ring bus topologies, where two circuit breakers feed each line.

The P841B is available in three variants; models C, D and E. The difference between the variants is the type of output contacts used. These differences are summarised in the table below:

Feature	Model C	Model D	Model E
Number of CT Inputs	8	8	8
Number of VT inputs	5	5	5
Opto coupled digital inputs	24	24	24
Standard relay output contacts	32	16	8
High speed high break output contacts		8	12

3.1 PRODUCT VERSIONS

This product belongs to the P40L family. Although this technical manual is specific to this product, it is useful to know where the product fits into the family and to describe the evolution path of the entire product family. The following diagram attempts to do this:

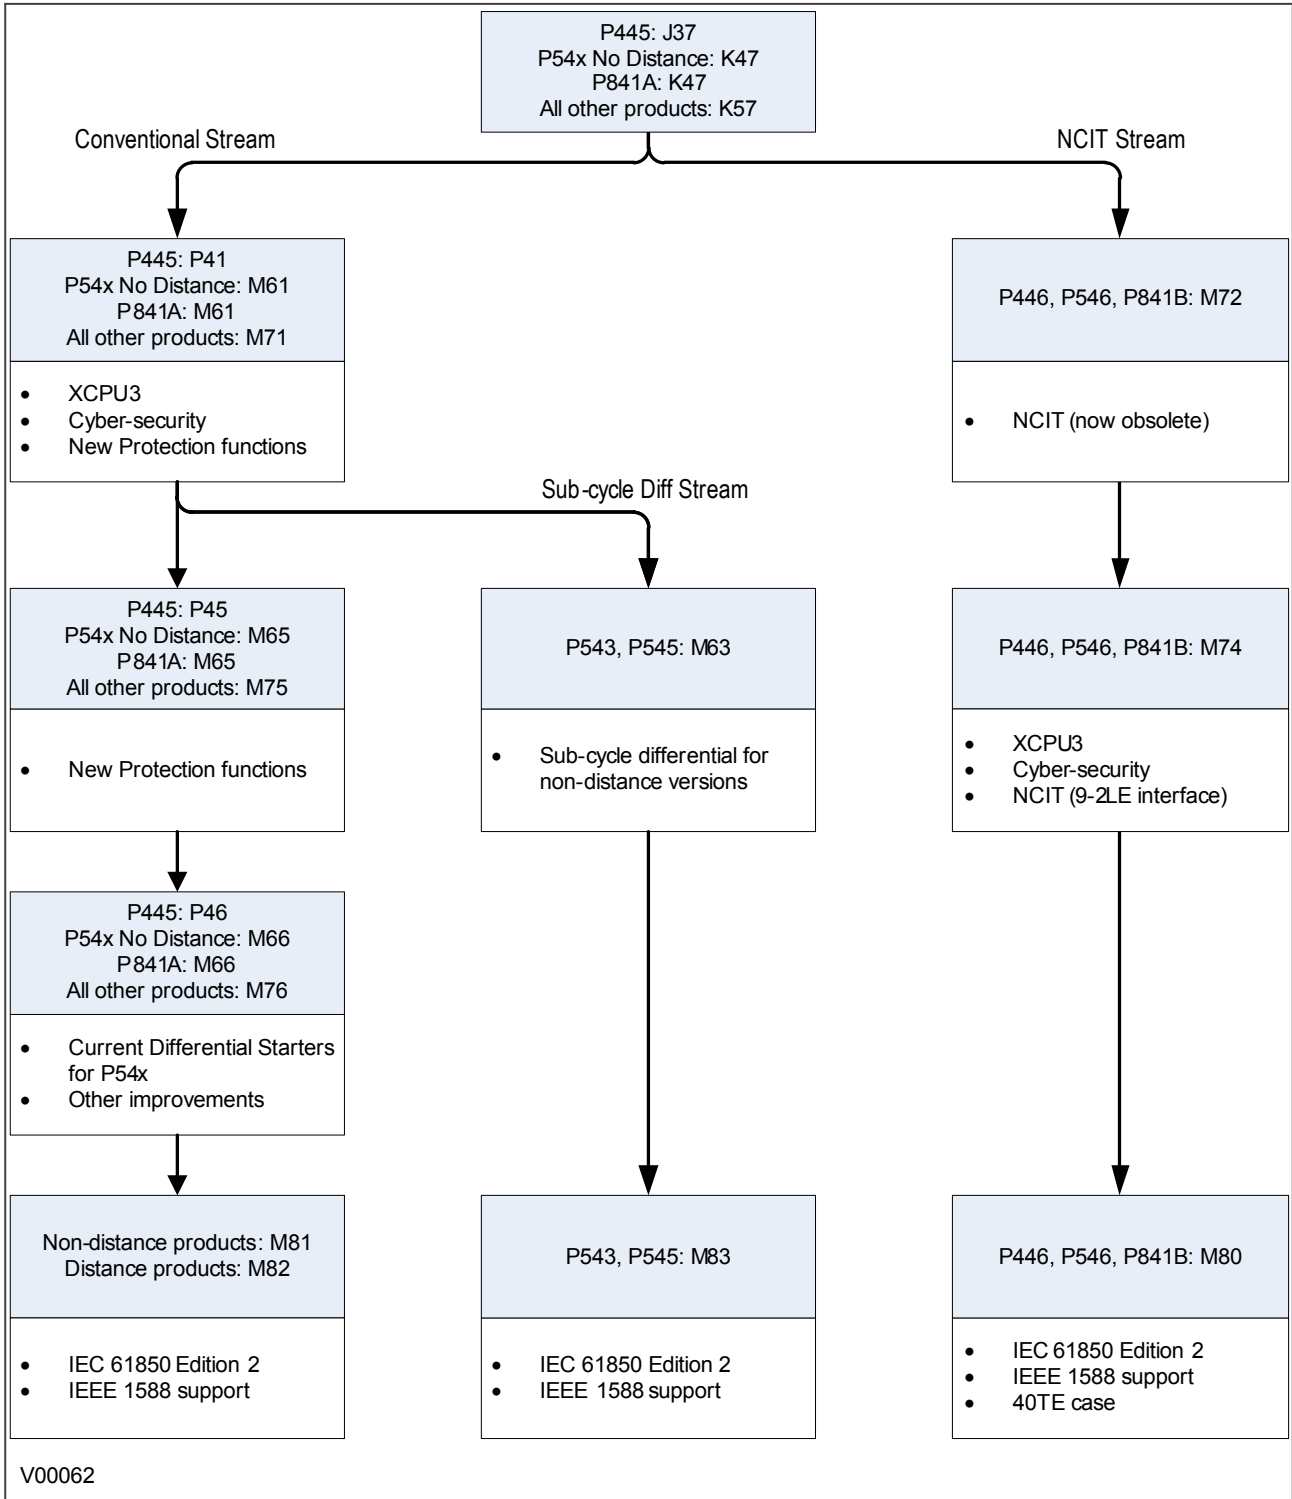


Figure 1: P40L family - version evolution

3.2 ORDERING OPTIONS

All current models and variants for this product are defined in an interactive spreadsheet called the CORTEC. This is available on the company website.

Alternatively, you can obtain it via the Contact Centre at the following URL:

<http://www.alstom.com/grid/contactcentre/>

A copy of the CORTEC is also supplied as a static table in the Appendices of this document. However, it should only be used for guidance as it provides a snapshot of the interactive data taken at the time of publication.

4 FEATURES AND FUNCTIONS

4.1 PROTECTION FUNCTIONS

Feature	IEC 61850	ANSI
Tripping Mode (1 & 3 pole)	PTRC	
ABC and ACB phase rotation		
Phase overcurrent , with optional directionality (4 stages)	OcpPTOC/RDIR	50/51/67
Earth/Ground overcurrent stages, with optional directionality (4 stages)	EfdPTOC/RDIR	50N/51N/ 67N
Sensitive earth fault (SEF) (4 stages)	SenPTOC/RDIR	50N/51N/67N
High impedance restricted earth fault (REF)	SenRefPDIF	64
Negative sequence overcurrent stages, with optional directionality (4 stages)	NgcPTOC/RDIR	67/46
Broken conductor, used to detect open circuit faults		46
Thermal overload protection	ThmPTTR	49
Undervoltage protection (2 stages)	VtpPhsPTUV	27
Overvoltage protection (2 stages)	VtpPhsPTOV	59
Remote overvoltage protection (2 stages)	VtpCmpPTOV	59R
Residual voltage protection (2 stages)	VtpResPTOV	59N
Underfrequency protection (4 stages)	FrqPTUF	81
Overfrequency protection (2 stages)	FrqPTOF	81
Rate of change of frequency protection (4 stages)	DfpPFRC	81
High speed breaker fail suitable for re-tripping and back-tripping (2 stages)	RBRF	50BF
Current Transformer supervision		46
Voltage transformer supervision		47/27
Auto-reclose (4 shots)	RREC	79
Check synchronisation (2 stages)	RSYN	25

4.2 CONTROL FUNCTIONS

Feature	IEC 61850	ANSI
Watchdog contacts		
Read-only mode		
Function keys	FnkGGIO	
Programmable LEDs	LedGGIO	
Programmable hotkeys		
Programmable allocation of digital inputs and outputs		
Fully customizable menu texts		
Circuit breaker control, status & condition monitoring	XCBR	52
CT supervision		
VT supervision		
Trip circuit and coil supervision		
Control inputs	PlGGIO1	

Feature	IEC 61850	ANSI
Power-up diagnostics and continuous self-monitoring		
Dual rated 1A and 5A CT inputs		
Alternative setting groups (4)		
Graphical programmable scheme logic (PSL)		
Fault locator	RFLO	

4.3 MEASUREMENT FUNCTIONS

Measurement Function	IEC 61850	ANSI
Measurement of all instantaneous & integrated values (Exact range of measurements depend on the device model)		MET
Disturbance recorder for waveform capture – specified in samples per cycle	RDRE	DFR
Fault Records		
Maintenance Records		
Event Records / Event logging		Event records
Time Stamping of Opto-inputs	Yes	Yes

4.4 COMMUNICATION FUNCTIONS

Feature	ANSI
NERC compliant cyber-security	
Front RS232 serial communication port for configuration	16S
Rear serial RS485 communication port for SCADA control	16S
2 Additional rear serial communication ports for SCADA control and teleprotection (fibre and copper) (optional)	16S
Ethernet communication (optional)	16E
Redundant Ethernet communication (optional)	16E
Courier Protocol	16S
IEC 61850 edition 1 or edition 2 (optional)	16E
IEC 60870-5-103 (optional)	16S
DNP3.0 over serial link (optional)	16S
DNP3.0 over Ethernet (optional)	16E
SNMP	16E
IRIG-B time synchronisation (optional)	CLK
IEEE 1588 PTP (Edition 2 devices only)	

5 LOGIC DIAGRAMS

This technical manual contains many logic diagrams, which should help to explain the functionality of the device. Although this manual has been designed to be as specific as possible to the chosen product, it may contain diagrams, which have elements applicable to other products. If this is the case, a qualifying note will accompany the relevant part.

The logic diagrams follow a convention for the elements used, using defined colours and shapes. A key to this convention is provided below. We recommend viewing the logic diagrams in colour rather than in black and white. The electronic version of the technical manual is in colour, but the printed version may not be. If you need coloured diagrams, they can be provided on request by calling the contact centre and quoting the diagram number.

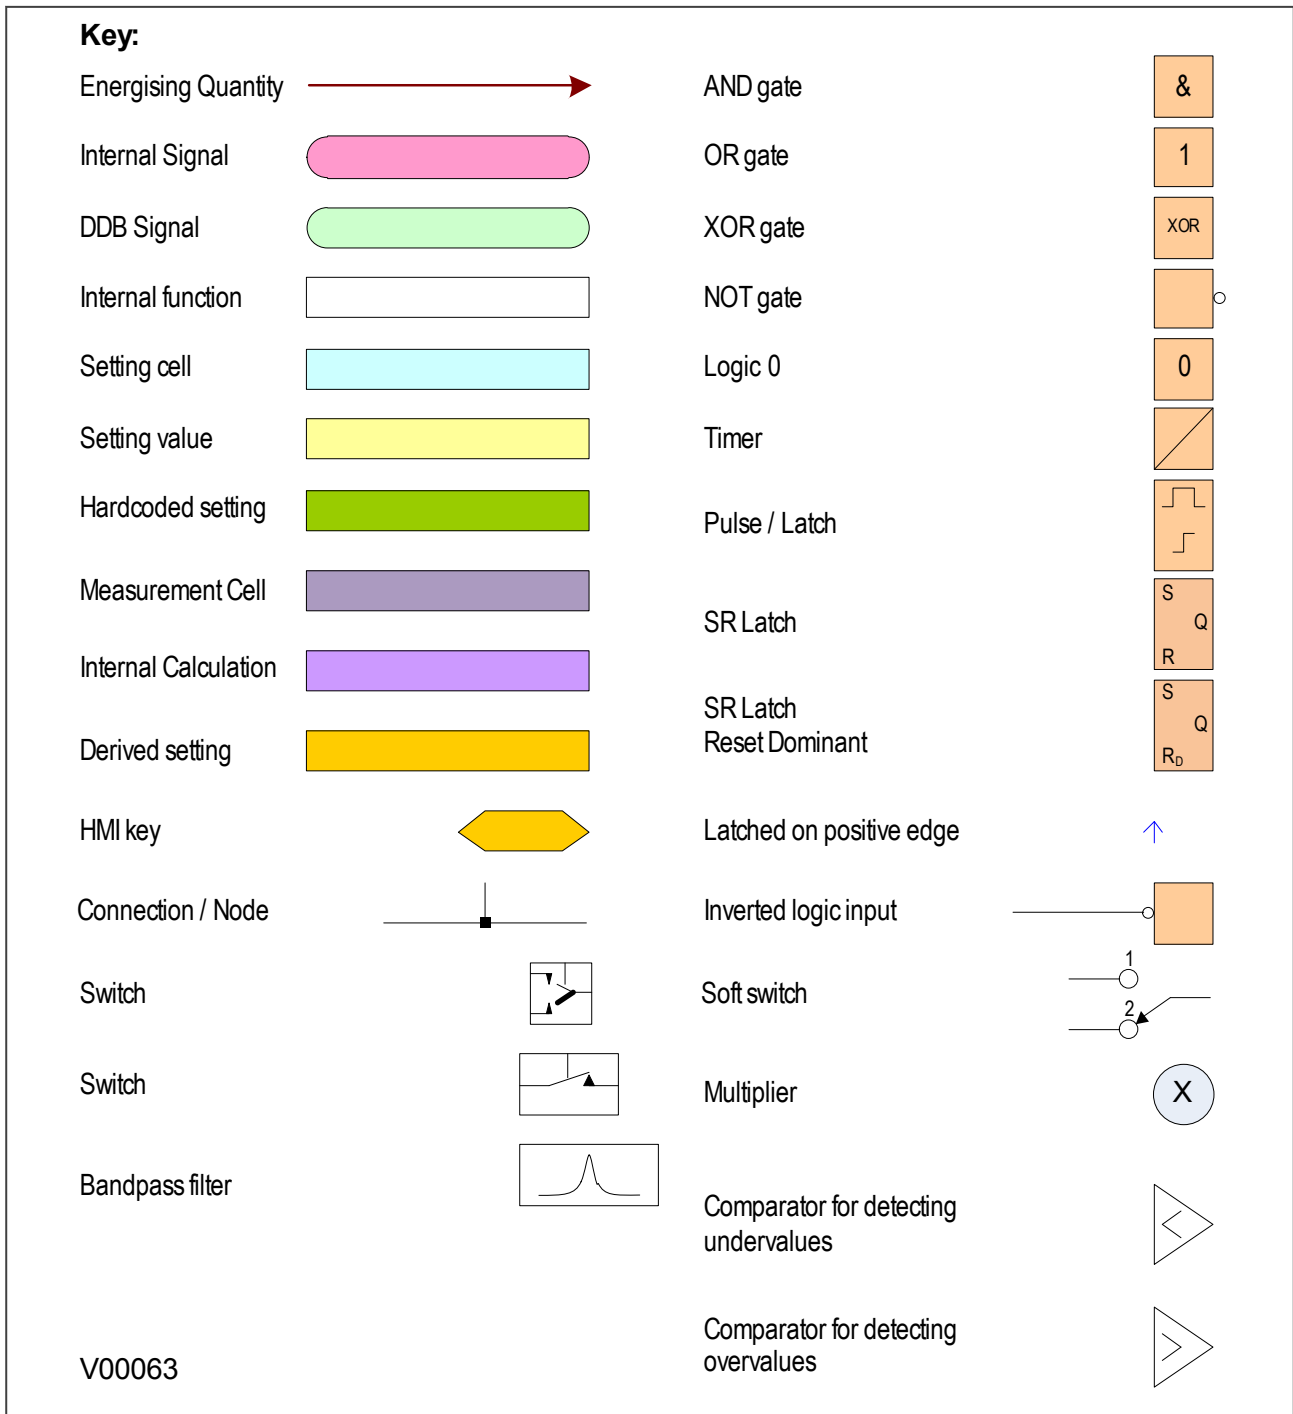


Figure 2: Key to logic diagrams

6 FUNCTIONAL OVERVIEW

This diagram is applicable to two products in the P40L family; P841A and P841B. Use the key on the diagram to determine the features relevant to the product described in this technical manual.

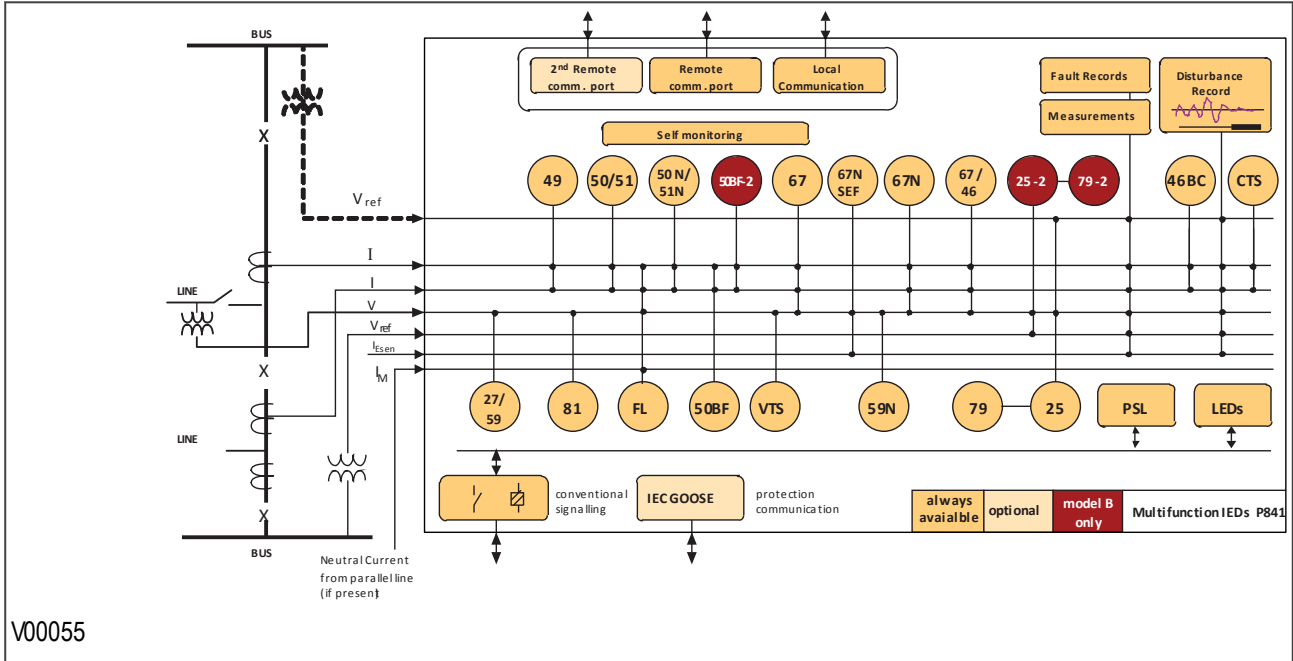


Figure 3: Functional Overview

SAFETY INFORMATION

CHAPTER 2

1 CHAPTER OVERVIEW

This chapter provides information about the safe handling of the equipment. The equipment must be properly installed and handled in order to maintain it in a safe condition and to keep personnel safe at all times. You must be familiar with information contained in this chapter before unpacking, installing, commissioning, or servicing the equipment.

This chapter contains the following sections:

Chapter Overview	17
Health and Safety	18
Symbols	19
Installation, Commissioning and Servicing	20
Decommissioning and Disposal	25
Standards Compliance	26

2 HEALTH AND SAFETY

Personnel associated with the equipment must be familiar with the contents of this Safety Information.

When electrical equipment is in operation, dangerous voltages are present in certain parts of the equipment. Improper use of the equipment and failure to observe warning notices will endanger personnel.

Only qualified personnel may work on or operate the equipment. Qualified personnel are individuals who are:

- familiar with the installation, commissioning, and operation of the equipment and the system to which it is being connected.
- familiar with accepted safety engineering practises and are authorised to energise and de-energise equipment in the correct manner.
- trained in the care and use of safety apparatus in accordance with safety engineering practises
- trained in emergency procedures (first aid).

The documentation provides instructions for installing, commissioning and operating the equipment. It cannot, however cover all conceivable circumstances. In the event of questions or problems, do not take any action without proper authorisation. Please contact your local sales office and request the necessary information.

3 SYMBOLS

Throughout this manual you will come across the following symbols. You will also see these symbols on parts of the equipment.



Caution:
Refer to equipment documentation. Failure to do so could result in damage to the equipment



Warning:
Risk of electric shock



Earth terminal. *Note: This symbol may also be used for a protective conductor (earth) terminal if that terminal is part of a terminal block or sub-assembly.*



Protective conductor (earth) terminal



Instructions on disposal requirements

Note:

The term 'Earth' used in this manual is the direct equivalent of the North American term 'Ground'.

4 INSTALLATION, COMMISSIONING AND SERVICING

4.1 LIFTING HAZARDS

Many injuries are caused by:

- Lifting heavy objects
- Lifting things incorrectly
- Pushing or pulling heavy objects
- Using the same muscles repetitively

Plan carefully, identify any possible hazards and determine how best to move the product. Look at other ways of moving the load to avoid manual handling. Use the correct lifting techniques and Personal Protective Equipment (PPE) to reduce the risk of injury.

4.2 ELECTRICAL HAZARDS



Caution:
All personnel involved in installing, commissioning, or servicing this equipment must be familiar with the correct working procedures.



Caution:
Consult the equipment documentation before installing, commissioning, or servicing the equipment.



Caution:
Always use the equipment as specified. Failure to do so will jeopardise the protection provided by the equipment.



Warning:
Removal of equipment panels or covers may expose hazardous live parts. Do not touch until the electrical power is removed. Take care when there is unlocked access to the rear of the equipment.



Warning:
Isolate the equipment before working on the terminal strips.



Warning:
Use a suitable protective barrier for areas with restricted space, where there is a risk of electric shock due to exposed terminals.



Caution:
Disconnect power before disassembling. Disassembly of the equipment may expose sensitive electronic circuitry. Take suitable precautions against electrostatic voltage discharge (ESD) to avoid damage to the equipment.



Caution:
NEVER look into optical fibres or optical output connections. Always use optical power meters to determine operation or signal level.



Caution:
Testing may leave capacitors charged to dangerous voltage levels. Discharge capacitors by reducing test voltages to zero before disconnecting test leads.



Caution:
Operate the equipment within the specified electrical and environmental limits.



Caution:
Before cleaning the equipment, ensure that no connections are energised. Use a lint free cloth dampened with clean water.

Note:

Contact fingers of test plugs are normally protected by petroleum jelly, which should not be removed.

4.3 UL/CSA/CUL REQUIREMENTS

The information in this section is applicable only to equipment carrying UL/CSA/CUL markings.



Caution:
Equipment intended for rack or panel mounting is for use on a flat surface of a Type 1 enclosure, as defined by Underwriters Laboratories (UL).



Caution:
To maintain compliance with UL and CSA/CUL, install the equipment using UL/CSA-recognised parts for: cables, protective fuses, fuse holders and circuit breakers, insulation crimp terminals, and replacement internal batteries.

4.4 FUSING REQUIREMENTS



Caution:
Where UL/CSA listing of the equipment is required for external fuse protection, a UL or CSA Listed fuse must be used for the auxiliary supply. The listed protective fuse type is: Class J time delay fuse, with a maximum current rating of 15 A and a minimum DC rating of 250 V dc (for example type AJT15).



Caution:
Where UL/CSA listing of the equipment is not required, a high rupture capacity (HRC) fuse type with a maximum current rating of 16 Amps and a minimum dc rating of 250 V dc may be used for the auxiliary supply (for example Red Spot type NIT or TIA).
For P50 models, use a 1A maximum T-type fuse.
For P60 models, use a 4A maximum T-type fuse.



Caution:
Digital input circuits should be protected by a high rupture capacity NIT or TIA fuse with maximum rating of 16 A. for safety reasons, current transformer circuits must never be fused. Other circuits should be appropriately fused to protect the wire used.



Caution:
CTs must NOT be fused since open circuiting them may produce lethal hazardous voltages

4.5 EQUIPMENT CONNECTIONS



Warning:
Terminals exposed during installation, commissioning and maintenance may present a hazardous voltage unless the equipment is electrically isolated.



Caution:
Tighten M4 clamping screws of heavy duty terminal block connectors to a nominal torque of 1.3 Nm.
Tighten captive screws of terminal blocks to 0.5 Nm minimum and 0.6 Nm maximum.



Caution:
Always use insulated crimp terminations for voltage and current connections.



Caution:
Always use the correct crimp terminal and tool according to the wire size.



Caution:
Watchdog (self-monitoring) contacts are provided to indicate the health of the device on some products. We strongly recommend that you hard wire these contacts into the substation's automation system, for alarm purposes.

4.6 PROTECTION CLASS 1 EQUIPMENT REQUIREMENTS



Caution:
Earth the equipment with the supplied PCT (Protective Conductor Terminal).



Caution:
Do not remove the PCT.



Caution:
The PCT is sometimes used to terminate cable screens. Always check the PCT's integrity after adding or removing such earth connections.



Caution:
Use a locknut or similar mechanism to ensure the integrity of stud-connected PCTs.



Caution:
The recommended minimum PCT wire size is 2.5 mm² for countries whose mains supply is 230 V (e.g. Europe) and 3.3 mm² for countries whose mains supply is 110 V (e.g. North America). This may be superseded by local or country wiring regulations.
For P60 products, the recommended minimum PCT wire size is 6 mm². See product documentation for details.



Caution:
The PCT connection must have low-inductance and be as short as possible.



Caution:
All connections to the equipment must have a defined potential. Connections that are pre-wired, but not used, should be earthed, or connected to a common grouped potential.

4.7 PRE-ENERGISATION CHECKLIST



Caution:
Check voltage rating/polarity (rating label/equipment documentation).



Caution:
Check CT circuit rating (rating label) and integrity of connections.



Caution:
Check protective fuse or miniature circuit breaker (MCB) rating.



Caution:
Check integrity of the PCT connection.



Caution:
Check voltage and current rating of external wiring, ensuring it is appropriate for the application.

4.8 PERIPHERAL CIRCUITRY



Warning:
Do not open the secondary circuit of a live CT since the high voltage produced may be lethal to personnel and could damage insulation. Short the secondary of the line CT before opening any connections to it.

Note:

For most Alstom equipment with ring-terminal connections, the threaded terminal block for current transformer termination is automatically shorted if the module is removed. Therefore external shorting of the CTs may not be required. Check the equipment documentation and wiring diagrams first to see if this applies.



Caution:
Where external components such as resistors or voltage dependent resistors (VDRs) are used, these may present a risk of electric shock or burns if touched.



Warning:
Take extreme care when using external test blocks and test plugs such as the MMLG, MMLB and P990, as hazardous voltages may be exposed. Ensure that CT shorting links are in place before removing test plugs, to avoid potentially lethal voltages.

4.9 UPGRADING/SERVICING



Warning:
Do not insert or withdraw modules, PCBs or expansion boards from the equipment while energised, as this may result in damage to the equipment. Hazardous live voltages would also be exposed, endangering personnel.



Caution:
Internal modules and assemblies can be heavy and may have sharp edges. Take care when inserting or removing modules into or out of the IED.

5 DECOMMISSIONING AND DISPOSAL

**Caution:**

Before decommissioning, completely isolate the equipment power supplies (both poles of any dc supply). The auxiliary supply input may have capacitors in parallel, which may still be charged. To avoid electric shock, discharge the capacitors using the external terminals before decommissioning.

**Caution:**

Avoid incineration or disposal to water courses. Dispose of the equipment in a safe, responsible and environmentally friendly manner, and if applicable, in accordance with country-specific regulations.

6 STANDARDS COMPLIANCE

Compliance with the European Commission Directive on EMC and LVD is demonstrated by self certification against international standards.



6.1 EMC COMPLIANCE: 2004/108/EC

Compliance with EN60255-26:2009 was used to establish conformity.

6.2 PRODUCT SAFETY: 2006/95/EC

Compliance with EN60255-27:2005 was used to establish conformity.

Protective Class

IEC 60255-27: 2005 Class 1 (unless otherwise specified in equipment documentation). This equipment requires a protective conductor (earth) to ensure user safety.

Installation category

IEC 60255-27: 2005 Overvoltage Category 3. Equipment in this category is qualification tested at 5kV peak, 1.2/50 μ S, 500 Ohms, 0.5 J, between all supply circuits and earth and also between independent circuits.

Environment

IEC 60255-27: 2005, IEC 60255-26:2009. The equipment is intended for indoor use only. If it is required for use in an outdoor environment, it must be mounted in a cabinet with the appropriate degree of ingress protection.

6.3 R&TTE COMPLIANCE

Radio and Telecommunications Terminal Equipment (R&TTE) directive 99/5/EC.

Conformity is demonstrated by compliance to both the EMC directive and the Low Voltage directive, to zero volts.

6.4 UL/CUL COMPLIANCE

If marked with this logo, the product is compliant with the requirements of the Canadian and USA Underwriters Laboratories.

The relevant UL file number and ID is shown on the equipment.



6.5 ATEX COMPLIANCE

If marked with the logo, the equipment is compliant with article 192 of European directive 94/9/EC. It is approved for operation outside an ATEX hazardous area. It is however approved for connection to Increased Safety, "Ex e", motors with rated ATEX protection, equipment category 2, to ensure their safe operation in gas zones 1 and 2 hazardous areas.



Equipment with this marking is not itself suitable for operation within a potentially explosive atmosphere.

Compliance demonstrated by Notified Body Type Examination Certificate.



II (2) G

ATEX Potentially Explosive Atmospheres directive 94/9/EC for equipment.

HARDWARE DESIGN

CHAPTER 3

1 CHAPTER OVERVIEW

This chapter provides information about the product's hardware design.

This chapter contains the following sections:

Chapter Overview	31
Hardware Architecture	32
Mechanical Implementation	33
Front Panel	35
Rear Panel	39
Boards and Modules	41

2 HARDWARE ARCHITECTURE

The main components comprising devices based on the Px4x platform are as follows:

- The housing, consisting of a front panel and connections at the rear
- The Main processor module consisting of the main CPU (Central Processing Unit), memory and an interface to the front panel HMI (Human Machine Interface)
- A selection of plug-in boards and modules with presentation at the rear for the power supply, communication functions, digital I/O, analogue inputs, and time synchronisation connectivity

All boards and modules are connected by a parallel data and address bus, which allows the processor module to send and receive information to and from the other modules as required. There is also a separate serial data bus for conveying sampled data from the input module to the CPU. These parallel and serial databuses are shown as a single interconnection module in the following figure, which shows typical modules and the flow of data between them.

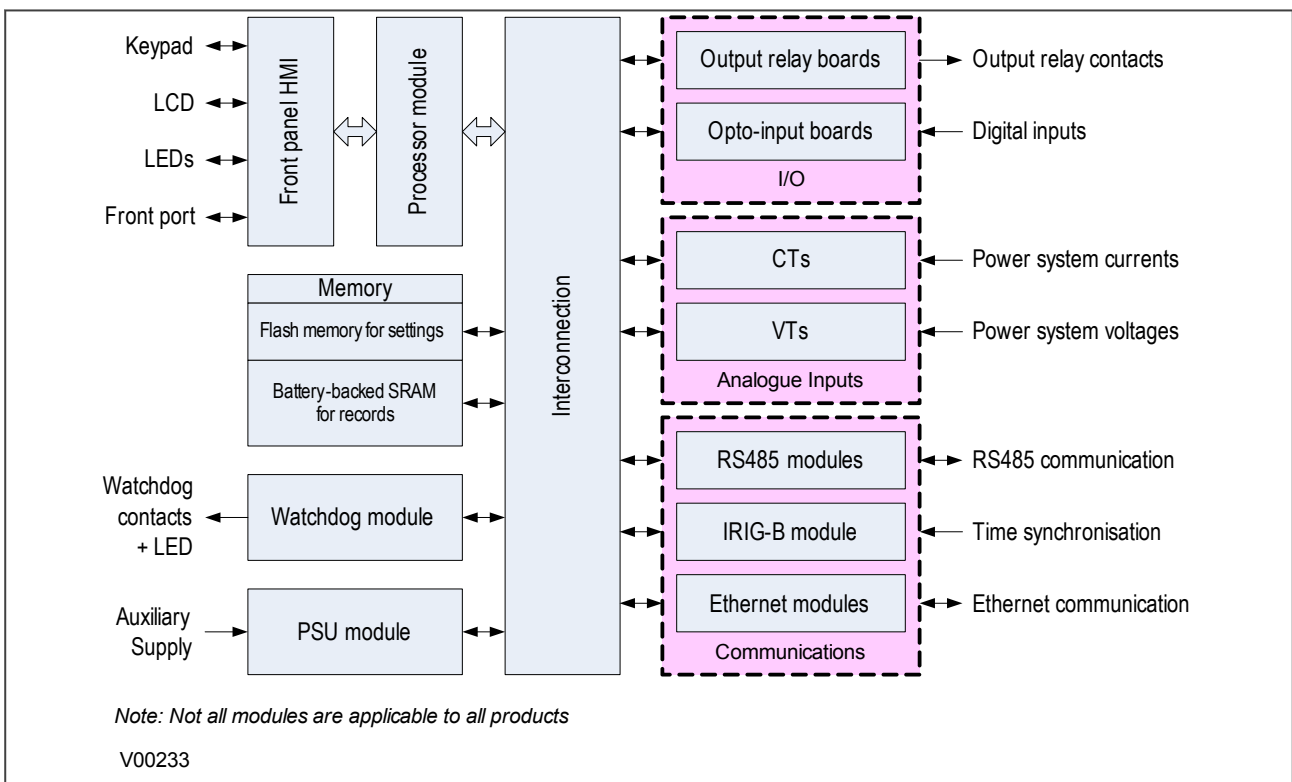


Figure 4: Hardware architecture

3 MECHANICAL IMPLEMENTATION

All products based on the Px4x platform have common hardware architecture. The hardware is modular and consists of the following main parts:

- Case and terminal blocks
- Boards and modules
- Front panel

The case comprises the housing metalwork and terminal blocks at the rear. The boards fasten into the terminal blocks and are connected together by a ribbon cable. This ribbon cable connects to the processor in the front panel.

The following diagram shows an exploded view of a typical product. The diagram shown does not necessarily represent exactly the product model described in this manual.

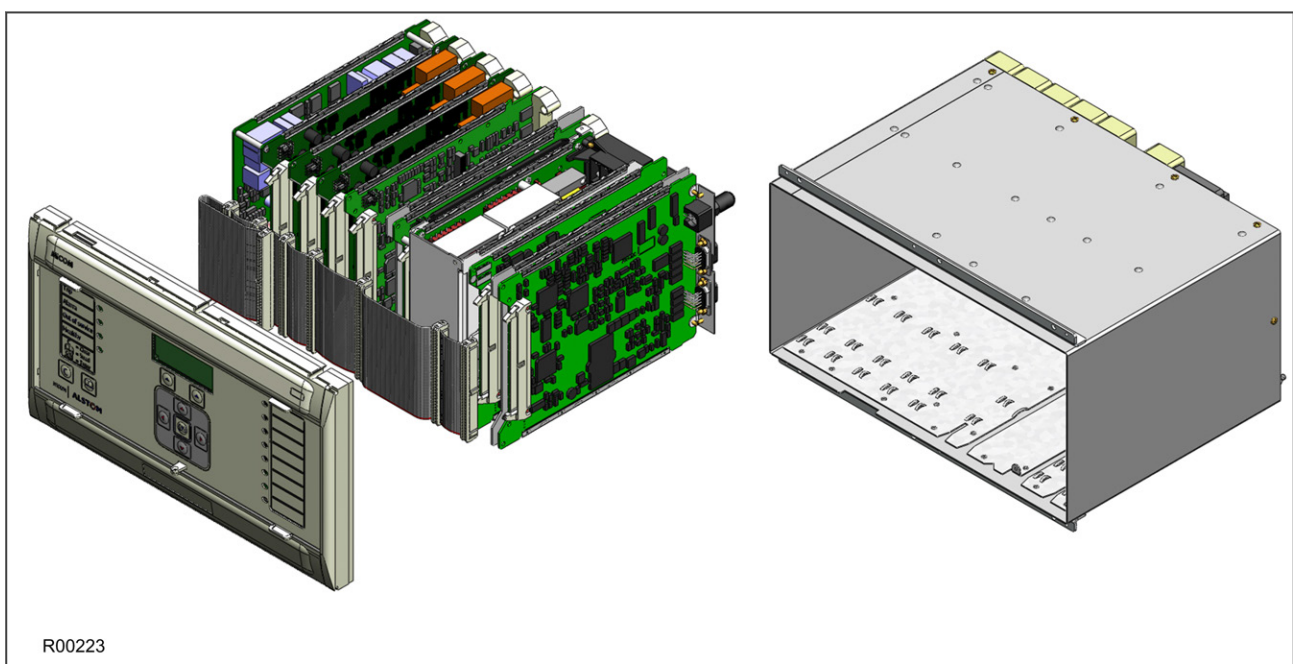


Figure 5: Exploded view of IED

3.1 HOUSING VARIANTS

The Px4x range of products are implemented in a range of case sizes. Case dimensions for industrial products usually follow modular measurement units based on rack sizes. These are: U for height and TE for width, where:

- 1U = 1.75 inches = 44.45 mm
- 1TE = 0.2 inches = 5.08 mm

The products are available in panel-mount or standalone versions. All products are nominally 4U high. This equates to 177.8 mm or 7 inches.

The cases are pre-finished steel with a conductive covering of aluminium and zinc. This provides good grounding at all joints, providing a low resistance path to earth that is essential for performance in the presence of external noise.

The case width depends on the product type and its hardware options. There are three different case widths for the described range of products: 40TE, 60TE and 80TE. The case dimensions and compatibility criteria are as follows:

Case width (TE)	Case width (mm)	Case width (inches)
40TE	203.2	8
60TE	304.8	12
80TE	406.4	16

Note:
Not all case sizes are available for all models

3.2 LIST OF BOARDS


The product's hardware consists of several modules drawn from a standard range. The exact specification and number of hardware modules depends on the model number and variant. Depending on the exact model, the product in question will use a selection of the following boards.

Board	Use
Main Processor board - 40TE or smaller	Main Processor board – without support for function keys
Main Processor board - 60TE or larger	Main Processor board – with support for function keys
Power supply board - 24/54V DC	Power supply input. Accepts DC voltage between 24V and 54V
Power supply board - 48/125V DC	Power supply input. Accepts DC voltage between 48V and 125V
Power supply board - 110/250V DC	Power supply input. Accepts DC voltage between 110V and 125V
Transformer board	Contains the voltage and current transformers
Input board	Contains the A/D conversion circuitry
Input board with opto-inputs	Contains the A/D conversion circuitry + 8 digital opto-inputs
IRIG-B board - modulated input	Interface board for modulated IRIG-B timing signal
IRIG-B board - demodulated input	Interface board for demodulated IRIG-B timing signal
Fibre board	Interface board for fibre-based RS485 connection
Fibre board + IRIG-B	Interface board for fibre-based RS485 connection + demodulated IRIG-B
2nd rear communications board	Interface board for RS232 / RS485 connections
2nd rear communications board with IRIG-B input	Interface board for RS232 / RS485 + IRIG-B connections
100MHz Ethernet board	Standard 100MHz Ethernet board for LAN connection (fibre + copper)
100MHz Ethernet board with modulated IRIG-B	Standard 100MHz Ethernet board (fibre / copper) + modulated IRIG-B
100MHz Ethernet board with demodulated IRIG-B	Standard 100MHz Ethernet board (fibre / copper)+ demodulated IRIG-B
High-break output relay board	Output relay board with high breaking capacity relays
Redundant Ethernet SHP+ modulated IRIG-B	Redundant SHP Ethernet board (2 fibre ports) + modulated IRIG-B input
Redundant Ethernet SHP + demodulated IRIG-B	Redundant SHP Ethernet board (2 fibre ports) + demodulated IRIG-B input
Redundant Ethernet RSTP + modulated IRIG-B	Redundant RSTP Ethernet board (2 fibre ports) + modulated IRIG-B input
Redundant Ethernet RSTP+ demodulated IRIG-B	Redundant RSTP Ethernet board (2 fibre ports) + demodulated IRIG-B input
Redundant Ethernet DHP+ modulated IRIG-B	Redundant DHP Ethernet board (2 fibre ports) + modulated IRIG-B input
Redundant Ethernet DHP+ demodulated IRIG-B	Redundant DHP Ethernet board (2 fibre ports) + demodulated IRIG-B input
Redundant Ethernet PRP+ modulated IRIG-B	Redundant PRP Ethernet board (2 fibre ports) + modulated IRIG-B input
Redundant Ethernet PRP+ demodulated IRIG-B	Redundant PRP Ethernet board (2 fibre ports) + demodulated IRIG-B input
Output relay output board	Standard output relay board

4 FRONT PANEL

4.1 FRONT PANEL

Depending on the exact model and chosen options, the product will be housed in either a 40TE, 60TE or 80TE case. By way of example, the following diagram shows the front panel of a typical 60TE unit. The front panels of the products based on 40TE and 80TE cases have a lot of commonality and differ only in the number of hotkeys and user-programmable LEDs. The hinged covers at the top and bottom of the front panel are shown open. An optional transparent front cover physically protects the front panel.

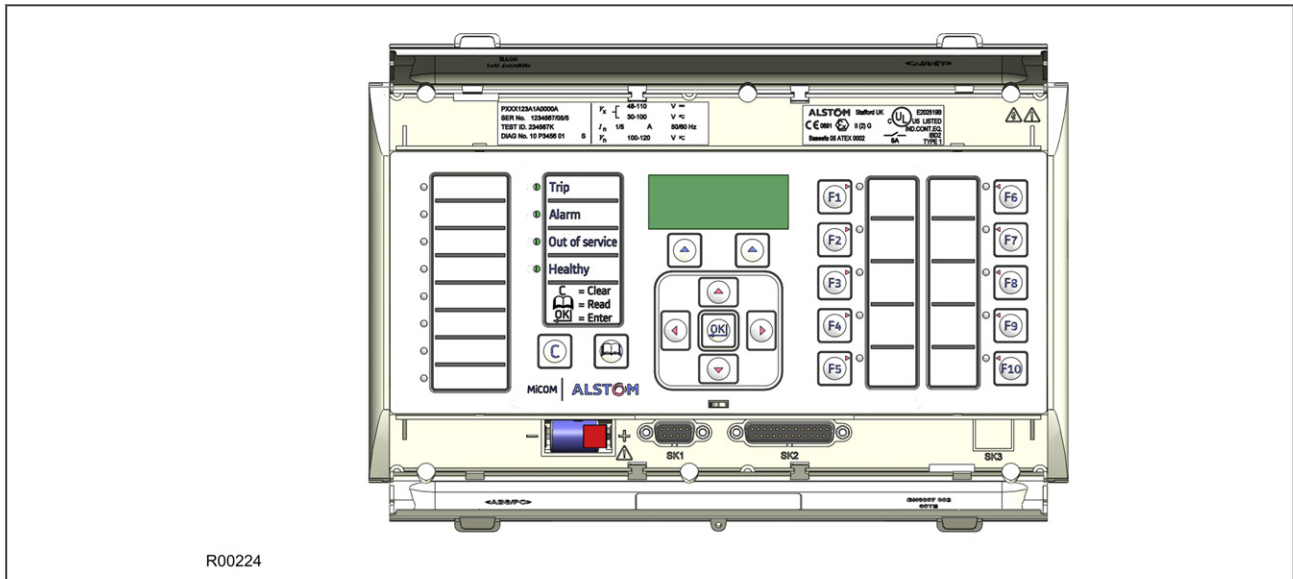

R00224

Figure 6: Front panel (60TE)

The front panel consists of:

- Top and bottom compartments with hinged cover
- LCD display
- Keypad
- 9 pin D-type serial port
- 25 pin D-type parallel port
- Fixed function LEDs
- Function keys and LEDs (60TE and 80TE models)
- Programmable LEDs (60TE and 80TE models)

4.1.1 TOP COMPARTMENT WITH HINGED COVER

The top compartment contains labels for the:






- Serial number
- Current and voltage ratings.

The bottom compartment contains:

- A compartment for a 1/2 AA size backup battery (used to back up the real time clock and event, fault, and disturbance records).
- A 9-pin female D-type front port for an EIA(RS)232 serial connection to a PC.
- A 25-pin female D-type parallel port for monitoring internal signals and downloading software and language text.

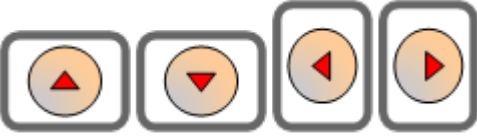4.1.2 KEYPAD

The keypad consists of the following keys:

4 arrow keys to navigate the menus (organised around the Enter key)	
An enter key for executing the chosen option	
A clear key for clearing the last command	
A read key for viewing larger blocks of text (arrow keys now used for scrolling)	
2 hot keys for scrolling through the default display and for control of setting groups. These are situated directly below the LCD display.	

4.1.2.1 LIQUID CRYSTAL DISPLAY

The LCD is a high resolution monochrome display with 16 characters by 3 lines and controllable back light.

4.1.3 FRONT SERIAL PORT (SK1)

The front serial port is a 9-pin female D-type connector, providing RS232 serial data communication. It is situated under the bottom hinged cover, and is used to communicate with a locally connected PC. It is used to transfer settings data between the PC and the IED.

The port is intended for temporary connection during testing, installation and commissioning. It is not intended to be used for permanent SCADA communications. This port supports the Courier communication protocol only. Courier is a proprietary communication protocol to allow communication with a range of protection equipment, and between the device and the Windows-based support software package.

This port can be considered as a DCE (Data Communication Equipment) port, so you can connect this port device to a PC with an EIA(RS)232 serial cable up to 15 m in length.

The inactivity timer for the front port is set to 15 minutes. This controls how long the unit maintains its level of password access on the front port. If no messages are received on the front port for 15 minutes, any password access level that has been enabled is cancelled.

Note:

The front serial port does not support automatic extraction of event and disturbance records, although this data can be accessed manually.

4.1.3.1 FRONT SERIAL PORT (SK1) CONNECTIONS

The port pin-out follows the standard for Data Communication Equipment (DCE) device with the following pin connections on a 9-pin connector.

Pin number	Description
2	Tx Transmit data
3	Rx Receive data
5	0 V Zero volts common

You must use the correct serial cable, or the communication will not work. A straight-through serial cable is required, connecting pin 2 to pin 2, pin 3 to pin 3, and pin 5 to pin 5.

Once the physical connection from the unit to the PC is made, the PC's communication settings must be set to match those of the IED. The following table shows the unit's communication settings for the front port.

Protocol	Courier
Baud rate	19,200 bps
Courier address	1
Message format	11 bit - 1 start bit, 8 data bits, 1 parity bit (even parity), 1 stop bit

4.1.4 FRONT PARALLEL PORT (SK2)

The front parallel port uses a 25 pin D-type connector. It is used for commissioning, downloading firmware updates and menu text editing.

4.1.5 FIXED FUNCTION LEDS

Four fixed-function LEDs on the left-hand side of the front panel indicate the following conditions.

- Trip (Red) switches ON when the IED issues a trip signal. It is reset when the associated fault record is cleared from the front display. Also the trip LED can be configured as self-resetting.
- Alarm (Yellow) flashes when the IED registers an alarm. This may be triggered by a fault, event or maintenance record. The LED flashes until the alarms have been accepted (read), then changes to constantly ON. When the alarms are cleared, the LED switches OFF.
- Out of service (Yellow) is ON when the IED's functions are unavailable.
- Healthy (Green) is ON when the IED is in correct working order, and should be ON at all times. It goes OFF if the unit's self-tests show there is an error in the hardware or software. The state of the healthy LED is reflected by the watchdog contacts at the back of the unit.

4.1.6 FUNCTION KEYS

The programmable function keys are available for custom use for some models.

Factory default settings associate specific functions to these keys, but by using programmable scheme logic, you can change the default functions of these keys to fit specific needs. Adjacent to these function keys are programmable LEDs, which are usually set to be associated with their respective function keys.

4.1.7 PROGRAMABLE LEDS

The device has a number of programmable LEDs, which can be associated with PSL-generated signals. The programmable LEDs for most models are tri-colour and can be set to RED, YELLOW or GREEN. However the programmable LEDs for some models are single-colour (red) only. The single-colour LEDs can be recognised by virtue of the fact they are large and slightly oval, whereas the tri-colour LEDs are small and round.

5 REAR PANEL

The MiCOM Px40 series uses a modular construction. Most of the internal workings are on boards and modules which fit into slots. Some of the boards plug into terminal blocks, which are bolted onto the rear of the unit. However, some boards such as the communications boards have their own connectors. The rear panel consists of these terminal blocks plus the rears of the communications boards.

The back panel cut-outs and slot allocations vary. This depends on the product, the type of boards and the terminal blocks needed to populate the case. The following diagram shows a typical rear view of a case populated with various boards.

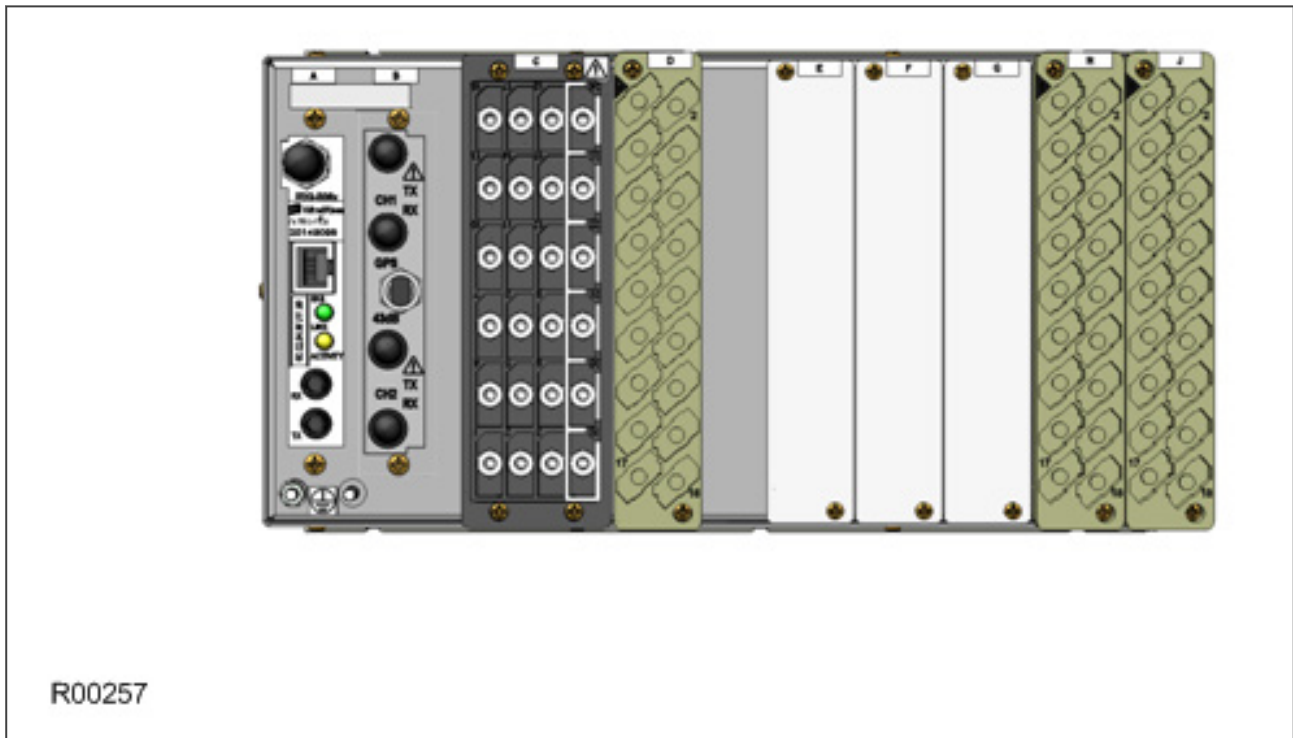


Figure 7: Rear view of populated case

Note:

This diagram is just an example and may not show the exact product described in this manual. It also does not show the full range of available boards, just a typical arrangement.

Not all slots are the same size. The slot width depends on the type of board or terminal block. For example, HD (heavy duty) terminal blocks, as required for the analogue inputs, require a wider slot size than MD (medium duty) terminal blocks. The board positions are not generally interchangeable. Each slot is designed to house a particular type of board. Again this is model-dependent.

The device may use one or more of the terminal block types shown in the following diagram. The terminal blocks are fastened to the rear panel with screws.

- Heavy duty (HD) terminal blocks for CT and VT circuits
- Medium duty (MD) terminal blocks for the power supply, opto-inputs, relay outputs and rear communications port
- MiDOS terminal blocks for CT and VT circuits
- RTD/CLIO terminal block for connection to analogue transducers

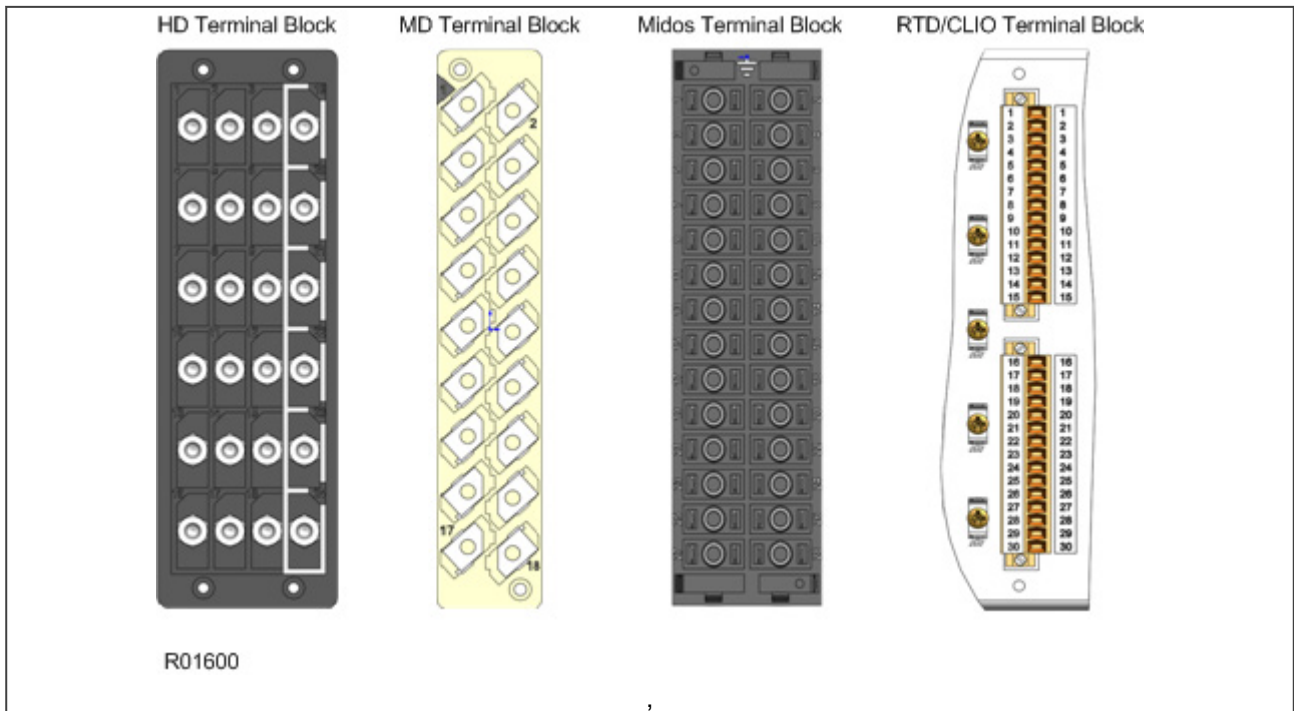


Figure 8: Terminal block types

Note:

Not all products use all types of terminal blocks. The product described in this manual may use one or more of the above types.

6 BOARDS AND MODULES

Each product comprises a selection of PCBs (Printed Circuit Boards) and subassemblies, depending on the chosen configuration.

6.1 PCBS

A PCB typically consists of the components, a front connector for connecting into the main system parallel bus via a ribbon cable, and an interface to the rear. This rear interface may be:

- Directly presented to the outside world (as is the case for communication boards such as Ethernet Boards)
- Presented to a connector, which in turn connects into a terminal block bolted onto the rear of the case (as is the case for most of the other board types)

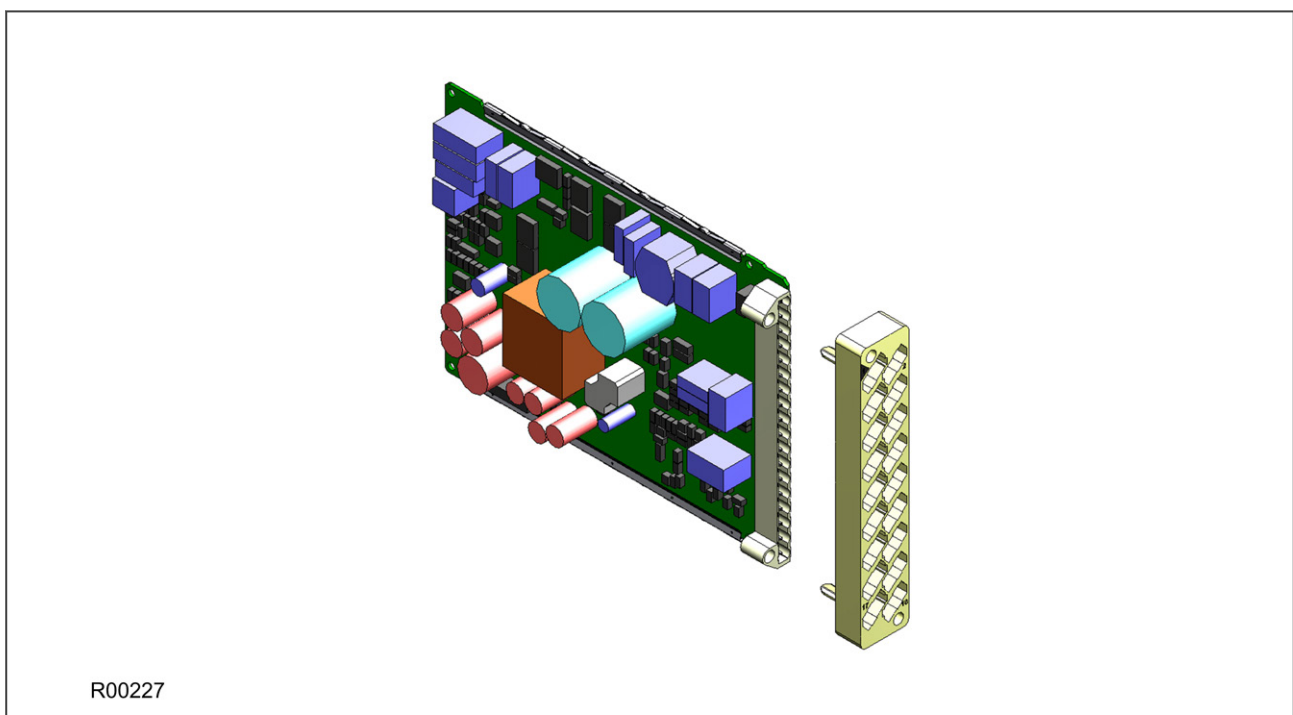


Figure 9: Rear connection to terminal block

6.2 SUBASSEMBLIES

A sub-assembly consists of two or more boards bolted together with spacers and connected with electrical connectors. It may also have other special requirements such as being encased in a metal housing for shielding against electromagnetic radiation.

Boards are designated by a part number beginning with ZN, whereas pre-assembled sub-assemblies are designated with a part number beginning with GN. Sub-assemblies, which are put together at the production stage, do not have a separate part number.

The products in the Px40 series typically contain two sub-assemblies:

- The power supply assembly comprising:
 - A power supply board
 - An output relay board
- The input module comprising:
 - One or more transformer boards, which contains the voltage and current transformers (partially or fully populated)
 - One or more input boards
 - Metal protective covers for EM (electromagnetic) shielding

The input module is pre-assembled and is therefore assigned a GN number, whereas the power supply module is assembled at production stage and does not therefore have an individual part number.

6.3 MAIN PROCESSOR BOARD

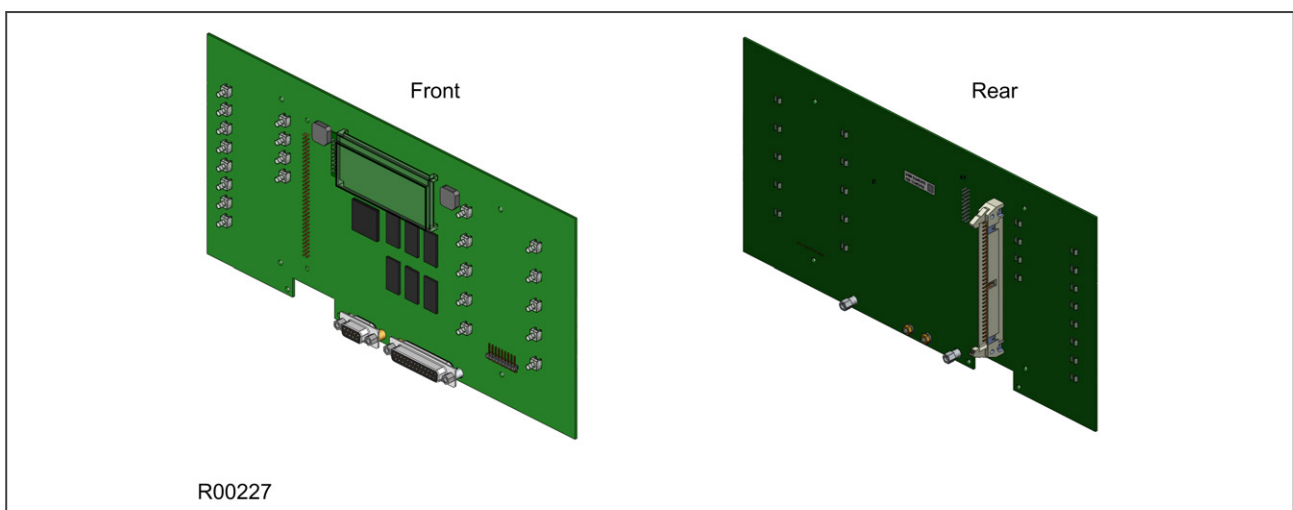


Figure 10: Main processor board

The main processor board performs all calculations and controls the operation of all other modules in the IED, including the data communication and user interfaces. This is the only board that does not fit into one of the slots. It resides in the front panel and connects to the rest of the system using an internal ribbon cable.

The LCD and LEDs are mounted on the processor board along with the front panel communication ports.

The memory on the main processor board is split into two categories: volatile and non-volatile. The volatile memory is fast access SRAM, used by the processor to run the software and store data during calculations. The non-volatile memory is sub-divided into two groups:

- Flash memory to store software code, text and configuration data including the present setting values.
- Battery-backed SRAM to store disturbance, event, fault and maintenance record data.

There are two board types available depending on the size of the case:

- For models in 40TE cases
- For models in 60TE cases and larger

6.4 POWER SUPPLY BOARD

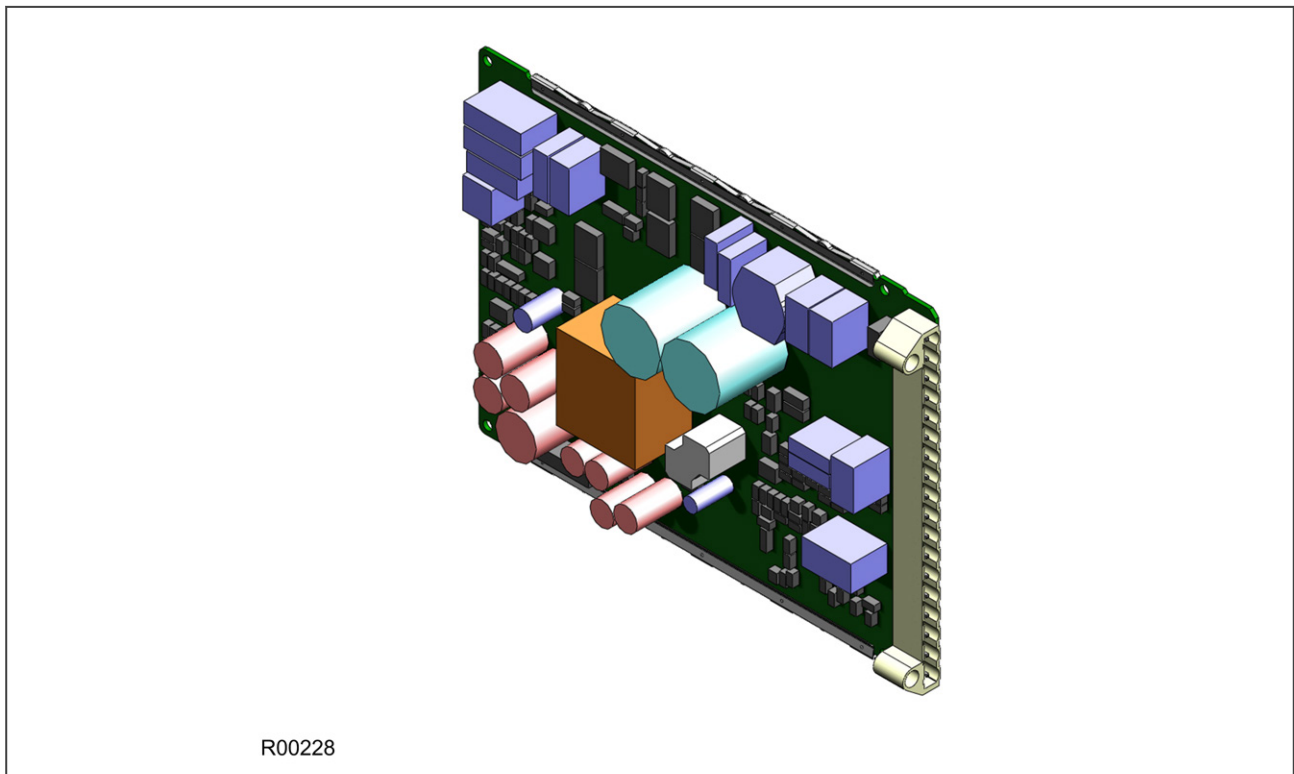


Figure 11: Power supply board

The power supply board provides power to the unit. One of three different configurations of the power supply board can be fitted to the unit. This is specified at the time of order and depends on the magnitude of the supply voltage that will be connected to it.

There are three board types, which support the following voltage ranges:

- 24/54 V DC
- 48/125 V DC or 40-100V AC
- 110/250 V DC or 100-240V AC

The power supply board connector plugs into a medium duty terminal block. This terminal block is always positioned on the right hand side of the unit looking from the rear.

The power supply board is usually assembled together with a relay output board to form a complete subassembly, as shown in the following diagram.

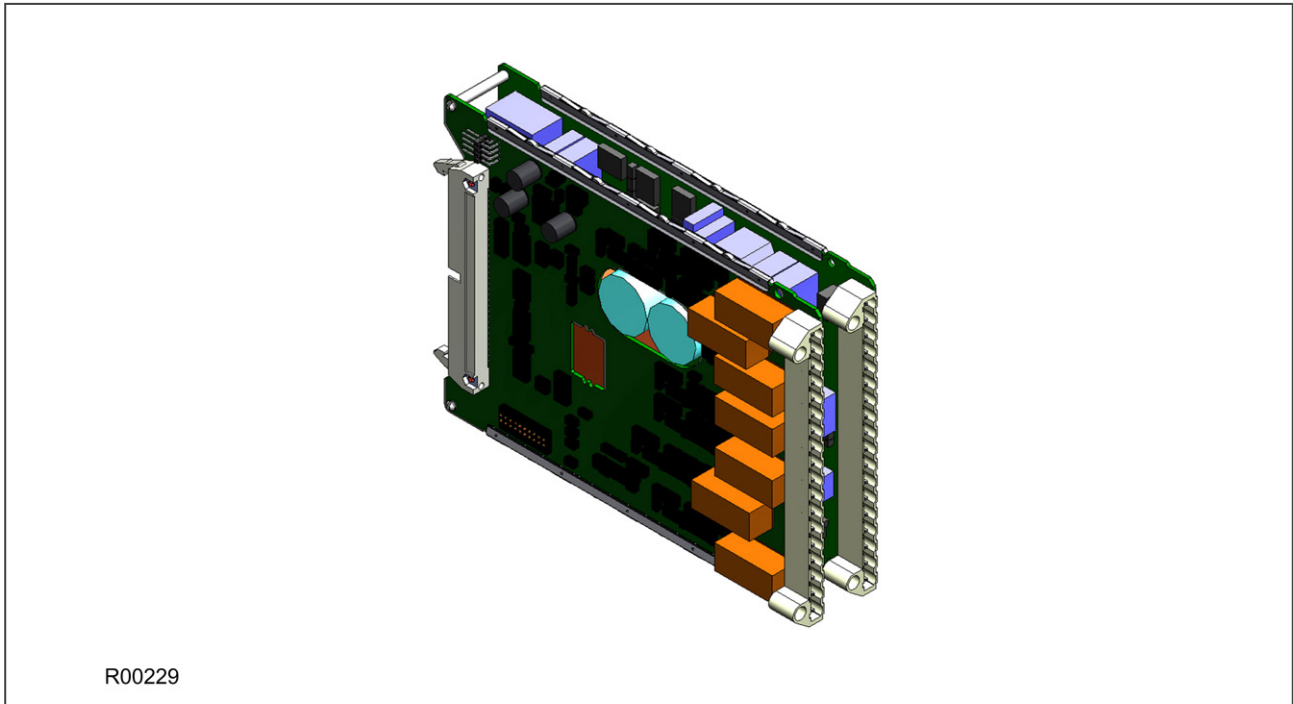


Figure 12: Power supply assembly

The power supply outputs are used to provide isolated power supply rails to the various modules within the unit. Three voltage levels are used by the unit's modules:

- 5.1 V for all of the digital circuits
- +/- 16 V for the analogue electronics such as on the input board
- 22 V for driving the output relay coils.

All power supply voltages, including the 0 V earth line, are distributed around the unit by the 64-way ribbon cable.

The power supply board incorporates inrush current limiting. This limits the peak inrush current to approximately 10 A.

Power is applied to pins 1 and 2 of the terminal block, where pin 1 is negative and pin 2 is positive. The pin numbers are clearly marked on the terminal block as shown in the following diagram.

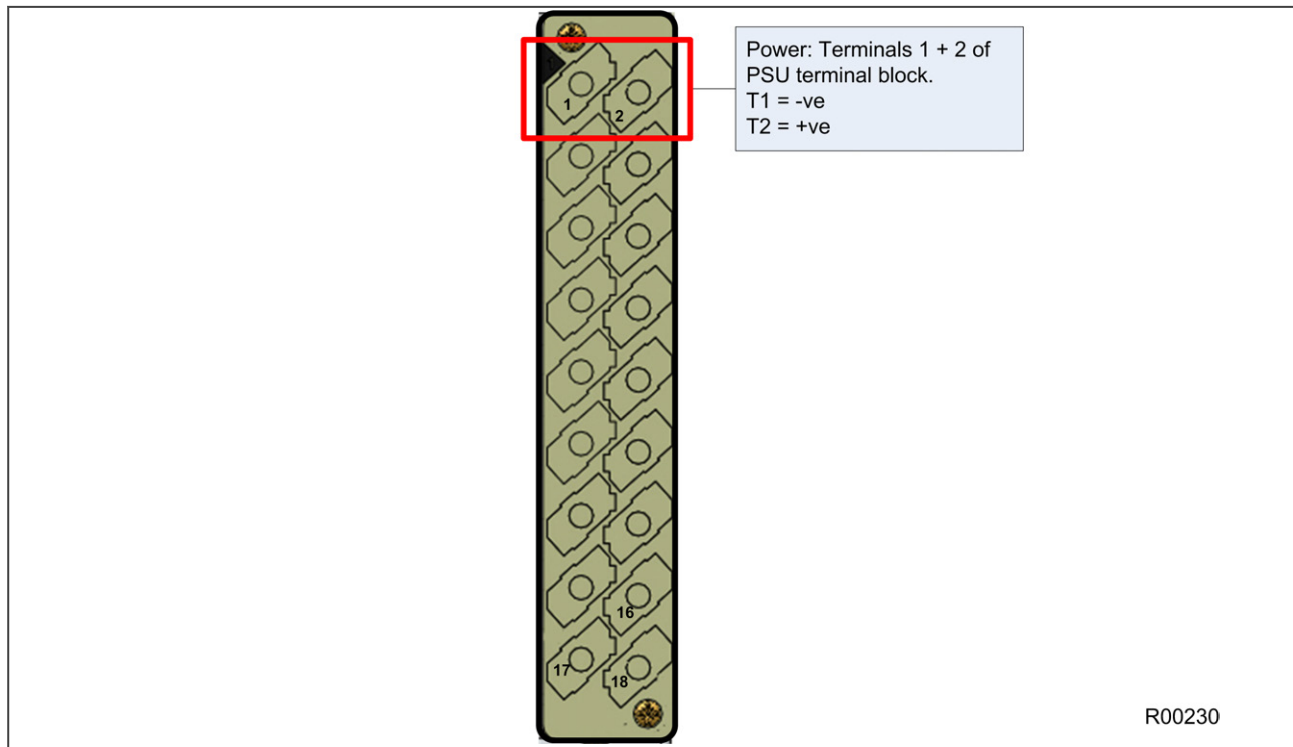


Figure 13: Power supply terminals

6.4.1 WATCHDOG

The Watchdog contacts are also hosted on the power supply board. The Watchdog facility provides two output relay contacts, one normally open and one normally closed. These are used to indicate the health of the device and are driven by the main processor board, which continually monitors the hardware and software when the device is in service.

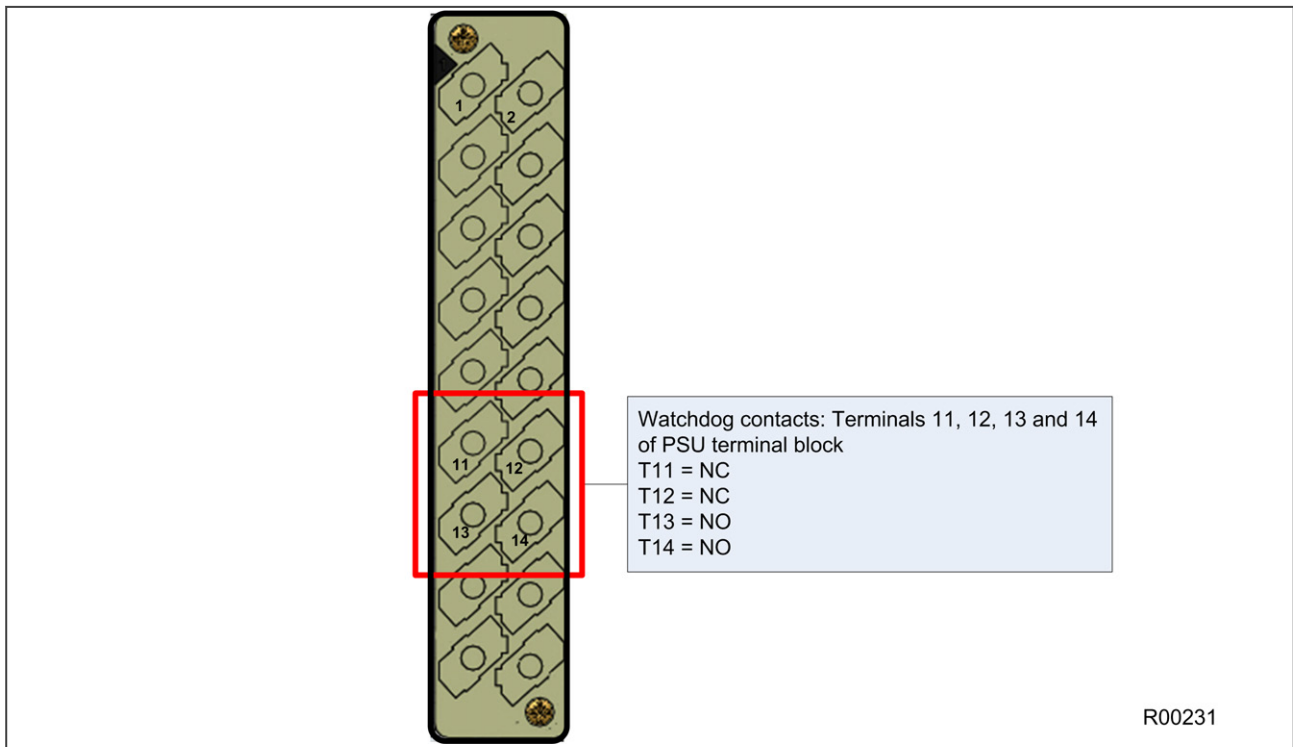


Figure 14: Watchdog contact terminals

6.4.2 REAR SERIAL PORT

The rear serial port (RP1) is housed on the power supply board. This is a three-terminal EIA(RS)485 serial communications port and is intended for use with a permanently wired connection to a remote control centre for SCADA communication. The interface supports half-duplex communication and provides optical isolation for the serial data being transmitted and received.

The physical connectivity is achieved using three screw terminals; two for the signal connection, and the third for the earth shield of the cable. These are located on pins 16, 17 and 18 of the power supply terminal block, which is on the far right looking from the rear. The interface can be selected between RS485 and K-bus. When the K-Bus option is selected, the two signal connections are not polarity conscious.

The polarity independent K-bus can only be used for the Courier data protocol. The polarity conscious MODBUS, IEC 60870-5-103 and DNP3.0 protocols need RS485.

The following diagram shows the rear serial port. The pin assignments are as follows:

- Pin 16: Earth shield
- Pin 17: Negative signal
- Pin 18: Positive signal

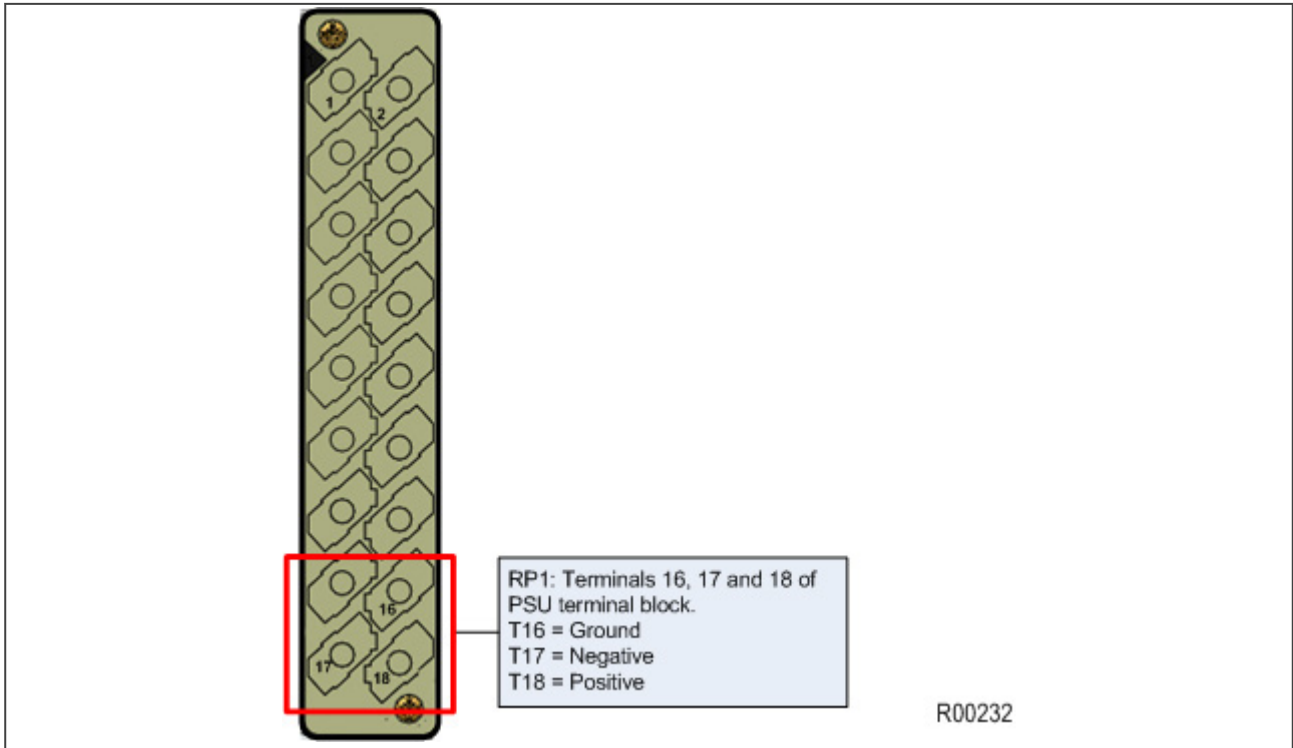


Figure 15: Rear serial port terminals

An additional serial port with D-type presentation is available as an optional board, if required.

6.5 INPUT MODULE - 1 TRANSFORMER BOARD

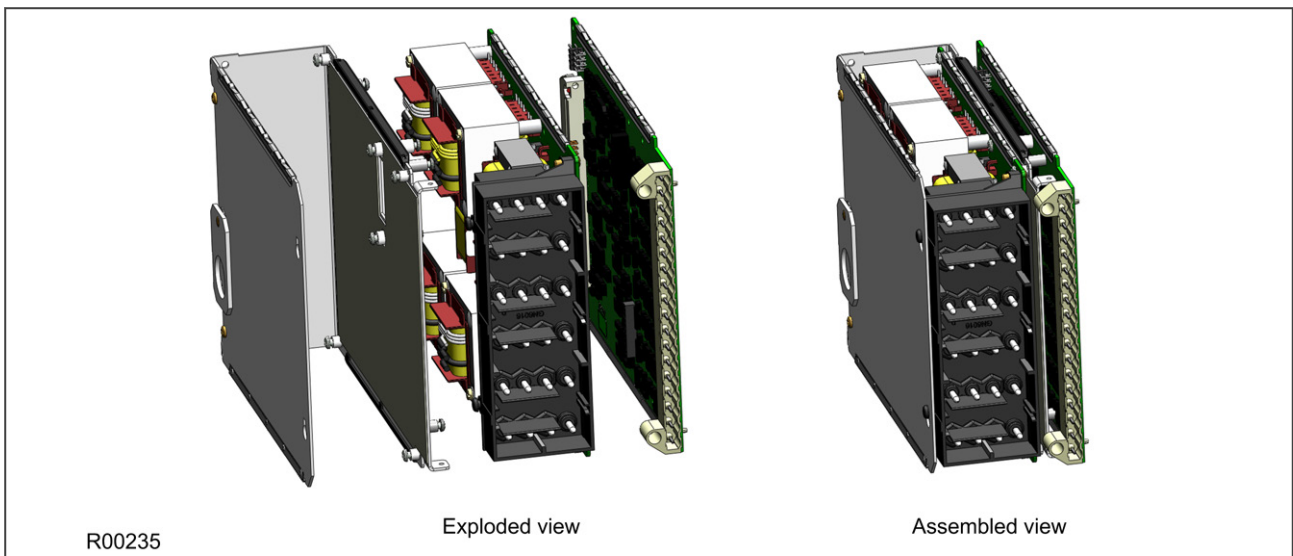


Figure 16: Input module - 1 transformer board

The input module consists of the main input board coupled together with an instrument transformer board. The instrument transformer board contains the voltage and current transformers, which isolate and scale the analogue input signals delivered by the system transformers. The input board contains the A/D conversion and digital processing circuitry, as well as eight digital isolated inputs (opto-inputs).

The boards are connected together physically and electrically. The module is encased in a metal housing for shielding against electromagnetic interference.

6.5.1 INPUT MODULE CIRCUIT DESCRIPTION

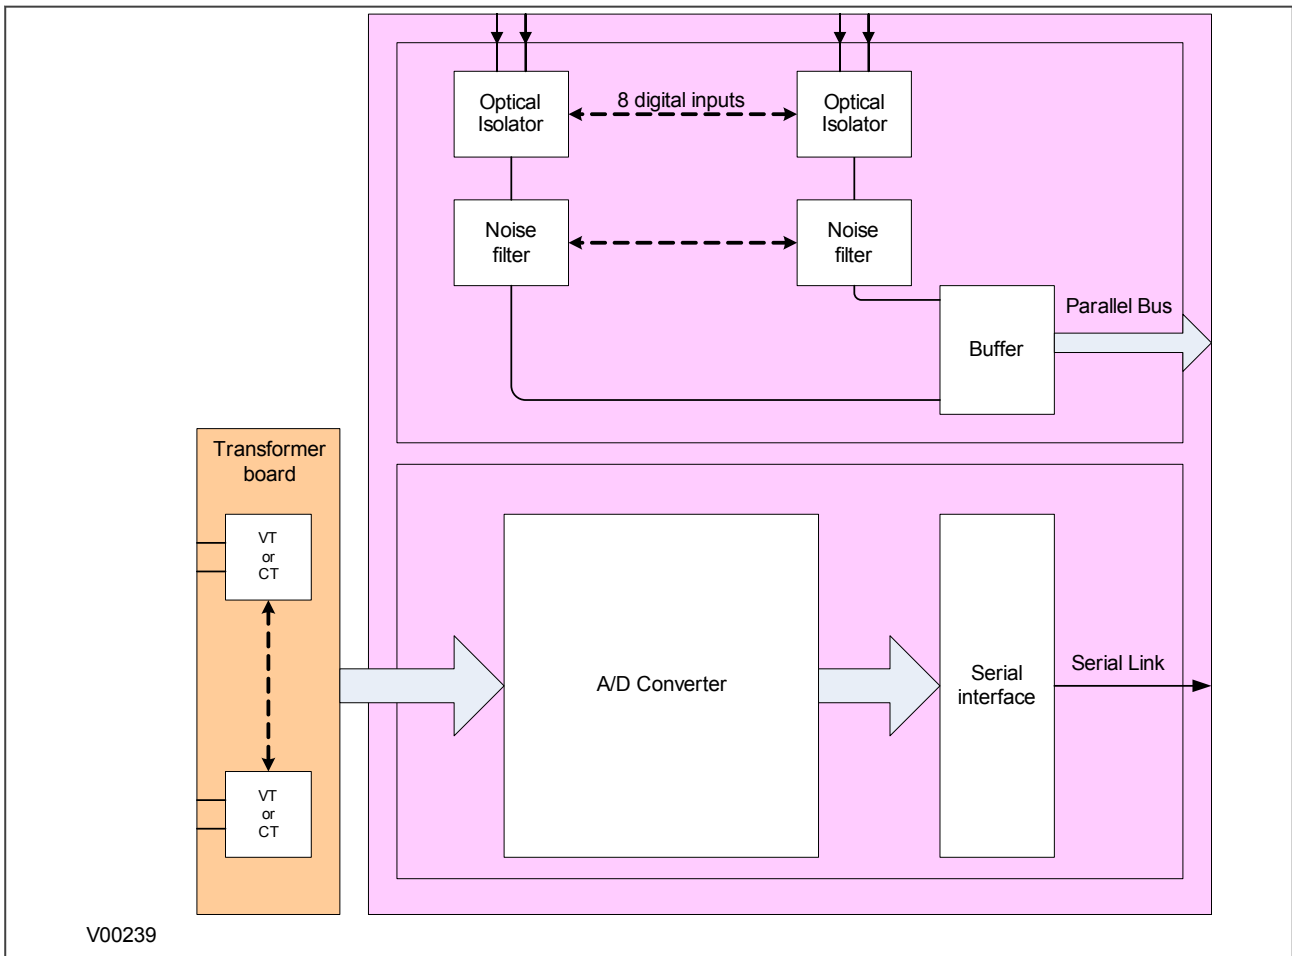


Figure 17: Input module schematic

A/D Conversion

The differential analogue inputs from the CT and VT transformers are presented to the main input board as shown. Each differential input is first converted to a single input quantity referenced to the input board's earth potential. The analogue inputs are sampled and converted to digital, then filtered to remove unwanted properties. The samples are then passed through a serial interface module which outputs data on the serial sample data bus.

The calibration coefficients are stored in non-volatile memory. These are used by the processor board to correct for any amplitude or phase errors introduced by the transformers and analogue circuitry.

Opto-isolated inputs

The other function of the input board is to read in the state of the digital inputs. As with the analogue inputs, the digital inputs must be electrically isolated from the power system. This is achieved by means of the 8 on-board optical isolators for connection of up to 8 digital signals. The digital signals are passed through an optional noise filter before being buffered and presented to the unit's processing boards in the form of a parallel data bus.

This selectable filtering allows the use of a pre-set filter of $\frac{1}{2}$ cycle which renders the input immune to induced power-system noise on the wiring. Although this method is secure it can be slow, particularly for

inter-tripping. This can be improved by switching off the $\frac{1}{2}$ cycle filter, in which case one of the following methods to reduce ac noise should be considered.

- Use double pole switching on the input
- Use screened twisted cable on the input circuit

The opto-isolated logic inputs can be configured for the nominal battery voltage of the circuit for which they are a part, allowing different voltages for different circuits such as signalling and tripping.

Note:

The opto-input circuitry can be provided without the A/D circuitry as a separate board, which can provide supplementary opto-inputs.

6.5.2 TRANSFORMER BOARD

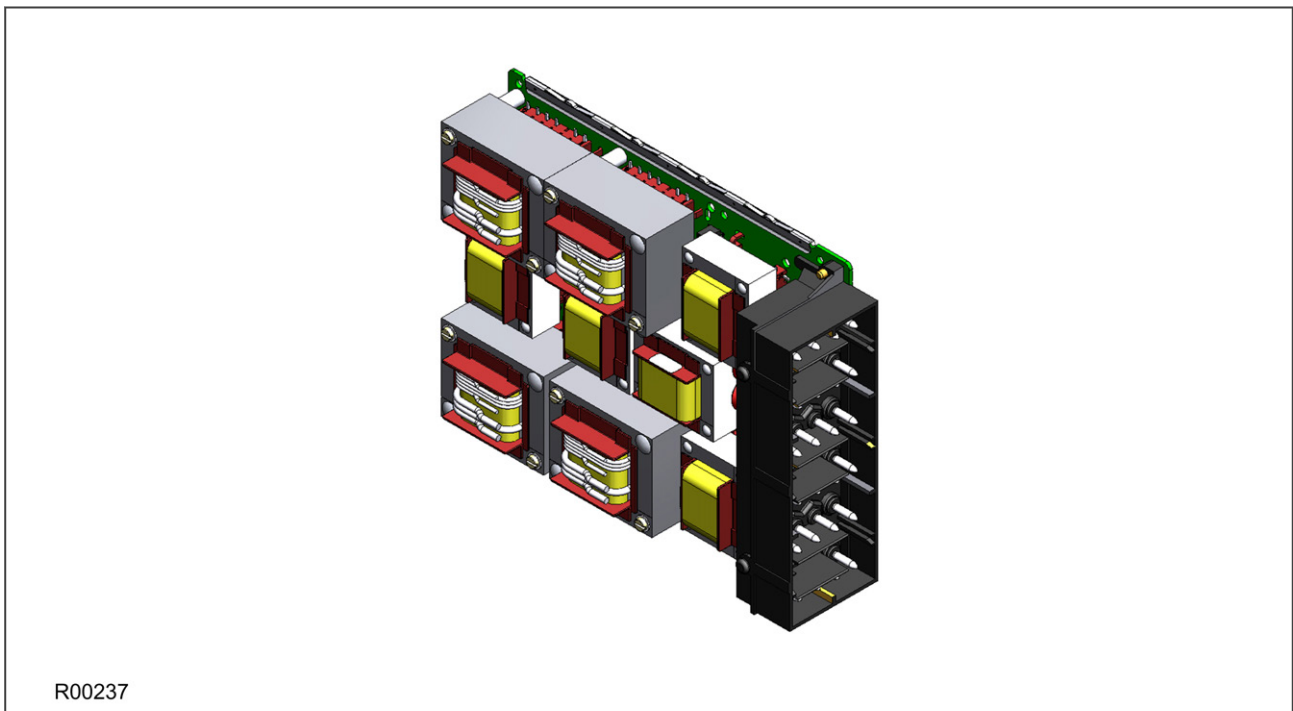


Figure 18: Transformer board

The transformer board hosts the current and voltage transformers. These are used to step down the currents and voltages originating from the power systems' current and voltage transformers to levels that can be used by the devices' electronic circuitry. In addition to this, the on-board CT and VT transformers provide electrical isolation between the unit and the power system.

The transformer board is connected physically and electrically to the input board to form a complete input module.

For terminal connections, please refer to the wiring diagrams.

6.5.3 INPUT BOARD

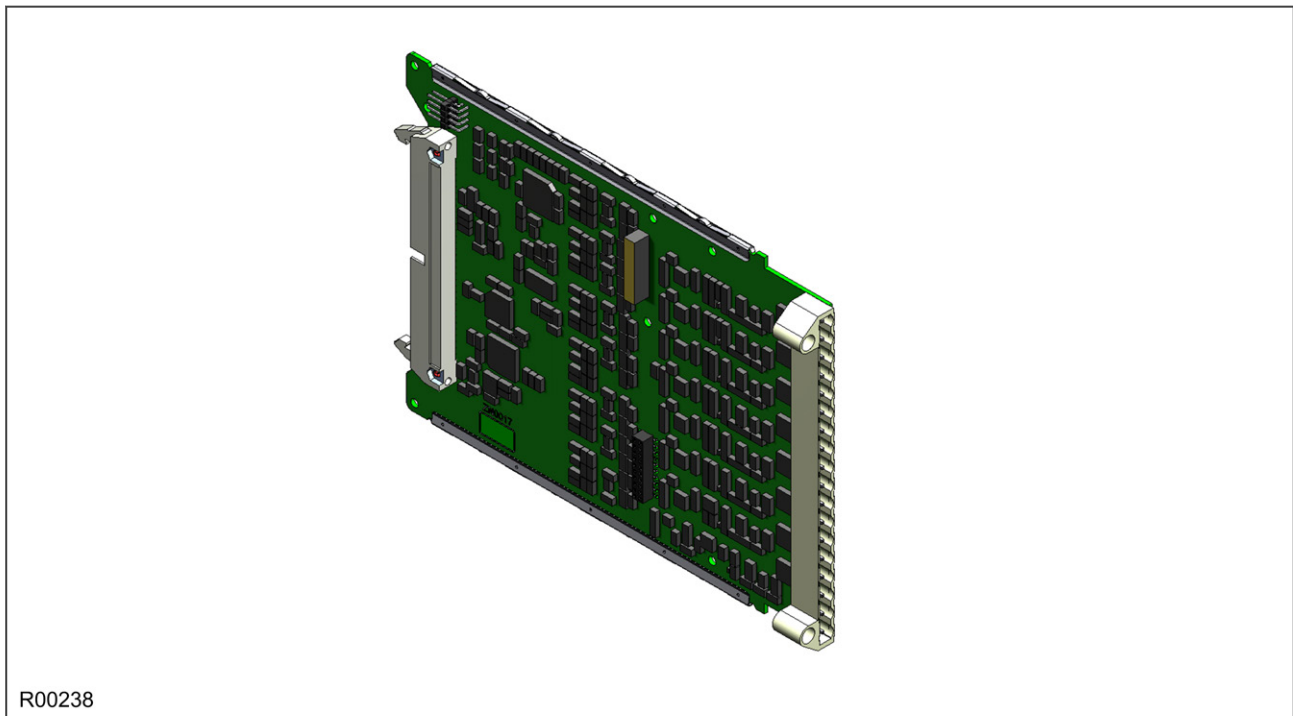


Figure 19: Input board

The input board is used to convert the analogue signals delivered by the current and voltage transformers into digital quantities used by the IED. This input board also has on-board opto-input circuitry, providing eight optically-isolated digital inputs and associated noise filtering and buffering. These opto-inputs are presented to the user by means of a MD terminal block, which sits adjacent to the analogue inputs HD terminal block.

The input board is connected physically and electrically to the transformer board to form a complete input module.

The terminal numbers of the opto-inputs are as follows:

Terminal Number	Opto-input
Terminal 1	Opto 1 -ve
Terminal 2	Opto 1 +ve
Terminal 3	Opto 2 -ve
Terminal 4	Opto 2 +ve
Terminal 5	Opto 3 -ve
Terminal 6	Opto 3 +ve
Terminal 7	Opto 4 -ve
Terminal 8	Opto 4 +ve
Terminal 9	Opto 5 -ve
Terminal 10	Opto 5 +ve
Terminal 11	Opto 6 -ve
Terminal 12	Opto 6 +ve
Terminal 13	Opto 7 -ve
Terminal 14	Opto 7 +ve
Terminal 15	Opto 8 -ve

Terminal Number	Opto-input
Terminal 16	Opto 8 +ve
Terminal 17	Common
Terminal 18	Common

6.6 STANDARD OUTPUT RELAY BOARD

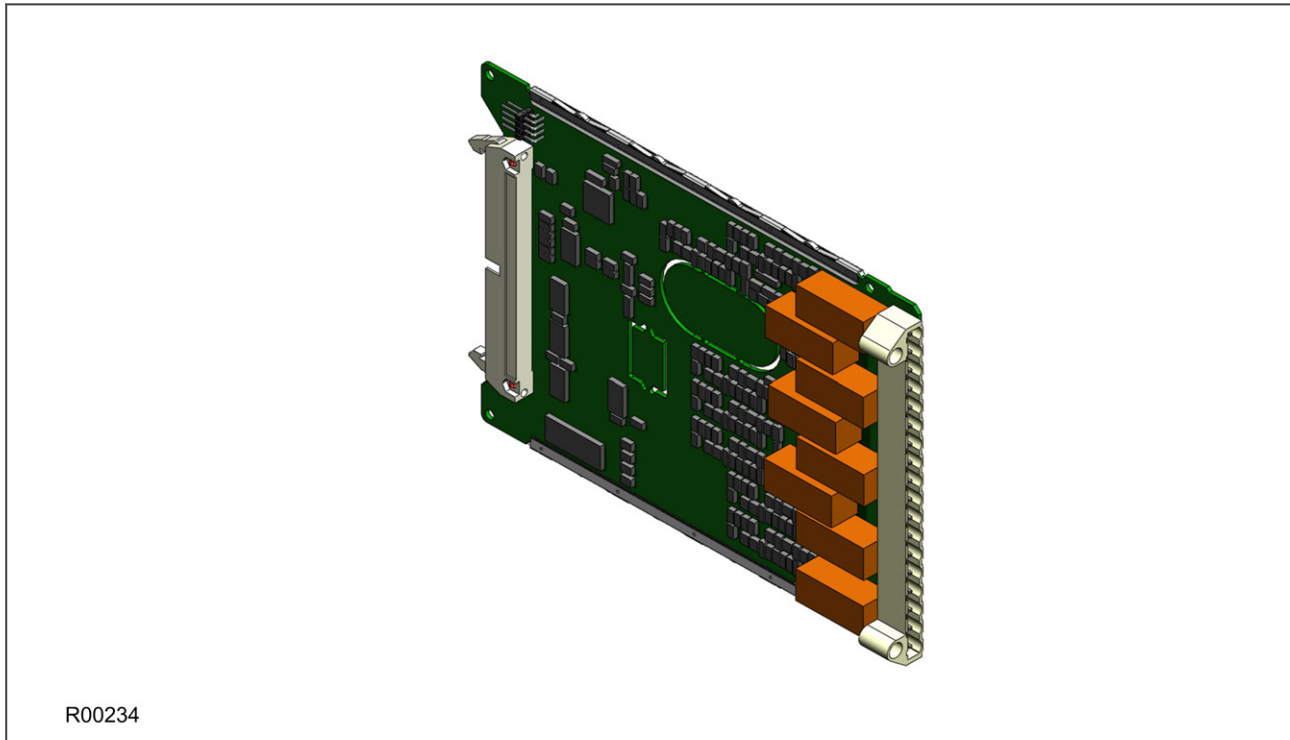


Figure 20: Standard output relay board - 8 contacts

This output relay board has 8 relays with 6 Normally Open contacts and 2 Changeover contacts.

The output relay board is provided together with the power supply board as a complete assembly, or independently for the purposes of relay output expansion.

There are two cut-out locations in the board. These can be removed to allow power supply components to protrude when coupling the output relay board to the power supply board. If the output relay board is to be used independently, these cut-out locations remain intact.

The terminal numbers are as follows:

Terminal Number	Output Relay
Terminal 1	Relay 1 NO
Terminal 2	Relay 1 NO
Terminal 3	Relay 2 NO
Terminal 4	Relay 2 NO
Terminal 5	Relay 3 NO
Terminal 6	Relay 3 NO
Terminal 7	Relay 4 NO
Terminal 8	Relay 4 NO
Terminal 9	Relay 5 NO

Terminal Number	Output Relay
Terminal 10	Relay 5 NO
Terminal 11	Relay 6 NO
Terminal 12	Relay 6 NO
Terminal 13	Relay 7 changeover
Terminal 14	Relay 7 changeover
Terminal 15	Relay 7 common
Terminal 16	Relay 8 changeover
Terminal 17	Relay 8 changeover
Terminal 18	Relay 8 common

6.7 IRIG-B BOARD

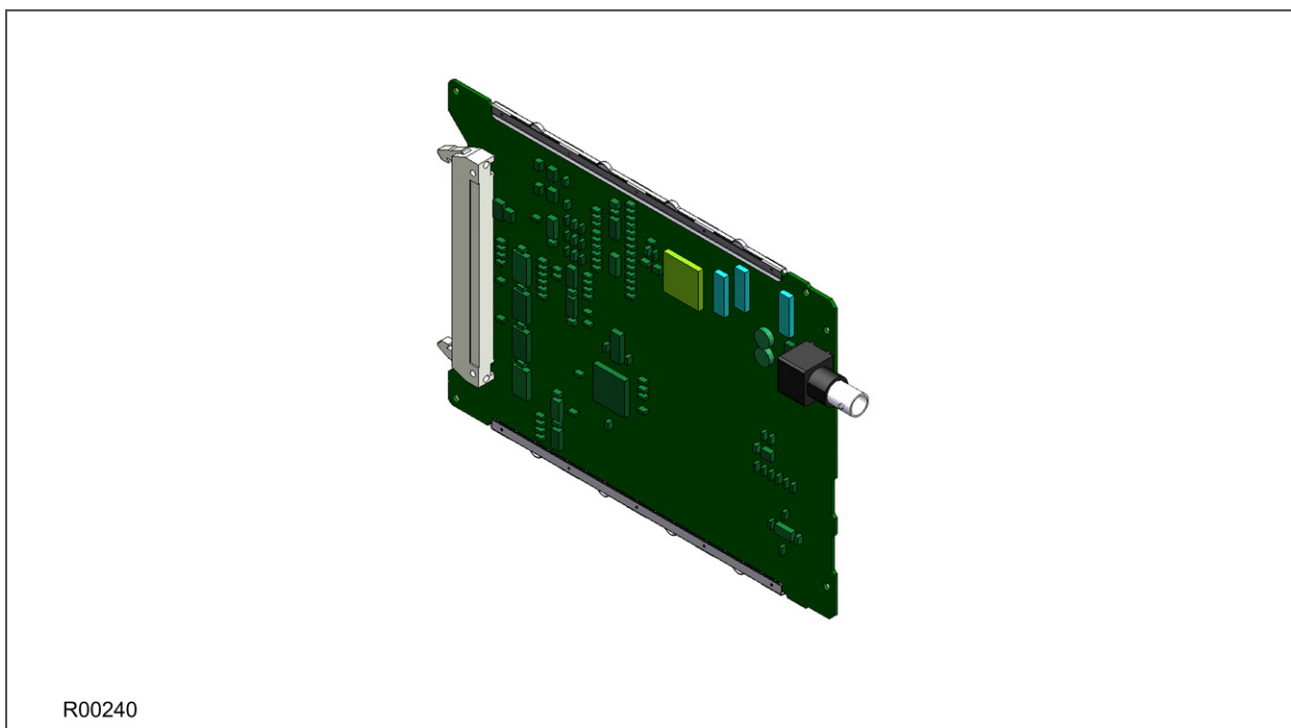


Figure 21: IRIG-B board

The IRIG-B board can be fitted to provide an accurate timing reference for the device. The IRIG-B signal is connected to the board via a BNC connector. The timing information is used to synchronise the IED's internal real-time clock to an accuracy of 1 ms. The internal clock is then used for time tagging events, fault, maintenance and disturbance records.

IRIG-B interface is available in modulated or demodulated formats.

The IRIG-B facility is provided in combination with other functionality on a number of additional boards, such as:

- Fibre board with IRIG-B
- Second rear communications board with IRIG-B
- Ethernet board with IRIG-B
- Redundant Ethernet board with IRIG-B

There are two types of each of these boards; one type which accepts a modulated IRIG-B input and one type which accepts a demodulated IRIG-B input.

6.8 FIBRE OPTIC BOARD

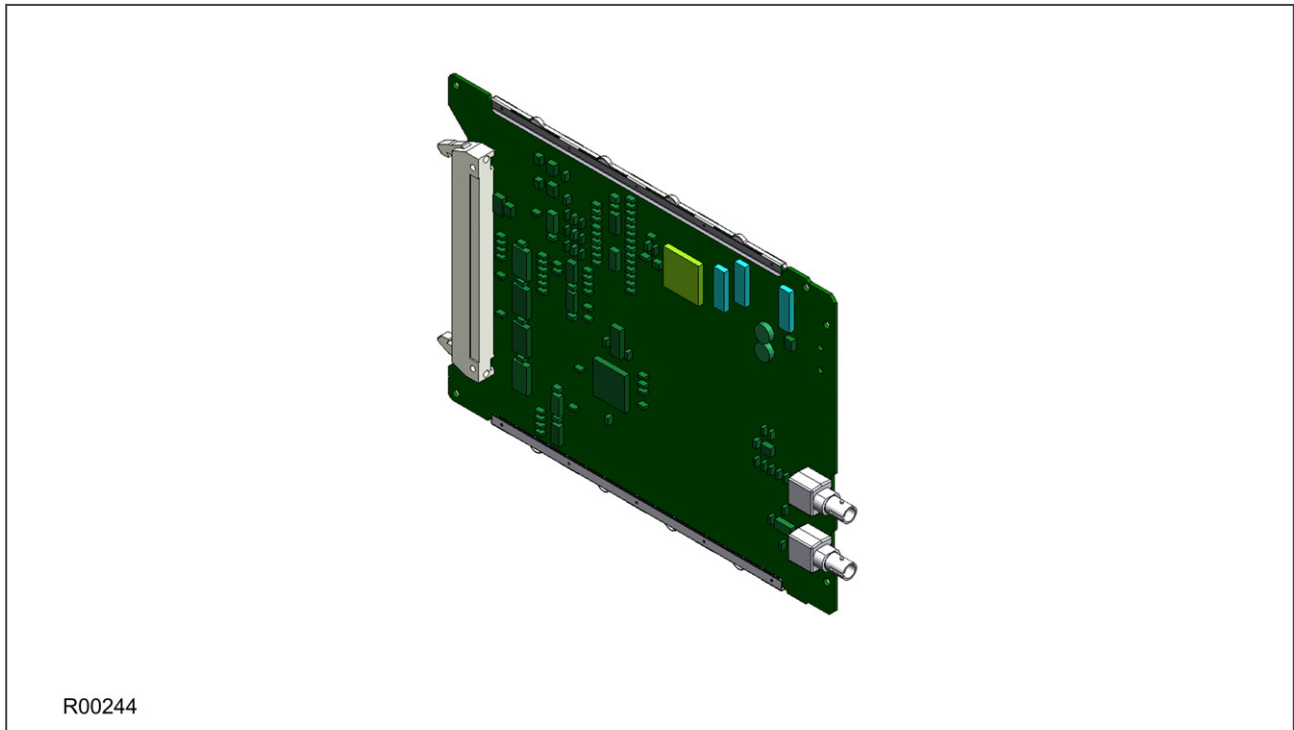


Figure 22: Fibre optic board

This board provides an interface for communicating with a master station. This communication link can use all compatible protocols (Courier, IEC 60870-5-103, MODBUS and DNP 3.0). It is a fibre-optic alternative to the metallic RS485 port presented on the power supply terminal block. The metallic and fibre optic ports are mutually exclusive.

The fibre optic port uses BFOC 2.5 ST connectors.

The board comes in two varieties; one with an IRIG-B input and one without:

6.9 REAR COMMUNICATION BOARD

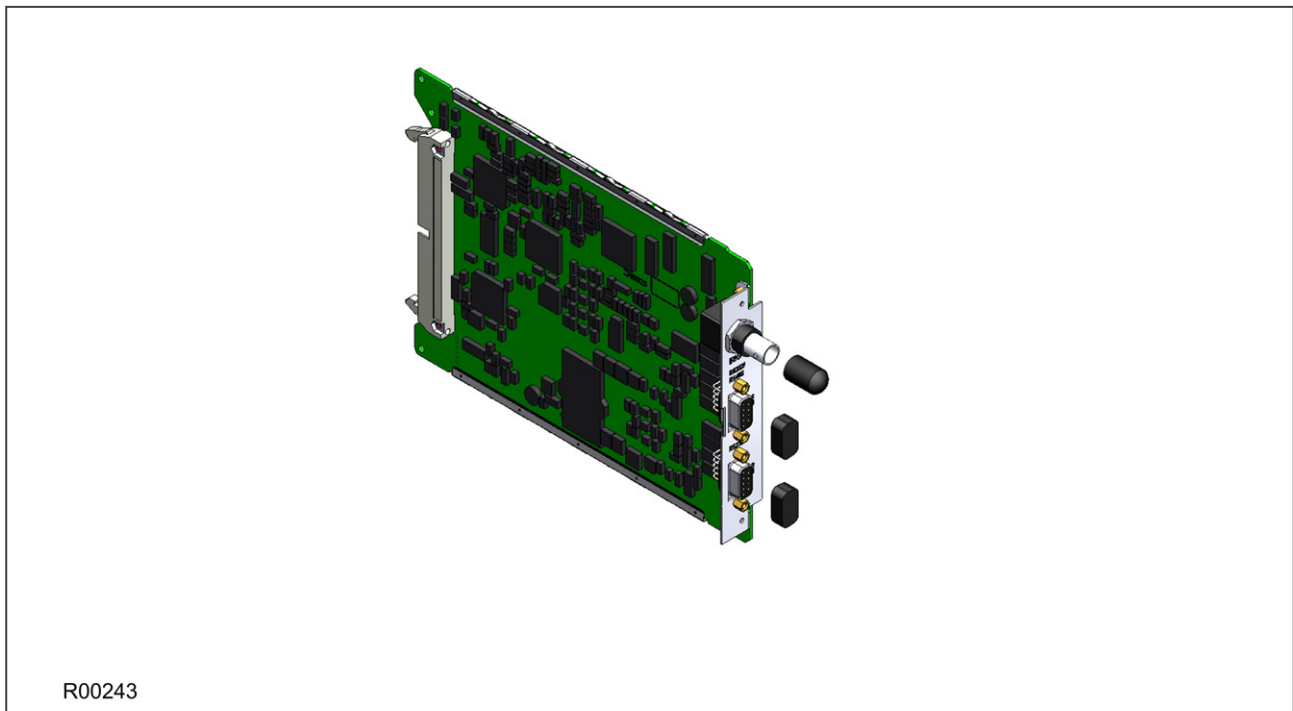


Figure 23: Rear communication board

The optional communications board containing the secondary communication ports provide two serial interfaces presented on 9 pin D-type connectors. These interfaces are known as SK4 and SK5. Both connectors are female connectors, but are configured as DTE ports. This means pin 2 is used to transmit information and pin 3 to receive.

SK4 can be used with RS232, RS485 and K-bus. SK5 can only be used with RS232 and is used for electrical teleprotection. The optional rear communications board and IRIG-B board are mutually exclusive since they use the same hardware slot. However, the board comes in two varieties; one with an IRIG-B input and one without.

6.10 ETHERNET BOARD

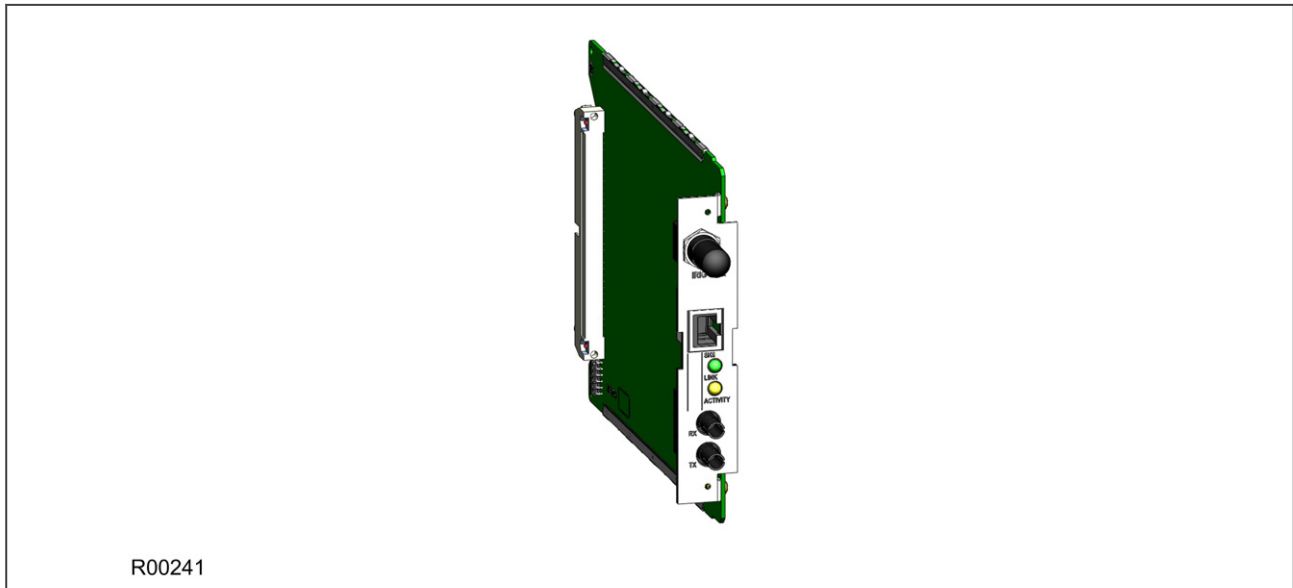


Figure 24: Ethernet board

This is a communications board that provides a standard 100-Base Ethernet interface. This board supports one electrical copper connection and one fibre-pair connection.

There are several variants for this board as follows:

- 100 Mbps Ethernet board
- 100 Mbps Ethernet with on-board modulated IRIG-B input
- 100 Mbps Ethernet with on-board unmodulated IRIG-B input

Two of the variants provide an IRIG-B interface. IRIG-B provides a timing reference for the unit – one board for modulated IRIG-B and one for demodulated. The IRIG B signal is connected to the board with a BNC connector.

The Ethernet and other connection details are described below:

IRIG-B Connector

- Centre connection: Signal
- Outer connection: Earth

LEDs

LED	Function	On	Off	Flashing
Green	Link	Link ok	Link broken	
Yellow	Activity			Traffic

Optical Fibre Connectors

Connector	Function
Rx	Receive
Tx	Transmit

RJ45connector

Pin	Signal name	Signal definition
1	TXP	Transmit (positive)
2	TXN	Transmit (negative)
3	RXP	Receive (positive)
4	-	Not used
5	-	Not used
6	RXN	Receive (negative)
7	-	Not used
8	-	Not used

6.11 REDUNDANT ETHERNET BOARD

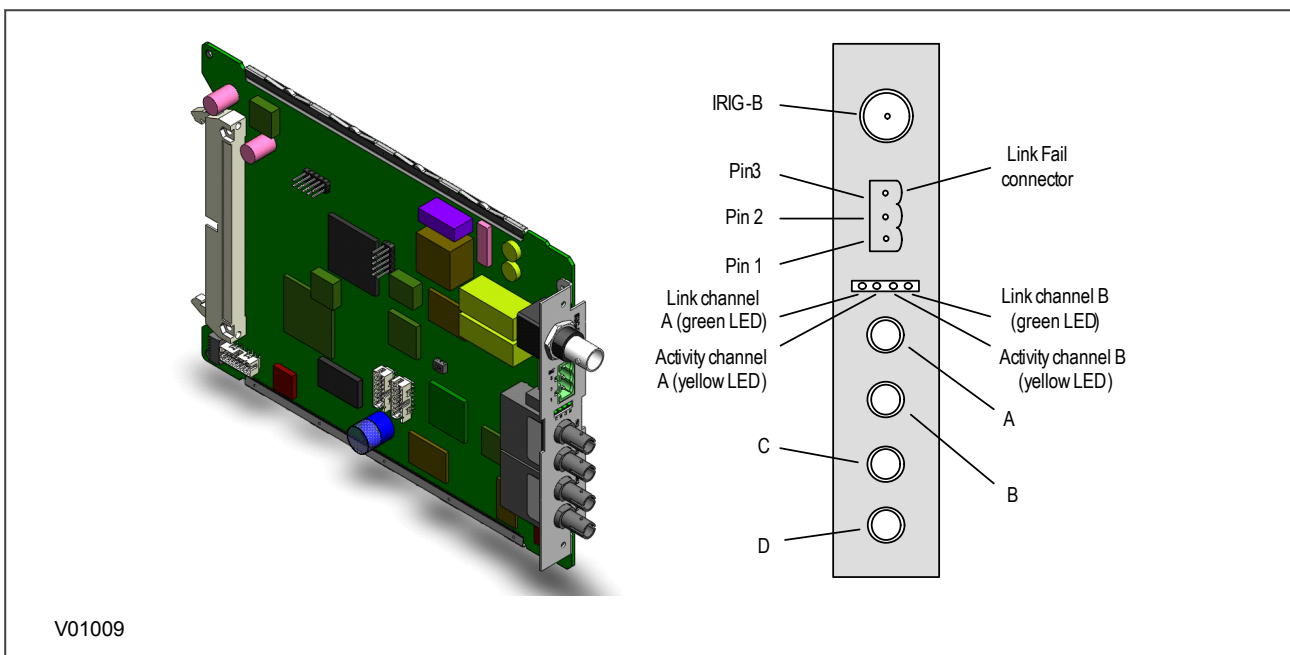


Figure 25: Redundant Ethernet board

This board provides dual redundant Ethernet (supported by two fibre pairs) together with an IRIG-B interface for timing.

Different board variants are available, depending on the redundancy protocol and the type of IRIG-B signal (unmodulated or modulated). The available redundancy protocols are:

- SHP (Self healing Protocol)
- RSTP (Rapid Spanning Tree Protocol)
- DHP (Dual Homing Protocol)
- PRP (Parallel Redundancy Protocol)

There are several variants for this board as follows:

- 100 Mbps redundant Ethernet running RSTP, with on-board modulated IRIG-B
- 100 Mbps redundant Ethernet running RSTP, with on-board unmodulated IRIG-B
- 100 Mbps redundant Ethernet running SHP, with on-board modulated IRIG-B
- 100 Mbps redundant Ethernet running SHP, with on-board unmodulated IRIG-B

- 100 Mbps redundant Ethernet running DHP, with on-board modulated IRIG-B
- 100 Mbps redundant Ethernet running DHP, with on-board unmodulated IRIG-B
- 100 Mbps redundant Ethernet running PRP, with on-board modulated IRIG-B
- 100 Mbps redundant Ethernet running PRP, with on-board demodulated IRIG-B

The Ethernet and other connection details are described below:

IRIG-B Connector

- Centre connection: Signal
- Outer connection: Earth

Link Fail Connector (Ethernet Board Watchdog Relay)

Pin	Closed	Open
1-2	Link fail Channel 1 (A)	Link ok Channel 1 (A)
2-3	Link fail Channel 2 (B)	Link ok Channel 2 (B)

LEDs

LED	Function	On	Off	Flashing
Green	Link	Link ok	Link broken	
Yellow	Activity	SHP running		PRP, RSTP or DHP traffic

Optical Fibre Connectors (ST)

Connector	DHP	RSTP	SHP	PRP
A	RXA	RX1	RS	RXA
B	TXA	TX1	ES	TXA
C	RXB	RX2	RP	RXB
D	TXB	TX2	EP	TXB

RJ45connector

Pin	Signal name	Signal definition
1	TXP	Transmit (positive)
2	TXN	Transmit (negative)
3	RXP	Receive (positive)
4	-	Not used
5	-	Not used
6	RXN	Receive (negative)
7	-	Not used
8	-	Not used

CONFIGURATION

CHAPTER 4

1 CHAPTER OVERVIEW

Each product has different configuration parameters according to the functions it has been designed to perform. There is, however, a common methodology used across the entire product series to set these parameters.

Some of the communications setup can only be carried out using the HMI, and cannot be carried out using settings applications software. This chapter includes concise instructions of how to configure the device, particularly with respect to the communications setup, as well as a description of the common methodology used to configure the device in general.

This chapter contains the following sections:

Chapter Overview	61
Settings Application Software	62
Using the HMI Panel	63
Line Parameters	73
Date and Time Configuration	75
Settings Group Selection	78

2 SETTINGS APPLICATION SOFTWARE

To configure this device you will need to use the Settings Application Software. The settings application software used in this range of IEDs is called MiCOM S1 Agile. It is a collection of software tools, which is used for setting up and managing the IEDs.

Although you can change many settings using the front panel HMI, some of the features cannot be configured without the Settings Application Software; for example the programmable scheme logic, or IEC61850 communications.

If you do not already have a copy of the Settings Application Software, you can obtain it from Alstom Grid contact centre.

To configure your product, you will need a data model that matches your product. When you launch the Settings Application Software, you will be presented with a panel that allows you to invoke the “Data Model Manager”. This will close the other aspects of the software in order to allow an efficient import of the chosen data model. If you don't have, or can't find, the data model relating to your product, please call the Alstom Grid contact centre.

When you have loaded all the data models you need, you should restart the Settings Application Software and start to create a model of your system using the “System Explorer” panel.

The software is designed to be intuitive, but help is available in an online help system and also the Settings Application Software user guide P40-M&CR-SAS-UG-EN-n, where 'Language' is a 2 letter code designating the language version of the user guide and 'n' is the latest version of the settings application software.

3 USING THE HMI PANEL

Using the HMI, you can:

- Display and modify settings
- View the digital I/O signal status
- Display measurements
- Display fault records
- Reset fault and alarm indications

The keypad provides full access to the device functionality using a range of menu options. The information is displayed on the LCD.

Keys	Description	Function
	Up and down cursor keys	To change the menu level or change between settings in a particular column, or changing values within a cell
	Left and right cursor keys	To change default display, change between column headings, or changing values within a cell
	ENTER key	For changing and executing settings
	Hotkeys	For executing commands and settings for which shortcuts have been defined
	Cancel key	To return to column header from any menu cell
	Read key	To read alarm messages
	Function keys (not all models)	For executing user programmable functions

Note:

As the LCD display has a resolution of 16 characters by 3 lines, some of the information is in a condensed mnemonic form.

3.1 NAVIGATING THE HMI PANEL

The cursor keys are used to navigate the menus. These keys have an auto-repeat function if held down continuously. This can be used to speed up both setting value changes and menu navigation. The longer the key is held pressed, the faster the rate of change or movement.

The navigation map below shows how to navigate the menu items.

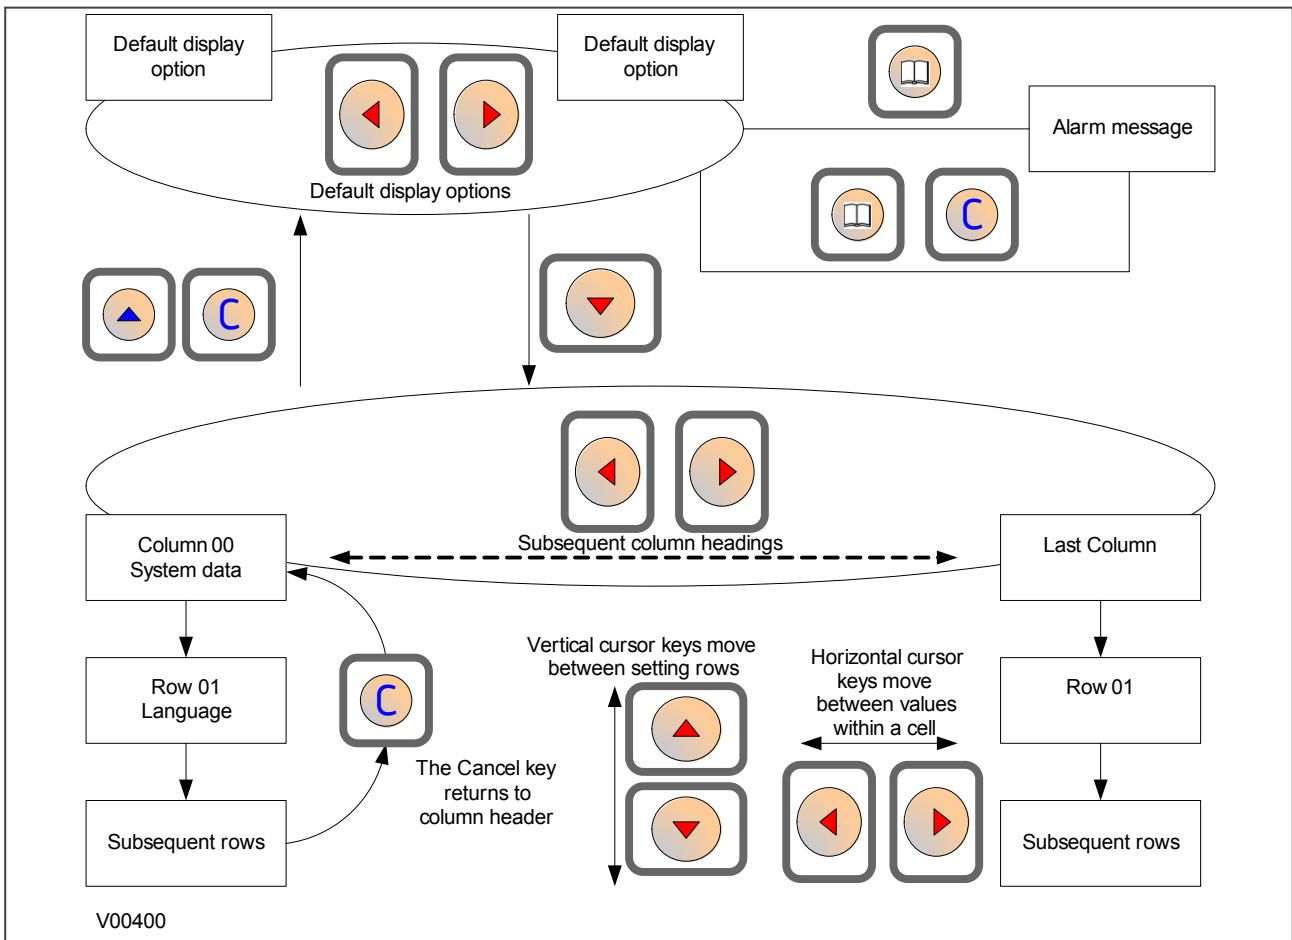


Figure 26: Navigating the HMI

3.2 GETTING STARTED

When you first start the IED, it will go through its power up procedure. After a few seconds it will settle down into one of the top level menus. There are two menus at this level:

- The Alarms menu for when there are alarms present
- The default display menu for when there are no alarms present.

If there are alarms present, the yellow Alarms LED will be flashing and the menu display will read as follows:

```
Alarms / Faults
Present
HOTKEY
```

Even though the device itself should be in full working order when you first start it, an alarm could still be present, for example, if there is no network connection for a device fitted with a network card. If this is the case, you can read the alarm by pressing the 'Read' key.

```
ALARMS
NIC Link Fail
```

If the device is fitted with an Ethernet card, you will first need to connect the device to an active Ethernet network to clear the alarm and get the default display.

If there are other alarms present, these must also be cleared before you can get into the default display menu options.

3.3 DEFAULT DISPLAY

The HMI contains a range of possible options that you can choose to be the default display. The options available are:

NERC Compliant banner

If the device is a cyber-security model, it will provide a NERC-compliant default display. If the device does not contain the cyber-security option, this display option is not available.

```
ACCESS ONLY FOR
AUTHORISED USERS
HOTKEY
```

Date and time

For example:

```
11:09:15
23 Nov 2011
HOTKEY
```

Description (user-defined)

For example:

```
Description
MiCOM P14NB
HOTKEY
```

Plant reference (user-defined)

For example:

```
Plant Reference
MiCOM
HOTKEY
```

Access Level

For example:

```
Access Level
3
HOTKEY
```

In addition to the above, there are also displays for the system voltages, currents, power and frequency etc., depending on the device model.

3.4 DEFAULT DISPLAY NAVIGATION

The following diagram is an example of the default display navigation. In this example, we have used a cyber-secure model. This is an example only and may not apply in its entirety to all models. The actual display options available depend on the exact model.

Use the horizontal cursor keys to step through from one display to the next.

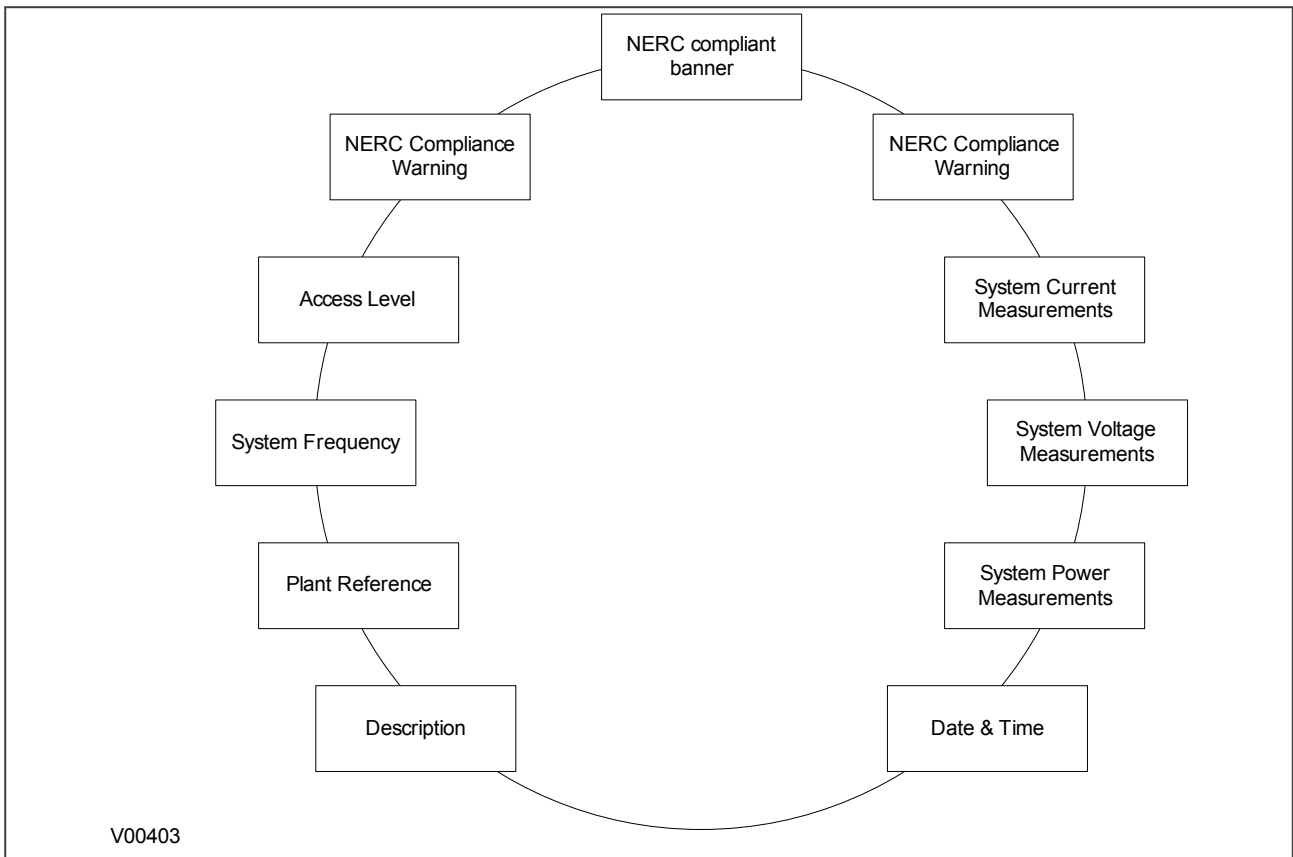


Figure 27: Default display navigation

If the device is cyber-secure but is not yet configured for NERC compliance (see Cyber-security chapter), a warning will appear when moving from the "NERC compliant" banner. The warning message is as follows:

DISPLAY NOT NERC
COMPLIANT. OK?

You will have to confirm with the **Enter** button before you can go any further.

Note:

Whenever the IED has an uncleared alarm the default display is replaced by the text Alarms/ Faults present. You cannot override this default display. However, you can enter the menu structure from the default display, even if the display shows the Alarms/Faults present message.

3.5 PASSWORD ENTRY

Configuring the default display (in addition to modification of other settings) requires level 3 access. You will be prompted for a password before you can make any changes, as follows. The default level 3 password is AAAA.

Enter Password

1. A flashing cursor shows which character field of the password can be changed. Press the up or down cursor keys to change each character (tip: pressing the up arrow once will return an upper case "A" as required by the default level 3 password).
2. Use the left and right cursor keys to move between the character fields of the password.
3. Press the **Enter** key to confirm the password. If you enter an incorrect password, an invalid password message is displayed then the display reverts to **Enter password**. On entering a valid password a message appears indicating that the password is correct and which level of access has been unlocked. If this level is sufficient to edit the selected setting, the display returns to the setting page to allow the edit to continue. If the correct level of password has not been entered, the password prompt page appears again.
4. To escape from this prompt press the **Clear** key. Alternatively, enter the password using the **Password** setting in the *SYSTEM DATA* column. If the keypad is inactive for 15 minutes, the password protection of the front panel user interface reverts to the default access level.

To manually reset the password protection to the default level, select **Password**, then press the CLEAR key instead of entering a password.

Note:

In the SECURITY CONFIG column, you can set the maximum number of attempts, the time window in which the failed attempts are counted and the time duration for which the user is blocked.

3.6 PROCESSING ALARMS AND RECORDS

If there are any alarm messages, they will appear on the default display and the yellow alarm LED flashes. The alarm messages can either be self-resetting or latched. If they are latched, they must be cleared manually.

1. To view the alarm messages, press the **Read** key. When all alarms have been viewed but not cleared, the alarm LED changes from flashing to constantly on, and the latest fault record appears (if there is one).
2. Scroll through the pages of the latest fault record, using the cursor keys. When all pages of the fault record have been viewed, the following prompt appears.

Press Clear To
Reset Alarms

3. To clear all alarm messages, press the **Clear** key. To return to the display showing alarms or faults present, and leave the alarms uncleared, press the **Read** key.
4. Depending on the password configuration settings, you may need to enter a password before the alarm messages can be cleared.
5. When all alarms are cleared, the yellow alarm LED switches off. If the red LED was on, this will also be switched off.

Note:

*To speed up the procedure, you can enter the alarm viewer using the **Read** key and subsequently pressing the **Clear** key. This goes straight to the fault record display. Press the **Clear** key again to move straight to the alarm reset prompt, then press the **Clear** key again to clear all alarms.*

3.7 MENU STRUCTURE

Settings, commands, records and measurements are stored in a local database inside the IED. When using the Human Machine Interface (HMI) it is convenient to visualise the menu navigation system as a table. Each item in the menu is known as a cell, which is accessed by reference to a column and row address. Each column and row is assigned a 2-digit hexadecimal numbers, resulting in a unique 4-digit cell address for every cell in the database. The main menu groups are allocated columns and the items within the groups are allocated rows, meaning a particular item within a particular group is a cell.

Each column contains all related items, for example all of the disturbance recorder settings and records are in the same column.

There are three types of cell:

- Settings: this is for parameters that can be set to different values
- Commands: this is for commands to be executed
- Data: this is for measurements and records to be viewed, which are not settable

Note:

Sometimes the term "Setting" is used generically to describe all of the three types.

The table below, provides an example of the menu structure:

SYSTEM DATA (Col 00)	VIEW RECORDS (Col 01)	MEASUREMENTS 1 (Col 02)	...
Language (Row 01)	"Select Event [0...n]" (Row 01)	IA Magnitude (Row 01)	...

SYSTEM DATA (Col 00)	VIEW RECORDS (Col 01)	MEASUREMENTS 1 (Col 02)	...
Password (Row 02)	Menu Cell Ref (Row 02)	IA Phase Angle (Row 02)	...
Sys Fn Links (Row 03)	Time & Date (Row 03)	IB Magnitude (Row 03)	...
...

It is convenient to specify all the settings in a single column, detailing the complete Courier address for each setting. The above table may therefore be represented as follows:

Setting	Column	Row	Description
SYSTEM DATA	00	00	First Column definition
Language (Row 01)	00	01	First setting within first column
Password (Row 02)	00	02	Second setting within first column
Sys Fn Links (Row 03)	00	03	Third setting within first column
...	
VIEW RECORDS	01	00	Second Column definition
Select Event [0...n]	01	01	First setting within second column
Menu Cell Ref	01	02	Second setting within second column
Time & Date	01	03	Third setting within second column
...	
MEASUREMENTS 1	02	00	Third Column definition
IA Magnitude	02	01	First setting within third column
IA Phase Angle	02	02	Second setting within third column
IB Magnitude	02	03	Third setting within third column
...	

The first three column headers are common throughout much of the product ranges. However the rows within each of these column headers may differ according to the product type. Many of the column headers are the same for all products within the series. However, there is no guarantee that the addresses will be the same for a particular column header. Therefore you should always refer to the product settings documentation and not make any assumptions.

3.8 CHANGING THE SETTINGS

- Starting at the default display, press the **Down** cursor key to show the first column heading.
- Use the horizontal cursor keys to select the required column heading.
- Use the vertical cursor keys to view the setting data in the column.
- To return to the column header, either press the Up cursor key for a second or so, or press the **Clear** key once. It is only possible to move across columns at the column heading level.
- To return to the default display, press the Up cursor key or the **Clear** key from any of the column headings. If you use the auto-repeat function of the Up cursor key, you cannot go straight to the default display from one of the column cells because the auto-repeat stops at the column heading.
- To change the value of a setting, go to the relevant cell in the menu, then press the **Enter** key to change the cell value. A flashing cursor on the LCD shows that the value can be changed. You may be prompted for a password first.
- To change the setting value, press the **Up** and **Down** cursor keys. If the setting to be changed is a binary value or a text string, select the required bit or character to be changed using the horizontal cursor keys.
- Press the **Enter** key to confirm the new setting value or the **Clear** key to discard it. The new setting is automatically discarded if it is not confirmed within 15 seconds.

9. For protection group settings and disturbance recorder settings, the changes must be confirmed before they are used. When all required changes have been entered, return to the column heading level and press the Down cursor key. Before returning to the default display, the following prompt appears.

```
Update settings?
ENTER or CLEAR
```

10. Press the **Enter** key to accept the new settings or press the **Clear** key to discard the new settings.

Note:

*For the protection group and disturbance recorder settings, if the menu time-out occurs before the changes have been confirmed, the setting values are discarded. Control and support settings, however, are updated immediately after they are entered, without the **Update settings?** prompt.*

3.9 DIRECT ACCESS (THE HOTKEY MENU)

For settings and commands that need to be executed quickly or on a regular basis, the IED provides a pair of keys directly below the LCD display. These so called **Hotkeys** can be used to execute specified settings and commands directly.

The functions available for direct access using these keys are:

- Setting group selection
- Control inputs
- Circuit Breaker (CB) control functions

The availability of these functions is controlled by the **Direct Access** cell in the *CONFIGURATION* column. There are four options: *Disabled*, *Enabled*, *CB Ctrl only* and *Hotkey only*.

For the Setting Group selection and Control inputs, this cell must be set to either *Enabled* or *Hotkey only*. For CB Control functions, the cell must be set to *Enabled* or *CB Ctrl only*.

3.9.1 SETTING GROUP SELECTION

By default, only Setting group 1 is enabled. Other setting groups will only be available if they are first enabled. To be able to select a different setting group, you must first enable them in the *CONFIGURATION* column.

To access the hotkey menu from the default display, you press the key directly below the HOTKEY text on the LCD. The following screen will appear.

```
←User32 STG GP→
HOTKEY MENU
EXIT
```

Use the right cursor keys to enter the *SETTING GROUP* menu.

```
←Menu User01→
SETTING GROUP 1
Nxt Grp Select
```

Select the setting group with **Nxt Grp** and confirm by pressing **Select**. If neither of the cursor keys is pressed within 20 seconds of entering a hotkey sub menu, the device reverts to the default display.

3.9.2 CONTROL INPUTS

The control inputs are user-assignable functions. You can use the *CTRL I/P CONFIG* column to configure the control inputs for the hotkey menu. In order to do this, use the first setting **Hotkey Enabled** cell to enable or disable any of the 32 control inputs. You can then set each control input to latched or pulsed and set its command to *On/Off, Set/Reset, In/Out, or Enabled/Disabled*.

By default, the hotkey is enabled for all 32 control inputs and they are set to *Set/Reset* and are *Latched*.

To access the hotkey menu from the default display, you press the key directly below the HOTKEY text on the LCD. The following screen will appear.

```

←User32 STG GP→
HOTKEY MENU
EXIT
  
```

Press the right cursor key twice to get to the first control input, or the left cursor key to get to the last control input.

```

←STP GP User02→
Control Input 1
EXIT SET
  
```

Now you can execute the chosen function (Set/Reset in this case).

If neither of the cursor keys is pressed within 20 seconds of entering a hotkey sub menu, the device reverts to the default display.

3.9.3 CIRCUIT BREAKER CONTROL

You can open and close the controlled circuit breaker with the hotkey to the right, if enabled as described above. By default, hotkey access to the circuit breakers is disabled.

If hotkey access to the circuit breakers has been enabled, the bottom right hand part of the display will read "Open or Close" depending on whether the circuit breaker is closed or open respectively:

For example:

```

Plant Reference
MiCOM
HOTKEY CLOSE
  
```

To close the circuit breaker (in this case), press the key directly below CLOSE. You will be given an option to cancel or confirm.

```

Execute
CB CLOSE
Cancel Confirm
  
```

More detailed information on this can be found in the Monitoring and Control chapter.

3.10 FUNCTION KEYS

Most products have a number of function keys for programming control functionality using the programmable scheme logic (PSL).

Each function key has an associated programmable tri-colour LED that can be programmed to give the desired indication on function key activation.

These function keys can be used to trigger any function that they are connected to as part of the PSL. The function key commands are in the *FUNCTION KEYS* column.

The first cell down in the *FUNCTION KEYS* column is the **Fn Key Status** cell. This contains a binary string, which represents the function key commands. Their status can be read from this binary string.

```
FUNCTION KEYS
Fn Key Status
0000000000
```

The next cell down (**Fn Key 1**) allows you to activate or disable the first function key (1). The **Lock** setting allows a function key to be locked. This allows function keys that are set to *Toggled* mode and their DDB signal active 'high', to be locked in their active state, preventing any further key presses from deactivating the associated function. Locking a function key that is set to the Normal mode causes the associated DDB signals to be permanently off. This safety feature prevents any inadvertent function key presses from activating or deactivating critical functions.

```
FUNCTION KEYS
Fn Key 1
Unlocked
```

The next cell down (**Fn Key 1 Mode**) allows you to set the function key to *Normal* or *Toggled*. In the Toggle mode the function key DDB signal output stays in the set state until a reset command is given, by activating the function key on the next key press. In the Normal mode, the function key DDB signal stays energised for as long as the function key is pressed then resets automatically. If required, a minimum pulse width can be programmed by adding a minimum pulse timer to the function key DDB output signal.

```
FUNCTION KEYS
Fn Key 1 Mode
Toggled
```

The next cell down (**Fn Key 1 Label**) allows you to change the label assigned to the function. The default label is *Function key 1* in this case. To change the label you need to press the enter key and then change the text on the bottom line, character by character. This text is displayed when a function key is accessed in the function key menu, or it can be displayed in the PSL.

```
FUNCTION KEYS
Fn Key 1 Label
Function Key 1
```

Subsequent cells allow you to carry out the same procedure as above for the other function keys.

The status of the function keys is stored in non-volatile memory. If the auxiliary supply is interrupted, the status of all the function keys is restored. The IED only recognises a single function key press at a time and a minimum key press duration of approximately 200 ms is required before the key press is recognised. This feature avoids accidental double presses.

4 LINE PARAMETERS

This product requires information about the circuit to which it is applied. This includes line impedance, residual compensation, and phase rotation sequence. For this reason circuit parameter information must be input using the *LINE PARAMETERS* settings. These *LINE PARAMETERS* settings are used by protection elements as well as by the fault locator.

4.1 TRIPPING MODE

The **Tripping Mode** setting selects whether the product should trip single-phase or three-phase when instantaneous protection elements detect single-phase faults.

Selecting *1 and 3 Pole* means that the product will only trip the affected phase for a single-phase fault. For faults involving more than one phase the product will always trip all three phases.

Selecting *3 Pole* means that the product will always trip all three phases.

For products controlling more than one circuit breaker, the tripping mode is independent for each circuit breaker.

The product features an autorecloser that can be used for single-phase autoreclose. In that case, if a single-phase fault evolves into a multi-phase fault during the autoreclose cycle, the product will switch to three-phase tripping.

4.2 RESIDUAL COMPENSATION

To improve accuracy of impedance measuring elements such as those used in distance protection and fault locators, the total loop impedance calculation Z_{LP}/I_A can be calibrated by the positive sequence impedance between the relaying point and the fault (Z_{F1}) using the following equation:

$$\mathbf{Z}_{F1} = \frac{\mathbf{V}_A}{\mathbf{I}_A + \mathbf{k}_{ZN} \cdot \mathbf{I}_N}$$

where:

- V_A is the phase A voltage
- I_A is the phase A current
- I_N is the residual current, derived from the phase currents by the equation:

$$\mathbf{I}_N = \mathbf{I}_A + \mathbf{I}_B + \mathbf{I}_C$$

- k_{ZN} is the residual compensation coefficient given by the complex equation:

$$\mathbf{k}_{ZN} = \frac{\mathbf{Z}_{L0} - \mathbf{Z}_{L1}}{3\mathbf{Z}_{L1}}$$

where:

- Z_{L0} is the total zero sequence impedance of the line (a complex value)
- Z_{L1} is the total positive sequence impedance of the protected line (a complex value)

The complex residual compensation coefficient is defined by two settings: **kZN Res Comp** (the absolute value) and **kZN Res Angle** (the angle in degrees).



Caution:
The k_{ZN} Res Angle is different to that in LFZP, SHNB, and LFZR products: If importing settings from these products, you must subtract angle $\angle Z_{L1}$

4.3 MUTUAL COMPENSATION

On parallel circuits, mutual flux coupling can alter the impedance seen by fault locators and distance zones. A current input (the Mutual Compensation input) is provided to compensate.

If you want to use Mutual Compensation, the connection polarity must match that shown in the connection diagram and the element must be *Enabled* in the settings.

Consider for example an A-phase to earth fault on one circuit of a parallel circuit. The positive sequence impedance between the relaying point and the fault can be calculated using the following equation:

$$Z_{F1} = \frac{V_A}{I_A + k_{ZN} \cdot I_N + k_{Zm} \cdot I_M}$$

where:

- V_A is the phase A voltage
- I_A is the phase A current
- I_N is the residual current of the protected line (derived from phase currents)
- I_M is the residual current of the parallel line (measured)
- k_{ZN} is the residual compensation coefficient
- k_{Zm} is the mutual compensation coefficient

In the above equation:

$$I_N = I_A + I_B + I_C$$

$$k_{ZN} = \frac{Z_{L0} - Z_{L1}}{3Z_{L1}}$$

$$k_{Zm} = \frac{Z_{m0}}{3Z_{L1}}$$

where:

- Z_{L0} is the total zero sequence impedance of the line (a complex value)
- Z_{L1} is the total positive sequence impedance of the protected line (complex value)
- Z_{m0} is the zero sequence mutual impedance between the two circuits (complex value).

If used, you must set the mutual compensation feature k_{Zm} using the settings:

- **k_{Zm} Mutual Set** (the absolute value) and
- **k_{Zm} Mutual Angle** (the angle in degrees).

5 DATE AND TIME CONFIGURATION

The date and time setting will normally be updated automatically by the chosen UTC (Universal Time Co-ordination) time synchronisation mechanism when the device is in service. You can also set the date and time manually using the **Date/Time** cell in the *DATE AND TIME* column.

5.1 USING AN SNTP SIGNAL

When using SNTP to maintain the clock, the IED must first be connected to the SNTP server, which should be energized and functioning.

1. In the *DATE AND TIME* column, check that either the **Primary Source** or **Secondary Source** setting is set to *SNTP*.
2. Ensure that the IED is receiving valid time synchronisation messages by checking that the **SNTP Status** cell reads *Server 1 OK* or *Server 2 OK*.
3. Check that the **Act. Time Source** cell reads *SNTP*. This indicates that the IED is using PTP as the source for its time. Note that if IRIG-B or PTP have been selected as the Primary Source, these must first be disconnected before the device can switch to SNTP as the active source.
4. Once the IED is using SNTP as the active time source, adjust the time offset of the universal coordinated time on the SNTP Server equipment, so that local time is displayed.
5. Check that the time, date and month are correct in the **Date/Time** cell.

5.2 USING AN IRIG-B SIGNAL

When using IRIG-B to maintain the clock, the IED must first be connected to the timing source equipment (usually a P594), which should be energized and functioning.

1. In the *DATE AND TIME* column, check that either the **Primary Source** or **Secondary Source** setting is set to *IRIG-B*.
2. Ensure the IED is receiving the IRIG-B signal by checking that **IRIG-B Status** cell reads *Active*
3. Check that the **Act. Time Source** cell reads *IRIG-B*. This indicates that the IED is using IRIG-B as the source for its time. Note that if SNTP or PTP have been selected as the Primary Source, these must first be disconnected before the device can switch to IRIG-B as the active source.
4. Once the IED is using IRIG-B as the active time source, adjust the time offset of the universal coordinated time (satellite clock time) on the satellite clock equipment, so that local time is displayed.
5. Check that the time, date and month are correct in the **Date/Time** cell. The IRIG-B signal does not contain the current year so this also needs to be set manually in this cell.
6. If the auxiliary supply fails, the time and date are maintained by the auxiliary battery. Therefore, when the auxiliary supply is restored, you should not have to set the time and date again. To test this, remove the IRIG-B signal, and then remove the auxiliary supply. Leave the device de-energized for approximately 30 seconds. On re-energization, the time should be correct.
7. Reconnect the IRIG-B signal.

5.3 USING AN IEEE 1588 PTP SIGNAL

When using IEEE 1588 PTP to maintain the clock, the IED must first be connected to the PTP Grandmaster, which should be energized and functioning.

1. In the *DATE AND TIME* column, check that either the **Primary Source** or **Secondary Source** setting is set to *PTP*.
2. Set the **Domain Number** setting. The domain defines which clocks the IED will use for synchronisation. Therefore this number must match the domain used by the other clocks on the network.

3. Ensure that the IED is receiving valid time synchronisation messages by checking that the **PTP Status** cell reads *Valid Master*.
4. Check that **Act. Time Source** cell reads *PTP*. This indicates that the IED is using PTP as the source for its time. Note that If IRIG-B or SNTP have been selected as the Primary Source, these must first be disconnected before the device can switch to PTP as the active source.
5. Once the IED is using PTP as the active time source, adjust the time offset of the universal coordinated time on the Master Clock equipment, so that local time is displayed.
6. Check that the time, date and month are correct in the **Date/Time** cell.

5.4 WITHOUT A TIMING SOURCE SIGNAL

If the time and date is not being maintained by an IRIG-B, PTP or SNTP signal, in the **DATE AND TIME** column, ensure that both the **Primary Source** and **Secondary Source** are set to *NONE*.

1. Check that **Act. Time Source** cell reads *Free Running*.
2. Set the date and time to the correct local time and date using the Date/Time cell or the serial protocol.
3. If the auxiliary supply fails, the time and date are maintained by the auxiliary battery. Therefore, when the auxiliary supply is restored, you should not have to set the time and date again. To test this, remove the auxiliary supply. Leave the device de-energized for approximately 30 seconds. On re-energization, the time should be correct.

5.5 TIME ZONE COMPENSATION

The UTC time standard uses Greenwich Mean Time as its standard. Without compensation, the date and time would be displayed on the device irrespective of its location.

You may wish to display the local time corresponding to its geographical location. You can do this with the settings **LocalTime Enable** and **LocalTime Offset**.

The **LocalTime Enable** has three setting options; *Disabled*, *Fixed*, and *Flexible*.

With *Disabled*, no local time zone is maintained. Time synchronisation from any interface will be used to directly set the master clock. All times displayed on all interfaces will be based on the master clock with no adjustment.

With *Fixed*, a local time zone adjustment is defined using the **LocalTime Offset** setting and all non-IEC 61850 interfaces, which uses the Simple Network Time Protocol (SNTP), are compensated to display the local time.

With *Flexible*, a local time zone adjustment is defined using the **LocalTime Offset** setting. The non-local and non-IEC 61850 interfaces can be set to either the UTC zone or the local time zone. The local interfaces are always set to the local time zone and the Ethernet interface is always set to the UTC zone.

The interfaces where you can select between UTC and Local Time are the serial interfaces RP1, RP2, DNP over Ethernet (if applicable) and Tunnelled Courier (if applicable). This is achieved by means of the following settings, each of which can be set to UTC or Local.:

- RP1 Time Zone
- RP2 Time Zone
- DNPOE Time Zone
- Tunnel Time Zone

The **LocalTime Offset** setting allows you to enter the local time zone compensation from -12 to + 12 hours at 15 minute intervals.

5.6 DAYLIGHT SAVING TIME COMPENSATION

It is possible to compensate for Daylight Saving time using the following settings

- DST Enable
- DST Offset
- DST Start
- DST Start Day
- DST Start Month
- DST Start Mins
- DST End
- DST End Day
- DST End Month
- DST End Mins

These settings are described in the *DATE AND TIME* settings table in the configuration chapter.

6 SETTINGS GROUP SELECTION

You can select the setting group using opto inputs, a menu selection, the hotkey menu or from some models, function keys. You choose which method using the Setting Group setting in the *CONFIGURATION* column. There are two possibilities; Select via Menu, or Select via PSL. If Select via Menu is chosen, you set the settings group using the Active Settings setting, or with the hotkeys. If Select via PSL is chosen, you set the settings group with DDB signals according to the following table:

SG Select 1X	SG Select X1	Selected Setting Group
0	0	1
0	1	2
1	0	3
1	1	4

Each setting group has its own PSL. Once a PSL configuration has been designed it can be allocated to any one of the 4 setting groups. When downloading or extracting a PSL configuration, you will be prompted to enter the required setting group to which it will be allocated.

AUTORECLOSE

CHAPTER 5

1 CHAPTER OVERVIEW

Selected models of this product provide sophisticated Autoreclose (AR) functionality. The purpose of this chapter is to describe the operation of this functionality including the principles, logic diagrams and applications.

This chapter contains the following sections:

Chapter Overview	81
Introduction to Autoreclose	82
Autoreclose Implementation	83
Autoreclose System Map	91
Logic Modules	119
Setting Guidelines	175

2 INTRODUCTION TO AUTORECLOSE

Approximately 80 - 90% of faults on transmission lines and distribution feeders are transient in nature. This means that most faults do not last long, and are self-clearing if isolated. A common example of a transient fault is an insulator flashover, which may be caused, for example, by lightning, clashing conductors, or wind-blown debris. Protection functions detecting the flashover will cause one or more circuit breakers to trip and may also remove the fault. If the source is removed, the fault does not recur if the line is re-energised.

The remaining 10 – 20% of faults are either semi-permanent or permanent. A small tree branch falling onto the line for example, could cause a semi-permanent fault. Here the cause of the fault would not be removed by immediate tripping of the circuit, but could possibly be burnt away during a time-delayed trip. Permanent faults could be broken conductors, transformer faults, cable faults or machine faults, which must be located and repaired before the power supply can be restored. In many fault incidents, if the faulty line is immediately tripped out, and time is allowed for the fault arc to de-ionise, reclosing the circuit breakers will result in the line being successfully re-energised.

Autoreclose schemes are used to automatically reclose a circuit breaker a set time after it has been opened due to operation of a protection element. On EHV transmission networks, Autoreclose is usually characterised by high-speed single-phase operation for the first attempt at reclosure. This is intended to help maintain system stability during a transient fault condition. On HV/MV distribution networks, Autoreclose is applied mainly to radial feeders, where system stability problems do not generally arise, and is generally characterised by delayed three-phase operation with potentially multiple reclosure attempts.

Autoreclosing provides an important benefit on circuits using time-graded protection, in that it allows the use of instantaneous protection to provide a high speed first trip. With fast tripping, the duration of the power arc resulting from an overhead line fault is reduced to a minimum. This lessens the chance of damage to the line, which might otherwise cause a transient fault to develop into a permanent fault. Using instantaneous protection also prevents blowing of fuses in teed feeders, as well as reducing circuit breaker maintenance by eliminating pre-arc heating. When instantaneous protection is used with Autoreclose, the scheme is normally arranged to block the instantaneous protection after the first trip. Therefore, if the fault persists after reclosure, the time-graded protection will provide discriminative tripping resulting in the isolation of the faulted section. However, for certain applications, where the majority of the faults are likely to be transient, it is common practise to allow more than one instantaneous trip before the instantaneous protection is blocked.

Some schemes allow a number of re-closures and time-graded trips after the first instantaneous trip, which may result in the burning out and clearance of semi-permanent faults. Such a scheme may also be used to allow fuses to operate in teed feeders where the fault current is low.

When considering feeders that are partly overhead line and partly underground cable, any decision to install Autoreclose should be subject to analysis of the data (knowledge of the frequency of transient faults). This is because this type of arrangement probably has a greater proportion of semi-permanent and permanent faults than for purely overhead feeders. In this case, the advantages of Autoreclose are small. It can even be disadvantageous because re-closing on to a faulty cable is likely to exacerbate the damage.

3 AUTORECLOSE IMPLEMENTATION

Before describing this function it is first necessary to understand the following terminology:

- A **Shot** is an attempt to close a circuit breaker using the Autoreclose function.
- **Multi-shot** is where more than one **Shot** is attempted.
- **Single-shot** is where only one **Shot** is attempted.
- **Dead Time** denotes the time between initiation of the Autoreclose operation and the attempt to close the circuit breaker.
- **Reclaim time** is the time following the initiation of the circuit breaker closing and the resetting of the Autoreclose scheme should the Autoreclose attempt be successful and the protection does not detect a subsequent fault condition.
- **High-speed Autoreclose** is generally regarded as an Autoreclose application where the **Dead Time** is less than 1 second.
- **Delayed Autoreclose** is generally regarded as an Autoreclose application where the **Dead Time** is greater than 1 second.

This product features a multiple-shot Autoreclose function, which is suitable for both High-speed Autoreclose and Delayed Autoreclose.

The Autoreclose function can be set to perform a single-shot, two-shot, three-shot or four-shot cycle. Dead Times for all shots can be adjusted independently.

If a circuit breaker closes successfully at the end of the Dead Time, a Reclaim Time starts. If the circuit breaker does not trip again, the Autoreclose function resets at the end of the Reclaim Time. If the protection trips again during the Reclaim Time, the sequence advances to the next shot in the programmed cycle. If all programmed reclose attempts have been made and the circuit breaker does not remain closed, the Autoreclose function goes into Lockout, whereupon manual intervention is required.

An Autoreclose cycle can be initiated by operation of an internal or external protection element provided it is mapped correctly, and that the circuit breaker is closed when the protection operates.

You can choose to initiate the Dead Time on:

- Protection operation
- A protection reset
- A Line Dead condition
- Circuit breaker operation

At the end of the relevant Dead Time, provided system conditions are suitable, a circuit breaker close signal is given. The system conditions to be met for closing are that:

- the system voltages are in synchronism
- or that the dead line/live bus or live line/dead bus conditions exist as indicated by the internal system check synchronising element
- and that the circuit breaker closing spring, or other energy source, is fully charged as indicated by the circuit breaker healthy input.

The circuit breaker close signal is removed when the circuit breaker closes.

If the protection trips and the circuit breaker opens during the Reclaim Time, the Autoreclose function either advances to the next shot in the programmed cycle, or if all programmed reclose attempts have been made, goes into Lockout. Each time a closure is attempted, a sequence counter is incremented by 1 and the Reclaim Time starts again.

Autoreclose is configured in the *AUTORECLOSE* column of the relevant settings group. The function is disabled by default. If you wish to use it you must enable it first in the *CONFIGURATION* column.

The Autoreclose function is a logic controller implemented in software. It takes inputs and processes them according to defined logic to generate appropriate outputs. The logic is controlled by user prescribed settings and commands. The controlling logic is complex and so, in order to facilitate its design and understanding, it is decomposed into smaller logic functions which, when combined together implement the complete scheme. This section concludes with a summary of:

- the logic inputs to the Autoreclose function,
- the logic outputs from the Autoreclose function
- the Autoreclose operating sequence
- the high-level design of the system logic functionality

3.1 AUTORECLOSE LOGIC INPUTS FROM EXTERNAL SOURCES

Logic inputs control the operation of the Autoreclose function. The logic inputs are mapped using DDB signals in the PSL.

Generally the inputs are from external equipment connected to opto-isolated inputs. They can also come from communications inputs, and some are internally derived.

This section provides an overview of the logic inputs originating from external sources.

3.1.1 CIRCUIT BREAKER HEALTHY INPUT

For circuit breakers to close, it needs energy. This energy usually comes from a spring (spring-charged circuit breakers) or from gas pressure (gas pressurised circuit breakers). After closing, it is necessary to re-establish sufficient energy in the circuit breaker before it can be closed again.

DDB signal inputs to the Autoreclose function allow the health of circuit breakers to be mapped to the logic. When asserted, these signals demonstrate that there is sufficient energy available to close and trip the circuit breaker before initiating a circuit breaker close command. If the signal indicating the health of the circuit breaker is low, and remains low for a defined period set in the circuit breaker healthy timer, the circuit breaker locks out and stays open.

If the circuit breaker healthy signal is not mapped in the PSL, the DDB signal defaults to high so that Autoreclose may proceed.

3.1.2 INHIBIT AUTORECLOSE INPUT

A logic input can be used to inhibit the Autoreclose function. The signal is mapped to the DDB signal **Inhibit AR** in the PSL.

Energising the input inhibits any auto-switching of connected circuit breakers. Any Autoreclose in progress is reset and inhibited but not locked out. This function ensures that auto-switching does not interfere with any manual switching. A typical application is on a mesh-corner scheme where manual switching is being performed on the mesh, for which any Autoreclose would cause interference.

For products that are capable of single-phase tripping and Autoreclose, if a single-phase Autoreclose cycle is in progress and a single pole of the circuit breaker is tripped when the inhibit Autoreclose signal is raised, the circuit breaker is instructed to trip all phases, ensuring that all poles are in the same state (and avoiding a pole stuck condition) when subsequent closing of the circuit breaker is attempted.

3.1.3 BLOCK AUTORECLOSE INPUT

External inputs can be used to block the Autoreclose function. If Autoreclose is in progress when the signal is asserted, it forces a lockout.

Typically this feature is used where Autoreclose may be required for some protection functions but not required for others. An example is on a transformer feeder, where Autoreclose can be initiated from the feeder protection but blocked from the transformer protection.

It can also be used if an Autoreclose cycle is likely to fail for conditions associated with the protected circuit, such as during the Dead Time, if a circuit breaker indicates that it is not healthy to switch.

3.1.4 RESET LOCKOUT INPUT

If a condition that forced a lockout has been removed, the lockout can be reset by energising a logic input appropriately mapped in the PSL. Energising the input will also reset any Autoreclose alarms.

3.1.5 POLE DISCREPANCY INPUT

Circuit breakers with independent mechanisms for each pole (phase), normally incorporate a mechanism to cater for cases where the phases are not together. This automatically trips all three phases if they are either not all open, or not all closed.

During single-phase Autoreclosing a pole discrepancy condition is necessarily introduced, but the pole discrepancy device should not operate for this condition. This can be achieved using a delayed action pole discrepancy device with a delay longer than the single-pole Autoreclose Dead Time (*SP AR Dead Time* setting).

Alternatively, an input can be used for external devices to indicate a pole discrepancy condition. The pole discrepancy input is activated by an external device to indicate that all three poles of a circuit breaker are not in the same position. If mapped in the PSL, energising the input forces three-phase tripping (providing there is not a single-phase Autoreclose in progress). Otherwise, a signal indicating single-phase Autoreclose in progress can be used to inhibit the external pole discrepancy device.

3.1.6 EXTERNAL TRIP INDICATION

Protection operation from a different device can be used to initiate the Autoreclose function. By default these external trip inputs are mapped to initiate Autoreclose and to initiate breaker failure protection (if the functions are enabled). These inputs are not mapped to the trip outputs. With appropriate mapping in the PSL however, the external device can use this product to trip connected circuit breakers.

3.2 AUTORECLOSE LOGIC INPUTS

This section provides an overview of the logic inputs, which are derived internally.

3.2.1 TRIP INITIATION SIGNALS

The phase A, phase B and phase C trip inputs are used to initiate single-phase and three-phase autoreclose. For the Autoreclose to work, you must ensure that these Trip Input signals remain appropriately mapped in the PSL.

3.2.2 CIRCUIT BREAKER STATUS INPUTS

Circuit breaker status information must be available as logic input(s) for Autoreclose to work. You can select whether to use CB open, CB closed, or both, as inputs. The settings are made in the *CB CONTROL* column of the menu, and you need to ensure that the PSL mapping of the chosen input(s) is correct.

3.2.3 SYSTEM CHECK SIGNALS

System Check and Check Synchronization functions produce signals which are used by the Autoreclose logic ensure that the Autoreclose function is applied only when the system is in a suitable condition.

3.3 AUTORECLOSE LOGIC OUTPUTS

Output signals are provided to provide indication of an Autoreclose in progress (ARIP). An ARIP signal is asserted when an Autoreclose sequence starts. It remains high from initiation, either until lockout, or until successful Autoreclose.

An Autoreclose lockout condition resets any 'Autoreclose in progress' and associated signals. Signals are available to indicate that Autoreclose is in progress and that a circuit breaker has been successfully closed.

3.4 AUTORECLOSE OPERATING SEQUENCE

The Autoreclose sequence is controlled by so-called Dead Timers. Dead Time Control settings are used to select the conditions that initiate Dead Timers in the Autoreclose sequence (for example protection operate, protection reset, CB open, etc.). This section describes typical AR operation sequences in which Dead Timers start when protection operation resets.

Note:

In a multi-shot AR sequence, a number of Dead Timers are used (one for each shot). All Dead Timers are enabled when the sequence is initiated, but each timer only starts when the particular shot with which it is associated is triggered.

3.4.1 AR TIMING SEQUENCE - TRANSIENT FAULT

The figure below describes the operating sequence for a single-shot Autorecloser for a transient fault that clears when the faulted line is isolated.

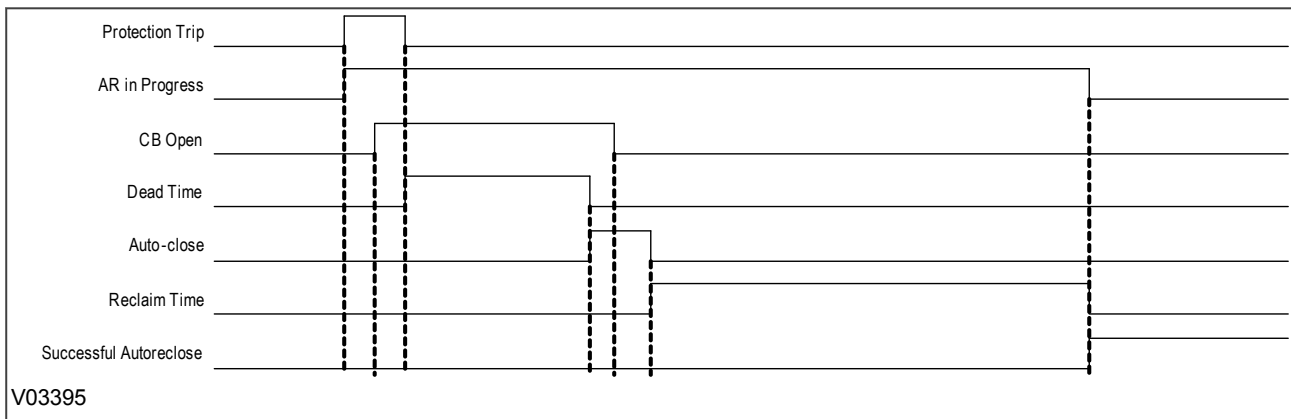


Figure 28: Autoreclose sequence for a Transient Fault

Following fault inception, the protection operates and issues a trip signal. At the same time the Autoreclose in Progress signal is asserted. Shortly afterwards the circuit breaker will open as indicated by the CB Open signal. Opening of the CB clears the fault and the protection resets. When this happens, the Dead Timer is started and the output remains high until the Dead Time setting expires, whereupon it resets and the Autorecloser issues the Auto-close command to close the circuit breaker. As the fault has been cleared, the circuit breaker closes and remains closed. When the Auto-close pulse is removed, the Reclaim Timer starts. If no further fault is detected before the Reclaim Timer expires, the Autoreclose is considered to be successful and this is indicated by the Successful Autoreclose signal.

3.4.2 AR TIMING SEQUENCE - EVOLVING/PERMANENT FAULT

The figure below shows a single-shot AR operating sequence where the fault is not cleared by the first AR cycle. The sequence starts in a similar way to that of a transient fault, but in this case the fault is not transient (it may be permanent, or it may evolve into a fault involving more than one phase). This case shows an evolving fault inception occurring before the Reclaim Time has expired. When the Autorecloser recognises that the protection has tripped, the cycle is terminated. The Autorecloser goes into Lockout, and the Autoreclose in Progress signal is reset.

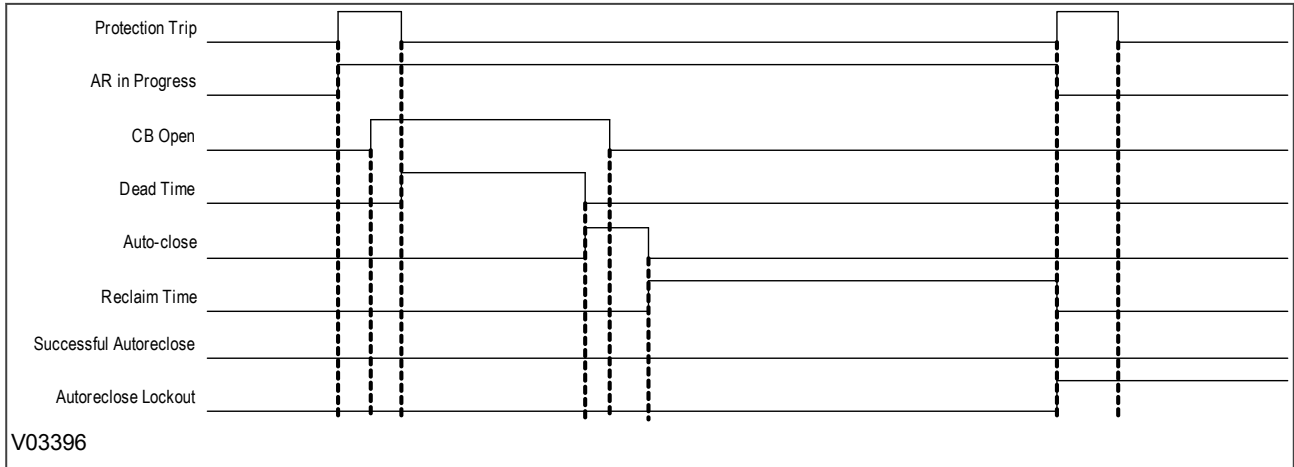


Figure 29: Autoreclose sequence for an evolving or permanent fault

3.4.3 AR TIMING SEQUENCE - EVOLVING/PERMANENT FAULT SINGLE-PHASE

If the Autorecloser is set for single-phase operation, then single phase operation is only allowed on the first shot. Subsequent tripping will be three-phase only until the AR has been successful or until AR has locked out as shown in the figure below.

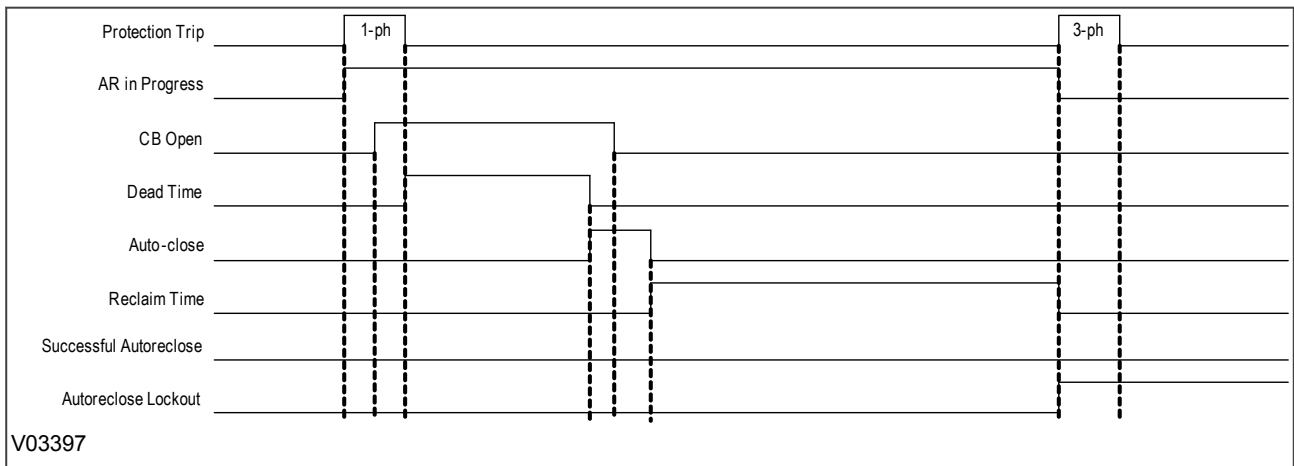


Figure 30: Autoreclose sequence for an evolving or permanent fault - single-phase operation

3.4.4 AR TIMING SEQUENCE - TRANSIENT FAULT DUAL CB

The figure below describes the operating sequence for a single-shot on a dual CB (2CB) Autorecloser for a transient fault that clears when the faulted line is isolated.

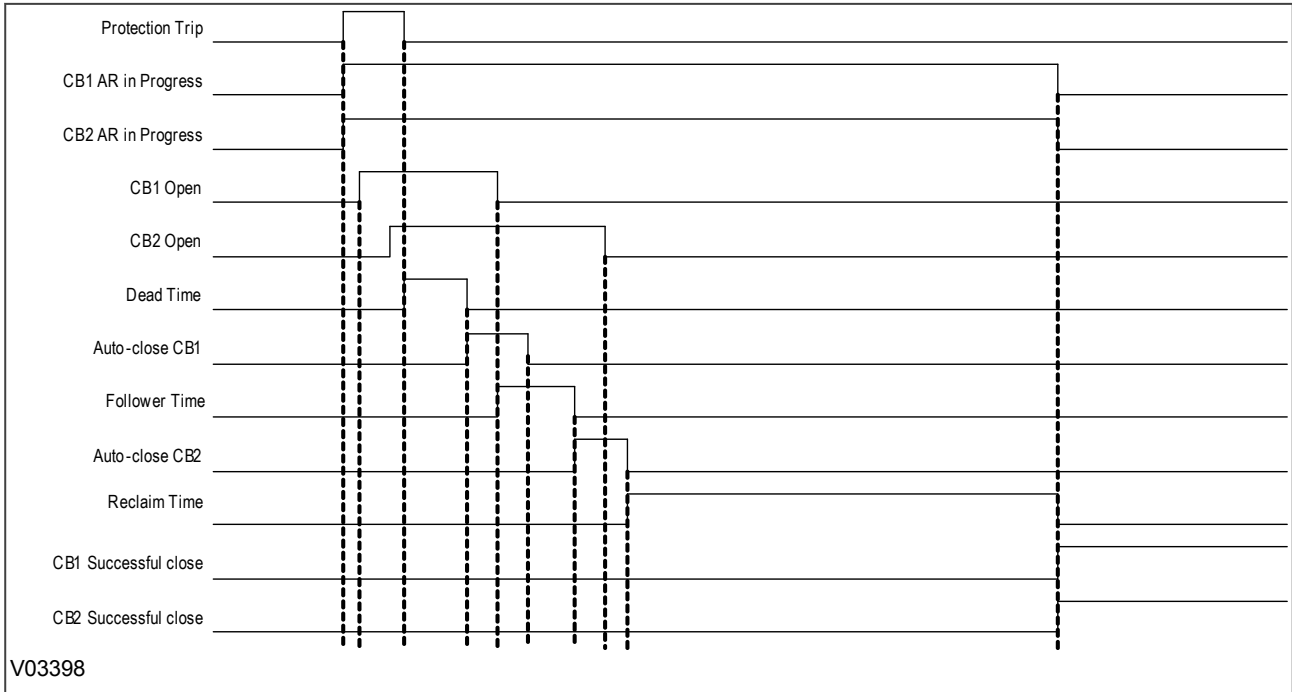


Figure 31: Dual CB Autoreclose Sequence for a Transient Fault

Following fault inception, the protection operates and issues a trip signal. At the same time an Autoreclose in Progress signal is asserted for each CB. Shortly afterwards, CB1 will open as indicated by the CB1 Open signal and after a short delay CB2 opens. Opening of CB2 clears the fault and the protection resets. When this happens, the Dead Timer is started and the output remains high until the Dead Time setting expires, whereupon it resets and the Autorecloser issues the Auto-close command to close CB1. When CB1 closes, the Follower Timer starts. When the Follower Timer expires, the Autorecloser issues the Autoclose command to close CB2. After CB2 has closed, as the fault has been cleared, both CBs remain closed. When the Auto-close 2 pulse is removed, the Reclaim Timer starts. If no further fault is detected before the Reclaim Timer expires, the Autoreclose is considered to be successful and this is indicated by the Successful Autoreclose signals.

3.4.5 AR TIMING SEQUENCE - EVOLVING/PERMANENT FAULT DUAL CB

The figure below shows a single-shot AR operating sequence where the fault is not cleared by the first AR cycle. The sequence starts in a similar way to that of a transient fault, but in this case the fault is not transient (it may be permanent, or it may evolve into a fault involving more than one phase). This case shows an evolving fault inception occurring before the Reclaim Time has expired. When the Autorecloser recognises that the protection has tripped, the cycle is terminated. The Autorecloser goes to Lockout, and the AR in Progress signals are reset

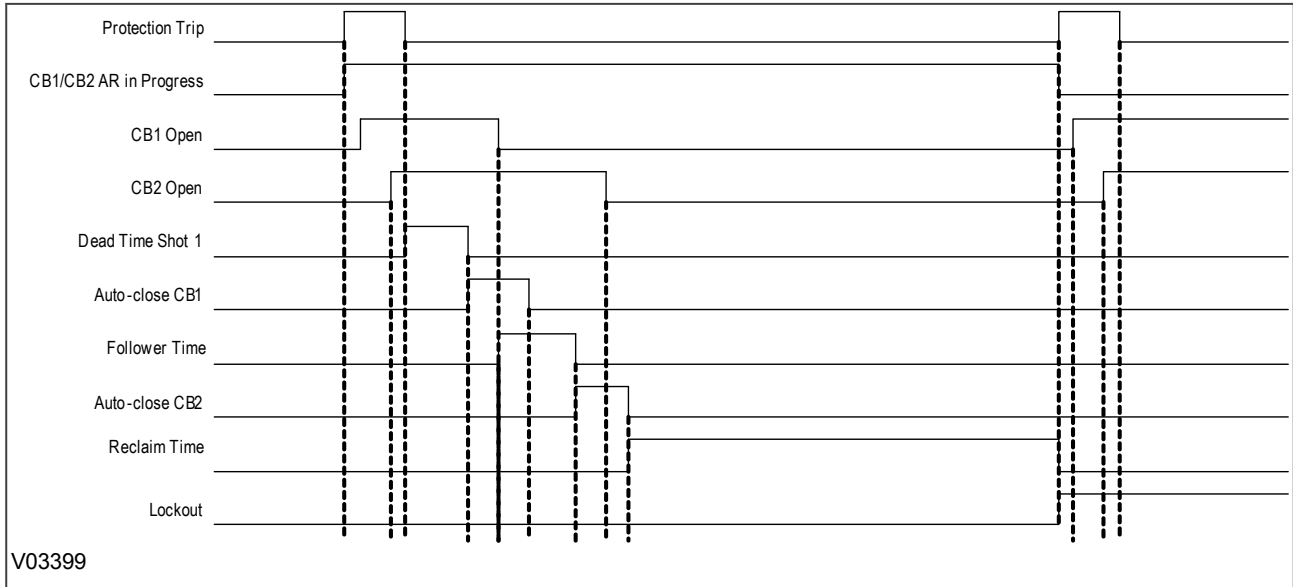


Figure 32: Autoreclose Sequence for an evolving/permanent fault on a dual CB application

3.4.6 AR TIMING SEQUENCE - PERSISTENT FAULT

The figure below shows the start of a multi-shot AR operating sequence where a single-phase fault is not cleared by the first AR cycle. The sequence starts in a similar way to that of a transient fault, but in this case the fault is not transient (it may be permanent, or it may evolve into a fault involving more than one phase). This case shows a second fault inception occurring before the Reclaim Time has expired. The significant point here is that after the first trip has occurred, the Autorecloser forces the 2 CBs into three-pole operation and different Dead Timers are used for the single-phase cycle compared with the three-phase cycle.

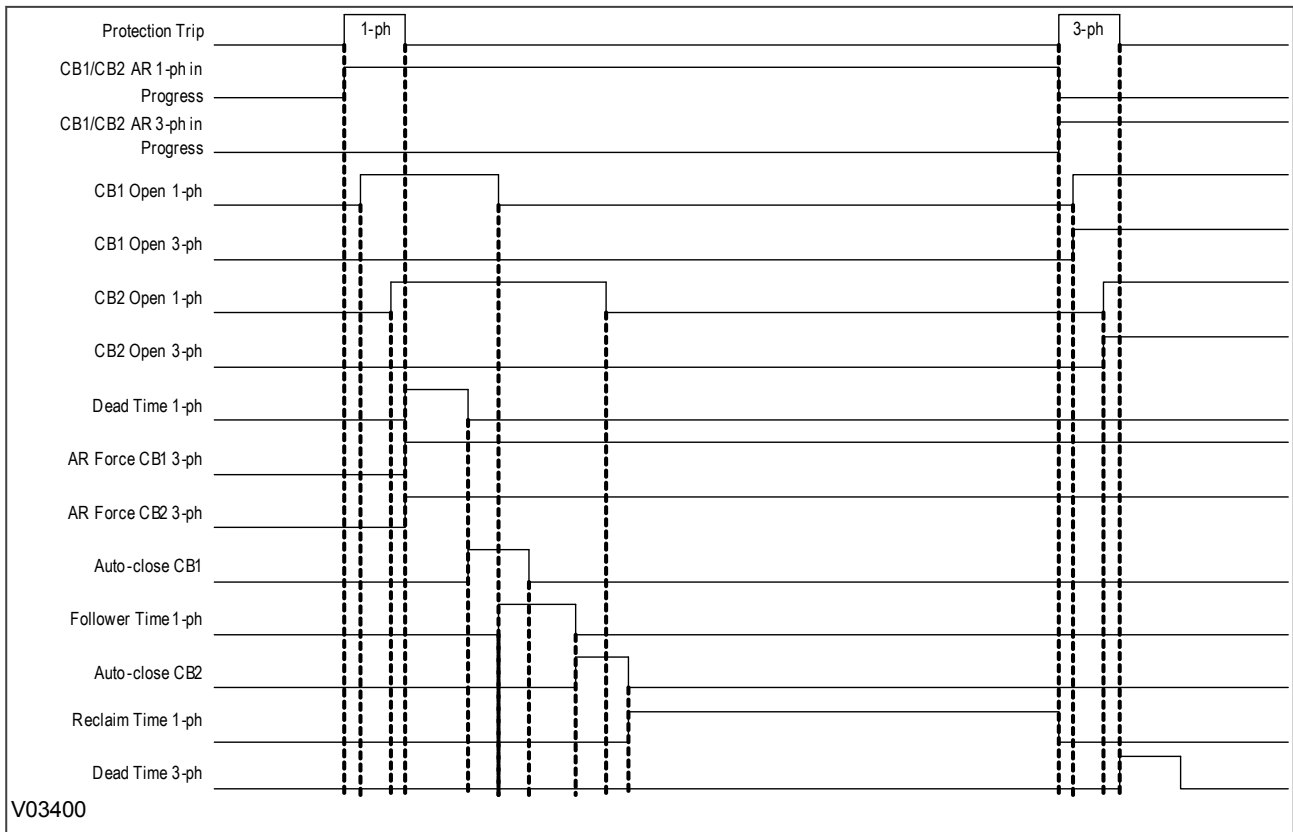


Figure 33: Autoreclose Sequence for a persistent fault on a multishot dual CB application set for single-phase operation

Note:

For three-phase Autoreclosing, for the first shot only, Autoreclose can be performed without checking that the voltages are in synchronism using a setting. This setting, CB1L SC Shot 1 or CB2L SC Shot 1, can be enabled to perform synch-checks on shot 1 for CB1 or CB2, or disabled to not perform the checks.

4 AUTORECLOSE SYSTEM MAP

The Autoreclose System Map describes the System Design of the Autoreclose Logic implemented in this product.

The Autoreclose is implemented in logical software modules. The logical software modules interact by exchanging signals between themselves, and with other software processes in the product. Interchange between modules is limited to digital signals which are realised as either DDB signals or so called “internal signals” (IntSigs). DDB signals are available for mapping in the PSL. Internal signals are similar to DDBs but they are self-contained within the device's functions and are not user-accessible.

The Autoreclose System Map shows the interconnection of the logic modules that are used in the Autoreclose system.

The logic diagrams follow a convention for the elements used, using defined colours and shapes. A key to this convention is provided below. We recommend viewing the logic diagrams in colour rather than in black and white. The electronic version of the technical manual is in colour, but the printed version is not. However, coloured diagrams can be provided on request.

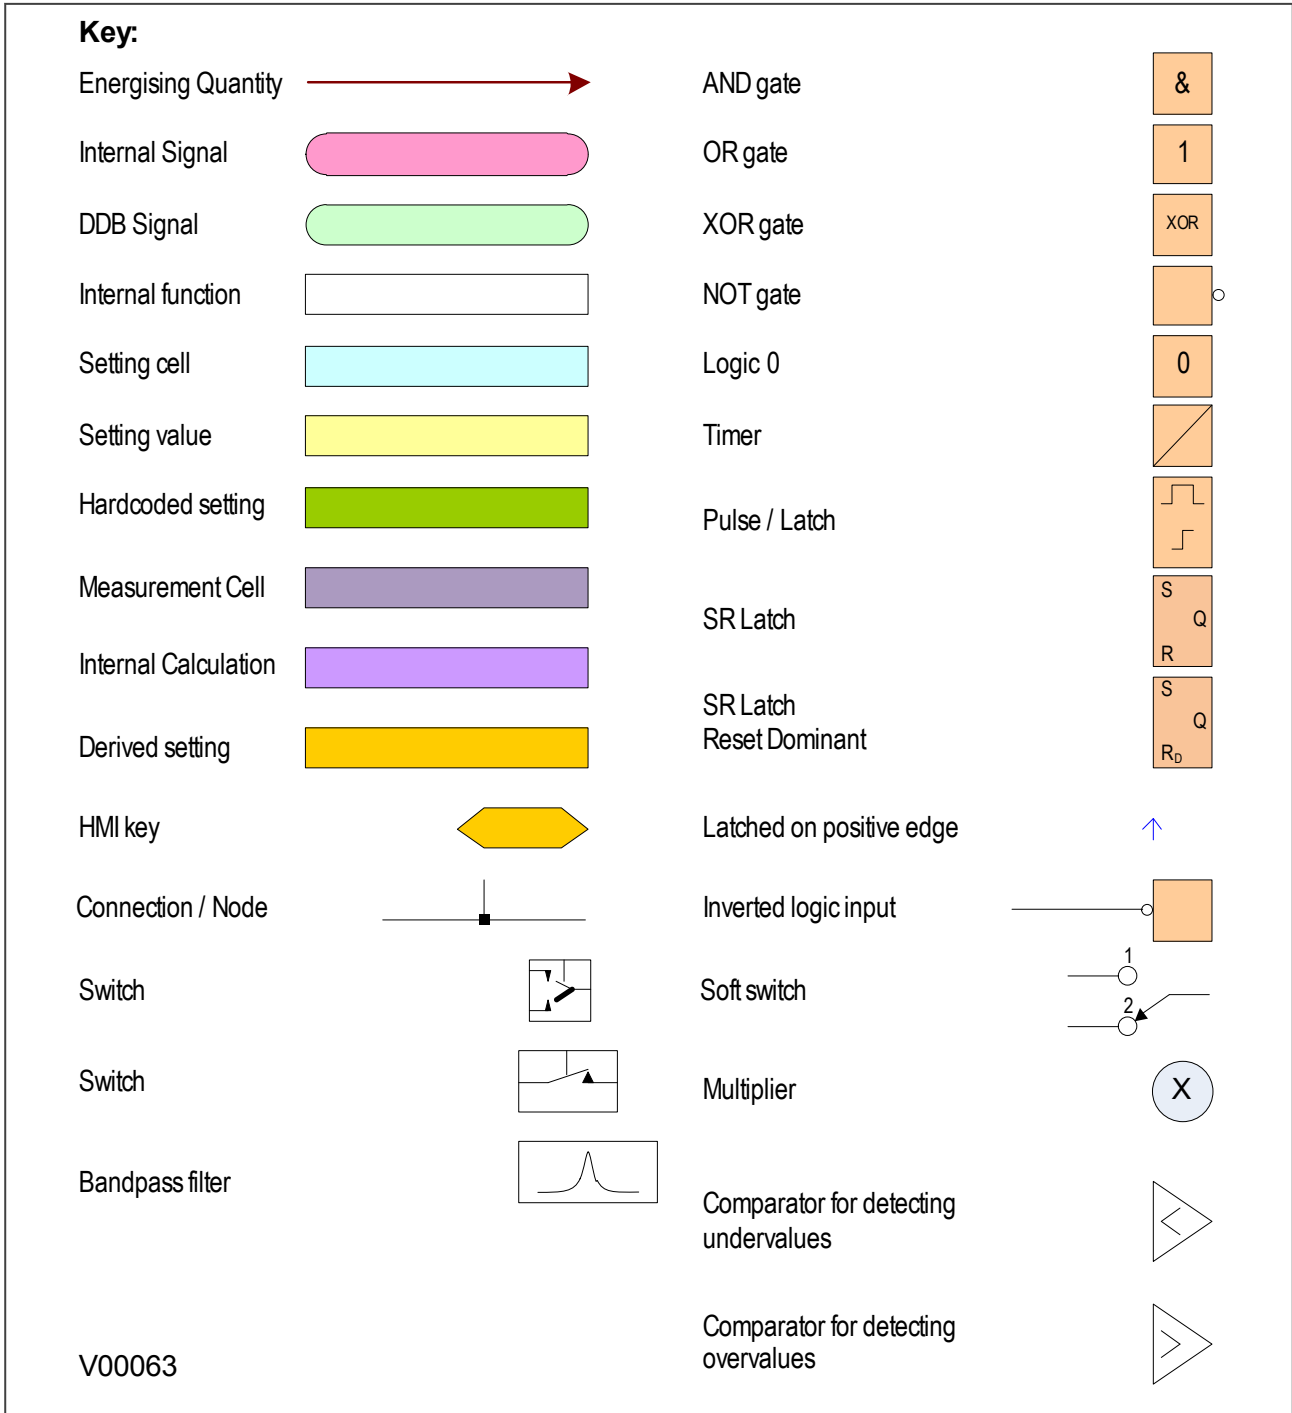


Figure 34: Key to logic diagrams

4.1 AUTORECLOSE SYSTEM MAP DIAGRAMS

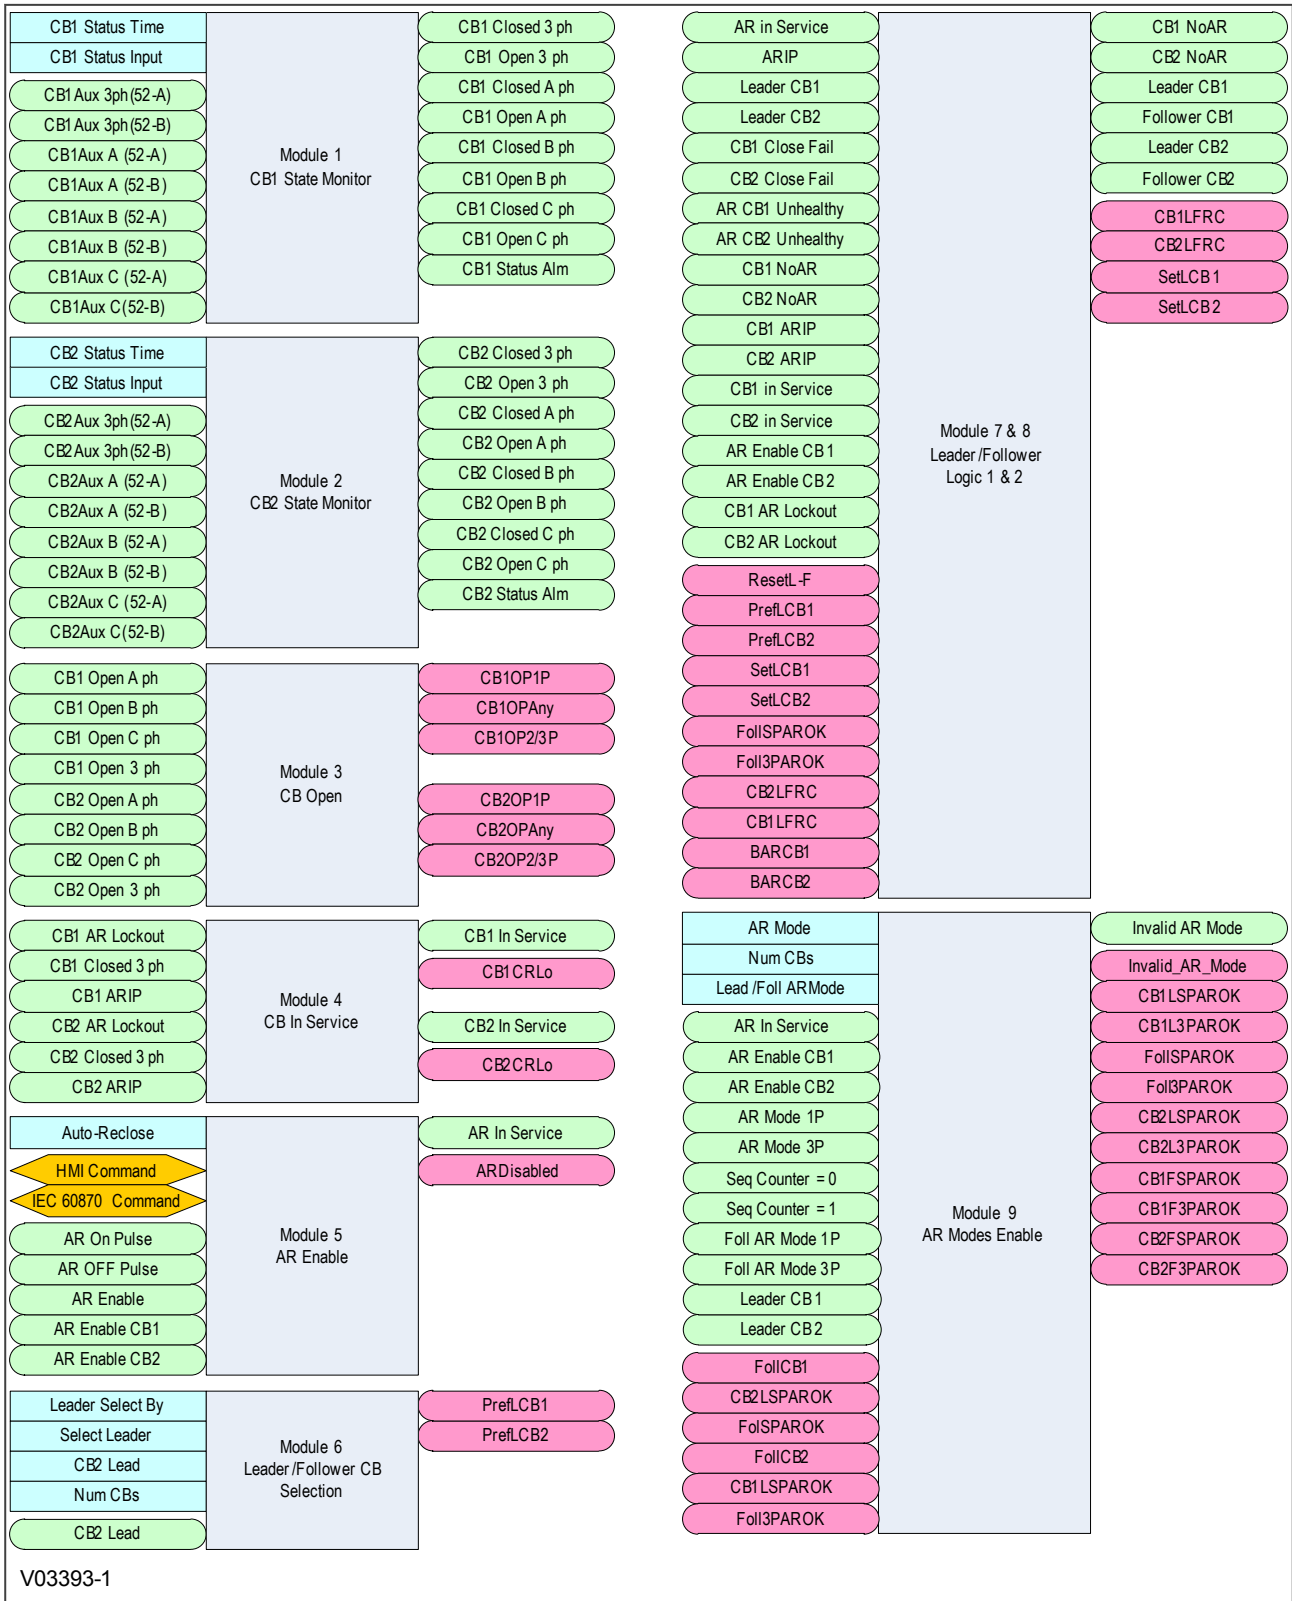


Figure 35: Autoreclose System Map - part 1

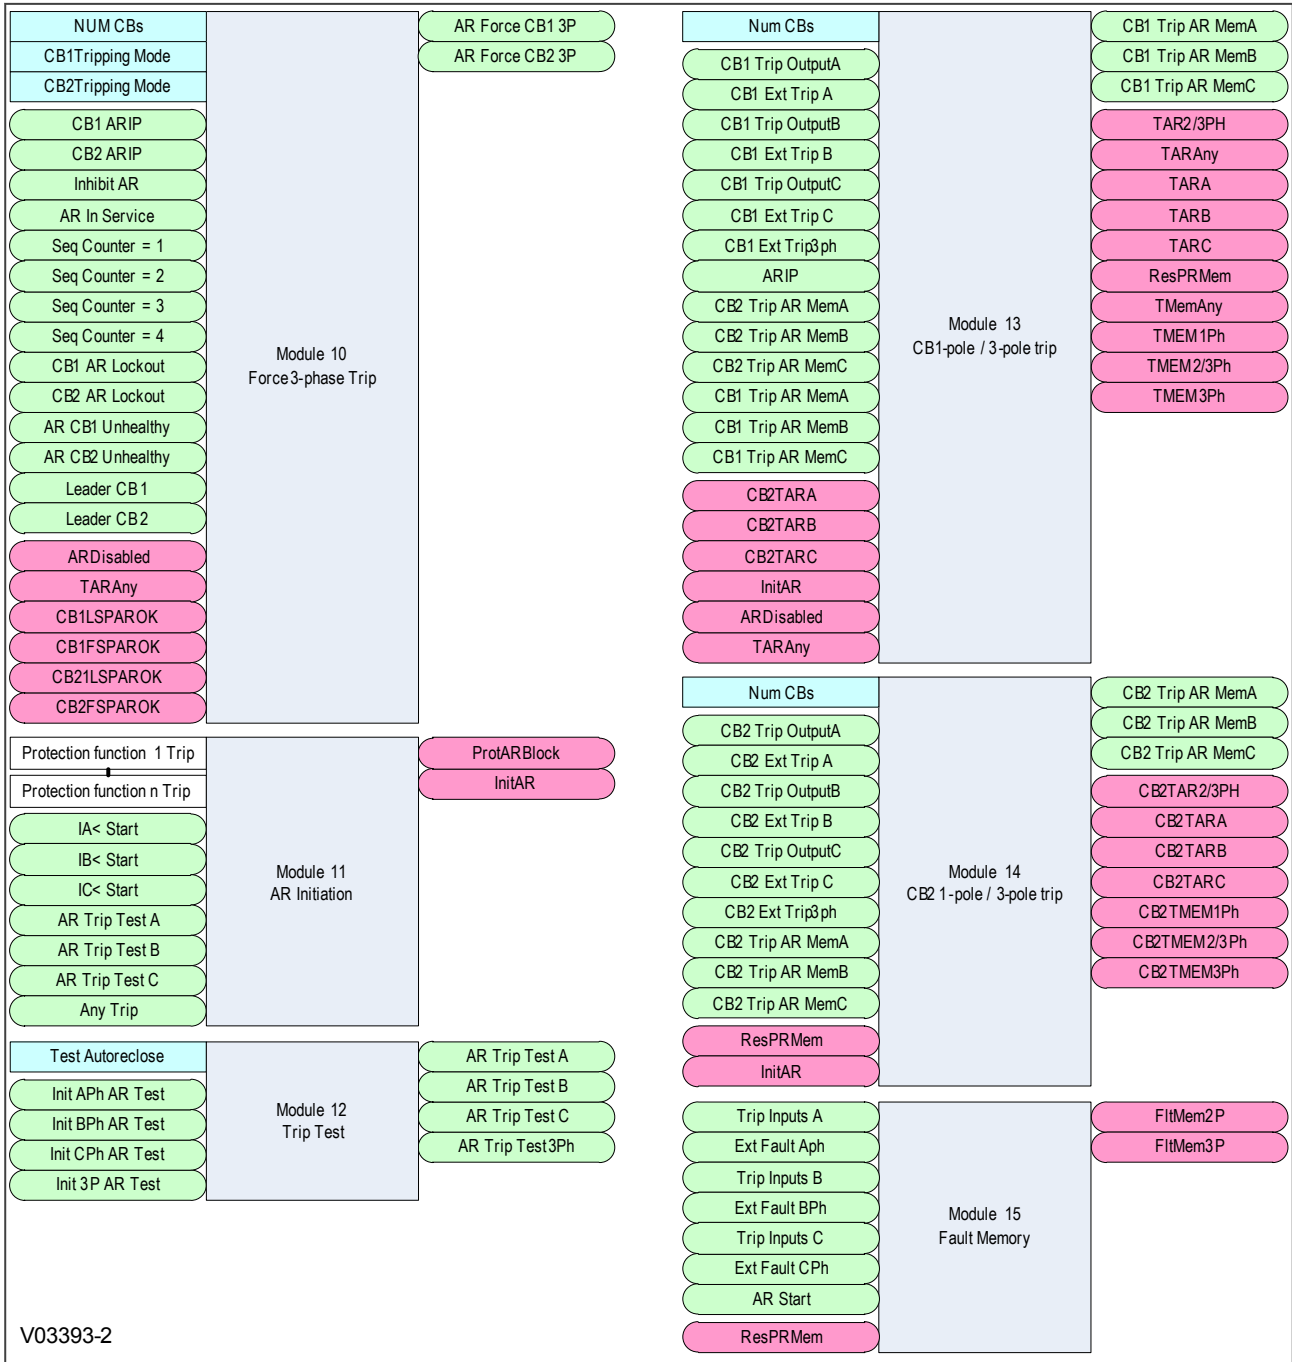


Figure 36: Autoreclose System Map - part 2

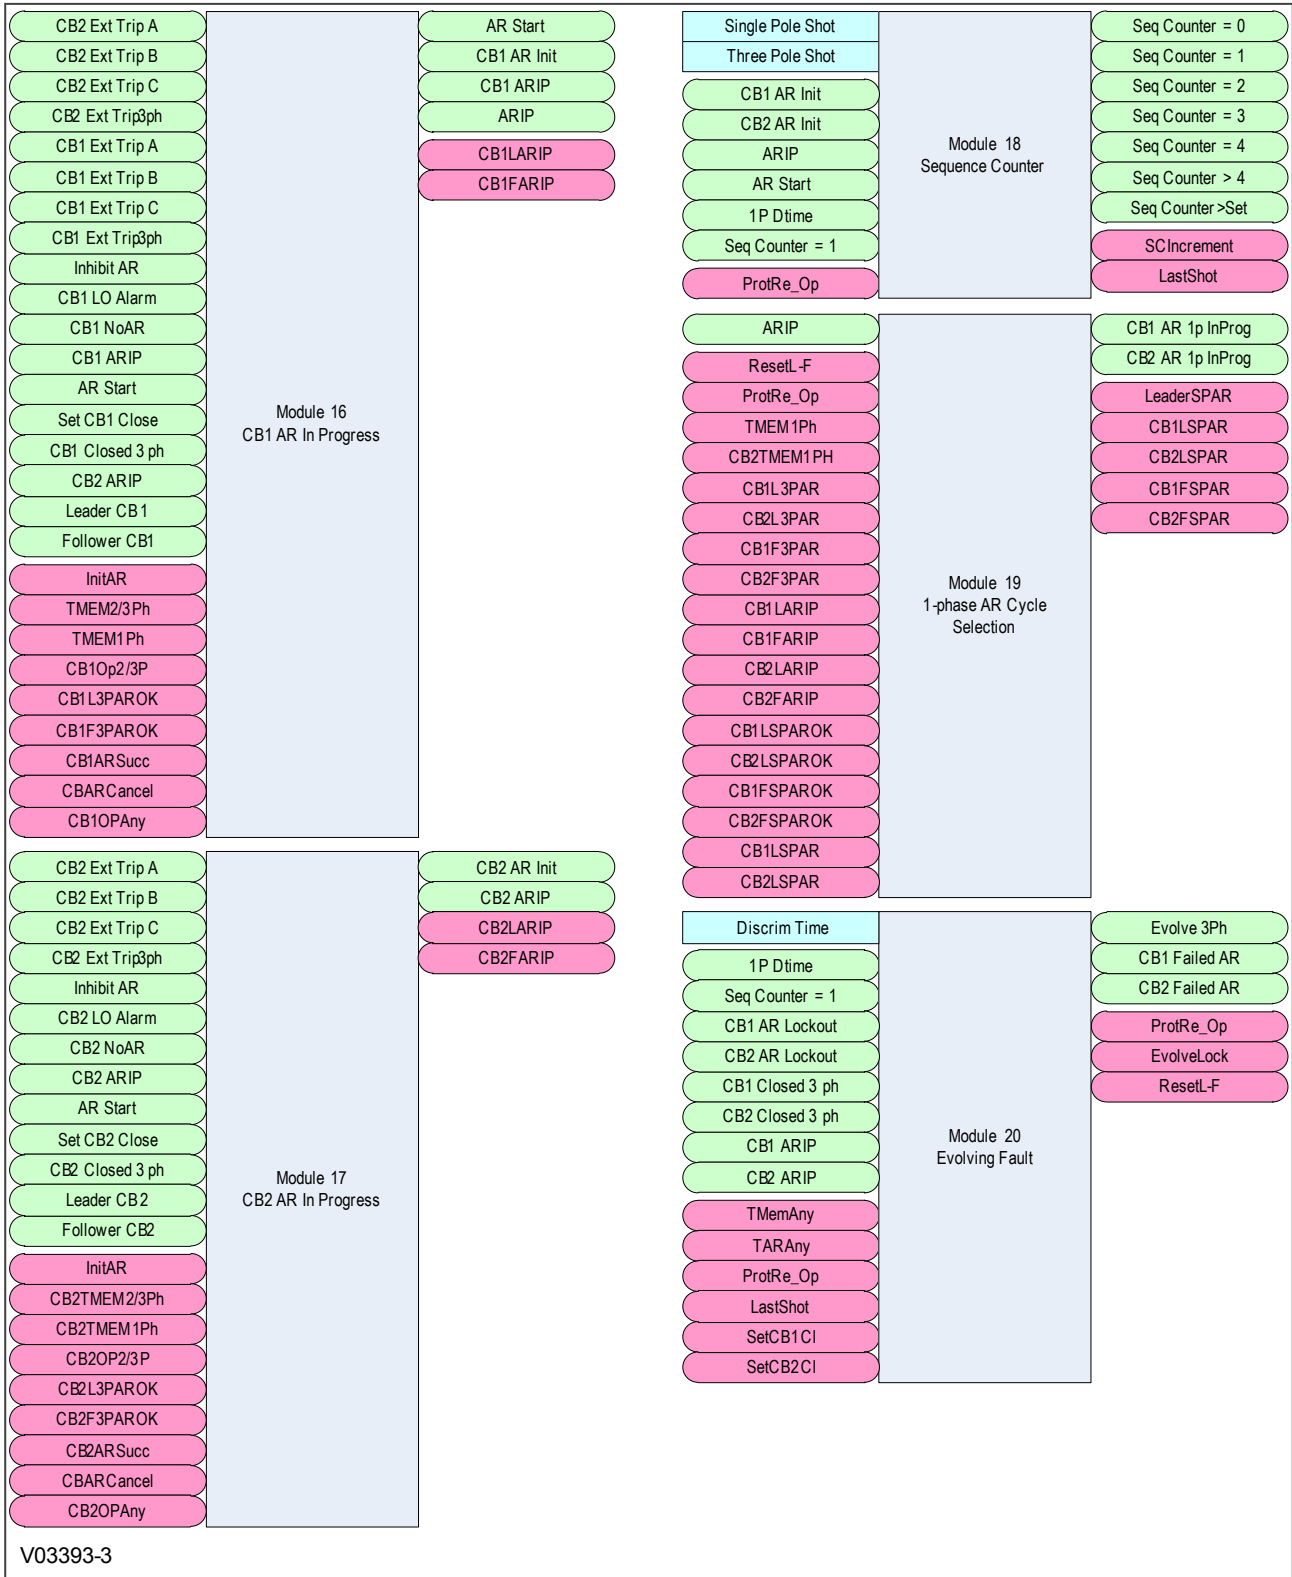


Figure 37: Autoreclose System Map - part 3

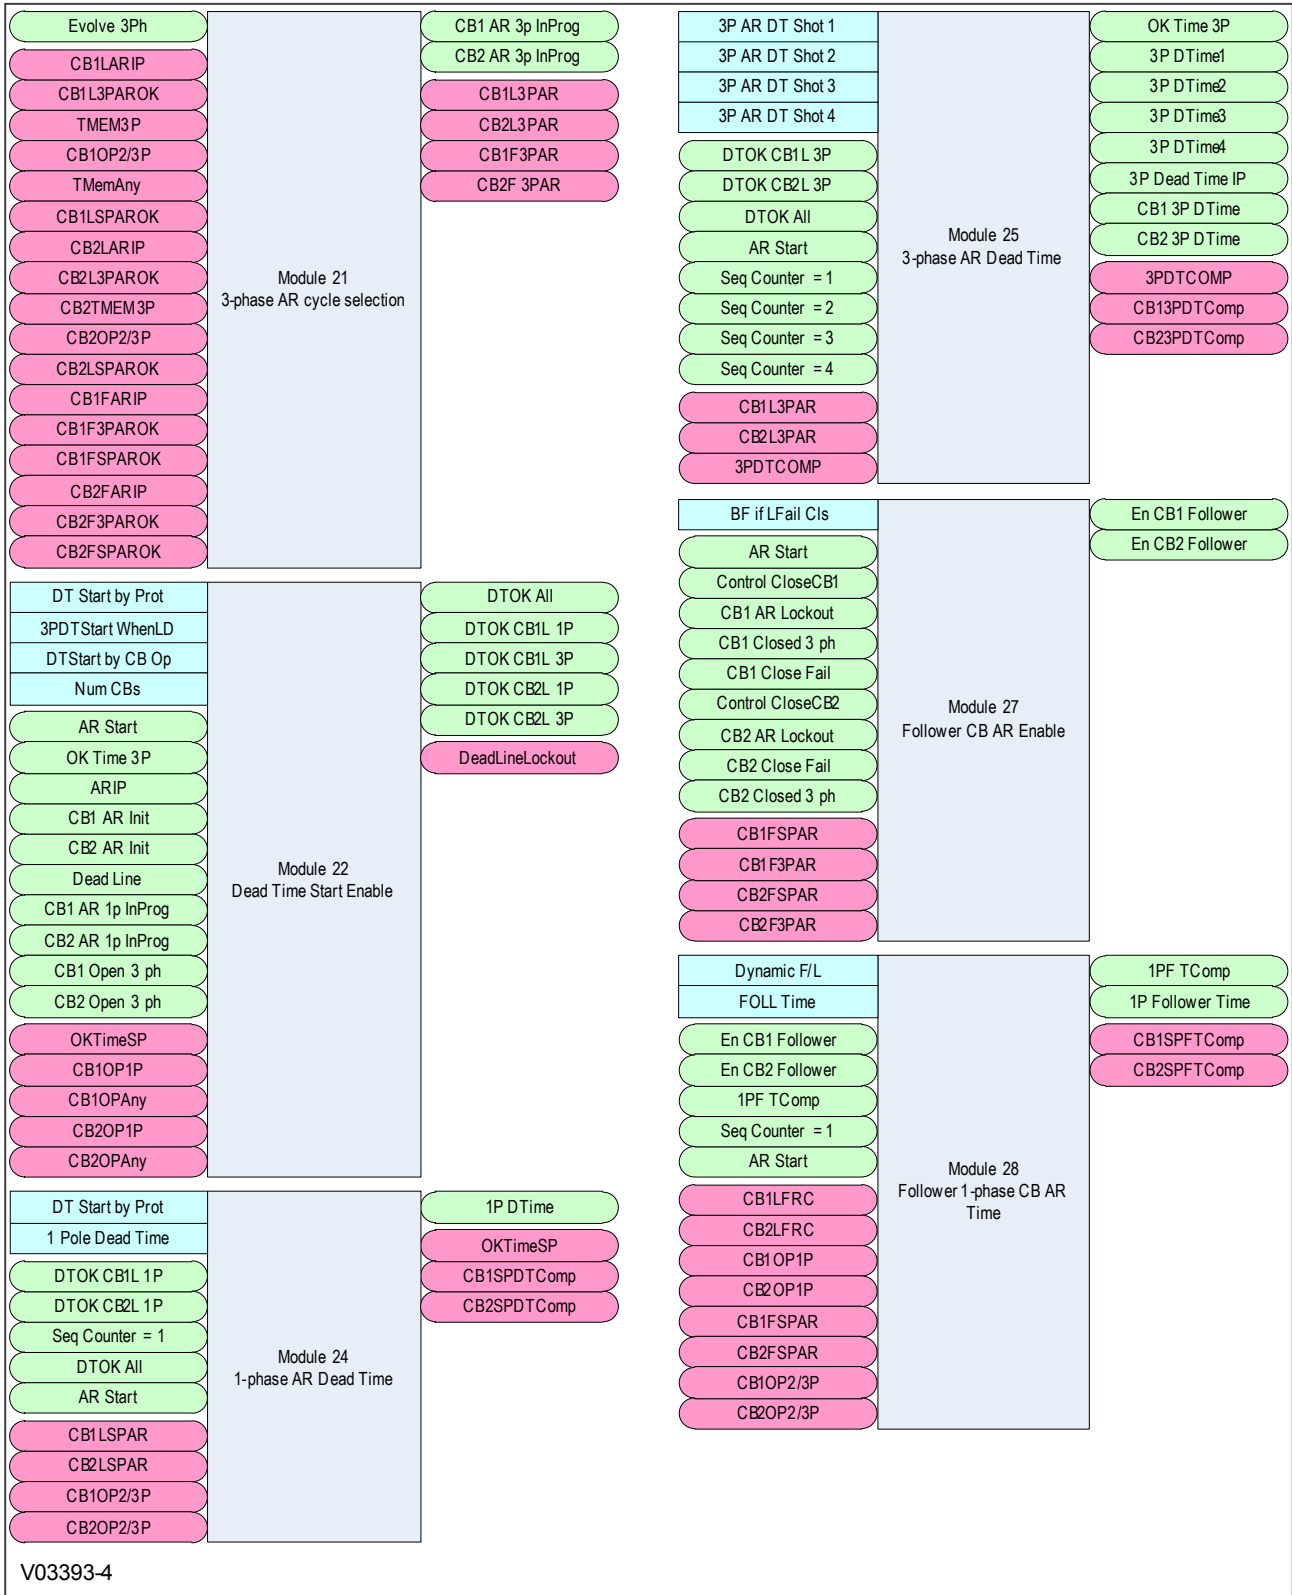


Figure 38: Autoreclose System Map - part 4

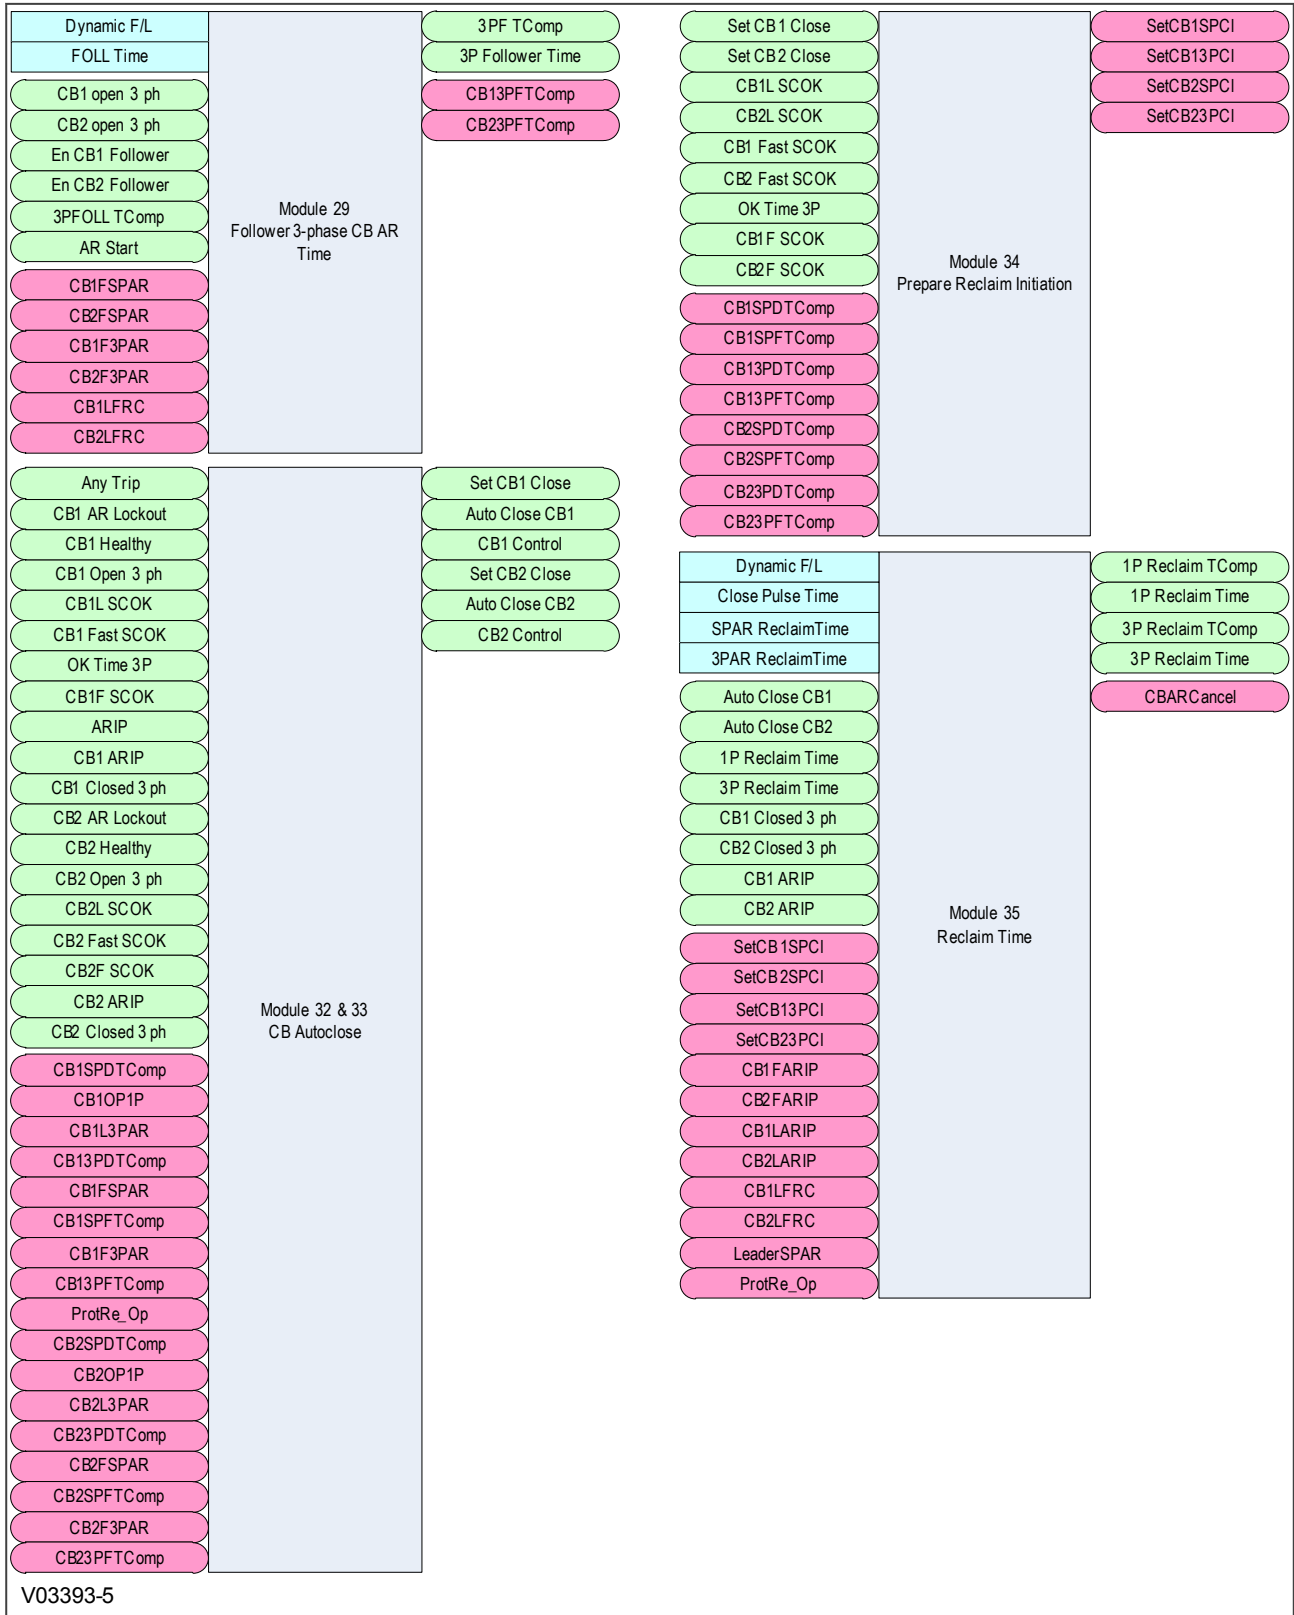


Figure 39: Autoreclose System Map - part 5

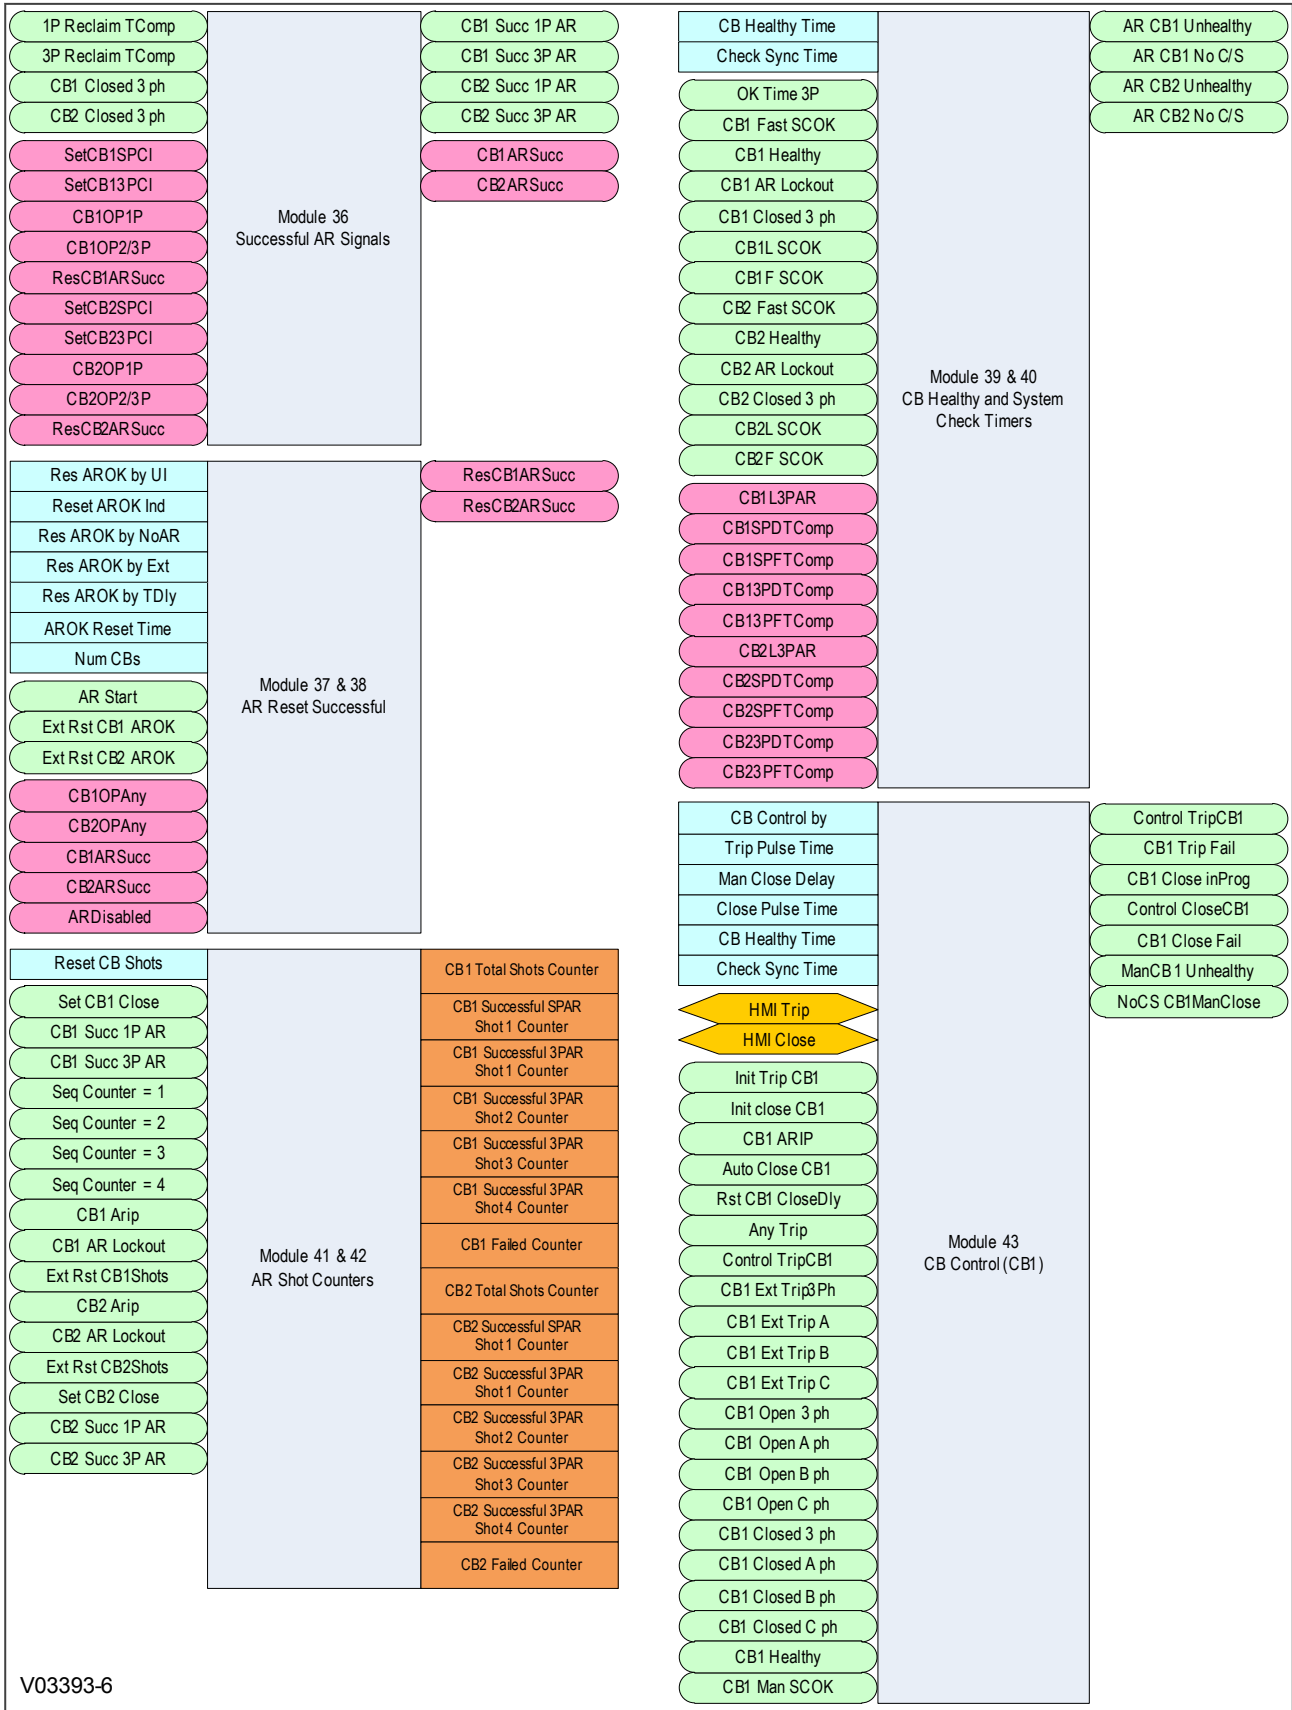


Figure 40: Autoreclose System Map - part 6

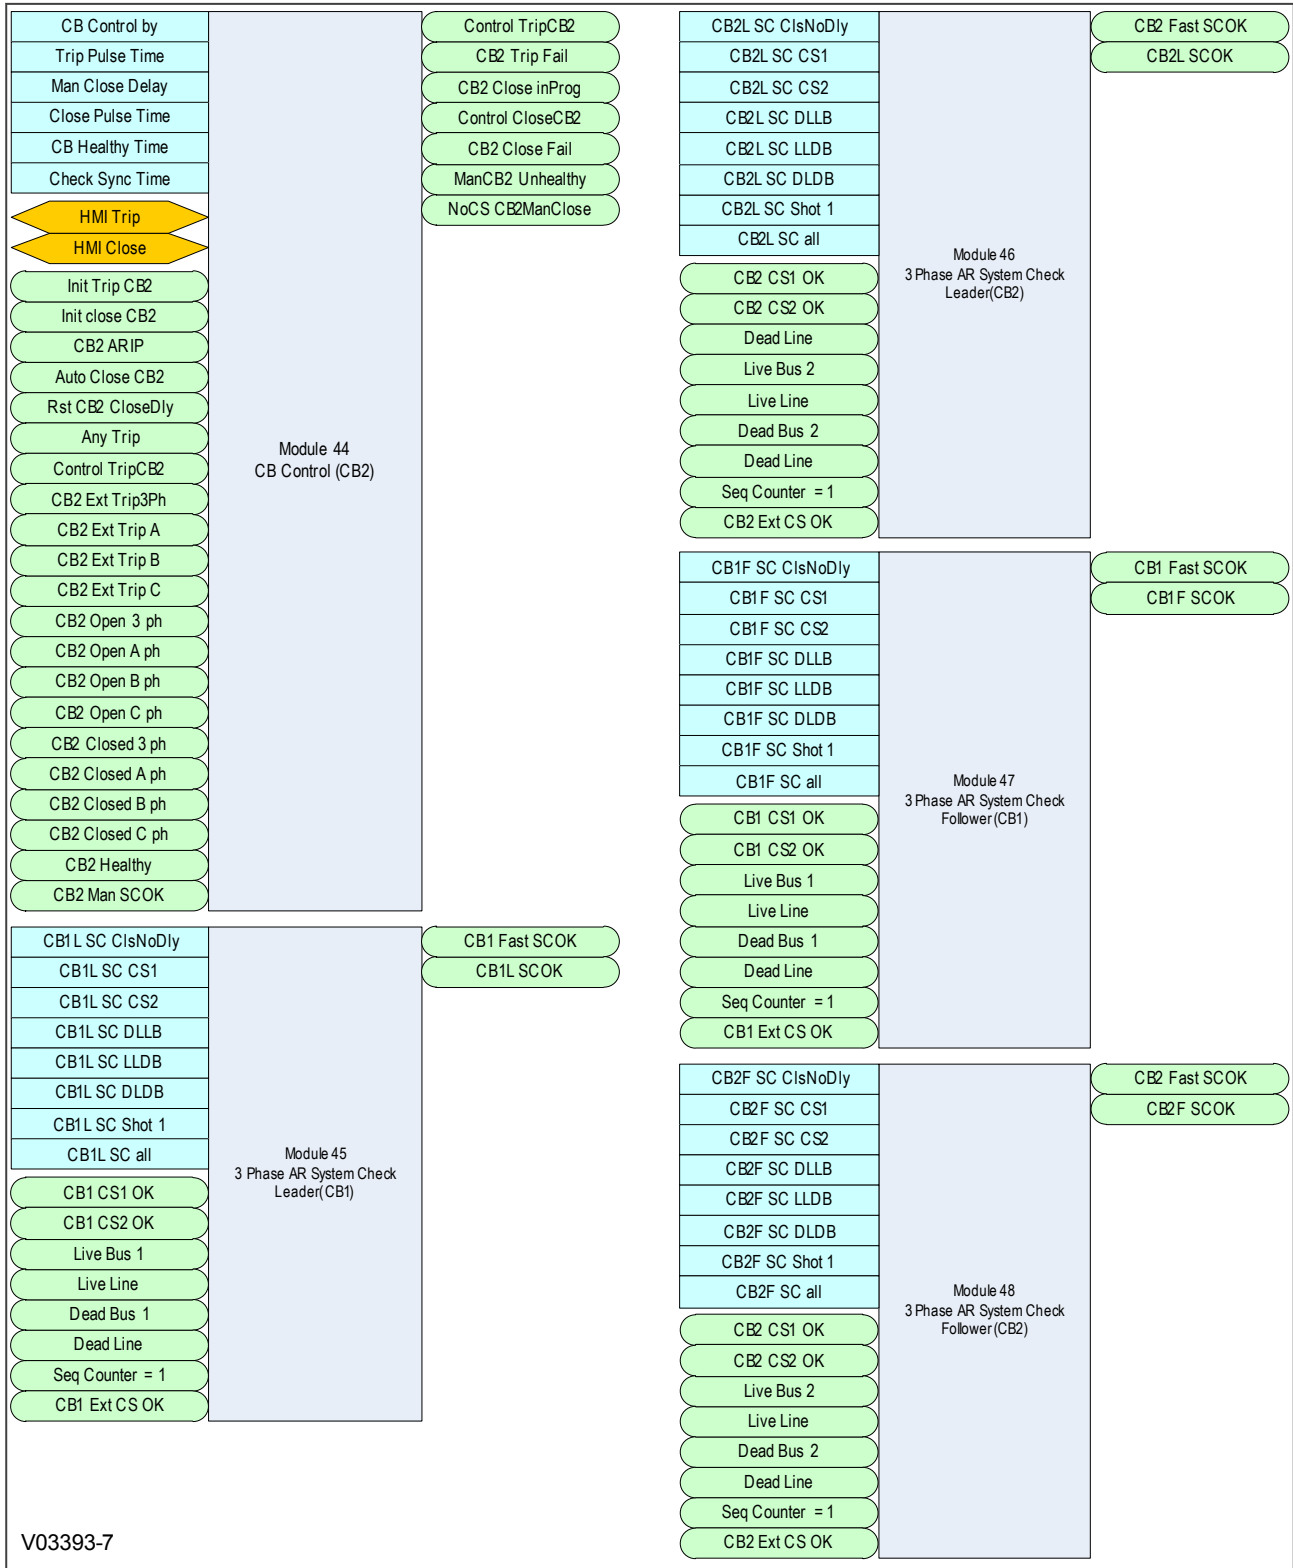


Figure 41: Autoreclose System Map - part 7


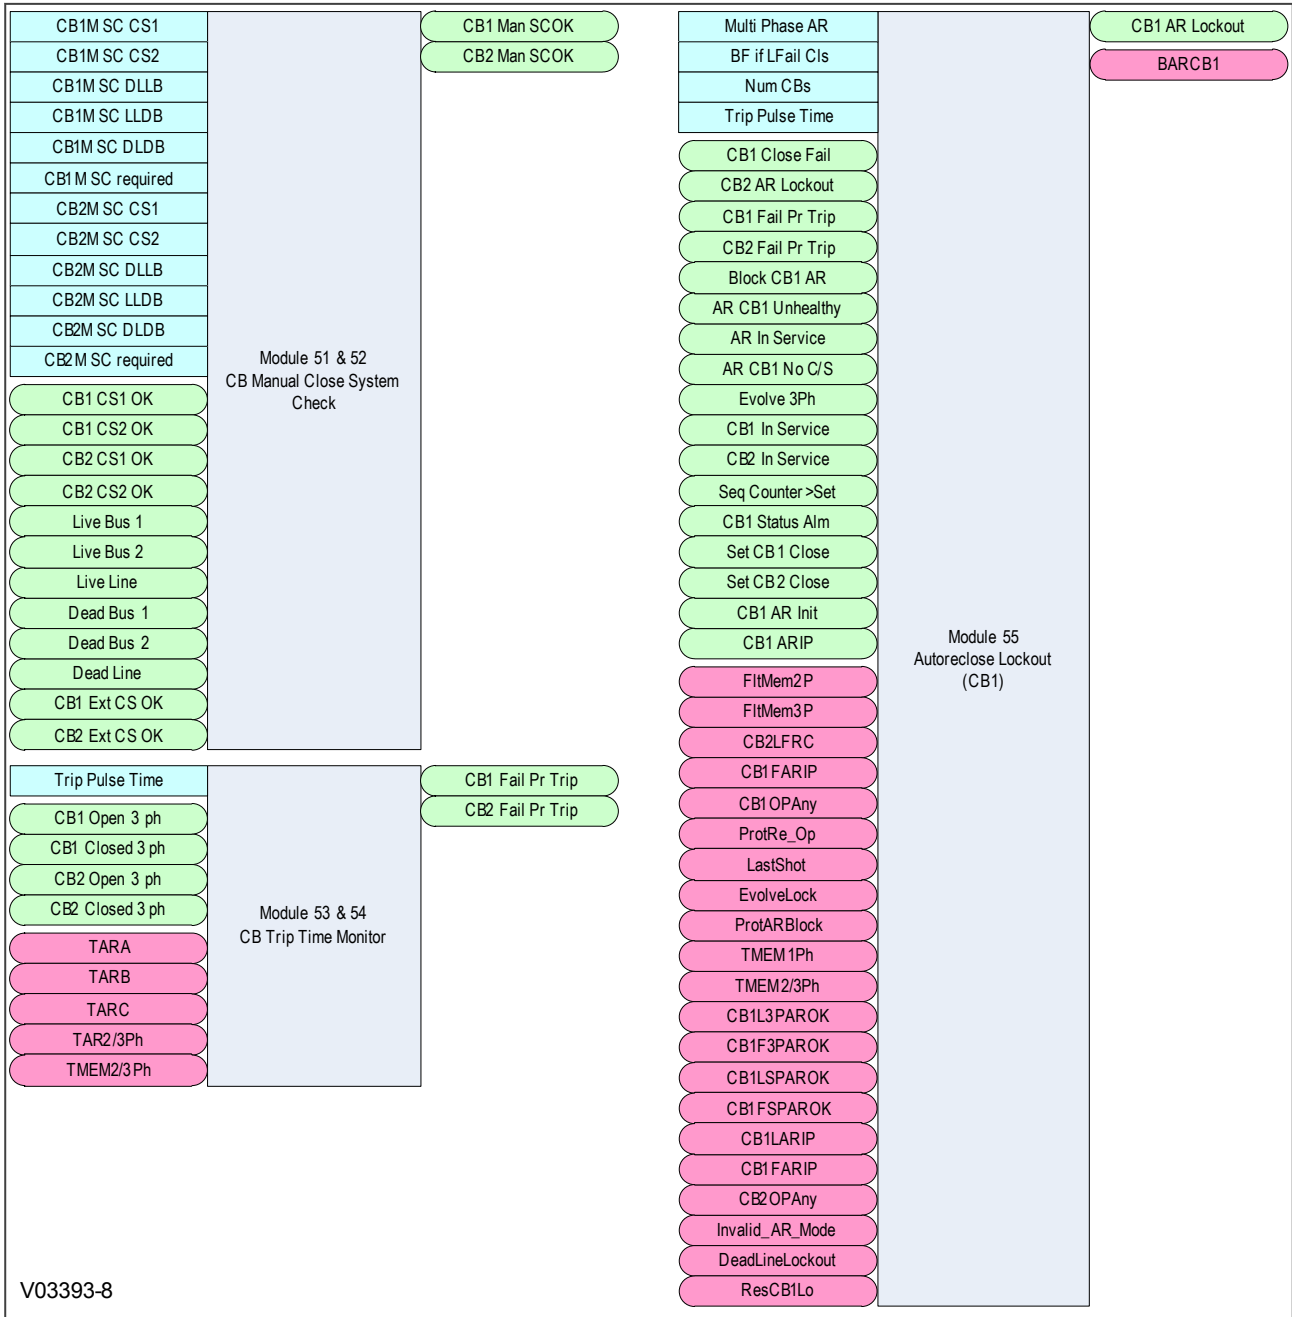


Figure 42: Autoreclose System Map - part 8

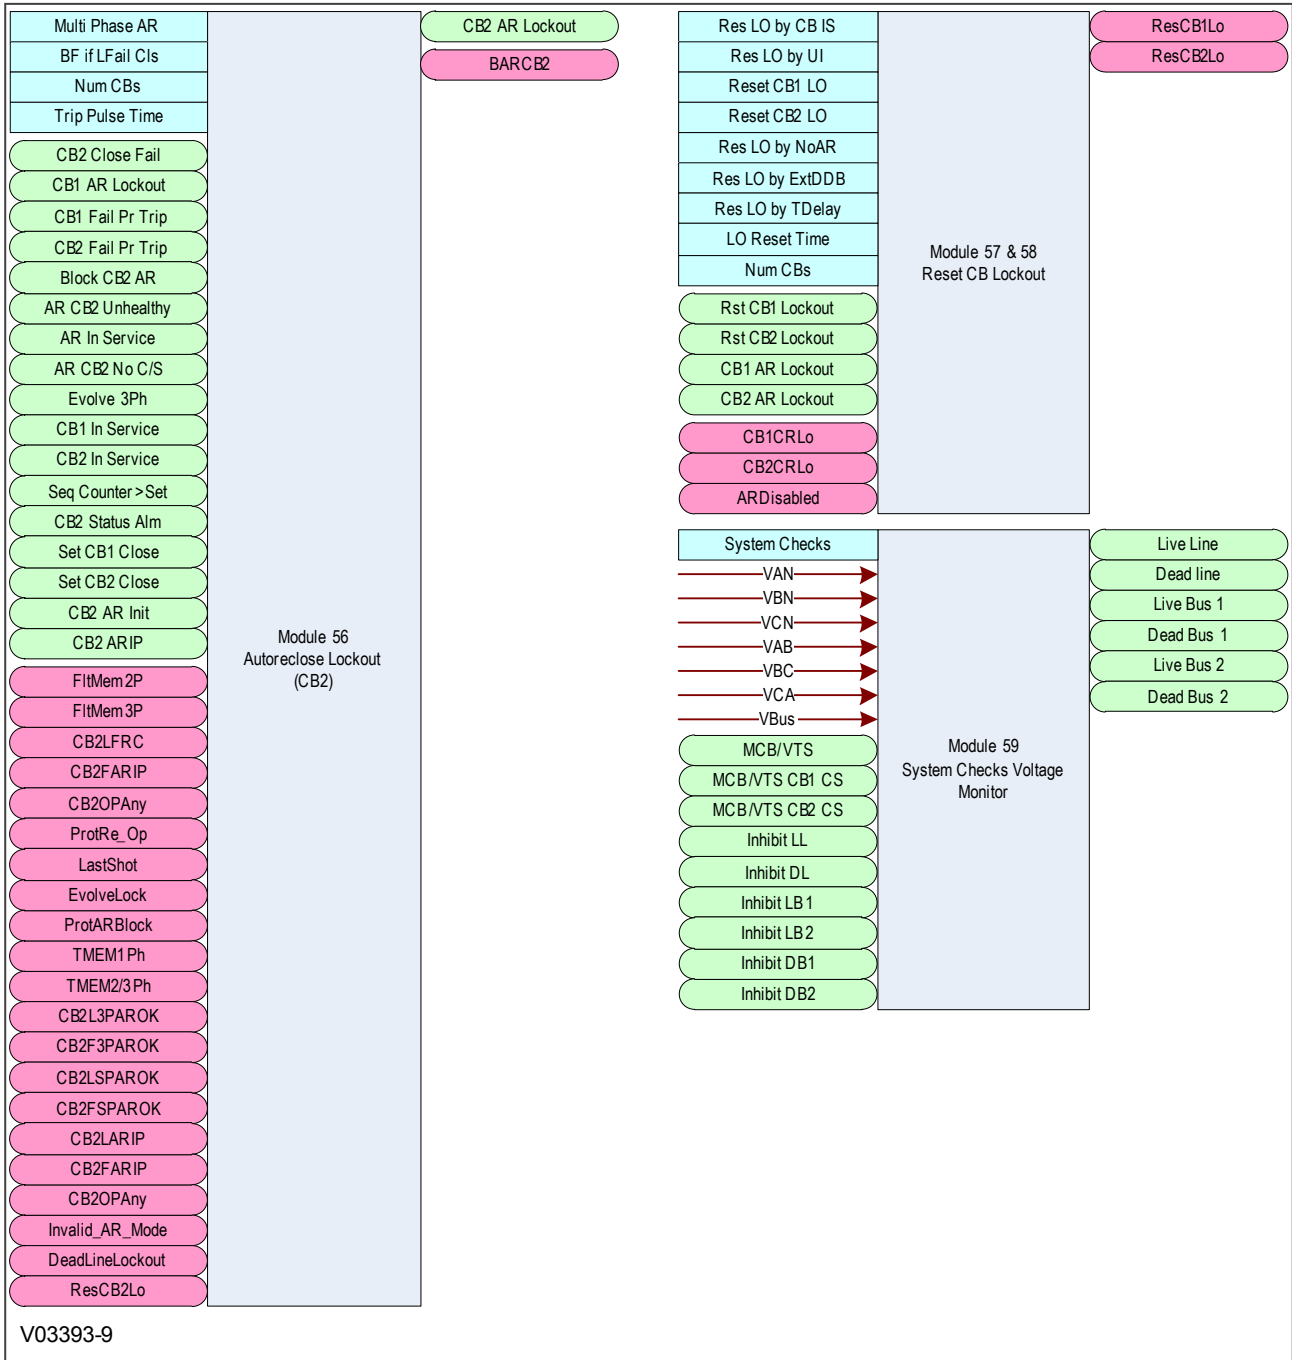

V03393-9

Figure 43: Autoreclose System Map - part 9

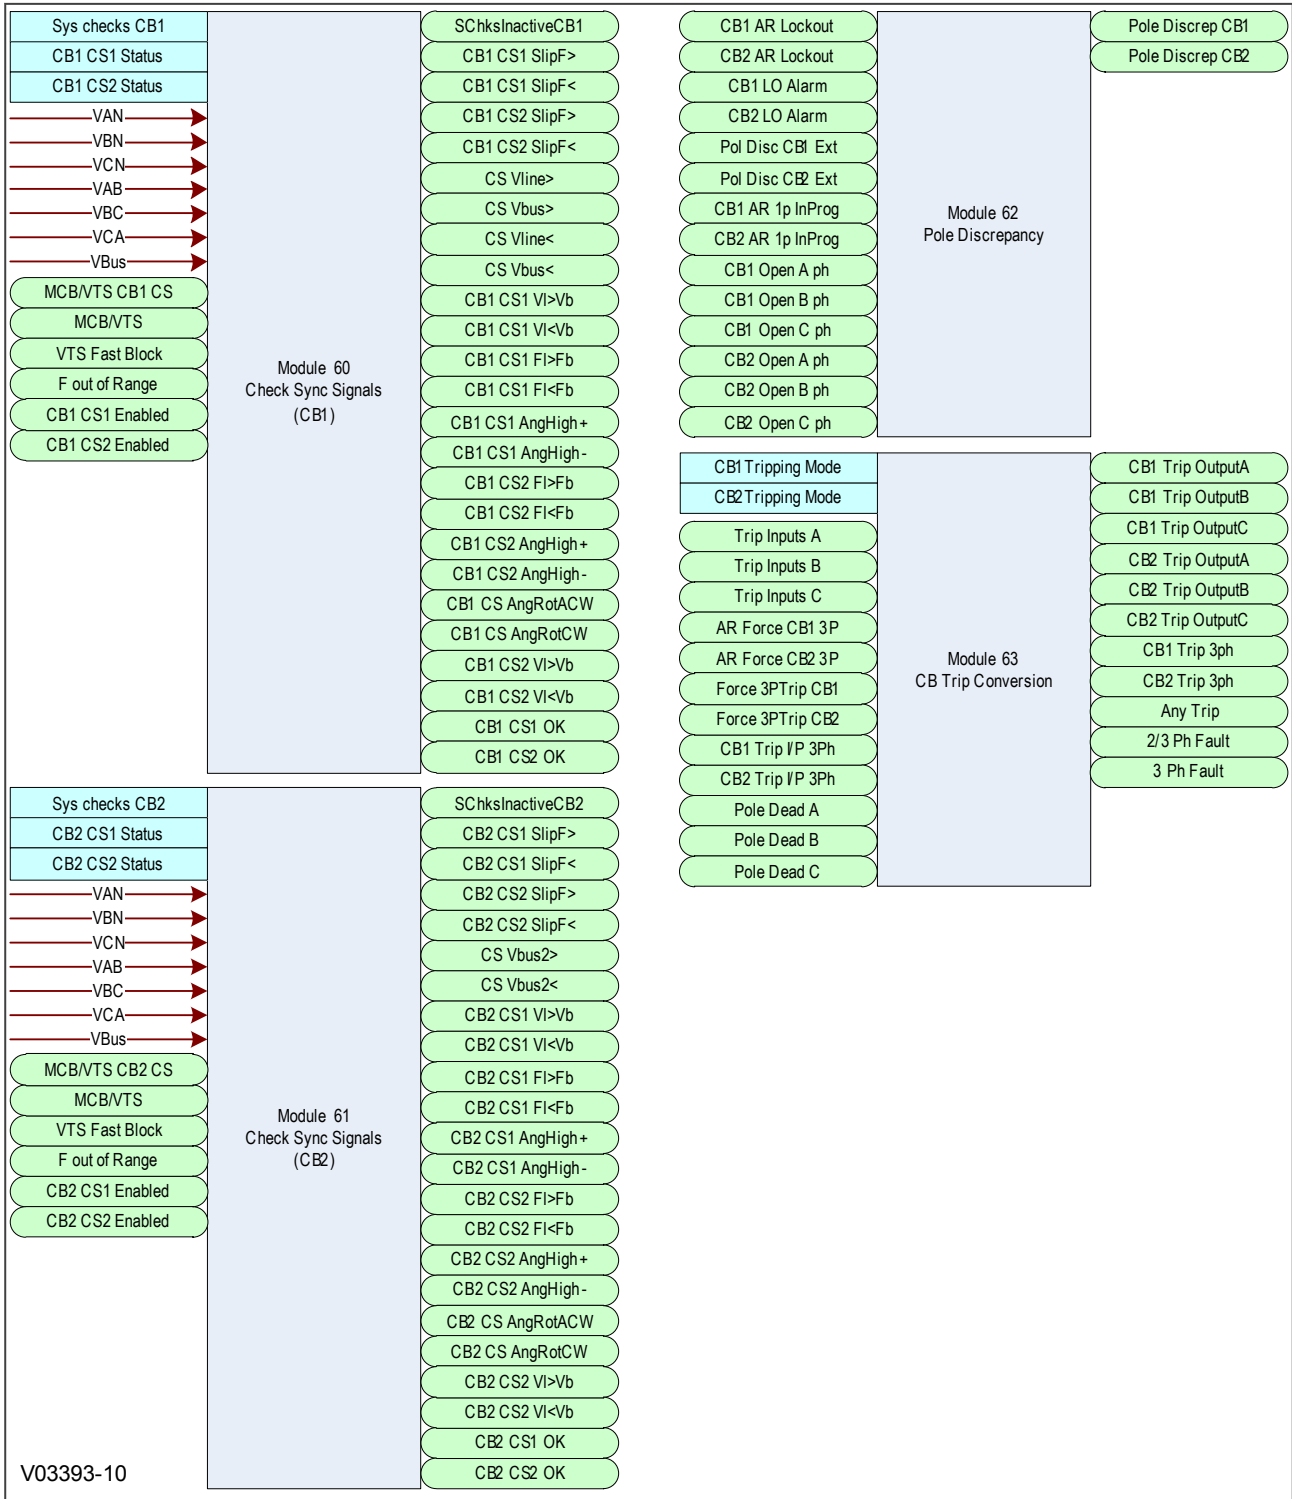


Figure 44: Autoreclose System Map - part 10

4.2 AUTORECLOSE INTERNAL SIGNALS

The following table lists all the internal signals used in the CB control and Autoreclose logic system:

Signal Name	Source	Destination	Description
3PDTCOMP	3-phase AR Dead Time (25)	3-phase AR Dead Time (25)	Three phase dead time complete

Signal Name	Source	Destination	Description
ARDisabled	AR Enable (5)	Reset CB Lockout (57) Force 3-phase Trip (10) CB1-pole / 3-pole trip (13) AR Reset Successful (37)	Overall autoreclosing disabled
BARCB1	Autoreclose Lockout (55)	Leader/Follower (7)	Block Autoreclose for CB1
BARCB2	Autoreclose Lockout (55)	Leader/Follower (7)	Block Autoreclose for CB2
CB13PDTComp	3-phase AR Dead Time (25)	CB Autoclose (32) Prepare Reclaim Initiation (34) CB Healthy and System Check Timers (39)	Three-pole Autoreclose dead time is complete for CB1
CB13PFTComp	Follower 3-phase CB AR Time (29)	CB Autoclose (32) Prepare Reclaim Initiation (34) CB Healthy and System Check Timers (39)	Three-pole Autoreclose follower time is complete for CB1
CB1ARSucc	Successful AR Signals (36)	AR Reset Successful (37) CB1 AR In Progress (16)	Autoreclose successful for CB1
CB1FARIP	CB1 AR In Progress (16)	Autoreclose Lockout (55) Reclaim Time (35)	Autoreclose in progress for CB1 acting as follower
CB1LARIP	CB1 AR In Progress (16)	Autoreclose Lockout (55) Reclaim Time (35)	Autoreclose in progress for CB1 acting as leader
CB1OP1P	CB Open (3)	Dead Time Start Enable (22) Follower 1-phase CB AR Time (28) CB Autoclose (32) Successful AR Signals (36)	CB1 is open on 1 phase
CB1OP2/3P	CB Open (3)	CB1 AR In Progress (16) 3-phase AR cycle selection (21) Follower 1-phase CB AR Time (28) Successful AR Signals (36)	CB1 is open on 2 or 3 phases
CB1OPAny	CB Open (3)	Autoreclose Lockout (55)	CB1 is open on 1, 2 or 3 phases
CB1SPOK			CB1 is OK for single-phase autoreclosure (either as leader or follower)
CB1CRLo	CB In Service (4)	Reset CB Lockout (57)	Reset CB1 lockout
CB1F3PAR	3-phase AR cycle selection (21)	Follower 3-phase CB AR Time (29) CB Autoclose (32)	Three-phase Autoreclose is active for CB1 as follower
CB1F3PAROK	AR Modes Enable (9)	CB1 AR In Progress (16) 3-phase AR cycle selection (21) Autoreclose Lockout (55)	CB1 is OK to perform three-phase Autoreclose as follower
CB1FSPAR	1-phase AR Cycle Selection (19)	Follower CB AR Enable (27) Follower 1-phase CB AR Time (28) Follower 3-phase CB AR Time (29) CB Autoclose (32)	Single-phase Autoreclose is in progress for CB1 as follower
CB1FSPAROK	AR Modes Enable (9)	Force 3-phase Trip (10), 1-phase AR Cycle Selection (19) 3-phase AR cycle selection (21) Autoreclose Lockout (55)	CB1 is OK to perform single-phase Autoreclose as follower
CB1L3PAR	3-phase AR cycle selection (21)	1-phase AR Cycle Selection (19) 3-phase AR Dead Time (25) CB Autoclose (32) CB Healthy and System Check Timers (39)	Three-phase Autoreclose is active for CB1 (CB1 as leader)

Signal Name	Source	Destination	Description
CB1L3PAROK	AR Modes Enable (9)	CB1 AR In Progress (16) 3-phase AR cycle selection (21), Autoreclose Lockout (55)	CB1 is OK to perform three-phase Autoreclose (as leader)
CB1LFRC	Leader/Follower Logic 1 & 2 (7)	Leader/Follower Logic 1 & 2 (7) Follower 1-phase CB AR Time (28) Follower 3-phase CB AR Time (29) Reclaim Time (35)	CB1 failed to reclose (as leader)
CB1LSPAR	1-phase AR Cycle Selection (19)	1-phase AR Cycle Selection (19) 1-phase AR Dead Time (24)	Single-phase Autoreclose is in progress for CB1 (as leader)
CB1LSPAROK	AR Modes Enable (9)	AR Modes Enable (9), Force 3-phase Trip (10) 1-phase AR Cycle Selection (19) 3-phase AR cycle selection (21) Autoreclose Lockout (55)	CB1 is OK to perform single-phase Autoreclose (as leader)
CB1SPDTComp	1-phase AR Dead Time (24)	1-phase AR Dead Time (24) CB Autoclose (32) Prepare Reclaim Initiation (34) CB Healthy and System Check Timers (39)	CB1 single-phase dead time is complete
CB1SPFTComp	Follower 1-phase CB AR Time (28)	CB Autoclose (32), Prepare Reclaim Initiation (34) CB Healthy and System Check Timers (39)	CB1 single-phase follower time is complete
CB23PDTCComp	3-phase AR Dead Time (25)		CB2 three-phase Autoreclose dead time is complete
CB23PFTComp	Follower 3-phase CB AR Time (29)		CB2 three-phase Autoreclose time is complete
CB23POK			CB2 is OK for three-phase Autoreclose as leader or follower
CB2ARSucc		CB2 AR In Progress (17)	Autoreclose successful for CB2
CB2FARIP	CB2 AR In Progress (17)	1-phase AR Cycle Selection (19) 3-phase AR cycle selection (21) Reclaim Time (35)	Autoreclose is in progress for CB2 as follower
CB2LARIP	CB2 AR In Progress (17)	1-phase AR Cycle Selection (19) 3-phase AR cycle selection (21) Reclaim Time (35)	Autoreclose is in progress for CB2 as leader
CB2OP1P	CB Open (3)	Dead Time Start Enable (22) Follower 1-phase CB AR Time (28)	CB2 is open on 1 phase
CB2OP2/3P	CB Open (3)	CB2 AR In Progress (17) 3-phase AR cycle selection (21) Follower 1-phase CB AR Time (28) 1-phase AR Dead Time (24)	CB2 is open on 2 or 3 phases
CB2OpAny	CB Open (3)	CB2 AR In Progress (17) Dead Time Start Enable (22) Autoreclose Lockout (55)	CB2 is open on 1, 2 or 3 phases
CB2SPOK			CB2 is OK for single-phase Autoreclose as leader or follower
CB2TAR2/3Ph	CB2 1-pole / 3-pole trip (14)		A 2-phase or 3-phase trip has initiated Autoreclose for CB2
CB2TARA	CB2 1-pole / 3-pole trip (14)	CB1-pole / 3-pole trip (13)	An A-phase trip has initiated Autoreclose for CB2

Signal Name	Source	Destination	Description
CB2TARB	CB2 1-pole / 3-pole trip (14)	CB1-pole / 3-pole trip (13)	A B-phase trip has initiated Autoreclose for CB2
CB2TARC	CB2 1-pole / 3-pole trip (14)	CB1-pole / 3-pole trip (13)	A C-phase trip has initiated Autoreclose for CB2
CB2TMEM1Ph	CB2 1-pole / 3-pole trip (14)	1-phase AR Cycle Selection (19) CB2 AR In Progress (17)	A single-phase trip initiated Autoreclose for CB2
CB2TMEM2/3Ph	CB2 1-pole / 3-pole trip (14)	CB2 AR In Progress (17)	A 2-phase or 3-phase trip initiated Autoreclose for CB2
CB2TMEM3Ph	CB2 1-pole / 3-pole trip (14)		A 3-phase trip initiated Autoreclose for CB2
CB2CRLo	CB In Service (4)		Reset lockout for CB2
CB2F3PAR		1-phase AR Cycle Selection (19) Follower CB AR Enable (27) Follower 3-phase CB AR Time (29)	Three-phase Autoreclose is in progress for CB2 as a follower
CB2F3PAROK	AR Modes Enable (9)	CB2 AR In Progress (17) 3-phase AR cycle selection (21)	CB2 is OK to perform three-phase Autoreclose as follower
CB2FSPAR	1-phase AR Cycle Selection (19)	Follower CB AR Enable (27) Follower 1-phase CB AR Time (28) Follower 3-phase CB AR Time (29)	Single-phase Autoreclose is in progress for CB2 as follower
CB2FSPAROK	AR Modes Enable (9)	Force 3-phase Trip (10) 1-phase AR Cycle Selection (19) 3-phase AR cycle selection (21)	CB2 is OK to perform single-phase Autoreclose as follower
CB2L3PAR	3-phase AR cycle selection (21)	1-phase AR Cycle Selection (19)	Three-phase Autoreclose is in progress for CB2 as leader
CB2L3PAROK	AR Modes Enable (9)	CB2 AR In Progress (17) 3-phase AR cycle selection (21)	CB2 is OK to perform three-phase Autoreclose as leader
CB2LFRC	Leader/Follower Logic 1 & 2 (7)	Leader/Follower (7) Follower 1-phase CB AR Time (28) Follower 3-phase CB AR Time (29) Reclaim Time (35) Autoreclose Lockout (55)	CB2 failed to reclose as leader
CB2LSPAR	1-phase AR Cycle Selection (19)	AR Modes Enable (9) 1-phase AR Cycle Selection (19) 1-phase AR Dead Time (24)	Single-phase Autoreclose is in progress for CB2 as leader
CB2LSPAROK	AR Modes Enable (9)	AR Modes Enable (9) 1-phase AR Cycle Selection (19) 3-phase AR cycle selection (21)	CB2 is OK to perform single-phase Autoreclose as leader
CB2SPDTComp	1-phase AR Dead Time (24)		CB2 single-phase dead time is complete
CB2SPFTComp	Follower 1-phase CB AR Time (28)		CB2 single-phase follower time is complete
DeadLineLockout	Dead Time Start Enable (22)	Autoreclose Lockout (55)	Signal to force the auto-reclose sequence to lockout
ENABLE CB13PDT			Enable dead time for three-phase Autoreclose for CB1
ENABLE CB1SPDT			Enable dead time for single-phase Autoreclose for CB1
ENABLE CB23PDT			Enable dead time for three-phase Autoreclose for CB2
ENABLE CB2SPDT			Enable dead time for single-phase Autoreclose for CB2

Signal Name	Source	Destination	Description
EvolveLock	Evolving Fault (20)	Autoreclose Lockout (55)	Lockout for 2nd trip after the "Discrim Time" has expired
F Out of Range		Check Sync Signals (60)	Signal from the frequency tracking logic indicating that the measured power system frequency is outside the operational range
FitMem2P	Fault Memory (15)	Autoreclose Lockout (55)	A signal to indicate that the initiating fault involved 2 phases
FitMem3P	Fault Memory (15)	Autoreclose Lockout (55)	A signal to indicate that the initiating fault involved 3 phases
Foll3PAROK	AR Modes Enable (9)	Leader/Follower (7) AR Modes Enable (9)	The follower circuit breaker is Ok for three-phase Autoreclose
FollSPAROK	AR Modes Enable (9)	Leader/Follower (7)	The follower circuit breaker is Ok for single-phase Autoreclose
InitAR	AR Initiation (11)	AR Initiation (11) CB1-pole / 3-pole trip (13) CB2 1-pole / 3-pole trip (14) CB1 AR In Progress (16) CB2 AR In Progress (17)	Internally derived signal to initiate Autoreclose (external triggers not included)
Invalid_AR_Mode	AR Modes Enable (9)	Autoreclose Lockout (55)	An invalid state is being indicated by the logic that uses opto-inputs to determine the Autoreclose mode.
LastShot	Sequence Counter (18)	Evolving Fault (20) Autoreclose Lockout (55)	Indicates that the Autoreclose sequence has reached the last shot
OKTimeSP	1-phase AR Dead Time (24)	Dead Time Start Enable (22)	The dead time for single pole Autoreclose is OK
PrefLCB1	Leader/Follower CB Selection (6)	Leader/Follower (7)	CB1 is the preferred leader
PrefLCB2	Leader/Follower CB Selection (6)	Leader/Follower (7)	CB2 is the preferred leader
ProtARBlock	AR Initiation (11)	Autoreclose Lockout (55)	Signal to block Autoreclose for selected host protection elements
ProtRe_Op	Evolving Fault (20)	Autoreclose Lockout (55) Sequence Counter (18) 1-phase AR Cycle Selection (19) Evolving Fault (20)	Signal to indicate that further protection operation has occurred during Autoreclose
ResCB1ARSucc	Successful AR Signals (36)	Successful AR Signals (36) AR Reset Successful (37)	Reset the indication of successful Autoreclose for CB1
ResCB1Lo	Reset CB Lockout (57)	Autoreclose Lockout (55)	Reset the indication of lockout for CB1
ResCB2ARSucc			Reset the indication of successful Autoreclose for CB2
ResCB2Lo			Reset the indication of lockout for CB2
ResetL-F	Evolving Fault (20)	Leader/Follower (7) 1-phase AR Cycle Selection (19)	Used to reset the allocation of leader/follower functionality
ResPRMem	CB1-pole / 3-pole trip (13)	CB2 1-pole / 3-pole trip (14) Fault Memory (15)	Reset the signal that indicates the faulted phases that initiated the Autoreclose
SCIncrement	Sequence Counter (18)		Increment the sequence counter
SCCountoveqShots			Sequence counter has exceeded setting
SetLCB1	Leader/Follower Logic 1 & 2 (7)	Leader/Follower (7)	CB1 has been selected as leader

Signal Name	Source	Destination	Description
SetLCB2	Leader/Follower Logic 1 & 2 (7)	Leader/Follower (7)	CB2 has been selected as leader
SetCB13PCI	Prepare Reclaim Initiation (34)	Reclaim Time (35) Successful AR Signals (36)	Three-phase close command to CB1
SetCB1SPCI	Prepare Reclaim Initiation (34)	Reclaim Time (35) Successful AR Signals (36)	Single-phase close command to CB1
SetCB23PCI		Reclaim Time (35)	Three-phase close command to CB2
SetCB2SPCI		Reclaim Time (35)	Single-phase close command to CB2
SPDTComp			Single-phase dead time complete
TAR2/3Ph	CB1-pole / 3-pole trip (13), CB2 1-pole / 3-pole trip (14)	CB Trip Time Monitor (53)	A 2-phase or 3-phase trip has initiated Autoreclose for CB1 (as leader)
TARA	CB1-pole / 3-pole trip (13)	CB Trip Time Monitor (53)	An A-phase trip has initiated Autoreclose
TARAny	CB1-pole / 3-pole trip (13)	Force 3-phase Trip (10) CB1-pole / 3-pole trip (13) Evolving Fault (20)	Any trip has initiated Autoreclose
TARB	CB1-pole / 3-pole trip (13)	CB Trip Time Monitor (53)	A B-phase trip has initiated Autoreclose
TARC	CB1-pole / 3-pole trip (13)	CB Trip Time Monitor (53)	A C-phase trip has initiated Autoreclose
TMEM1Ph	CB1-pole / 3-pole trip (13)	1-phase AR Cycle Selection (19) CB1 AR In Progress (16) Autoreclose Lockout (55)	Signal to remember that Autoreclose was initiated by a single-phase fault
TMEM2/3Ph	CB1-pole / 3-pole trip (13)	CB Trip Time Monitor (53) Autoreclose Lockout (55) CB1 AR In Progress (16)	Signal to remember that Autoreclose was initiated by a 2-phase fault or a 3-phase fault
TMEM3Ph	CB1-pole / 3-pole trip (13)		Signal to remember that Autoreclose was initiated by a 3-phase fault
TMemAny	CB1-pole / 3-pole trip (13)	Evolving Fault (20) 3-phase AR cycle selection (21)	Signal to remember that Autoreclose was initiated by an AnyTrip

4.3 AUTORECLOSE DDB SIGNALS

The following table lists all the DDB signals used in the CB control and Autoreclose logic system:

DDB Signal Name	DDB Signal Number	Source Module (Module Number)	Destination Module (Module Number.)
1P DTime	1554	1-phase AR Dead Time (24)	Sequence Counter (18) Evolving Fault (20)
1P Follower Time	1446	Follower 1-phase CB AR Time (28)	
1P Reclaim TComp	1568	Reclaim Time (35)	Successful AR Signals (36)
1P Reclaim Time	1567	Reclaim Time (35)	Reclaim Time (35)
1PF TComp	1561	Follower 1-phase CB AR Time (28)	Follower 1-phase CB AR Time (28)
2/3 Ph Fault	527	CB Trip Conversion (63)	
3 Ph Fault	528	CB Trip Conversion (63)	
3P Dead Time IP	853	3-phase AR Dead Time (25)	
3P DTime1	1556	3-phase AR Dead Time (25)	
3P DTime2	1557	3-phase AR Dead Time (25)	
3P DTime3	1558	3-phase AR Dead Time (25)	
3P DTime4	1559	3-phase AR Dead Time (25)	
3P Follower Time	1447	Follower 3-phase CB AR Time (29)	
3P Reclaim TComp	1570	Reclaim Time (35)	Successful AR Signals (36)

DDB Signal Name	DDB Signal Number	Source Module (Module Number)	Destination Module (Module Number.)
3P Reclaim Time	1569	Reclaim Time (35)	Reclaim Time (35)
3PF TComp	1562	Follower 3-phase CB AR Time (29)	Follower 1-phase CB AR Time (29)
Any Trip	522	CB Trip Conversion (63)	AR Initiation (11) CB1 Autoclose (32) CB2 Autoclose (33) CB Control (43) CB2 Control (44)
AR CB1 No C/S	308	CB Healthy and System Check Timers (39)	Autoreclose Lockout (55)
AR CB1 Unhealthy	307	CB Healthy and System Check Timers (39)	Force 3-phase Trip (10) Autoreclose Lockout (55) Leader Follower Logic (7)
AR CB2 No C/S	330	CB2 Healthy and System Check Timers (40)	CB2 Autoreclose Lockout (56)
AR CB2 Unhealthy	329	CB2 Healthy and System Check Timers (40)	Force 3-phase Trip (10) CB2 Autoreclose Lockout (56) Leader Follower Logic (7)
AR Enable	1384		AR Enable (5)
AR Enable CB1	1609		AR Enable (5) Leader Follower Logic (8) AR Modes Enable (9) Leader Follower Logic (7)
AR Enable CB2	1605		AR Enable (5) AR OK (8) AR Modes Enable (9) Leader Follower Logic (7)
AR Force CB1 3P	858	Force 3-phase Trip (10)	CB Trip Conversion (63)
AR Force CB2 3P	1485	Force 3-phase Trip (10)	CB Trip Conversion (63)
AR In Service	1385	AR Enable (5)	Leader Follower Logic (8) Force 3-phase Trip (10) AR Modes Enable (9) Autoreclose Lockout (55) CB2 Autoreclose Lockout (56) Leader Follower Logic (7)
AR Mode 1P	1497		AR Modes Enable (9)
AR Mode 3P	1498		AR Modes Enable (9)
AR OFF Pulse	1383		AR Enable (5)
AR On Pulse	1382		AR Enable (5)
AR Start	1541	CB1 AR In Progress (16)	Fault Memory (15) CB1 AR In Progress (16) CB2 AR In Progress (17) Sequence Counter (18) Dead Time Start Enable (22) 1-phase AR Dead Time (24) 3-phase AR Dead Time (25) Follower CB AR Enable (27) Follower 1-phase CB AR Time (28) Follower 3-phase CB AR Time (29) AR Reset Successful (37) CB2 AR Reset Successful (38)
AR Trip Test 3ph	576	Trip Test (12)	
AR Trip Test A	577	Trip Test (12)	AR Initiation (11)

DDB Signal Name	DDB Signal Number	Source Module (Module Number)	Destination Module (Module Number.)
AR Trip Test B	578	Trip Test (12)	AR Initiation (11)
AR Trip Test C	579	Trip Test (12)	AR Initiation (11)
ARIP	1542	CB1 AR In Progress (16)	1-phase AR Cycle Selection (19), 1-pole / 3-pole trip (13) Sequence Counter (18) Dead Time Start Enable (22) CB1 Autoclose (32) CB2 Autoclose (33) Leader Follower Logic (7)
Auto Close CB1	854	CB1 Autoclose (32)	Reclaim Time (35) CB Control (43)
Auto Close CB2	1448	CB2 Autoclose (33)	Reclaim Time (35) CB2 Control (44)
Block CB1 AR	448		Autoreclose Lockout (55)
Block CB2 AR	1421		CB2 Autoreclose Lockout (56)
CB1 3P Dtime	1560	3-phase AR Dead Time (25)	
CB1 AR 1p InProg	845	1-phase AR Cycle Selection (19),	Dead Time Start Enable (22) Pole Discrepancy (62)
CB1 AR 3p InProg	844	3-phase AR Cycle Selection (21)	
CB1 AR Init	1543	CB1 AR In Progress (16)	Sequence Counter (18) Dead Time Start Enable (22) Autoreclose Lockout (55)
CB1 AR Lockout	306	Autoreclose Lockout (55)	CB In Service (4) Leader Follower Logic (8) Force 3-phase Trip (10) Evolving Fault (20) Follower CB AR Enable (27) CB1 Autoclose (32) CB Healthy and System Check Timers (39) AR Shot Counters (41) Reset CB Lockout (57) Pole Discrepancy (62) Leader Follower Logic (7) CB2 Autoreclose Lockout (56)
CB1 ARIP	1544	CB1 AR In Progress (16)	CB In Service (4) Force 3-phase Trip (10) Evolving Fault (20) CB1 Autoclose (32) CB1 AR In Progress (16) Reclaim Time (35) AR Shot Counters (41) CB Control (43) Autoreclose Lockout (55) Leader Follower Logic (7)
CB1Aux 3ph(52-A)	420		CB1 State Monitor (1)
CB1Aux 3ph(52-B)	424		CB1 State Monitor (1)
CB1Aux A(52-A)	421		CB1 State Monitor (1)
CB1Aux A(52-B)	425		CB1 State Monitor (1)
CB1Aux B(52-A)	422		CB1 State Monitor (1)
CB1Aux B(52-B)	426		CB1 State Monitor (1)

DDB Signal Name	DDB Signal Number	Source Module (Module Number)	Destination Module (Module Number.)
CB1Aux C(52-A)	423		CB1 State Monitor (1)
CB1Aux C(52-B)	427		CB1 State Monitor (1)
CB1 Close Fail	303	CB Control (43)	Autoreclose Lockout (55) Leader Follower Logic (7) Follower CB AR Enable (27)
CB1 Close inProg	842	CB Control (43)	
CB1 Closed 3 ph	907	CB State Monitor (1)	CB In Service (4) CB1 Autoreclose (32) CB1 AR In Progress (16) Evolving Fault (20) Follower CB AR Enable (27) Reclaim Time (35) Successful AR Signals (36) CB Healthy and System Check Timers (39) CB Control (43) CB Trip Time Monitor (53)
CB1 Closed A ph	908	CB State Monitor (1)	CB Control (43)
CB1 Closed B ph	909	CB State Monitor (1)	CB Control (43)
CB1 Closed C ph	910	CB State Monitor (1)	CB Control (43)
CB1 Control	1566	CB1 Autoreclose (32)	
CB1 CS AngRotACW	1594	Check Sync Signals (60)	
CB1 CS AngRotCW	1595	Check Sync Signals (60)	
CB1 CS1 AngHigh-	1593	Check Sync Signals (60)	
CB1 CS1 AngHigh+	1592	Check Sync Signals (60)	
CB1 CS1 Enabled	881		Check Sync Signals (60)
CB1 CS1 FL>FB	1590	Check Sync Signals (60)	
CB1 CS1 OK	883	Check Sync Signals (60)	3 Phase AR System Check (45) CB Manual Close System Check (51)
CB1 CS1 SlipF<	1579	Check Sync Signals (60)	
CB1 CS1 SlipF>	1578	Check Sync Signals (60)	
CB1 CS1 VL<VB	1588	Check Sync Signals (60)	
CB1 CS1 VL>VB	1586	Check Sync Signals (60)	
CB1 CS2 AngHigh-	1496	Check Sync Signals (60)	
CB1 CS2 AngHigh+	1495	Check Sync Signals (60)	
CB1 CS2 Enabled	882		Check Sync Signals (60)
CB1 CS2 FL<FB	1494	Check Sync Signals (60)	
CB1 CS2 FL>FB	1493	Check Sync Signals (60)	
CB1 CS2 OK	884	Check Sync Signals (60)	3 Phase AR System Check (45) CB Manual Close System Check (51)
CB1 CS2 SlipF<	1465	Check Sync Signals (60)	
CB1 CS2 SlipF>	1464	Check Sync Signals (60)	
CB1 CS2 VL<VB	1589	Check Sync Signals (60)	
CB1 CS2 VL>VB	1587	Check Sync Signals (60)	
CB1 Ext CS OK	900		3 Phase AR System Check (45) CB Manual Close System Check (51)

DDB Signal Name	DDB Signal Number	Source Module (Module Number)	Destination Module (Module Number.)
CB1 Ext Trip A	535		CB1 1-pole / 3-pole trip (13), CB1 AR In Progress (16), CB Control (43)
CB1 Ext Trip B	536		CB1 1-pole / 3-pole trip (13), CB1 AR In Progress (16), CB Control (43)
CB1 Ext Trip C	537		CB1 1-pole / 3-pole trip (13), CB1 AR In Progress (16), CB Control (43)
CB1 Ext Trip3ph	534		CB1 1-pole / 3-pole trip (13), CB1 AR In Progress (16), CB Control (43)
CB1 Fail Pr Trip	1575	CB Trip Time Monitor (53)	Autoreclose Lockout (55) CB2 Autoreclose Lockout (56)
CB1 Failed AR	1550	Evolving Fault (20)	
CB1 Fast SCOK	1572	3 Phase AR System Check Leader (45) 3 Phase AR System Check Follower (47)	CB1 Autoclose (32) Prepare Reclaim Initiation (34) CB Healthy and System Check Timers (39)
CB1 Healthy	436		CB1 Autoclose (32) CB Healthy and System Check Timers (39) CB Control (43)
CB1 In Service	1526	CB In Service (4)	Leader Follower Logic (8) Autoreclose Lockout (55) CB2 Autoreclose Lockout (56) Leader Follower Logic (7)
CB1 LO Alarm	860		CB1 AR In Progress (16) Pole Discrepancy (62)
CB1 Man SCOK	1574	Manual Close System Check (51)	CB Control (43)
CB1 NoAR	1528	Leader Follower Logic (8) Leader Follower Logic (7)	CB1 AR In Progress (16) Leader Follower Logic (7)
CB1 Open 3 ph	903	CB State Monitor (1)	CB Open (3) Dead Time Start Enable (22) Follower 3-phase CB AR Time (29) CB1 Autoclose (32) CB Control (43) CB Trip Time Monitor (53)
CB1 Open A ph	904	CB State Monitor (1)	CB Open (3) CB Control (43) Pole Discrepancy
CB1 Open B ph	905	CB State Monitor (1)	CB Open (3) CB Control (43) Pole Discrepancy (62)
CB1 Open C ph	906	CB State Monitor (1)	CB Open (3) CB Control (43) Pole Discrepancy (62)
CB1 Status Alarm	301	CB State Monitor (1)	Autoreclose Lockout (55)
CB1 Succ 1P AR	1571	Successful AR Signals (36)	AR Shot Counters (41)
CB1 Succ 3P AR	852	Successful AR Signals (36)	AR Shot Counters (41)
CB1 Trip 3ph	526	CB Trip Conversion (63)	
CB1 Trip AR MemA	1535	CB1 1-pole / 3-pole Trip (13)	CB1 1-pole / 3-pole Trip (13)

DDB Signal Name	DDB Signal Number	Source Module (Module Number)	Destination Module (Module Number.)
CB1 Trip AR MemB	1536	CB1 1-pole / 3-pole Trip (13)	CB1 1-pole / 3-pole Trip (13)
CB1 Trip AR MemC	1537	CB1 1-pole / 3-pole Trip (13)	CB1 1-pole / 3-pole Trip (13)
CB1 Trip Fail	302	CB Control (43)	
CB1 Trip IP 3Ph	529		CB Trip Conversion (63)
CB1 Trip Output A	523	CB Trip Conversion (63)	CB1 1-pole / 3-pole trip (13)
CB1 Trip Output B	524	CB Trip Conversion (63)	CB1 1-pole / 3-pole trip (13)
CB1 Trip Output C	525	CB Trip Conversion (63)	CB1 1-pole / 3-pole trip (13)
CB1F SCOK	1491	3 Phase AR System Check (45)	CB1 Autoclose (32) Prepare Reclaim Initiation (34) CB Healthy and System Check Timers (39)
CB1L SCOK	1573	3 Phase AR System Check (45)	CB1 Autoclose (32) Prepare Reclaim Initiation (34) CB Healthy and System Check Timers (39)
CB2 3P Dtime	1444	3-phase AR Dead Time (25)	
CB2 AR 1p InProg	855	1-phase AR Cycle Selection (19)	Dead Time Start Enable (22) Pole Discrepancy (62)
CB2 AR 3p InProg	1411	3-phase AR Cycle Selection (21)	
CB2 AR Init	1434	CB2 AR In Progress (17)	Sequence Counter (18) Dead Time Start Enable (22) CB2 Autoreclose Lockout (56)
CB2 AR Lockout	328	CB2 Autoreclose Lockout (56)	CB In Service (4) Leader Follower Logic (8) Force 3-phase Trip (10) Evolving Fault (20) Follower CB AR Enable (27) CB2 Autoclose (33) CB2 Healthy and System Check Timers (40) CB2 AR Shot Counters (42) Reset CB2 Lockout (58) Pole Discrepancy (62) Leader Follower Logic (7) Autoreclose Lockout (55)
CB2 ARIP	1435	CB2 AR In Progress (17)	CB In Service (4) Force 3-phase Trip (10) Evolving Fault (20) CB2 Autoclose (33) CB1 AR In Progress (16) CB2 AR In Progress (17) Reclaim Time (35) CB2 AR Shot Counters (42) CB2 Control (44) CB2 Autoreclose Lockout (56) Leader Follower Logic (7)
CB2 Aux3ph(52-A)	428		CB2 State Monitor (2)
CB2 Aux3ph(52-B)	432		CB2 State Monitor (2)
CB2 Aux A(52-A)	429		CB2 State Monitor (2)
CB2 Aux A(52-B)	433		CB2 State Monitor (2)
CB2 Aux B(52-A)	430		CB2 State Monitor (2)
CB2 Aux B(52-B)	434		CB2 State Monitor (2)
CB2 Aux C(52-A)	431		CB2 State Monitor (2)

DDB Signal Name	DDB Signal Number	Source Module (Module Number)	Destination Module (Module Number.)
CB2 Aux C(52-B)	435		CB2 State Monitor (2)
CB2 Close Fail	325	CB Control (44)	CB2 Autoreclose Lockout (56) Leader Follower Logic (7) Follower CB AR Enable (27))
CB2 Close inProg	1453	CB Control (44)	
CB2 Closed 3 ph	915	CB2 State Monitor (1)	CB In Service (4) CB2 Autoclose (33) CB2 AR In Progress (17) Evolving Fault (20) Follower CB AR Enable (27) Reclaim Time (35) Successful AR Signals (36) CB2 Healthy and System Check Timers (40) CB Control (44) CB2 Trip Time Monitor (54)
CB2 Closed A ph	916	CB2 State Monitor (2)	CB Control (44)
CB2 Closed B ph	917	CB2 State Monitor (2)	CB Control (44)
CB2 Closed C ph	918	CB2 State Monitor (2)	CB Control (44)
CB2 Control	1450	CB2 Autoclose (33)	
CB2 CS AngRotACW	1482	CB2 Check Sync Signals (61)	
CB2 CS AngRotCW	1483	CB2 Check Sync Signals (61)	
CB2 CS1 AngHigh-	1479	CB2 Check Sync Signals (61)	
CB2 CS1 AngHigh+	1478	CB2 Check Sync Signals (61)	
CB2 CS1 Enabled	1426		CB2 Check Sync Signals (61)
CB2 CS1 FI<FB	1476	CB2 Check Sync Signals (61)	
CB2 CS1 FI>FB	1474	CB2 Check Sync Signals (61)	
CB2 CS1 OK	1577	CB2 Check Sync Signals (61)	3 Phase AR System Check Leader CB2 (46) 3 Phase AR System Check Follower CB2 (48) CB2 Manual Close System Check (52)
CB2 CS1 SlipF<	1467	CB2 Check Sync Signals (61)	
CB2 CS1 SlipF>	1466	CB2 Check Sync Signals (61)	
CB2 CS1 VL<VB	1472	CB2 Check Sync Signals (61)	
CB2 CS1 VL>VB	1470	CB2 Check Sync Signals (61)	
CB2 CS2 AngHigh-	1481	CB2 Check Sync Signals (61)	
CB2 CS2 AngHigh+	1480	CB2 Check Sync Signals (61)	
CB2 CS2 Enabled	1427		CB2 Check Sync Signals (61)
CB2 CS2 FL<FB	1476	CB2 Check Sync Signals (61)	
CB2 CS2 FL>FB	1475	CB2 Check Sync Signals (61)	
CB2 CS2 OK	1463	CB2 Check Sync Signals (61)	3 Phase AR System Check Leader CB2 (46) 3 Phase AR System Check Follower CB2 (48) CB2 Manual Close System Check (52)
CB2 CS2 SlipF<	1469	CB2 Check Sync Signals (61)	
CB2 CS2 SlipF>	1468	CB2 Check Sync Signals (61)	
CB2 CS2 VL<VB	1473	CB2 Check Sync Signals (61)	
CB2 CS2 VL>VB	1471	CB2 Check Sync Signals (61)	

DDB Signal Name	DDB Signal Number	Source Module (Module Number)	Destination Module (Module Number.)
CB2 Ext CS OK	901		3 Phase AR System Check Leader CB2 (46) 3 Phase AR System Check Follower CB2 (48) CB2 Manual Close System Check (52)
CB2 Ext Trip A	539		CB2 1-pole / 3-pole trip (14) CB1 AR In Progress (16) CB2 AR In Progress (17) CB Control (44)
CB2 Ext Trip B	540		CB2 1-pole / 3-pole trip (14) CB1 AR In Progress (16) CB2 AR In Progress (17) CB Control (44)
CB2 Ext Trip C	541		CB2 1-pole / 3-pole trip (14) CB1 AR In Progress (16) CB2 AR In Progress (17) CB Control (44)
CB2 Ext Trip3ph	538		CB2 1-pole / 3-pole trip (14) CB1 AR In Progress (16) CB2 AR In Progress (17) CB Control (44)
CB2 Fail Pr Trip	1459	CB2 Trip Time Monitor (54)	Autoreclose Lockout (55) CB2 Autoreclose Lockout (56)
CB2 Failed AR	1441	Evolving Fault (20)	
CB2 Fast SCOK	1454	3 Phase AR System Check Leader CB2 (46) 3 Phase AR System Check Follower CB2 (48)	CB2 Autoclose (33) CB2 Healthy and System Check Timers (40)
CB2 Healthy	437		CB Autoclose (32) CB2 Healthy and System Check Timers (40) CB Control (44)
CB2 In Service	1428	CB In Service (4)	Leader Follower Logic (8) Autoreclose Lockout (55) CB2 Autoreclose Lockout (56) Leader Follower Logic (7)
CB2 Lead	1408		Leader/Follower CB Selection (6)
CB2 LO Alarm	1599		CB2 AR In Progress (17) Pole Discrepancy (62)
CB2 Man SCOK	1458	CB2 Manual Close System Check (52)	CB Control (44)
CB2 NoAR	1429	Leader Follower Logic (8) Leader Follower Logic (7)	CB2 AR In Progress (17) Leader Follower Logic (7)
CB2 Open 3 ph	911	CB2 State Monitor (2)	CB Open (3) Dead Time Start Enable (22) Follower 3-phase CB AR Time (29) CB2 Autoclose (33) CB Control (44) CB2 Trip Time Monitor (54)
CB2 Open A ph	912	CB2 State Monitor (2)	CB Open (3) CB Control (44) Pole Discrepancy (62)
CB2 Open B ph	913	CB2 State Monitor (2)	CB Open (3) CB Control (44) Pole Discrepancy (62)

DDB Signal Name	DDB Signal Number	Source Module (Module Number)	Destination Module (Module Number.)
CB2 Open C ph	914	CB2 State Monitor (2)	CB Open (3) CB Control (44) Pole Discrepancy (62)
CB2 Status Alm	323	CB2 State Monitor (2)	CB2 Autoreclose Lockout (56)
CB2 Succ 1P AR	1451	Successful AR Signals (36)	CB2 AR Shot Counters (42)
CB2 Succ 3P AR	1452	Successful AR Signals (36)	CB2 AR Shot Counters (42)
CB2 Trip 3ph	1600	CB Trip Conversion (63)	
CB2 Trip AR MemA	1499	CB2 1-pole / 3-pole Trip (13)	CB2 1-pole / 3-pole Trip (13)
CB2 Trip AR MemB	1500	CB2 1-pole / 3-pole Trip (13)	CB2 1-pole / 3-pole Trip (13)
CB2 Trip AR MemC	1501	CB2 1-pole / 3-pole Trip (13)	CB2 1-pole / 3-pole Trip (13)
CB2 Trip Fail	324	CB Control (44)	
CB2 Trip IP 3Ph	1608		CB Trip Conversion (63)
CB2 Trip Output A	1601	CB Trip Conversion (63)	CB2 1-pole / 3-pole trip (13)
CB2 Trip Output B	1602	CB Trip Conversion (63)	CB2 1-pole / 3-pole trip (13)
CB2 Trip Output C	1603	CB Trip Conversion (63)	CB2 1-pole / 3-pole trip (13)
CB2F SCOK	1456	3 Phase AR System Check Follower CB2 (48)	CB2 Autoclose (33) Prepare Reclaim Initiation (34) CB2 Healthy and System Check Timers (40)
CB2L SCOK	1455	3 Phase AR System Check Leader CB2 (46)	CB2 Autoclose (33) Prepare Reclaim Initiation (34) CB2 Healthy and System Check Timers (40)
Control CloseCB1	839	CB Control (43)	Follower CB AR Enable (27)
Control CloseCB2	841	CB Control (44)	Follower CB AR Enable (27)
Control TripCB1	838	CB Control (43)	CB Control (43)
Control TripCB2	840	CB Control (44)	CB2 Control (44)
CS VBus1>	1583	Check Sync Signals (60)	
CS VBus1<	1582	Check Sync Signals (60)	
CS VBus2<	1585	CB2 Check Sync Signals (61)	
CS VBus2>	1584	CB2 Check Sync Signals (61)	
CS VLine<	1580	Check Sync Signals (60)	
CS VLine>	1581	Check Sync Signals (60)	
Dead Bus 1	887	System Checks Voltage Monitor (59)	3 Phase AR System Check (45) CB Manual Close System Check (51)
Dead Bus 2	1462	System Checks Voltage Monitor (59)	3 Phase AR System Check CB2 (46) CB2 Manual Close System Check (52)
Dead Line	889	System Checks Voltage Monitor (59)	Dead Time Start Enable (22) 3 Phase AR System Check (45) 3 Phase AR System Check CB2 (46) 3 Phase AR System Check (47) 3 Phase AR System Check CB2 (48) CB Manual Close System Check (51) CB2 Manual Close System Check (52)
DTOK All	1551	Dead Time Start Enable (22)	1-phase AR Dead Time (24) 3-phase AR Dead Time (25)
DTOK CB1L 1P	1552	Dead Time Start Enable (22)	1-phase AR Dead Time (24)
DTOK CB1L 3P	1553	Dead Time Start Enable (22)	3-phase AR Dead Time (25)
DTOK CB2L 1P	1442	Dead Time Start Enable (22)	1-phase AR Dead Time (24)

DDB Signal Name	DDB Signal Number	Source Module (Module Number)	Destination Module (Module Number.)
DTOK CB2L 3P	1443	Dead Time Start Enable (22)	3-phase AR Dead Time (25)
En CB1 Follower	1488	Follower CB AR Enable (27)	Follower 1-phase CB AR Time (28) Follower 3-phase CB AR Time (29)
En CB2 Follower	1455	Follower CB AR Enable (27)	Follower 1-phase CB AR Time (28) Follower 3-phase CB AR Time (29)
Evolve 3Ph	1547	Evolving Fault (20)	3-phase AR cycle selection (21) Autoreclose Lockout (55) CB2 Autoreclose Lockout (56)
Ext Fault Aph	1508		Fault Memory (15)
Ext Fault BPh	1509		Fault Memory (15)
Ext Fault CPh	1510		Fault Memory (15)
Ext Rst CB1 AROK	1517		AR Reset Successful (37)
Ext Rst CB1Shots	1518		AR Shot Counters (41)
Ext Rst CB2 AROK	1417		AR Reset Successful (37)
Ext Rst CB2Shots	1418		CB2 AR Shot Counters (42)
F out of Range	319		Check Sync Signals (60) CB2 Check Sync Signals (61)
Foll AR Mode 1P	1409		AR Modes Enable (9)
Foll AR Mode 3P	1410		AR Modes Enable (9)
Follower CB1	1432	Leader Follower Logic (7)	CB1 AR In Progress (16)
Follower CB2	1433	Leader Follower Logic (7)	CB2 AR In Progress (17)
Force 3PTrip CB1	533		CB Trip Conversion (63)
Force 3PTrip CB2	1604		CB Trip Conversion (63)
IA< Start	864		AR Initiation (11)
IB< Start	865		AR Initiation (11)
IC< Start	866		AR Initiation (11)
Inhibit AR	1420		Force 3-phase Trip (10) CB1 AR In Progress (16), CB2 AR In Progress (17)
Inhibit DB1	1525		System Checks Voltage Monitor (59)
Inhibit DB2	1425		System Checks Voltage Monitor (59)
Inhibit DL	1523		System Checks Voltage Monitor (59)
Inhibit LB1	1524		System Checks Voltage Monitor (59)
Inhibit LB2	1424		System Checks Voltage Monitor (59)
Inhibit LL	1522		System Checks Voltage Monitor (59)
Init 3P AR Test	1507		Trip Test (12)
Init APh AR Test	1504		Trip Test (12)
Init BPh AR Test	1505		Trip Test (12)
Init Close CB1	440		CB Control (43)
Init Close CB2	442		CB2 Control (44)
Init CPh AR Test	1506		Trip Test (12)
Init Trip CB1	439		CB Control (43)
Init Trip CB2	441		Init Trip CB2
Invalid AR Mode	331	AR Modes Enable (9)	

DDB Signal Name	DDB Signal Number	Source Module (Module Number)	Destination Module (Module Number.)
Leader CB1	1530	Leader Follower Logic (7)	CB1 AR In Progress (16) Leader Follower Logic (7) AR Modes Enable (9) Force 3-phase Trip (10)
Leader CB2	1431	Leader Follower Logic (7)	CB2 AR In Progress (17) Leader Follower Logic (7) AR Modes Enable (9) Force 3-phase Trip (10)
Live Bus 1	886	System Checks Voltage Monitor (59)	3 Phase AR System Check (45) 3 Phase AR System Check (47) CB1 Manual Close System Check (51)
Live Bus 2	1461	System Checks Voltage Monitor (59)	3 Phase AR System Check CB2 (46) 3 Phase AR System Check CB2 (48) CB2 Manual Close System Check (52)
Live Line	888	System Checks Voltage Monitor (59)	3 Phase AR System Check (45) 3 Phase AR System Check (46) 3 Phase AR System Check (47) 3 Phase AR System Check (48) CB1 Manual Close System Check (51) CB2 Manual Close System Check (52)
ManCB1 Unhealthy	304	CB Control (43)	
ManCB2 Unhealthy	326	CB Control (44)	
MCB/VTS	438		System Checks Voltage Monitor (59) Check Sync Signals (60) CB2 Check Sync Signals (61)
MCB/VTS CB1 CS	1521		System Checks Voltage Monitor (59) Check Sync Signals (60)
MCB/VTS CB2 CS	1423		System Checks Voltage Monitor (59) CB2 Check Sync Signals (61)
NoCS CB1ManClose	305	CB Control (43)	
NoCS CB2ManClose	327	CB Control (44)	
OK Time 3P	1555	3-phase AR Dead Time (25)	Dead Time Start Enable (22) CB1 Autoclose (32) CB2 Autoclose (33) Prepare Reclaim Initiation (34) CB1 Healthy and System Check Timers (39) CB2 Healthy and System Check Timers (40)
Pole Dead A	892		CB Trip Conversion (63)
Pole Dead B	893		CB Trip Conversion (63)
Pole Dead C	894		CB Trip Conversion (63)
Pole Disc. CB1 Ext	451		Pole Discrepancy (62)
Pole Disc. CB2 Ext	1606		Pole Discrepancy (62)
Pole Discrep. CB1	699	Pole Discrepancy (62)	
Pole Discrep. CB2	1607	Pole Discrepancy (62)	
Rst CB1 CloseDly	443		CB Control (43)
Rst CB2 CloseDly	1419		CB2 Control (44)
Rst CB1 Lockout	446		Reset CB Lockout (57)
Rst CB2 Lockout	1420		Reset CB2 Lockout (58)
SChksInactiveCB1	880	Check Sync Signals (60)	

DDB Signal Name	DDB Signal Number	Source Module (Module Number)	Destination Module (Module Number.)
SChksInactiveCB2	1484	CB2 Check Sync Signals (61)	
Seq Counter = 0	846	Sequence Counter (18)	AR Modes Enable (9)
Seq Counter = 1	847	Sequence Counter (18)	AR Modes Enable (9) Force 3-phase Trip (10) Sequence Counter (18) Evolving Fault (20) 1-phase AR Dead Time (24) 3-phase AR Dead Time (25) Follower 1-phase CB AR Time (28) AR Shot Counters (41) CB2 AR Shot Counters (42) 3 Phase AR System Check (45) 3 Phase AR System Check CB2 (46) 3 Phase AR System Check (47) 3 Phase AR System Check CB2 (48)
Seq Counter = 2	848	Sequence Counter (18)	Force 3-phase Trip (10) 3-phase AR Dead Time (25) AR Shot Counters (41) CB2 AR Shot Counters (42)
Seq Counter = 3	849	Sequence Counter (18)	Force 3-phase Trip (10) 3-phase AR Dead Time (25) AR Shot Counters (41) CB2 AR Shot Counters (42)
Seq Counter = 4	850	Sequence Counter (18)	Force 3-phase Trip (10) 3-phase AR Dead Time (25) AR Shot Counters (41) CB2 AR Shot Counters (42)
Seq Counter > 4	851	Sequence Counter (18)	
Seq Counter>Set	1546	Sequence Counter (18)	Autoreclose Lockout (55) CB2 Autoreclose Lockout (56))
Set CB1 Close	1565	CB1 Autoclose (32)	CB1 AR In Progress (16) Prepare Reclaim Initiation (34) AR Shot Counters (41) Autoreclose Lockout (55) CB2 Autoreclose Lockout (56)
Set CB2 Close	1449	CB2 Autoclose (33)	CB2 AR In Progress (17) Prepare Reclaim Initiation (34) CB2 AR Shot Counters (42) Autoreclose Lockout (55) CB2 Autoreclose Lockout (56)
Trip Inputs A	530		Fault Memory (15) CB Trip Conversion (63)
Trip Inputs B	531		Fault Memory (15) CB Trip Conversion (63)
Trip Inputs C	532		Fault Memory (15) CB Trip Conversion (63)
VTS Fast Block	832		Check Sync Signals (60) CB2 Check Sync Signals (61)

5 LOGIC MODULES

This section contains a complete set of logic diagrams, which will help to explain the Autoreclose function. Most of the logic diagrams shown are logic modules that comprise the overall Autoreclose system. Some of the diagrams shown are not directly related to Autoreclose functionality, however, they may use some inputs and produce outputs that are used by the Autoreclose system. These diagrams are shown in this section for the sake of completeness.

5.1 CIRCUIT BREAKER STATUS MONITOR

The Circuit Breaker State Monitor logic is part of the Monitoring and Control functionality and is fully described in that chapter. The logic diagram is repeated in this section because some of the outputs of this logic module are used as inputs to some of the Autoreclose logic modules.

5.1.1 CB STATE MONITOR

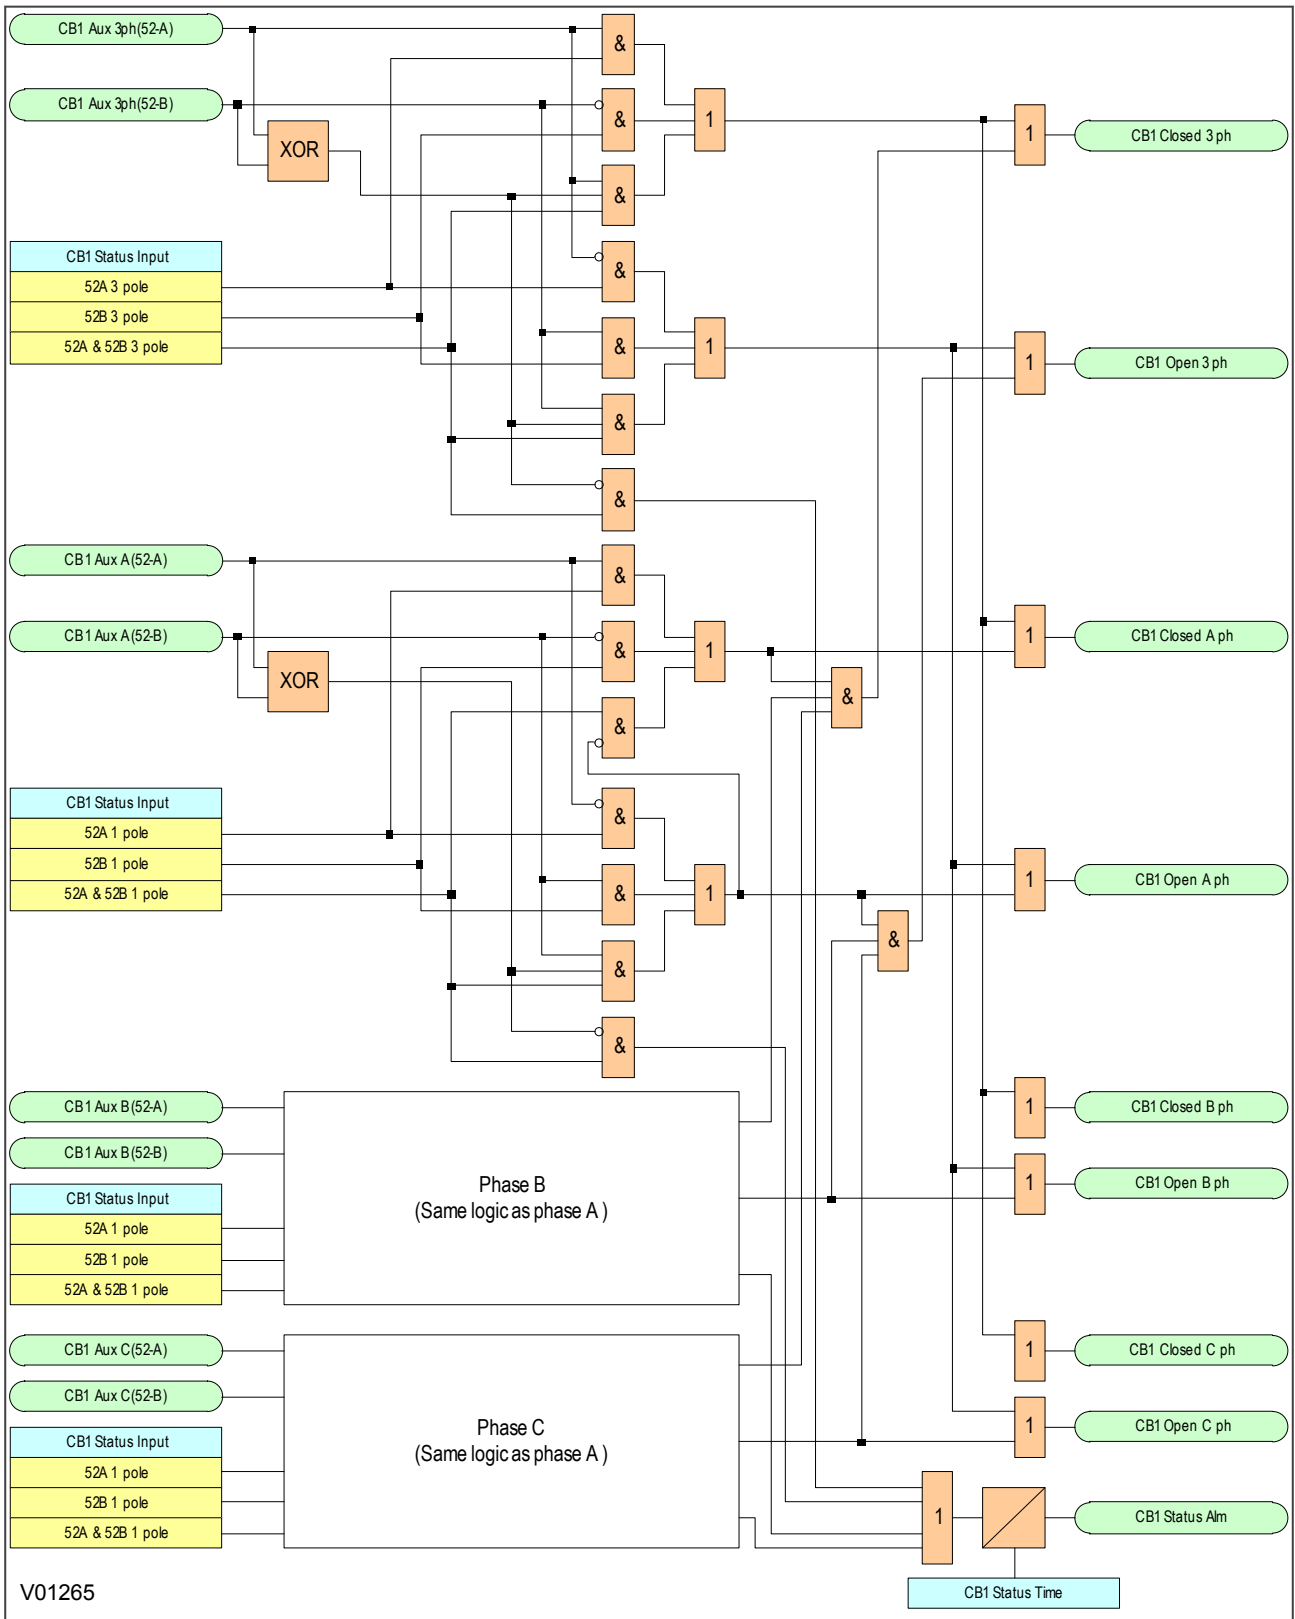


Figure 45: CB State logic diagram (Module 1)

5.2 CIRCUIT BREAKER OPEN LOGIC

The Circuit Breaker Open logic module produces internal signals indicating the open status of one or more phases. These signals are used by some of the Autoreclose logic modules.

5.2.1 CIRCUIT BREAKER OPEN LOGIC DIAGRAM

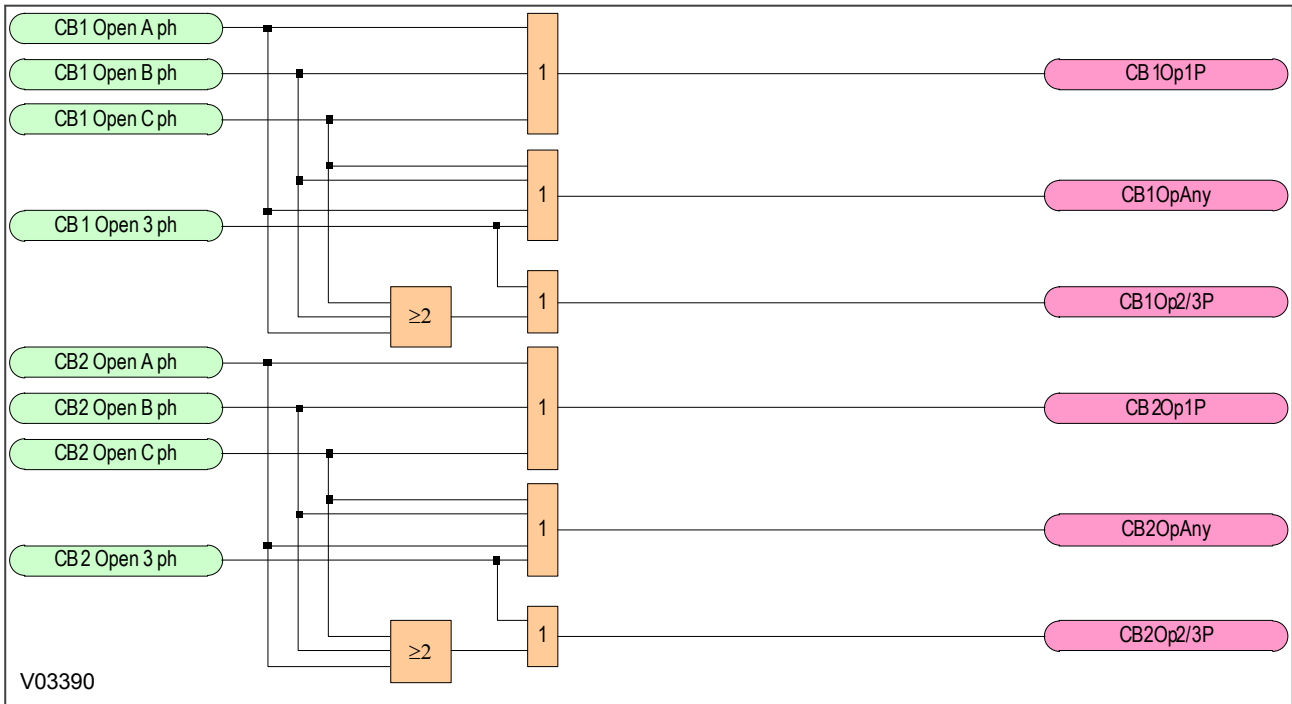


Figure 46: Circuit Breaker Open logic diagram (Module 3)

5.3 CIRCUIT BREAKER IN SERVICE LOGIC

For Autoreclose to proceed, a circuit breaker has to be in service when the Autoreclose is initiated. A circuit breaker is considered to be in service if it has been closed for more than the CB IS Time setting.

For applications with fast-acting circuit breaker auxiliary switches, a time delay setting CB IS Memory Time is provided. This is used to ensure correct operation if a delay between the circuit breaker tripping and recognition by the protection, is expected.

When an Autoreclose cycle starts, the “in service” signal for a circuit breaker stays set until the Autoreclose cycle finishes.

The circuit breaker “in service” signal resets if the circuit breaker opens, or if the corresponding Autoreclose in progress (ARIP) signal resets.

5.3.1 CIRCUIT BREAKER IN SERVICE LOGIC DIAGRAM

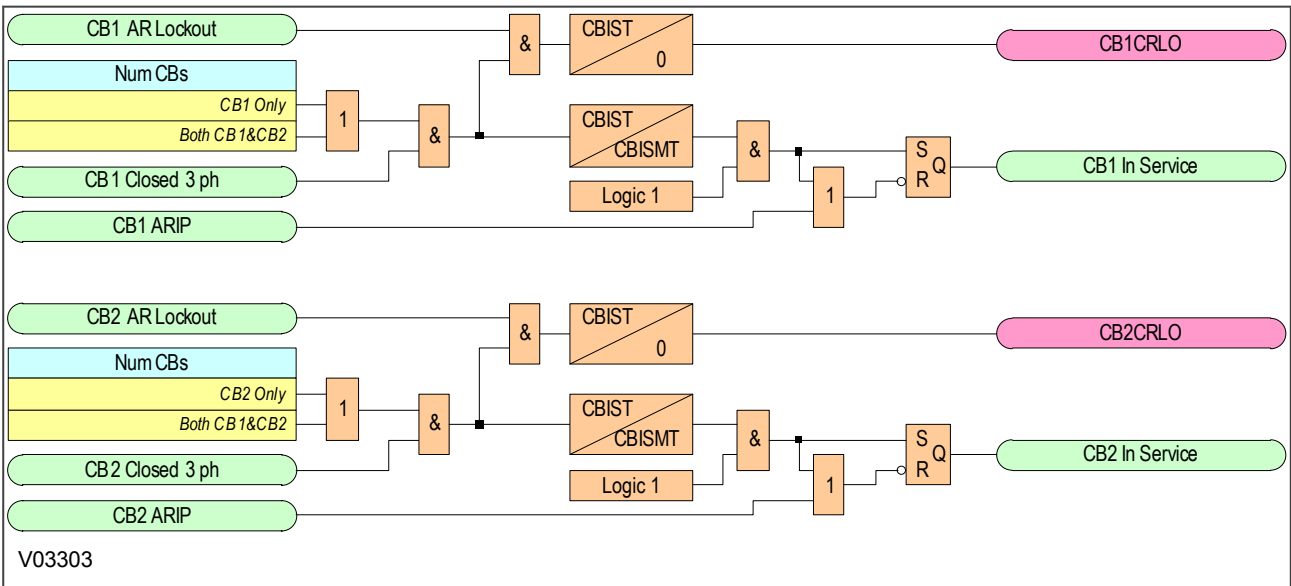


Figure 47: CB In Service logic diagram (Module 4)

5.4 AUTORECLOSE ENABLE LOGIC

The Autoreclose function must be enabled in the *CONFIGURATION* column before it can be brought into service. It can be brought into service by:

- using an opto-input mapped to the **AR Enable** DDB signal
- pulsing the DDB signal **AR On Pulse** (use **AR Off Pulse** to bring it out of service)
- programming a function key on the HMI.
- if applicable, using IEC 60870-5-103 communications

Further validation signals are also required to switch on Autoreclose. These are the DDB signals **AR Enable CB1** and **AR Enable CB2**. Once Autoreclose is in service, the **AR In Service** DDB signal is asserted and the **AR Status** cell in the *CB CONTROL* column is set accordingly.

5.4.1 AUTORECLOSE ENABLE LOGIC DIAGRAM

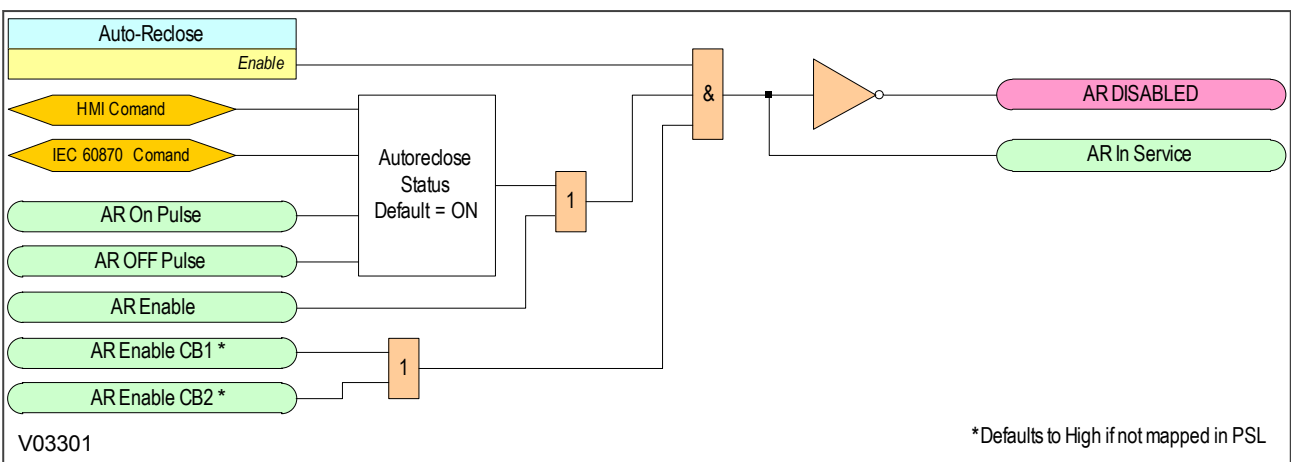


Figure 48: Autoreclose Enable logic diagram (Module 5)

5.5 AUTORECLOSE LEADER/FOLLOWER

You can select either CB1 or CB2 to be the leader, with CB2 or CB1 as the follower respectively.

5.5.1 LEADER/FOLLOWER CB SELECTION LOGIC DIAGRAM

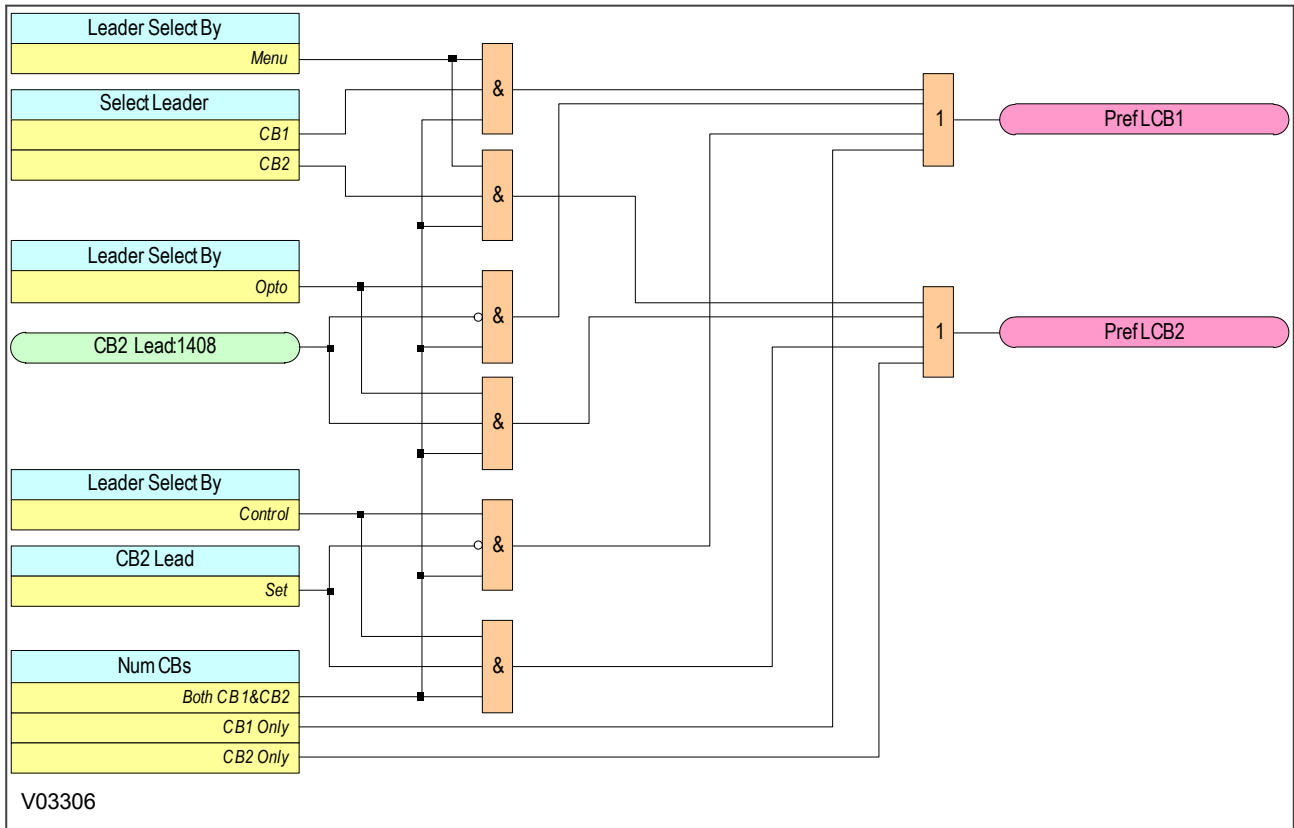


Figure 49: Leader/Follower CB Selection Logic Diagram (Module 6)

5.5.2 LEADER FOLLOWER LOGIC DIAGRAM

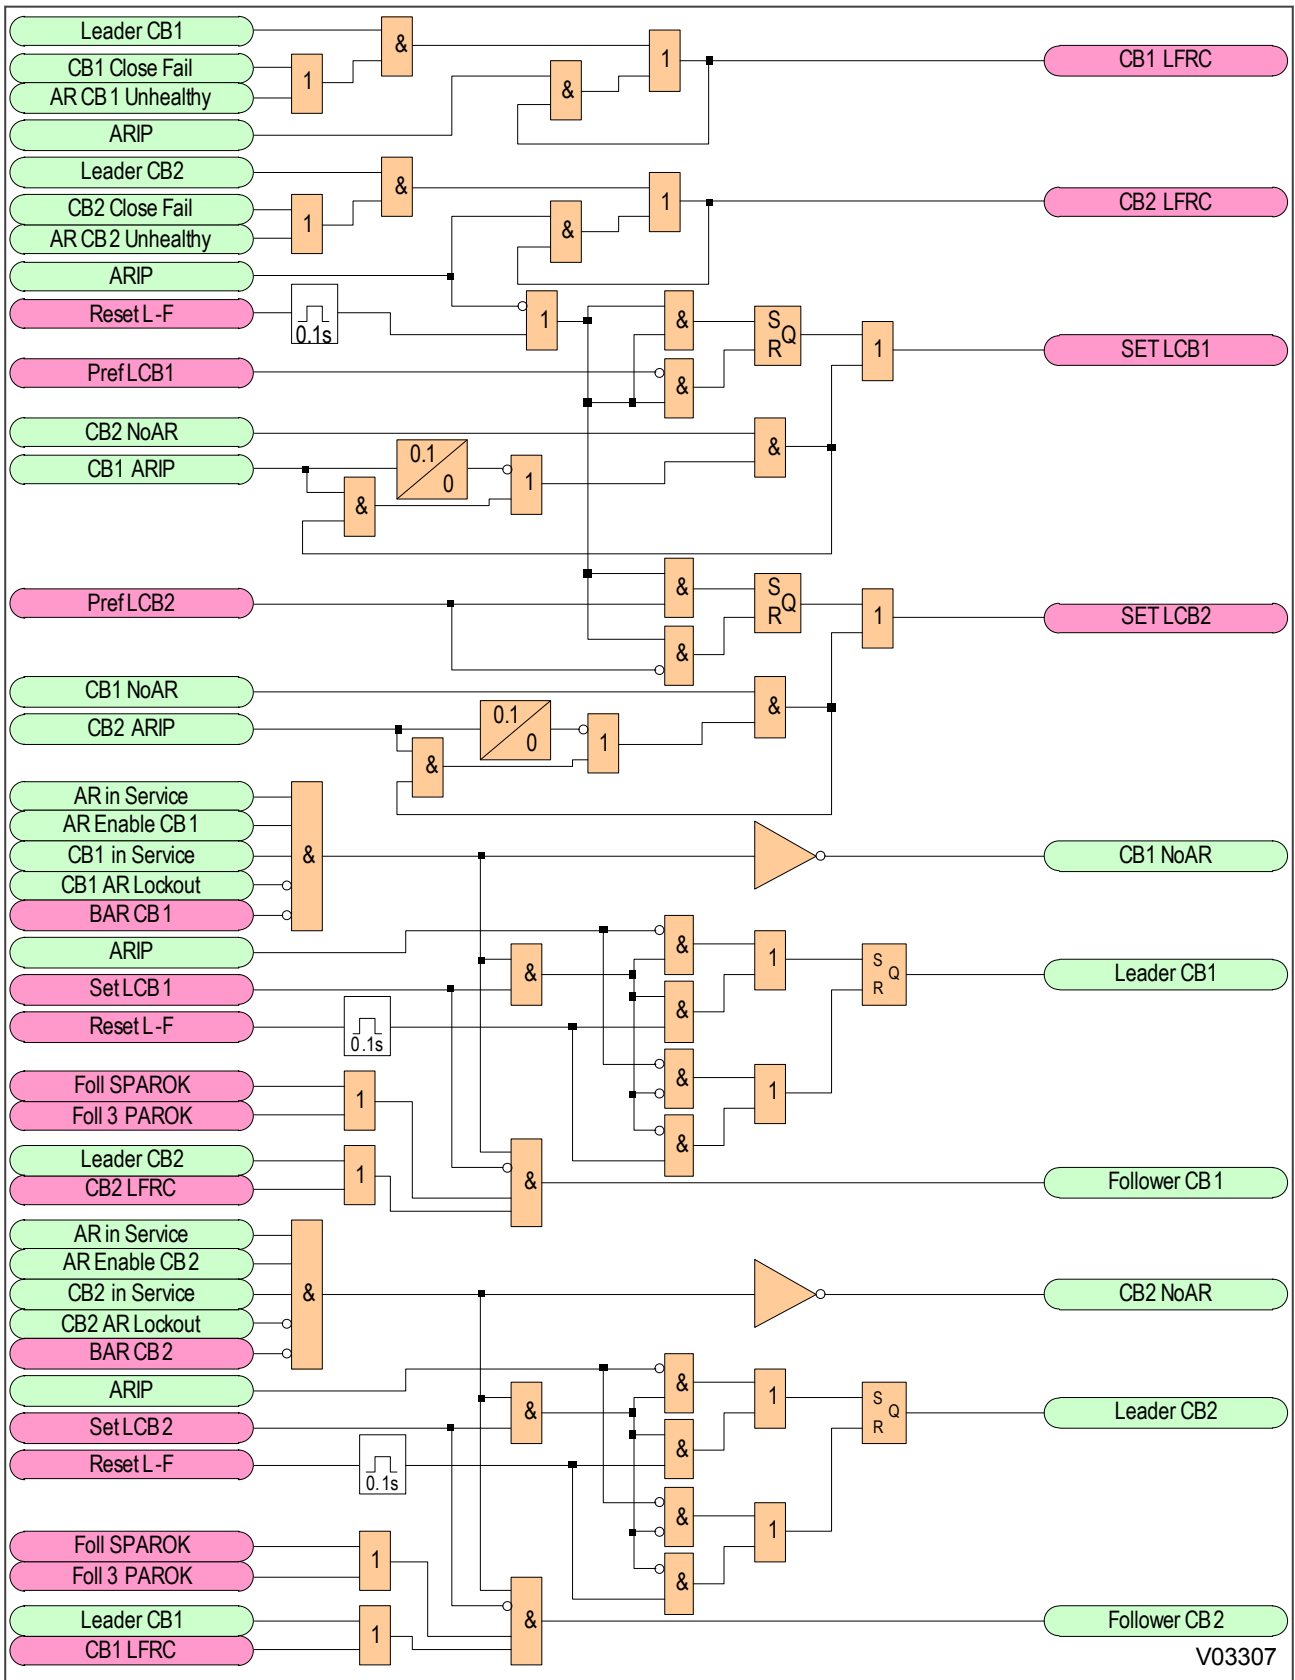


Figure 50: Leader/Follower logic diagram (Module 7 & 8)

5.6 AUTORECLOSE MODES

The device can provide Single-phase and/or Three-phase Autoreclose. The Autoreclose mode is configured by the **AR Mode** setting in the *AUTORECLOSE* column. You can choose from:

- Single-phase (*AR 1P*)
- Three-phase (*AR 3P*)
- Single-phase and Three-phase (*AR 1/3P*)
- Controlled by commands from DDB signals that must be mapped to opto-isolated inputs in the PSL (*AR Opto*).

Single-phase Autoreclosing is permitted only for the first shot of an Autoreclose cycle. In a multi-shot Autoreclose cycle the second and subsequent trips will always be three-phase.

For multi-phase faults, you can use the **Multi Phase AR** setting in the *AUTORECLOSE* column to configure the following options:

- Allow Autoreclose for all fault types (*Allow Autoclose*)
- Block Autoreclose for 2-phase and 3-phase faults (*BAR 2 and 3 ph*)
- Block Autoreclose for 3-phase faults (*BAR 3 Phase*)

5.6.1 SINGLE-PHASE AND THREE-PHASE AUTORECLOSE

This section applies to dual-CB devices. Where there are signals and settings for each of the two circuit breakers, only the first CB (CB1) is shown, to improve clarity and save repetition. Where settings and signals include "CB1", there is a "CB2" equivalent.

Single-phase Autoreclose Only

If single-phase Autoreclose is enabled, the logic allows only a single shot Autoreclose. For a single-phase fault, the single phase dead timer **SP AR Dead Time** starts, and the DDB signal **CB1 AR 1p Inprog** is asserted, which indicates that single-phase Autoreclose is in progress. In this case, for a multi-phase fault the logic triggers a three-phase trip and goes to lockout.

Three-phase Autoreclose Only

During three-phase Autoreclose, for any fault, the three-phase dead timers: **3P AR DT Shot 1**, **3P AR DT Shot 2**, **3P AR DT Shot 3** and **3P AR DT Shot 4** are started and the DDB signal is **CB1 AR 3p InProg** is asserted, which indicates that three-phase Autoreclose is in progress.

If three-phase only Autoreclose is enabled, the logic forces a three-phase trip by setting the DDB signal **AR Force CB1 3P** for any single-phase fault.

Single-phase and Three-phase Autoreclose

With single-phase and three-phase Autoreclose enabled then, if the first fault is a single-phase fault the single-phase dead time **SP AR Dead Time** is started and the single-phase Autoreclose in progress signal is asserted. If the first fault is a multi-phase fault the three phase dead timer **3P AR DT Shot 1** is started and the three-phase Autoreclose in progress signal is asserted. If set to allow more than one reclose (**AR Shots** > 1) then any subsequent faults are converted to three-phase trips by setting the force three-pole tripping signal. The three-phase dead times **3P AR DT Shot 2**, **3P AR DT Shot 3** and **3P AR DT Shot 4** (Dead Times 2, 3, 4) are started for the 2nd, 3rd and 4th trips (shots) respectively. The DDB signal **CB1 AR 3p InProg** is asserted. If a single-phase fault evolves to a multi-phase fault during the single-phase dead time (**SP AR Dead Time**), single-phase Autoreclose is stopped. The single-phase Autoreclose in progress signal is reset, the three-phase Autoreclose in progress signal is set, and the three-phase dead timer **3P AR DT Shot 1** is started.

5.6.2 AUTORECLOSE MODES ENABLE LOGIC DIAGRAM

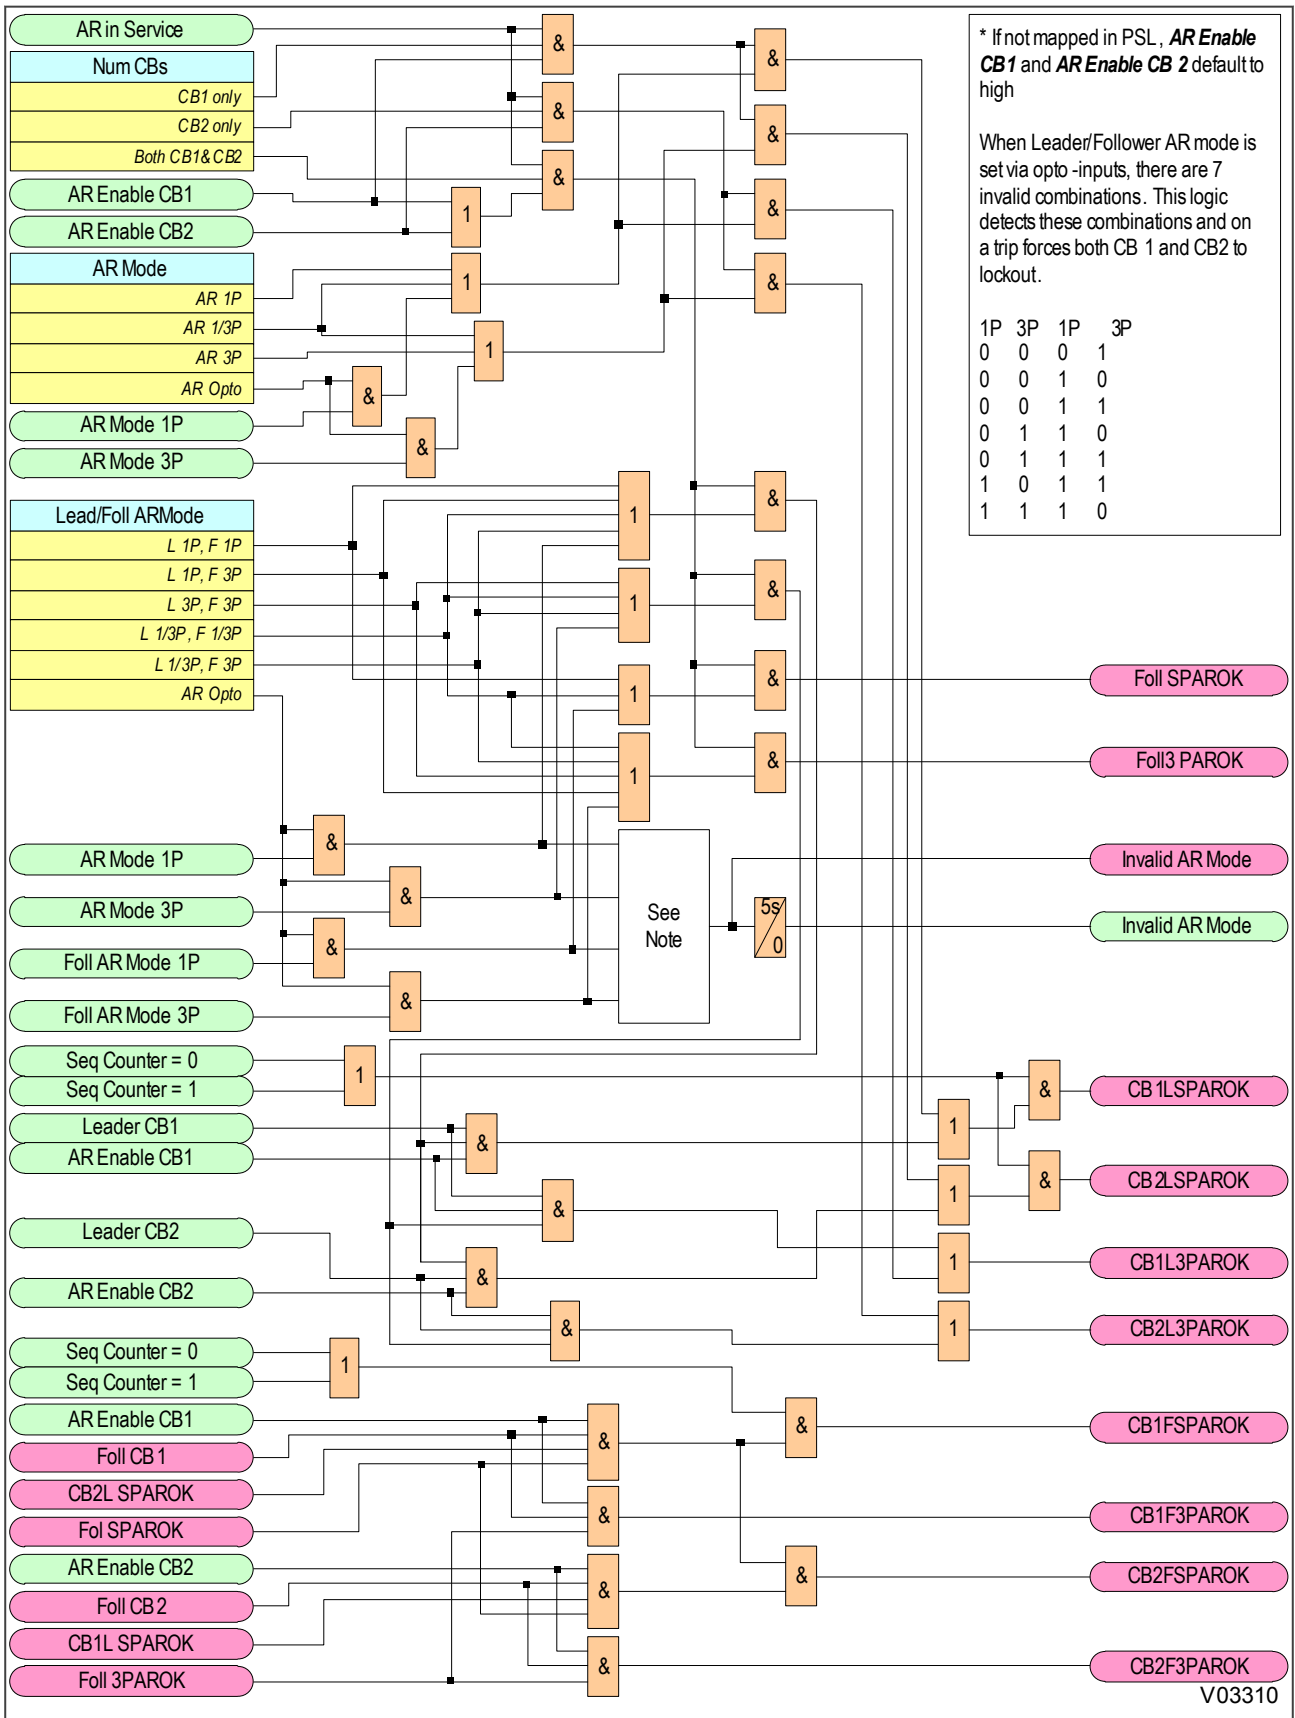


Figure 51: Autoreclose Modes Enable logic diagram (Module 9)

5.7 AR FORCE THREE-PHASE TRIP LOGIC

Following single-phase tripping, while the Autoreclose cycle is in progress, and upon resetting of the protection elements, tripping switches to three-phase.

Any protection operations that occur for subsequent faults while the Autoreclose cycle remains in progress will be tripped three-phase.

5.7.1 FORCE THREE-PHASE TRIP LOGIC DIAGRAM

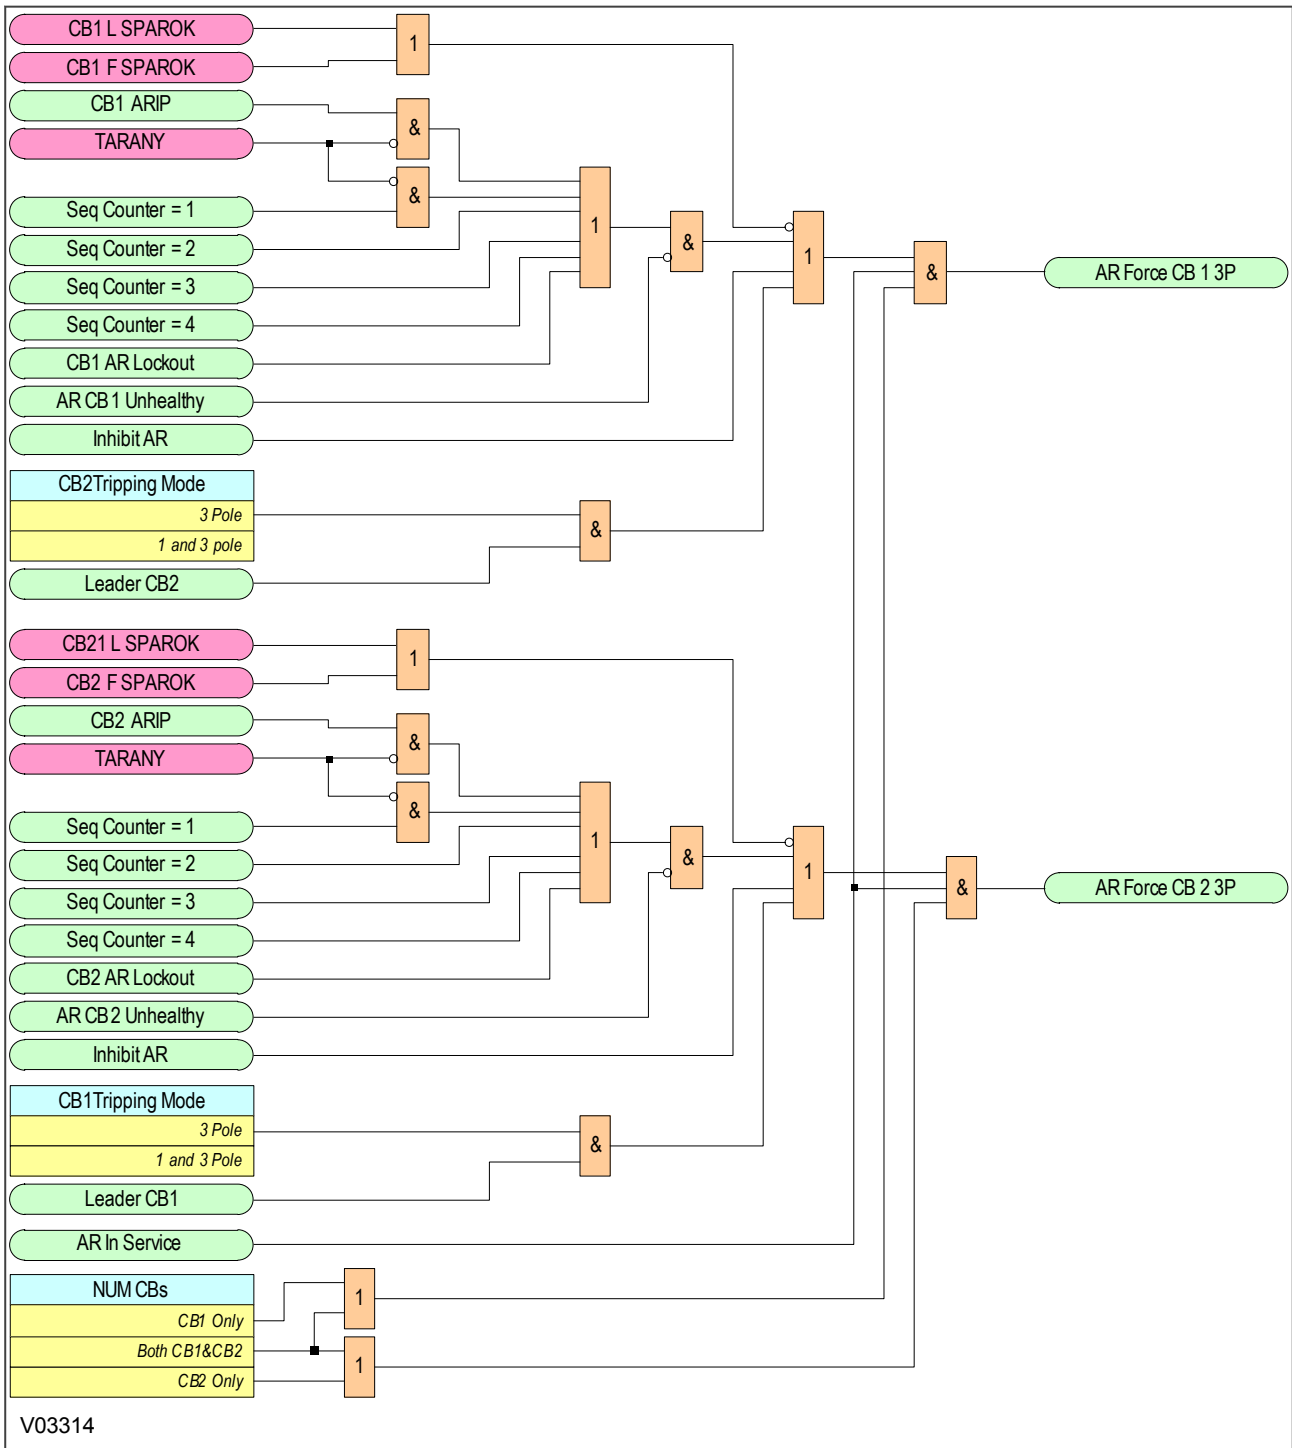


Figure 52: Force three-phase trip logic diagram (Module 10)

5.8 AUTORECLOSE INITIATION LOGIC

Autoreclose initiation starts Autoreclose for a circuit breaker only if Autoreclose is enabled for the circuit breaker, and the circuit breaker is in service. When an Autoreclose cycle is started, Autoreclose in progress (ARIP) is indicated. The indication remains until the end of the cycle. The end of the cycle is signified by successful Autoreclose, or by lockout.

Autoreclose cycles can be initiated by:

- Protection functions internal to the product
- A Trip Test feature
- External protection equipment
- Evolving fault combinations

Internal Protection Functions

Many of the protection functions in the product can be programmed to initiate or block Autoreclose. The associated settings are found in the Autoreclose column and the available options are *No Action*, *Initiate AR*, or *Block AR*. If set to *Block AR* operation of the protection function blocks the Autoreclose function and forces a lockout.

Trip Test Feature

The **Test Autoreclose** command cell in the *COMMISSION TESTS* column can be used to initiate an Autoreclose cycle. Each option provides a 100 ms pulse output. There is also a 'No Operation' option to exit the command field without initiating a test.

External Protection Equipment

Protection operation from a different device can be used to initiate Autoreclose via PSL. By default these external trip input signals are mapped to initiate Autoreclose. These inputs are not mapped to the trip outputs. With appropriate mapping in the PSL, however, the external device can use this product to trip connected circuit breakers.

Evolving Fault Combinations

The Autoreclose function would normally be initiated by a single condition (such as a single-phase fault). If, however, the system conditions evolve such that other conditions that could initiate Autoreclose, then the dynamics of the Autoreclose logic need to adapt. For example, if a single-phase fault evolves into a multi-phase fault, then the operation of the Autorecloser must consequently adapt. To achieve this signals are generated to indicate conditions such as evolving faults, re-operation of protection, combinations of initiation by internal protection, external protection, or test features, which control the Autoreclose sequencing.

Records of initiating conditions are stored and used to control the sequencing. Initiation can be from a protection function integrated in the product, from external protection and internal sources such as the Autoreclose test function. Initiation can be further qualified by the phases causing the initiation (any one phase, two phases, or three phases). These conditions are stored in signals that generally feature "MEM"-memory, or "AR" – Autoreclose, in the signal name (for example TMEM2/3Ph) indicates that a protection trip involving 2 or 3 phases initiated the Autoreclose. The signals are not used outside the Autoreclose logic.

5.8.1 AUTORECLOSE INITIATION LOGIC DIAGRAM

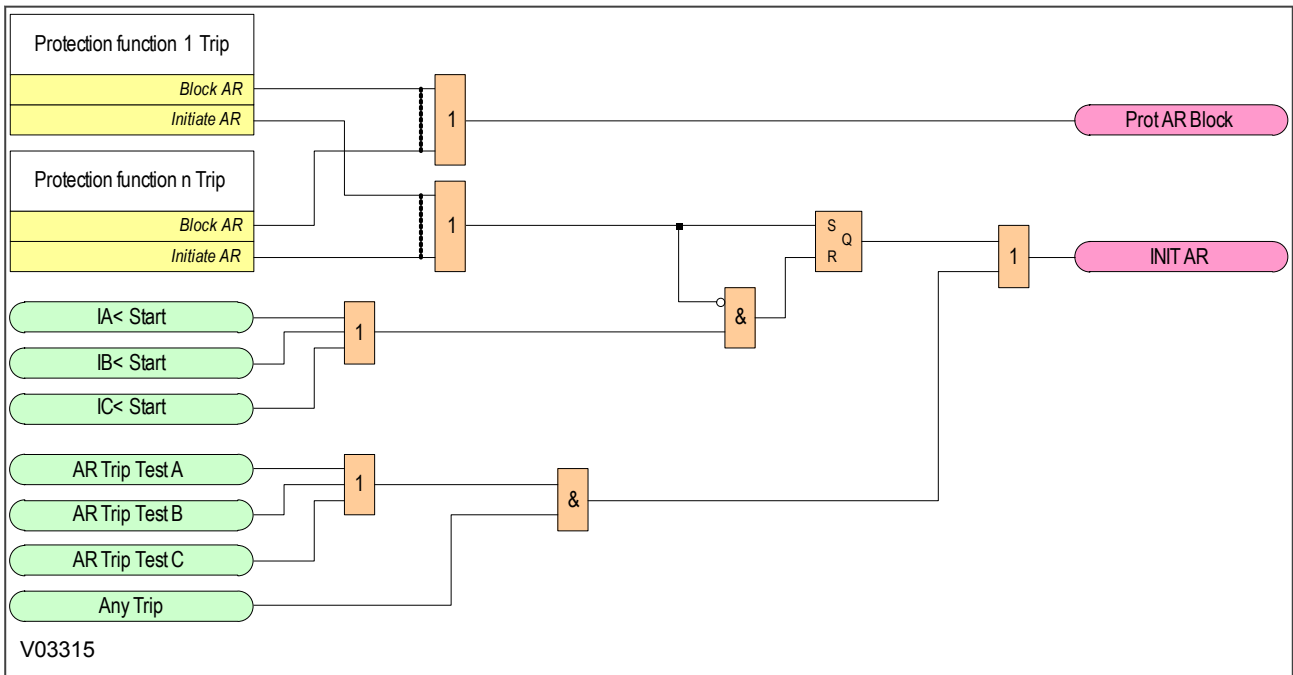


Figure 53: Autoreclose Initiation logic diagram (Module 11)

5.8.2 AUTORECLOSE TRIP TEST LOGIC DIAGRAM

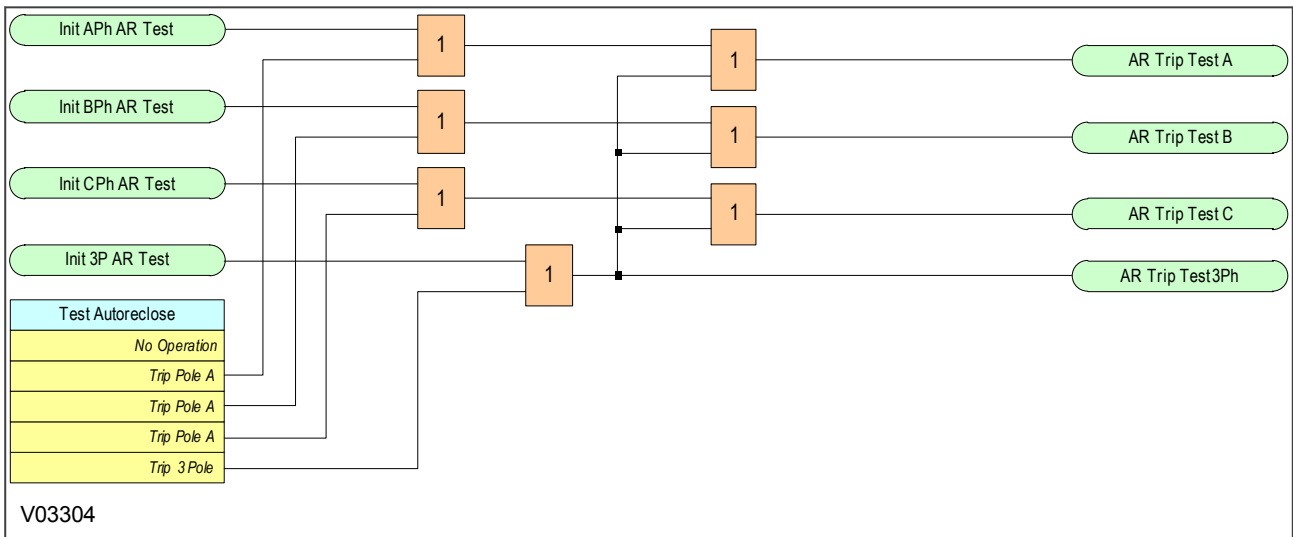


Figure 54: Autoreclose Trip Test logic diagram (Module 12)

5.8.3 EXTERNAL TRIP LOGIC DIAGRAM FOR CB1

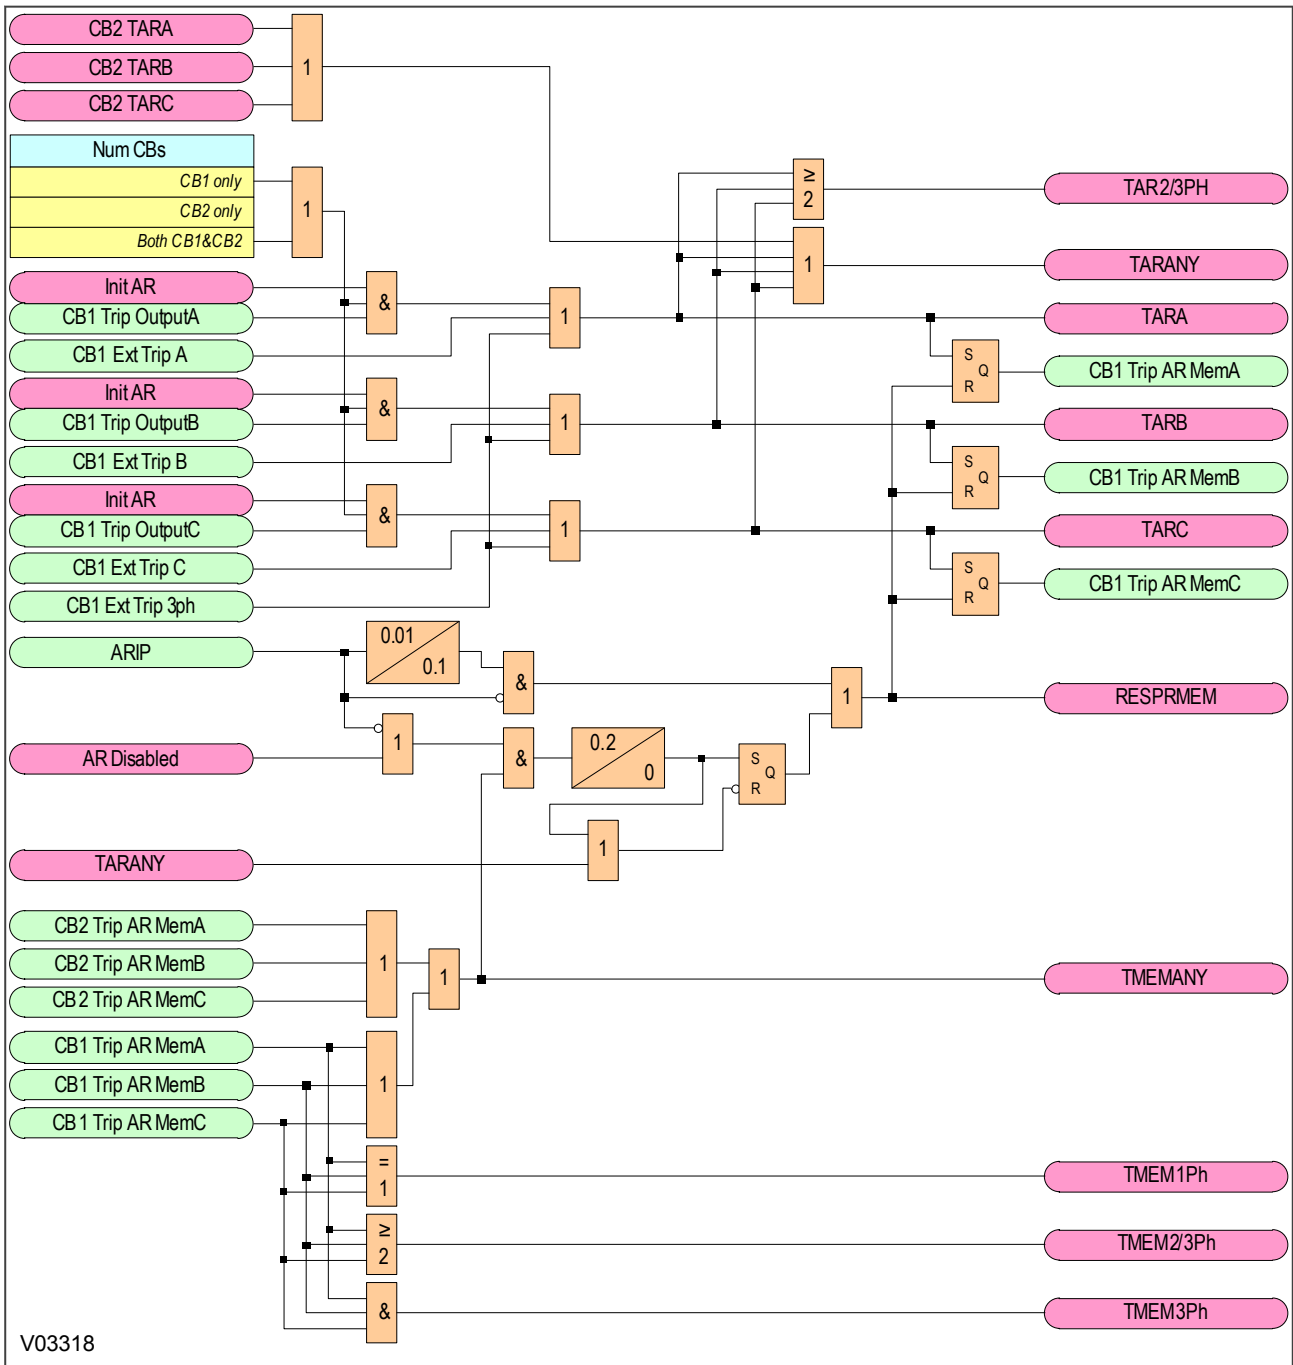


Figure 55: Autoreclose initiation by internal single and three phase trip or external trip for CB1 (Module 13)

Note:

For single-phase Autoreclose, these signals must be mapped as shown in the default PSL scheme.

5.8.4 EXTERNAL TRIP LOGIC DIAGRAM FOR CB2

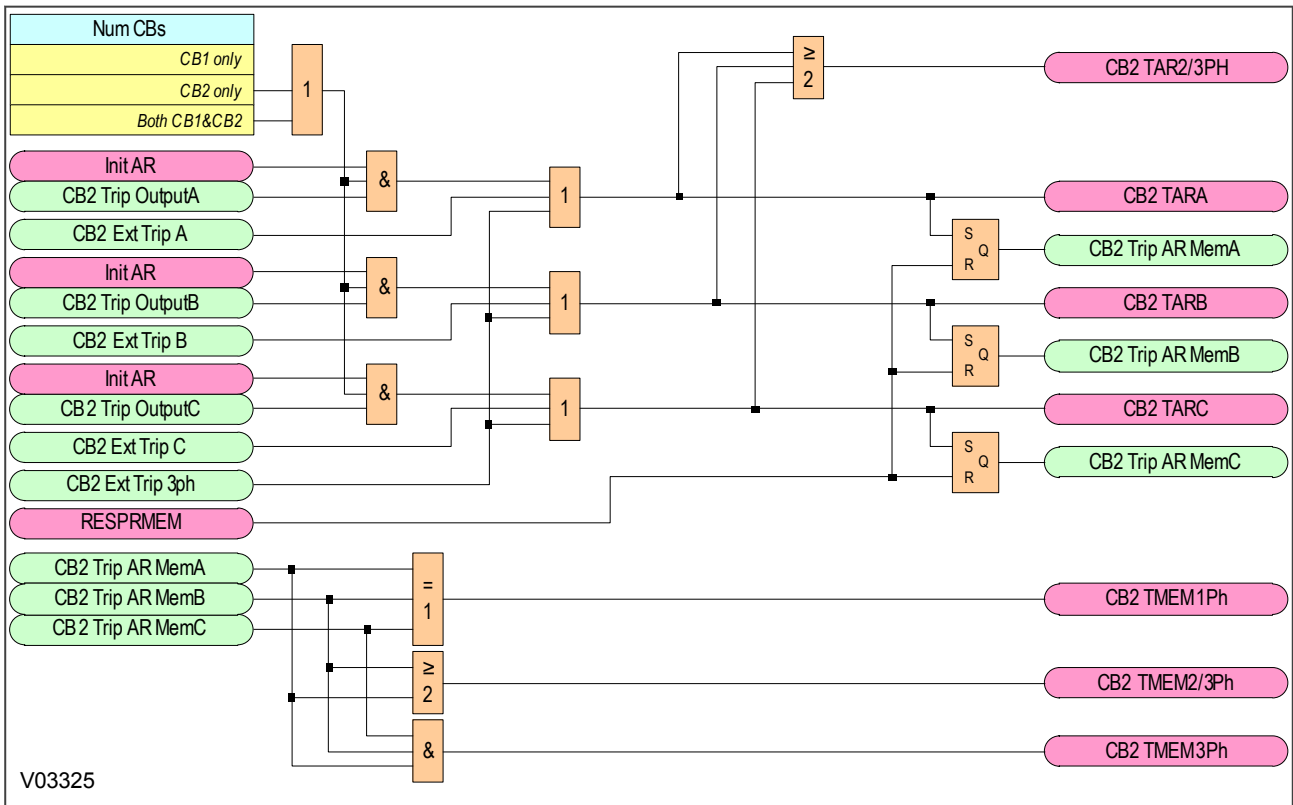


Figure 56: Autoreclose initiation by internal single and three phase trip or external trip for CB2 (Module 14)

Note:
For single-phase Autoreclose, these signals must be mapped as shown in the default PSL scheme.

5.8.5 PROTECTION REOPERATION AND EVOLVING FAULT LOGIC DIAGRAM

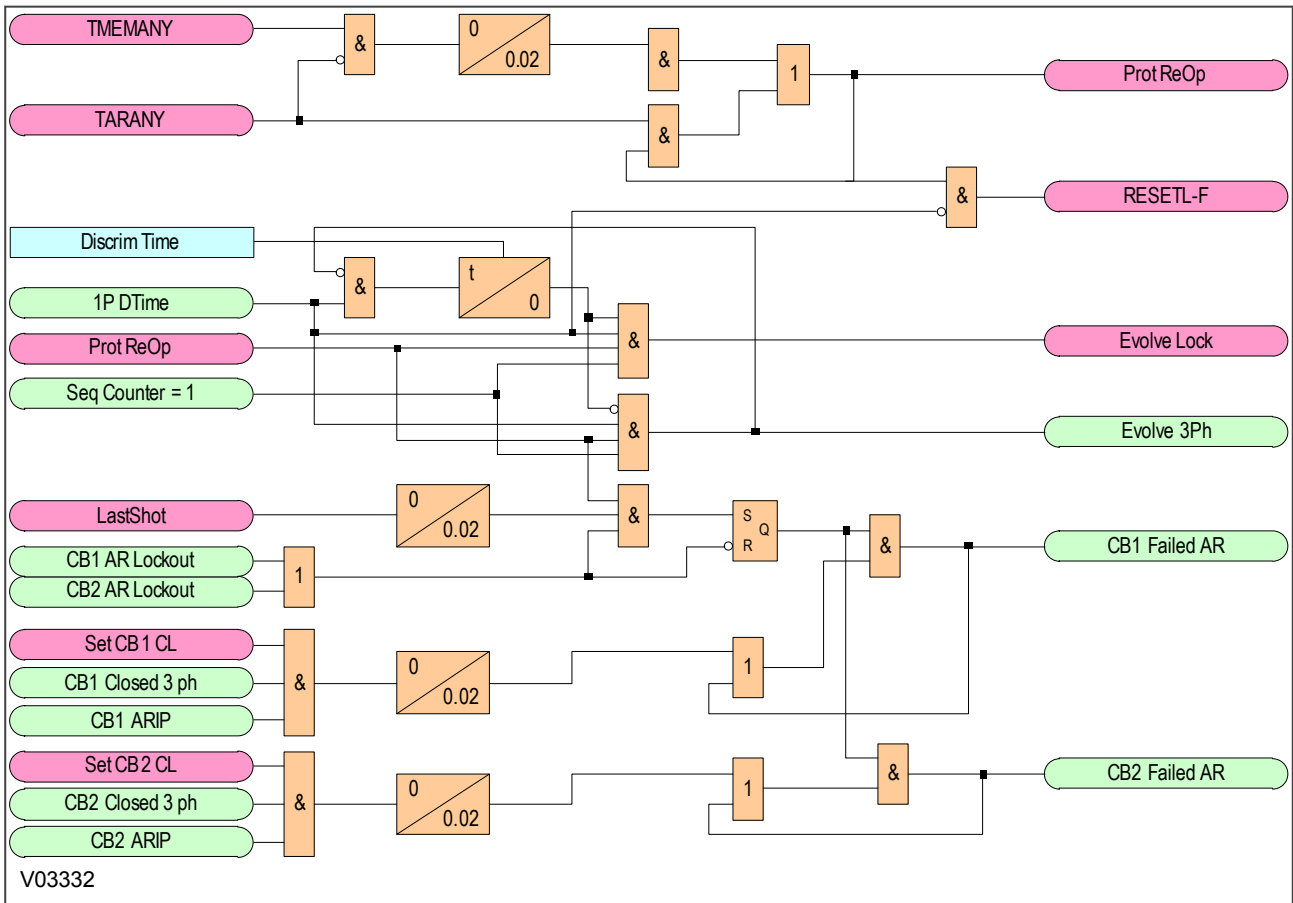


Figure 57: Protection Reoperation and Evolving Fault logic diagram (Module 20)

5.8.6 FAULT MEMORY LOGIC DIAGRAM

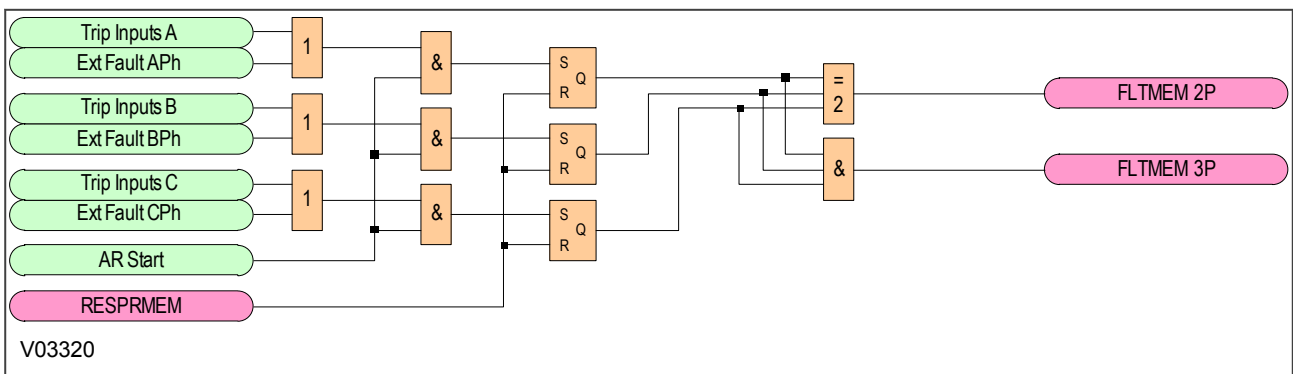


Figure 58: Fault Memory logic diagram (Module 15)

5.9 AUTORECLOSE IN PROGRESS

The AR In Progress module produces various signals to indicate to other modules and functions that an Autoreclose operation is currently in progress.

5.9.1 AUTORECLOSE IN PROGRESS LOGIC DIAGRAM FOR CB1

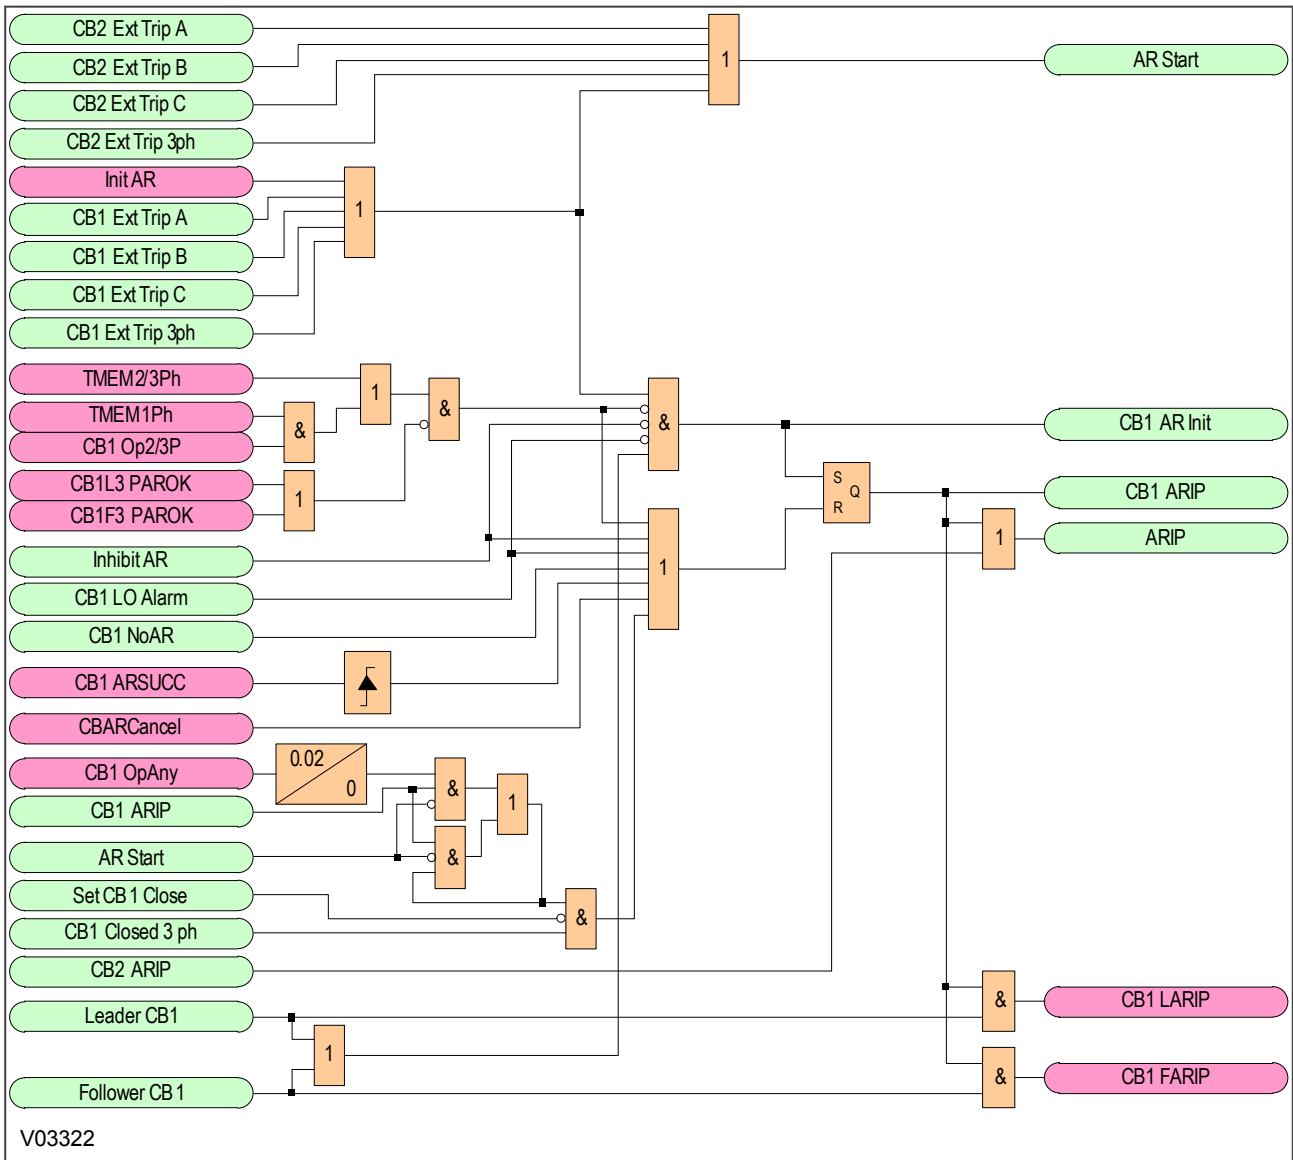


Figure 59: Autoreclose In Progress logic diagram for CB1 (Module 16)

5.9.2 AUTORECLOSE IN PROGRESS LOGIC DIAGRAM FOR CB2

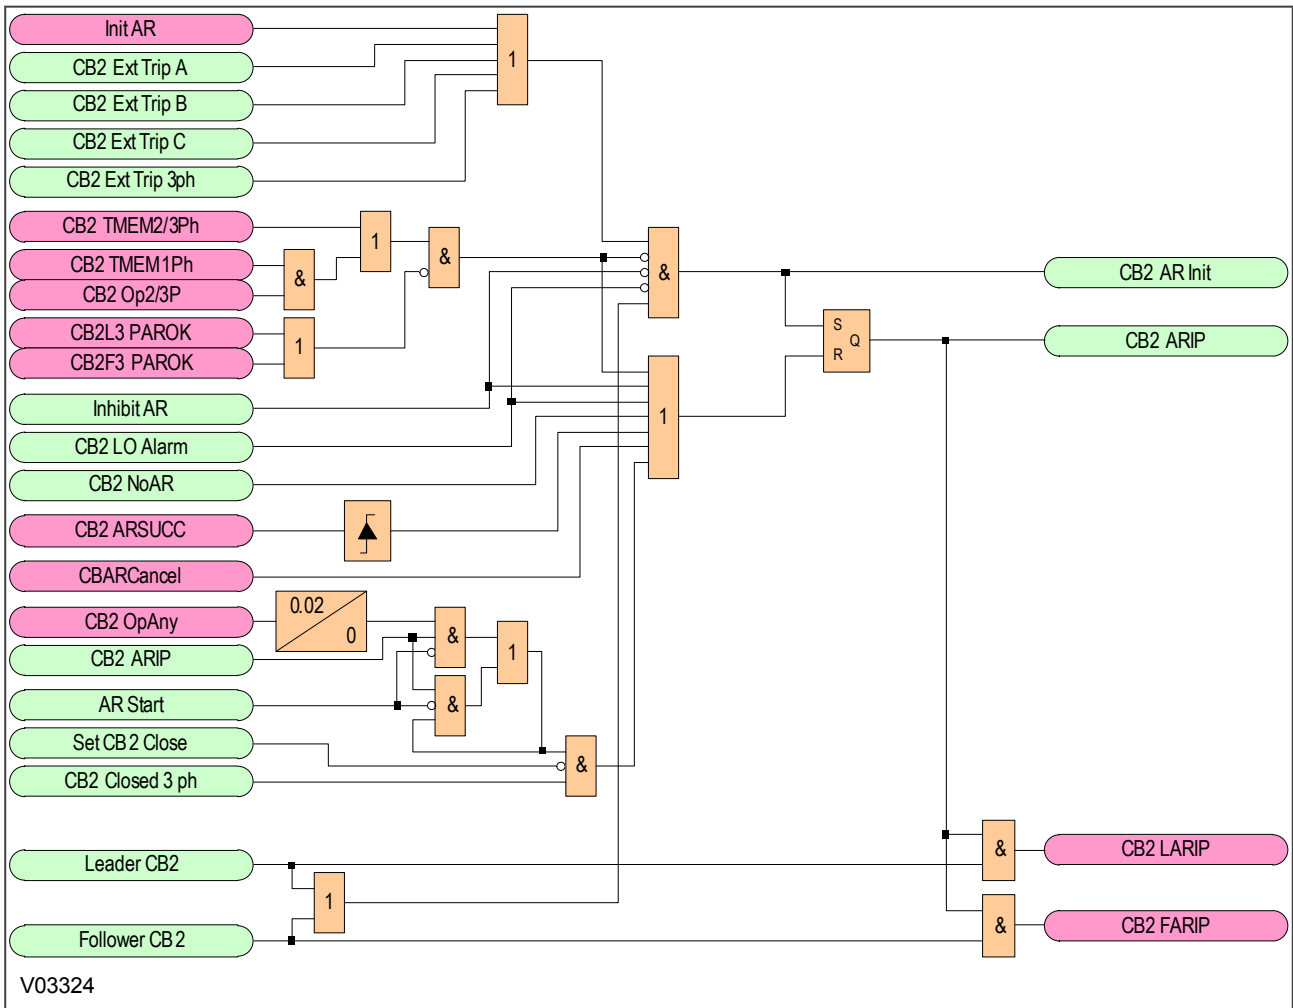


Figure 60: Autoreclose In Progress logic diagram for CB2 (Module 17)

5.10 SEQUENCE COUNTER

The Autoreclose logic includes a counter for counting the number of Autoreclose shots. This is referred to as the sequence counter. The sequence counter has a value of zero if Autoreclose is not in progress. Following a trip, and subsequent Autoreclose initiation, the sequence counter is incremented. The counter provides output signals indicating how many initiation events have occurred in any Autoreclose cycle. These signals are available as user indications and are used in the logic to select the appropriate dead times or, for a persistent fault, force a lockout.

It is possible to skip the first Autoreclose attempt by enabling the **AR Skip Shot 1** setting. If this is set, the sequence counter will skip the first Autoreclose attempt (Shot 1) and move to the second (Shot 2) immediately upon Autoreclose initiation. Each time the protection trips the sequence counter is incremented by 1. The Autoreclose logic compares the sequence counter value to the number of Autoreclose shots setting **AR Shots**. If the counter value exceeds this setting then the Autoreclose is locked out. If Autoreclose is successful, the sequence counter resets to zero.

5.10.1 AUTORECLOSE SEQUENCE COUNTER LOGIC DIAGRAM

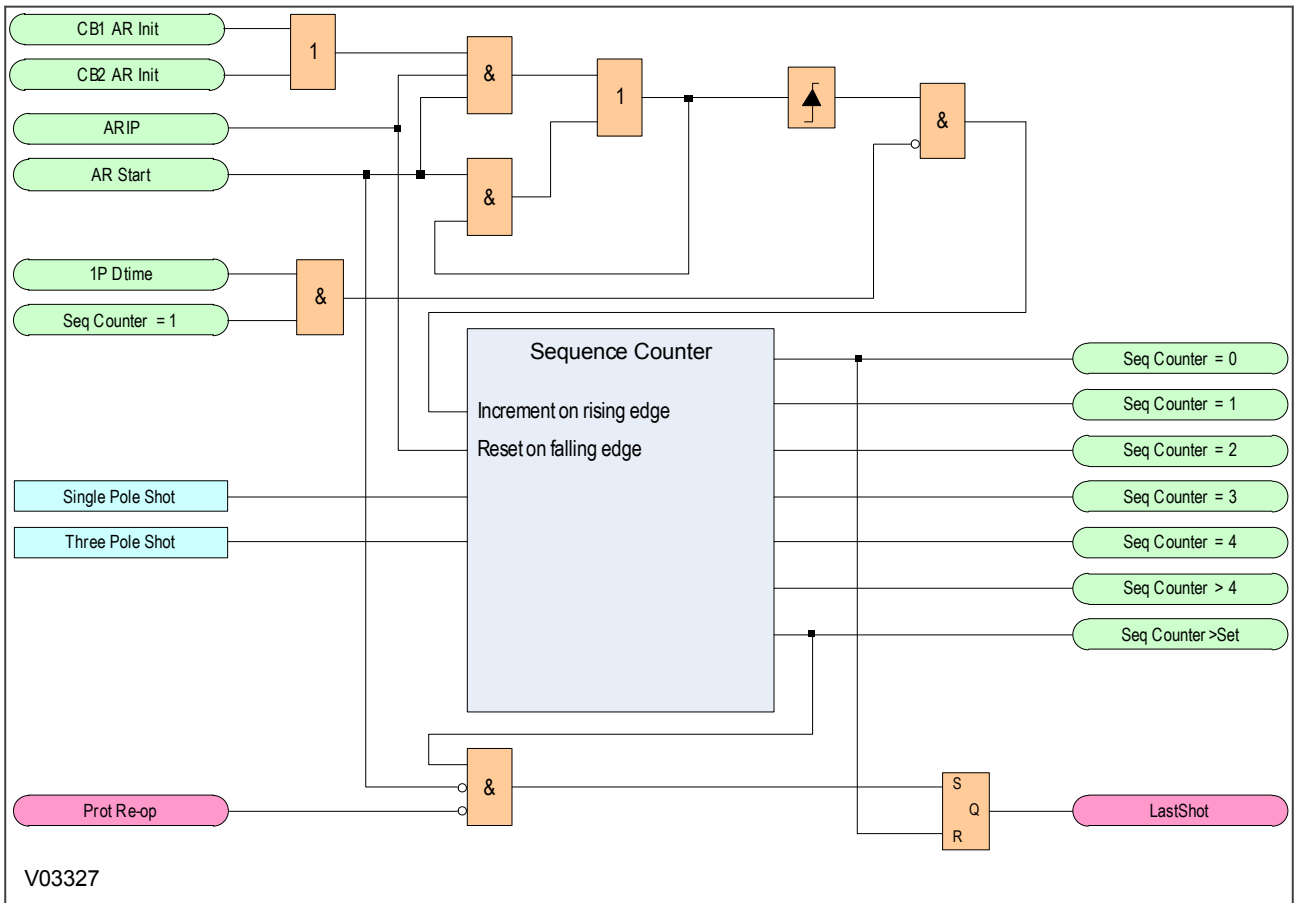


Figure 61: Autoreclose Sequence Counter logic diagram (Module 18)

5.11 AUTORECLOSE CYCLE SELECTION

The Autoreclose cycle selection logic is responsible for determining whether the Autoreclose will start as single-phase or three-phase.

5.11.1 SINGLE PHASE AUTORECLOSE CYCLE SELECTION LOGIC DIAGRAM

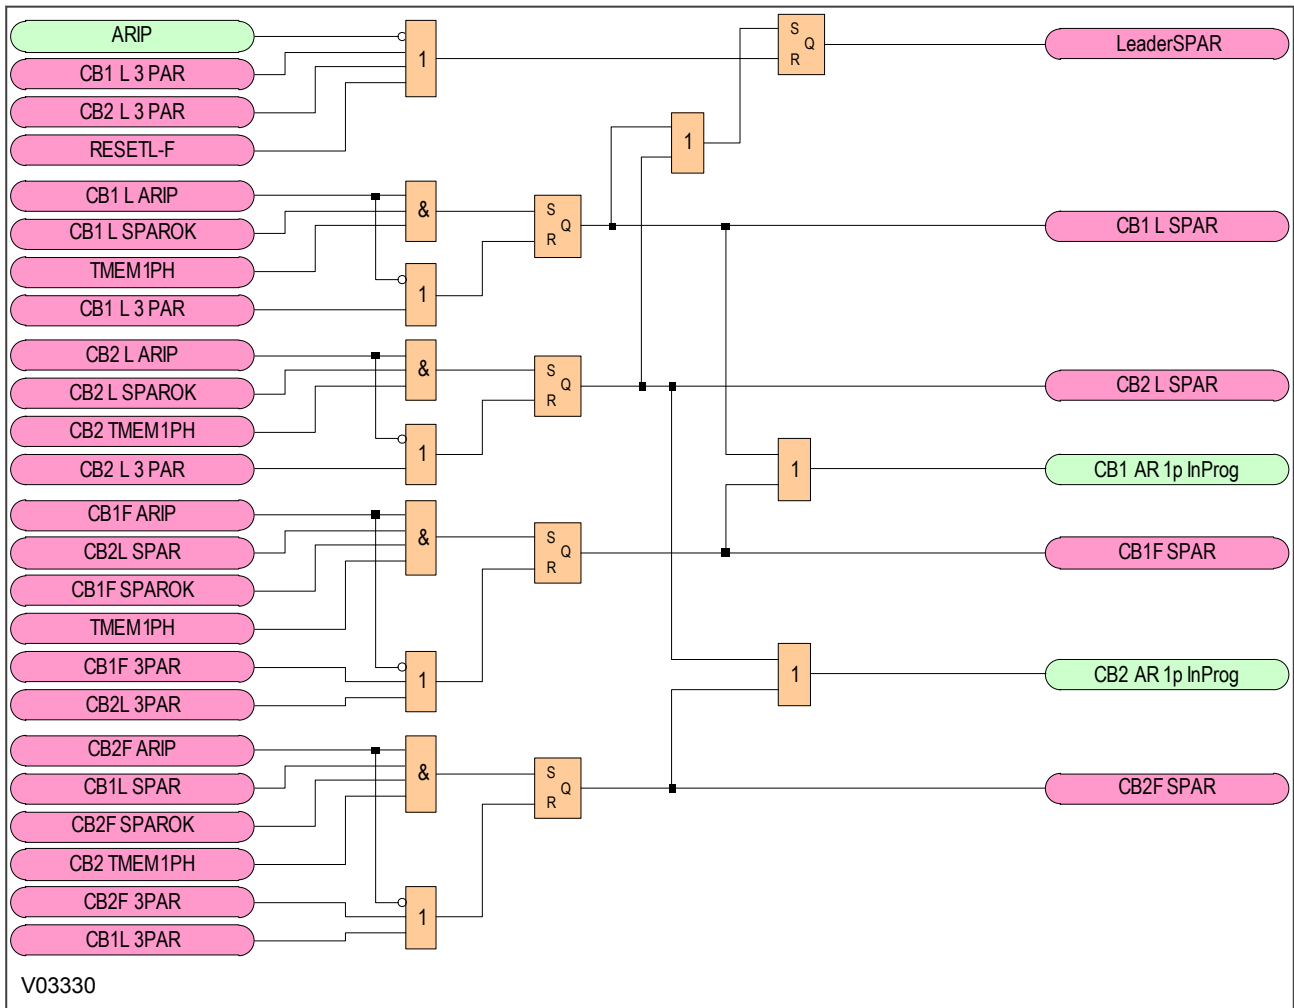


Figure 62: Single-phase Autoreclose Cycle Selection logic diagram (Module 19)

5.11.2 3-PHASE AUTORECLOSE CYCLE SELECTION

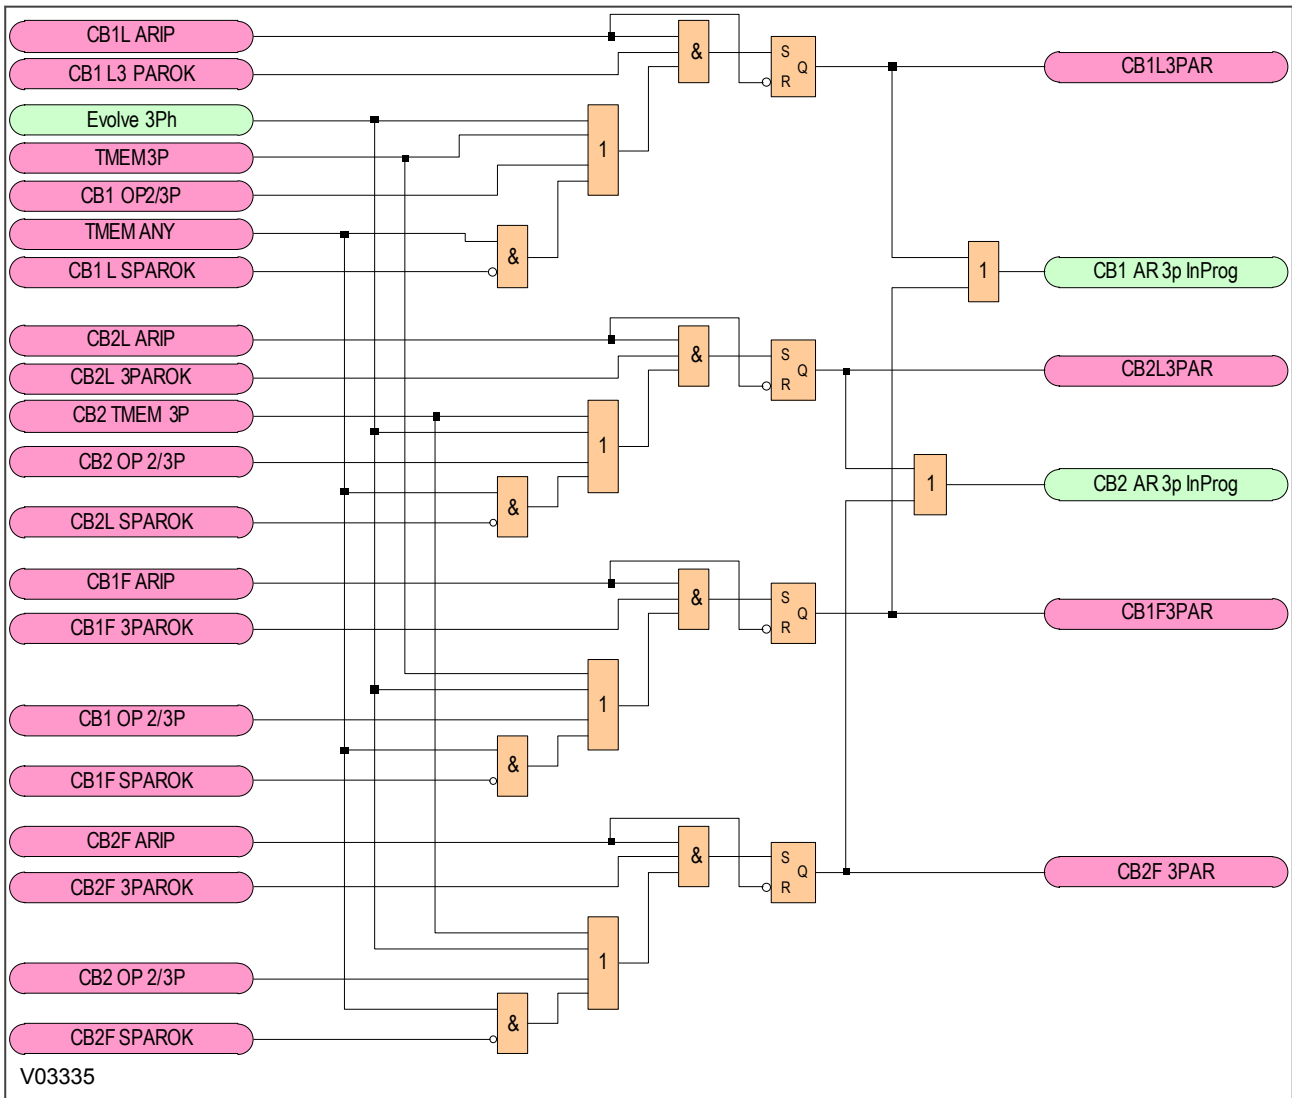


Figure 63: Three-phase Autoreclose Cycle Selection logic diagram (Module 21)

5.12 DEAD TIME CONTROL

Once an Autoreclose cycle has started, the conditions to enable the dead time to run are determined by the menu settings, the circuit breaker status, the protection status, the nature of the AR cycle (single-phase or three-phase), and the opto-isolated inputs from external sources.

Three settings are involved in controlling the dead time start:

- **DT Start by Prot**
- **3PDTStart WhenLD**
- **DTStart by CB Op**

The **DT Start by Prot** determines how the protection action will initiate a dead time. The setting is always visible and has three options *Protection Reset*, *Protection Op* (protection operation), and *Disable* which should be selected if you don't want protection action to start the dead time. These options set the basic conditions for starting the dead time.

Selecting protection operation to start the dead time can, optionally, be qualified by a check that the line is dead.

Selecting protection reset to start the dead time can, optionally, be qualified by a check, that the circuit breaker is open (***DTStart by CB Op***) before starting the dead time. For three-phase tripping applications, there is a further option to check that the line is dead (***3PDTStart WhenLD***) before starting the dead time.

If ***DT Start by Prot*** is disabled, the circuit breaker must be open for the dead time to start. For three-phase tripping applications, there is an option to check that the line is dead (***3PDTStart WhenLD***) before starting the dead time. To check that the line is dead, set ***3PDTStart WhenLD*** to *enabled*. To check that the circuit breaker is open, set ***DTStart by CB Op*** to *Enabled*.

5.12.1 DEAD TIME START ENABLE LOGIC DIAGRAM

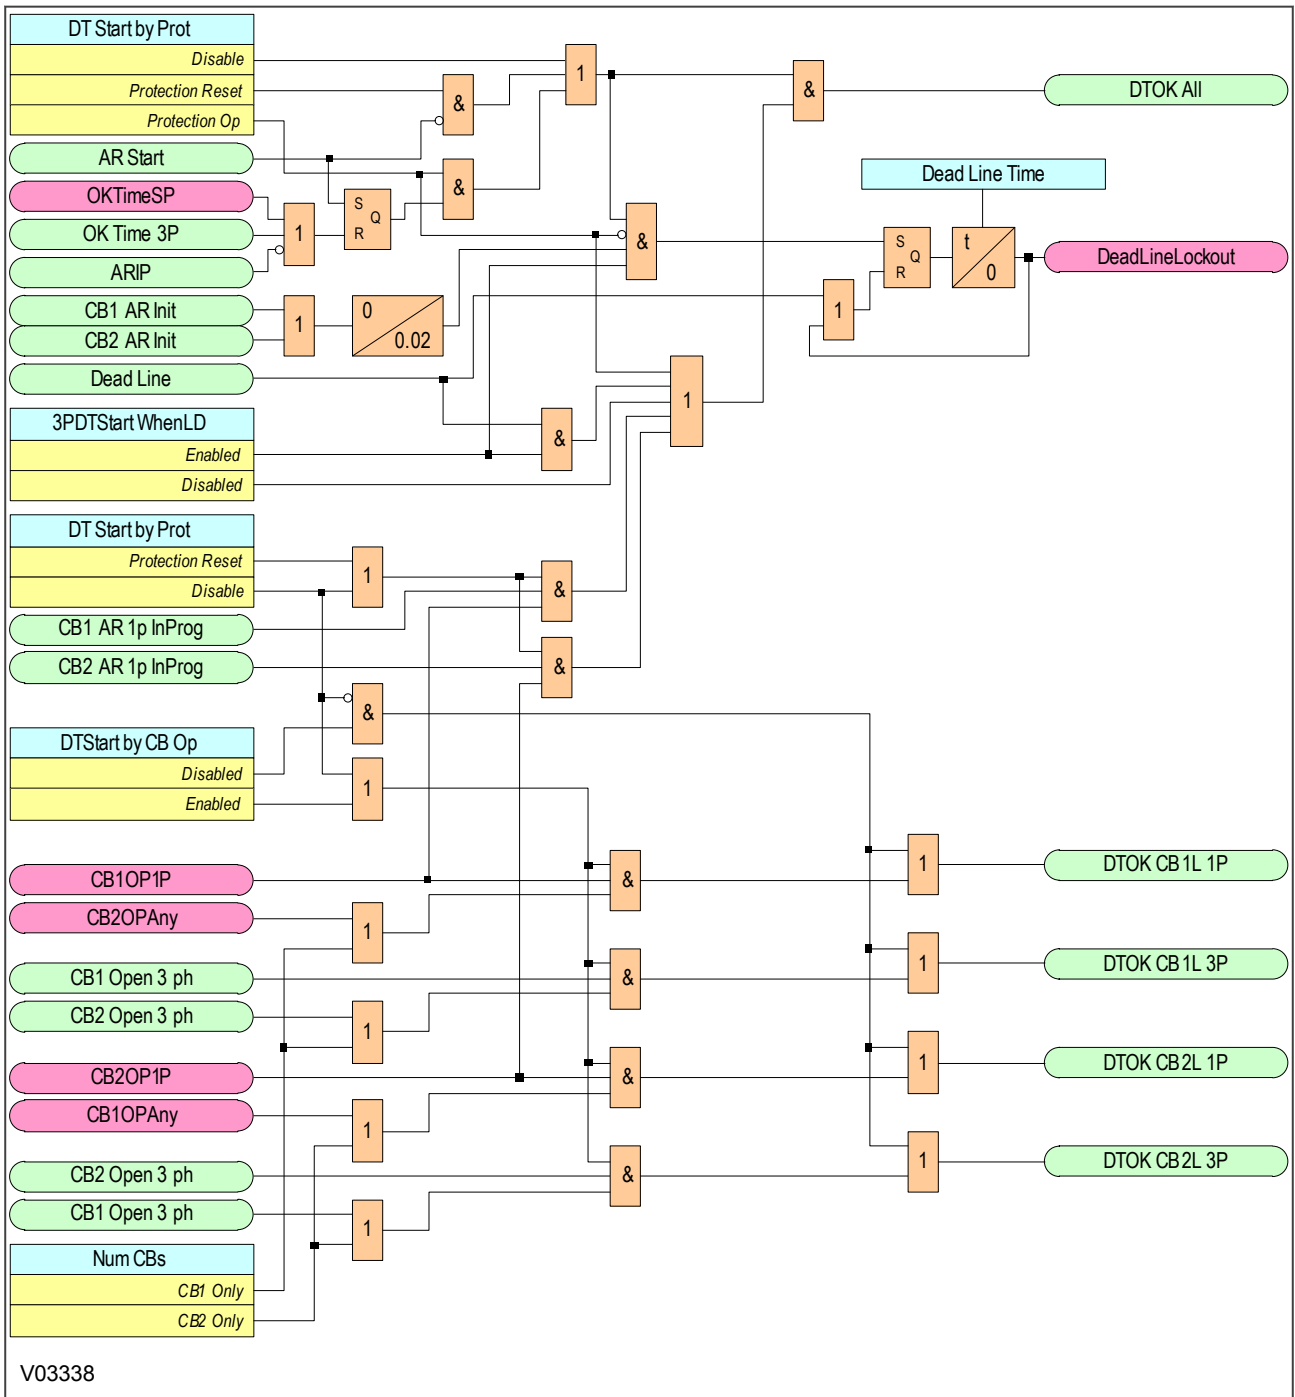


Figure 64: Dead time Start Enable logic diagram (Module 22)

5.12.2 SINGLE-PHASE LEADER DEAD TIME LOGIC DIAGRAM

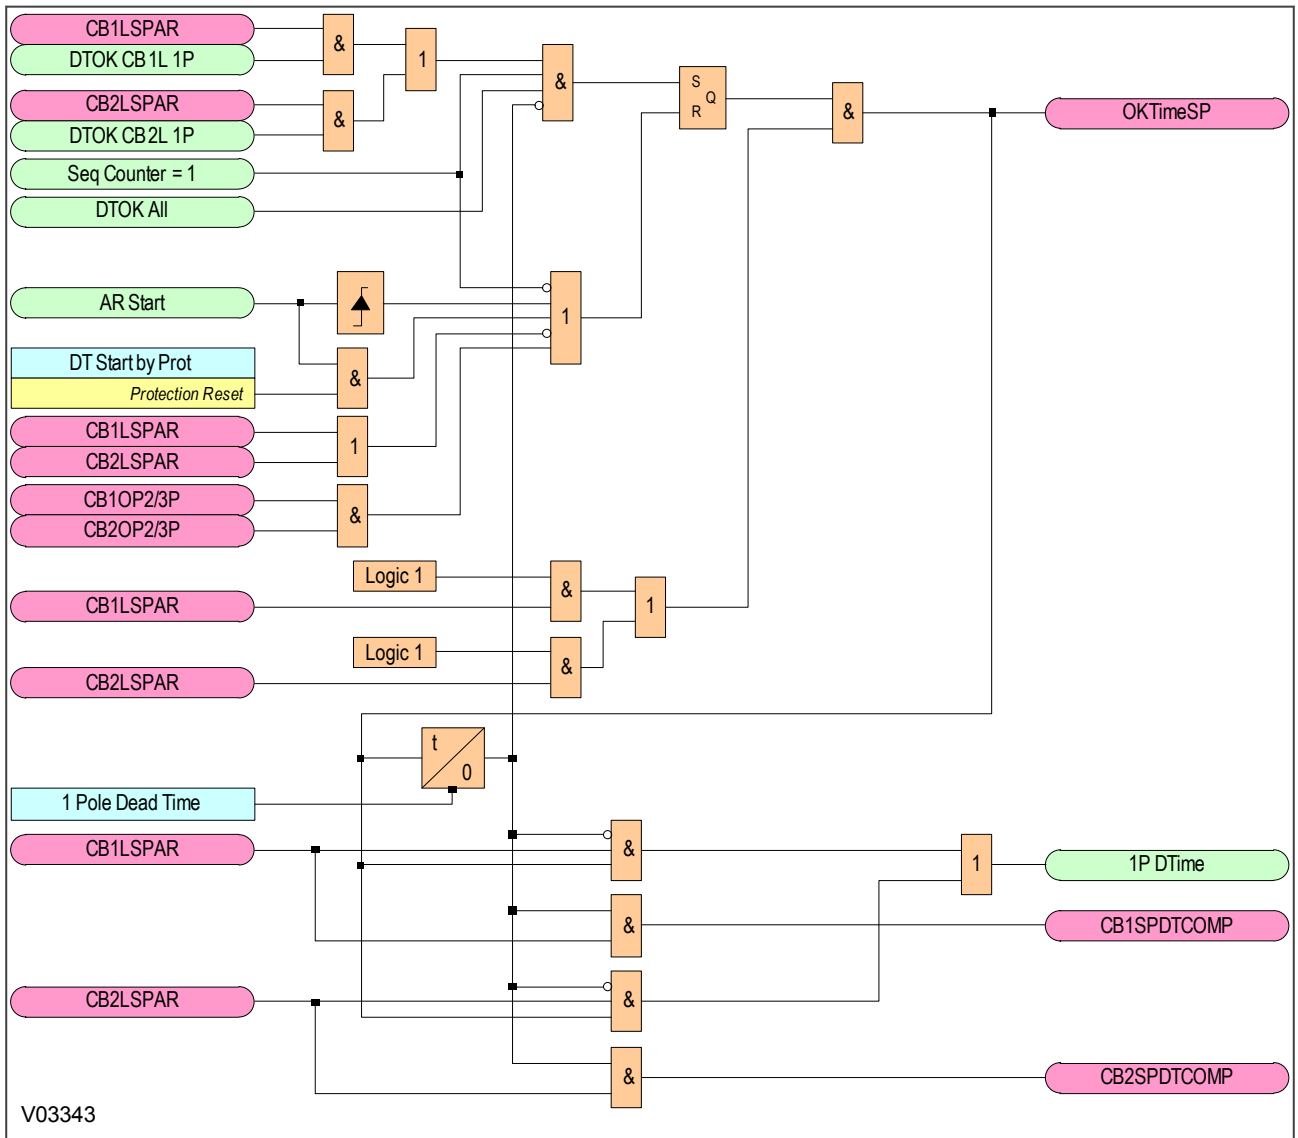


Figure 65: Single-phase Leader Dead Time logic diagram (Module 24)

5.12.3 3-PHASE LEADER DEAD TIME LOGIC DIAGRAM

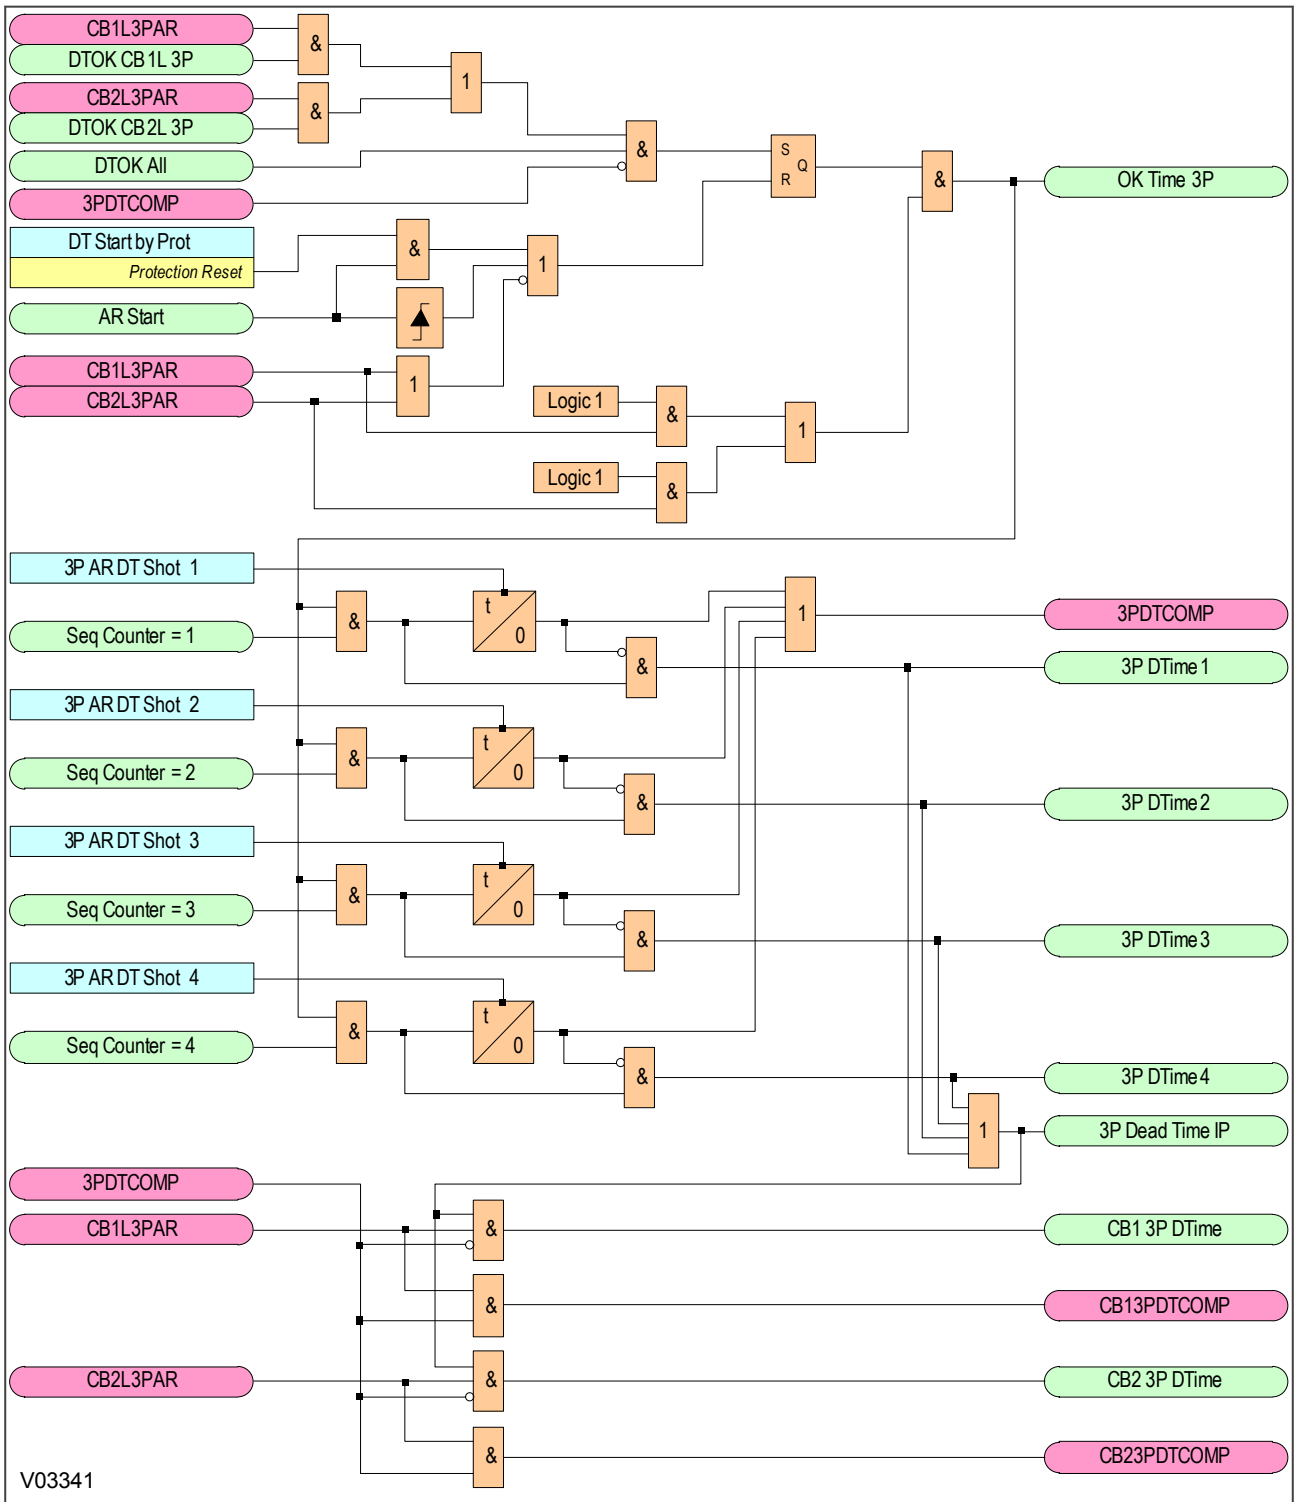


Figure 66: Three-phase Leader CB Dead Time logic diagram (Module 25)

5.12.4 FOLLOWER ENABLE LOGIC DIAGRAM

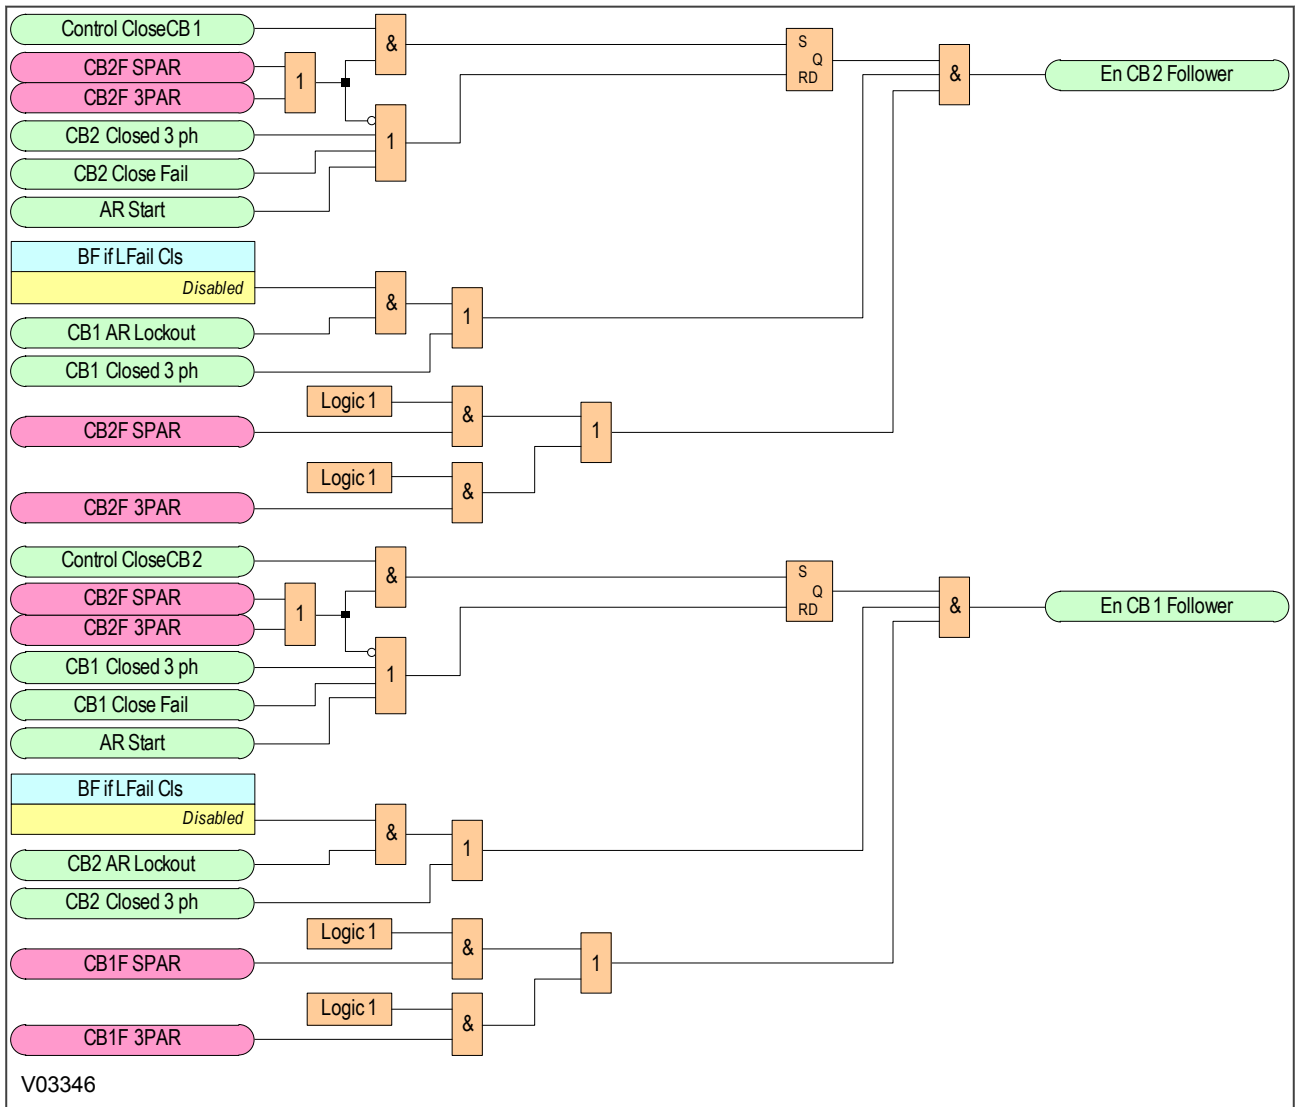


Figure 67: Follower Enable logic diagram (Module 27)

5.12.5 SINGLE-PHASE FOLLOWER TIMING LOGIC DIAGRAM

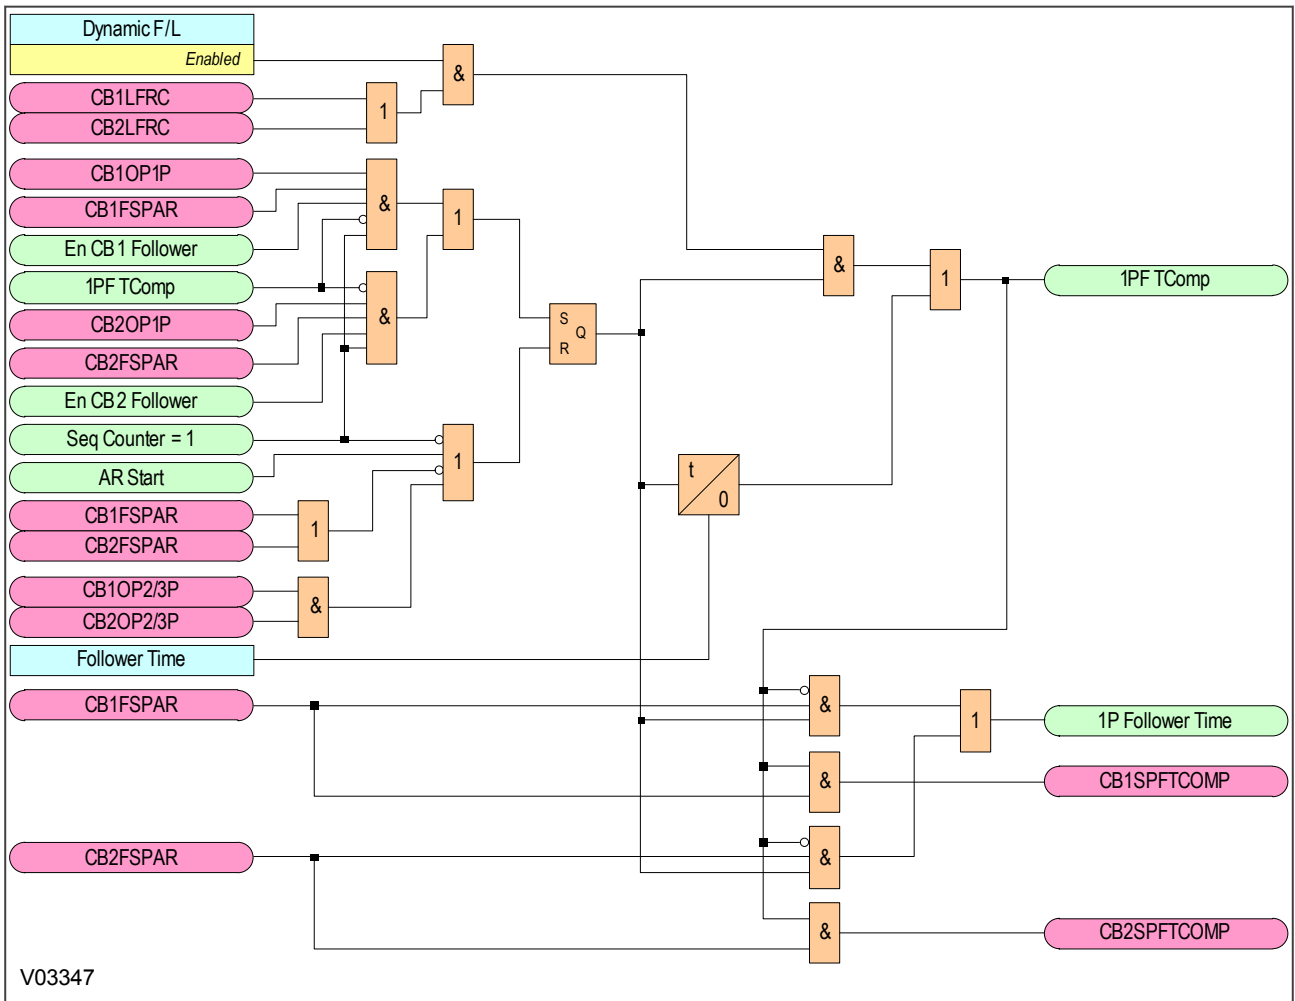


Figure 68: Single-phase Follower CB timing logic diagram (Module 28)

5.12.6 THREE-PHASE FOLLOWER TIMING LOGIC DIAGRAM

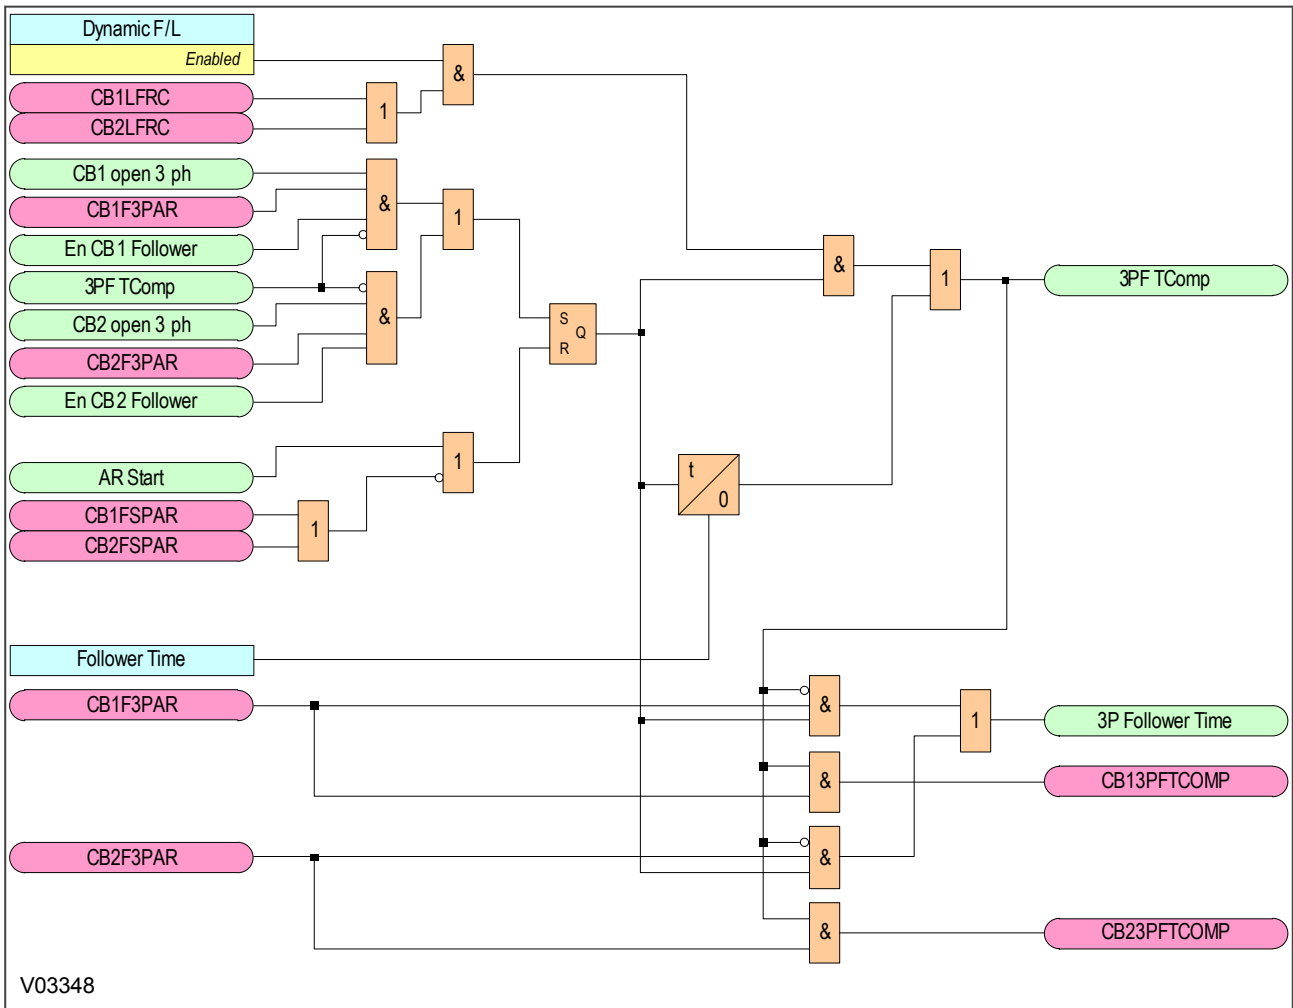


Figure 69: Three-phase Follower CB timing logic diagram (Module 29)

5.13 CIRCUIT BREAKER AUTOCLOSE

Autoclose logic takes effect when dead times have expired.

The Autoclose logic checks that all necessary conditions are satisfied before issuing an Autoclose command to the circuit breaker control scheme.

Before a circuit breaker can be closed, it must be healthy (sufficient energy to close, and if necessary re-trip) and it must not be in a lockout condition.

For three-phase Autoreclose, the circuit breaker must be open on all three phases and the appropriate system check conditions must be met. For single-phase Autoreclose, the circuit breaker must be open on that phase.

The Autoclose command is a pulse lasting 100 milliseconds. Another command (**Set CB Close**) to set the circuit breaker to close is asserted as well as the Autoclose command. This signal will remain set either until the end of the Autoreclose cycle, or until the next protection operation. These commands are used to initiate the Reclaim Time logic and the Autoreclose Shot Counter logic.

5.13.1 CIRCUIT BREAKER AUTOCLOSE LOGIC DIAGRAM

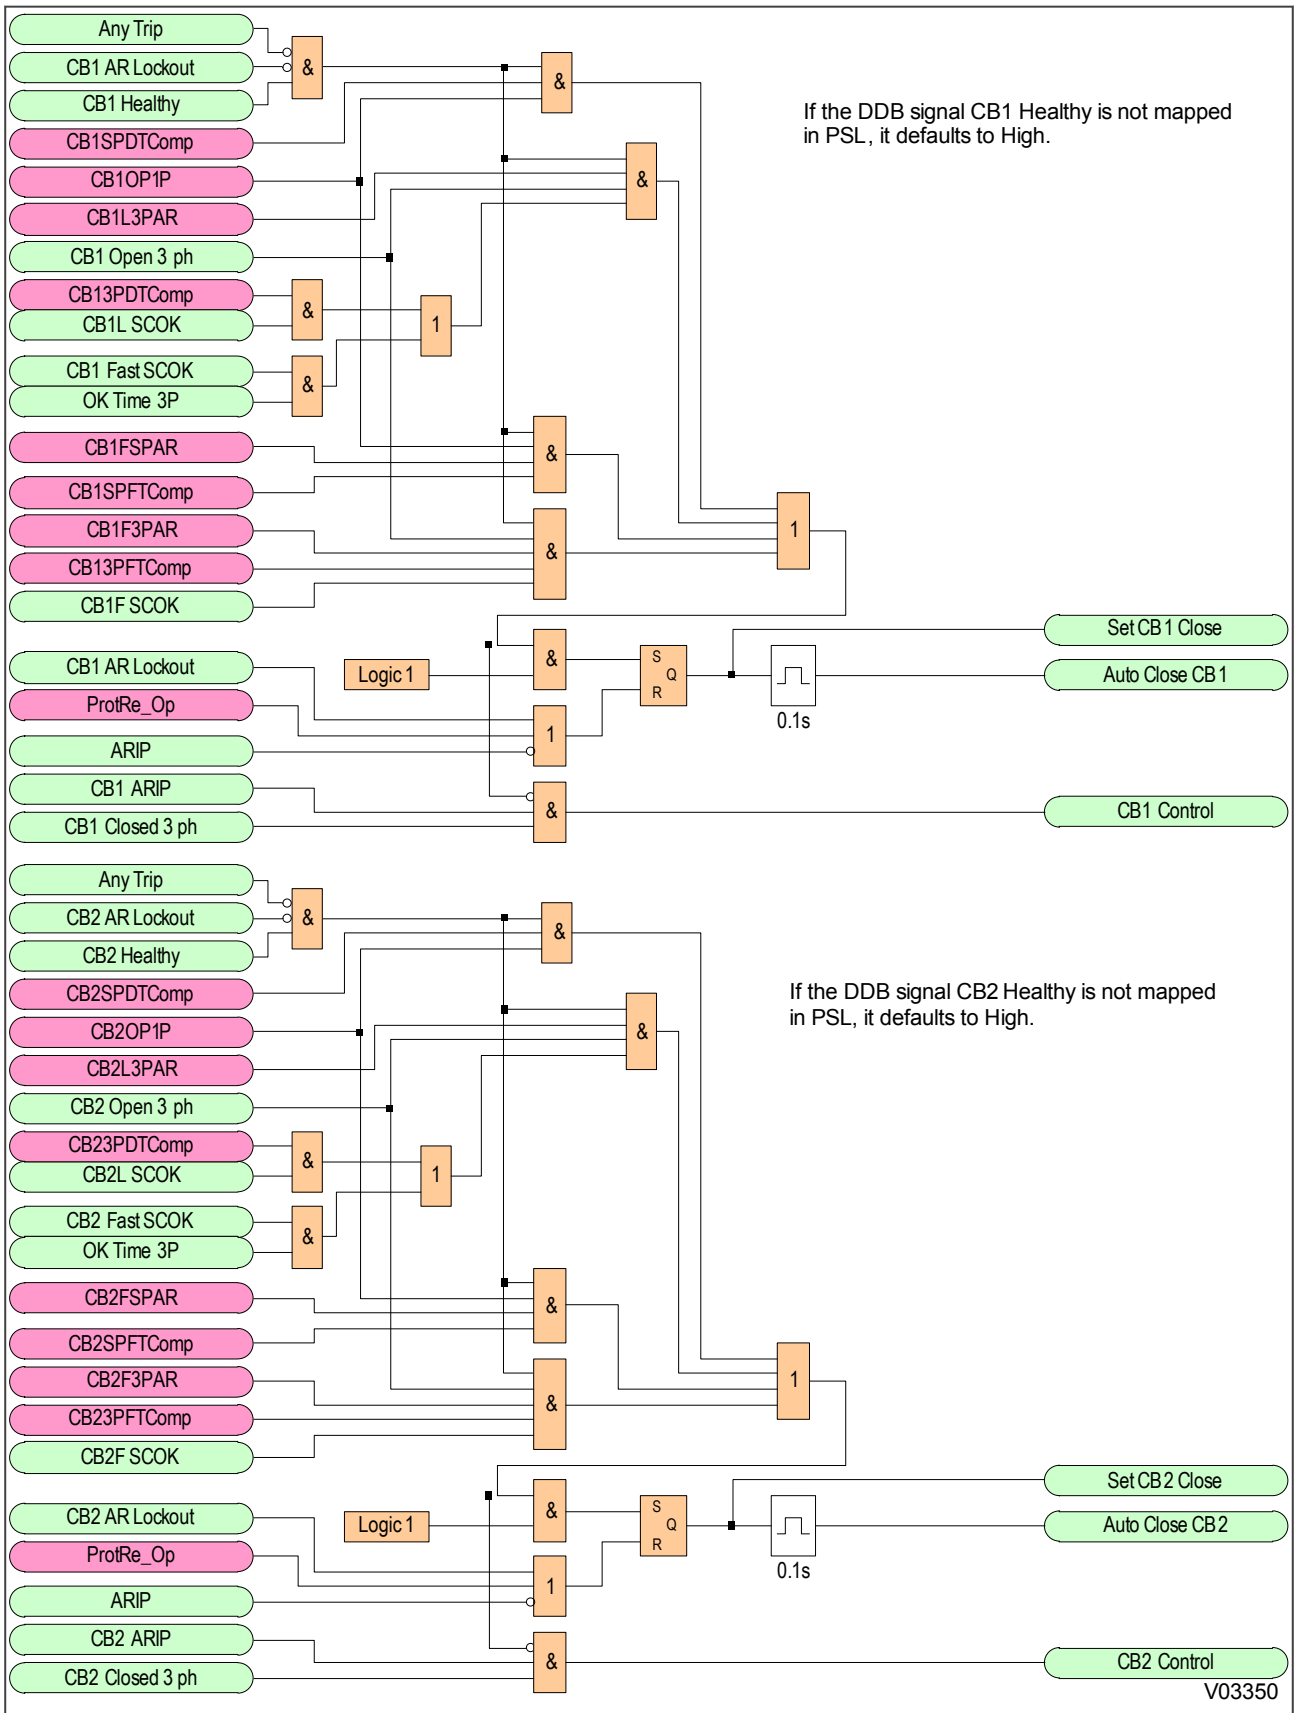


Figure 70: Circuit Breaker Autoreclose Logic Diagram (Modules 32 & 33)

5.14 RECLAIM TIME

If the protection operates again before the reclaim time has expired, the corresponding sequence counter is incremented. At the same time, any “dead time complete” (...DTCOMP) signals are reset and the logic is prepared for the next dead time to start when conditions are suitable. The operation also resets the signal that would set the circuit breaker to close, and stops and resets the reclaim timer. The reclaim time starts again if the signal to set a circuit breaker to close goes high following completion of a dead time in a subsequent Autoreclose cycle.

If the circuit breaker is closed and has not tripped again when the reclaim time expires, signals are generated to indicate successful Autoreclose. These signals increment the relevant circuit breaker successful Autoreclose shot counters and reset the relevant Autoreclose in progress signal.

The “successful Autoreclose” signals generated from the logic can be reset by various commands and settings options available under *CB CONTROL* menu settings as follows:

If **Res AROK by UI** is set to *Enabled*, all the signals can be reset by user interface command **Reset AROK Ind** from the *CB CONTROL* menu.

If **Res AROK by NoAR** is set to *Enabled*, the signals for each circuit breaker can be reset by temporarily generating an Autoreclose disabled signal according to the logic shown.

If **Res AROK by Ext** is set to *Enabled*, the signals can be reset by activation of an external input signal appropriately mapped in the PSL.

If **Res AROK by TDly** is set to *Enabled*, the signals are automatically reset after a time delay set in **AROK Reset Time**.

5.14.1 PREPARE RECLAIM INITIATION LOGIC DIAGRAM

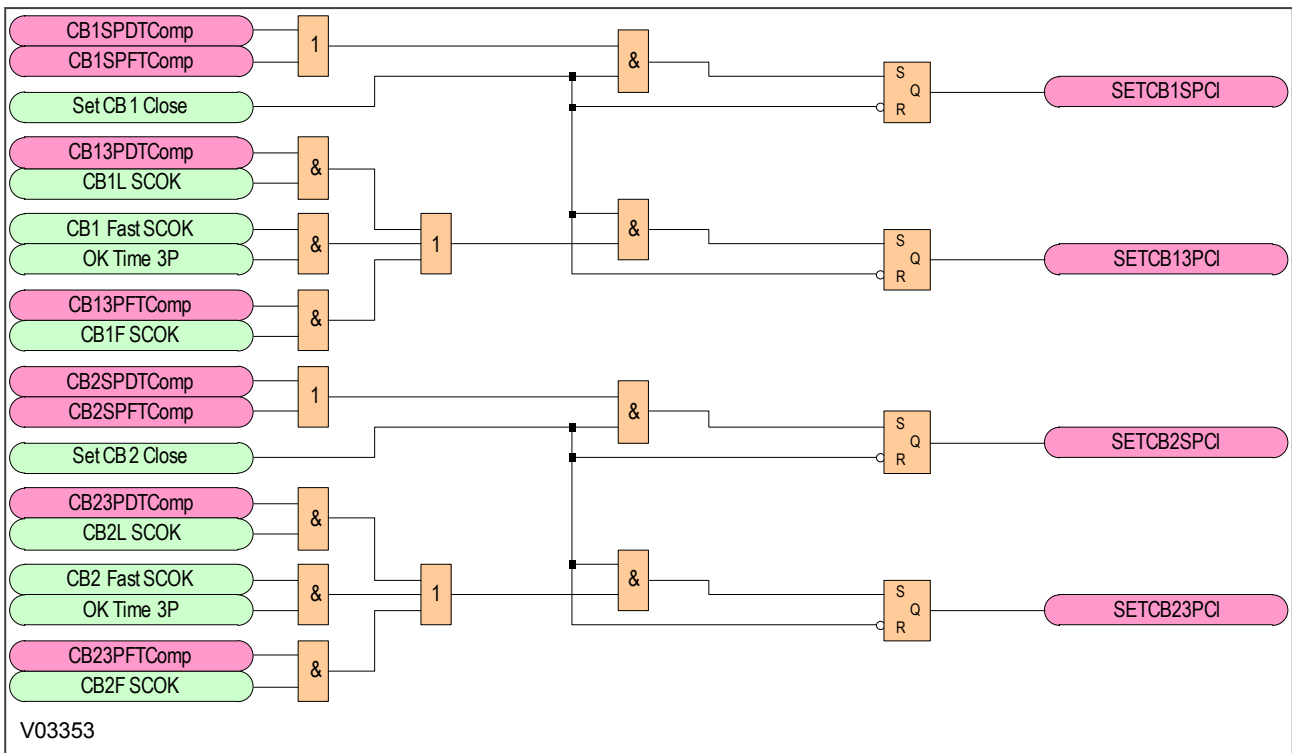


Figure 71: Prepare Reclaim Initiation logic diagram (Module 34)

5.14.2 RECLAIM TIME LOGIC DIAGRAM

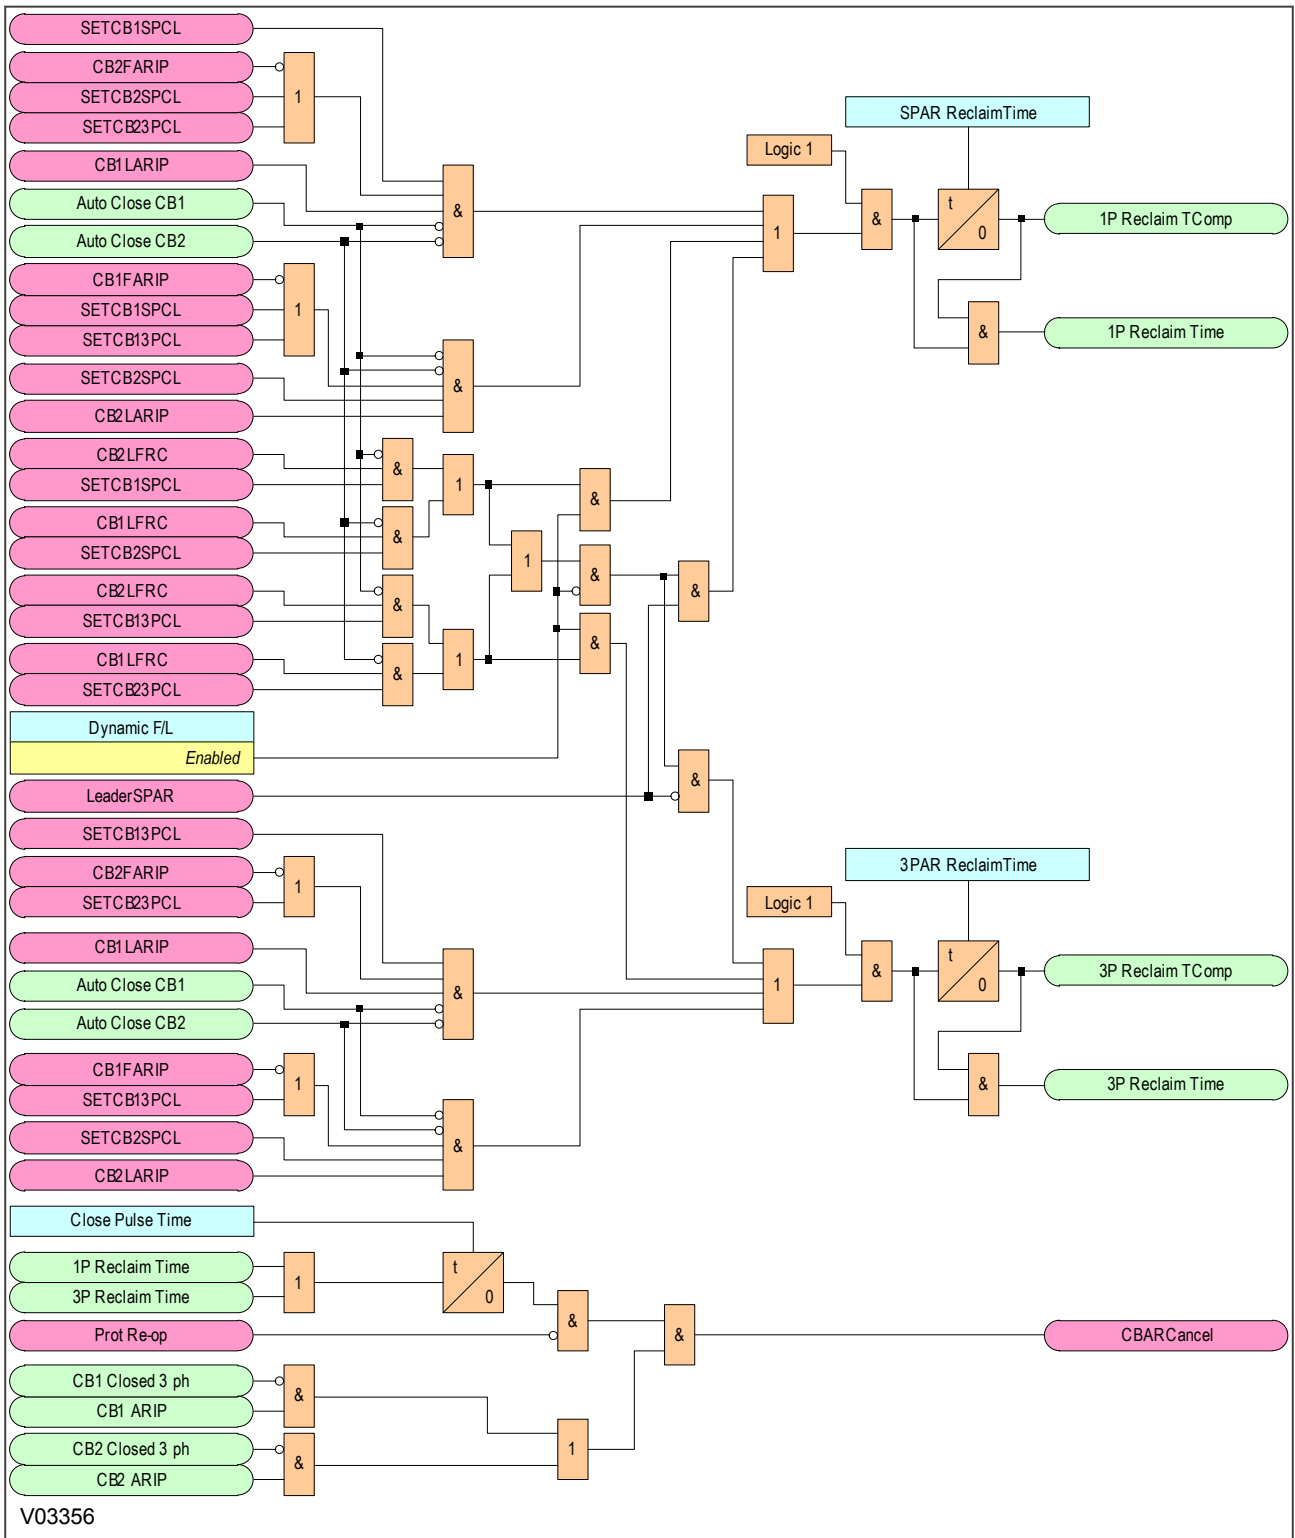


Figure 72: Reclaim Time logic diagram (Module 35)

5.14.3 SUCCESSFUL AUTORECLOSE SIGNALS LOGIC DIAGRAM


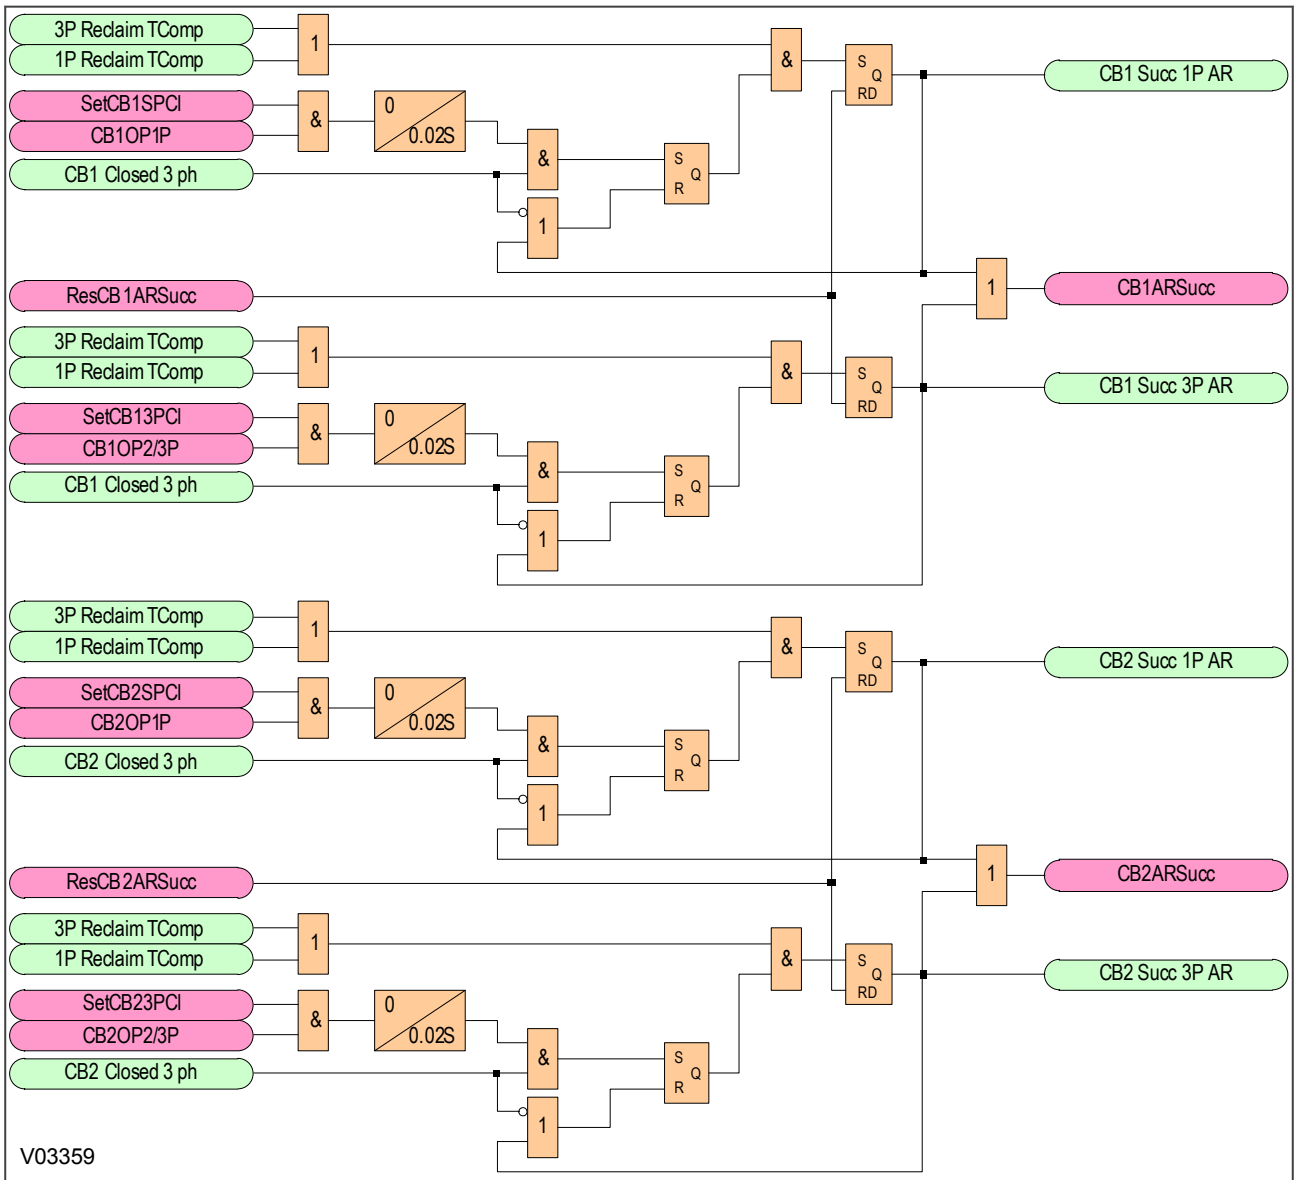


Figure 73: Successful Autoreclose Signals logic diagram (Module 36)

5.14.4 AUTORECLOSE RESET SUCCESSFUL INDICATION LOGIC DIAGRAM

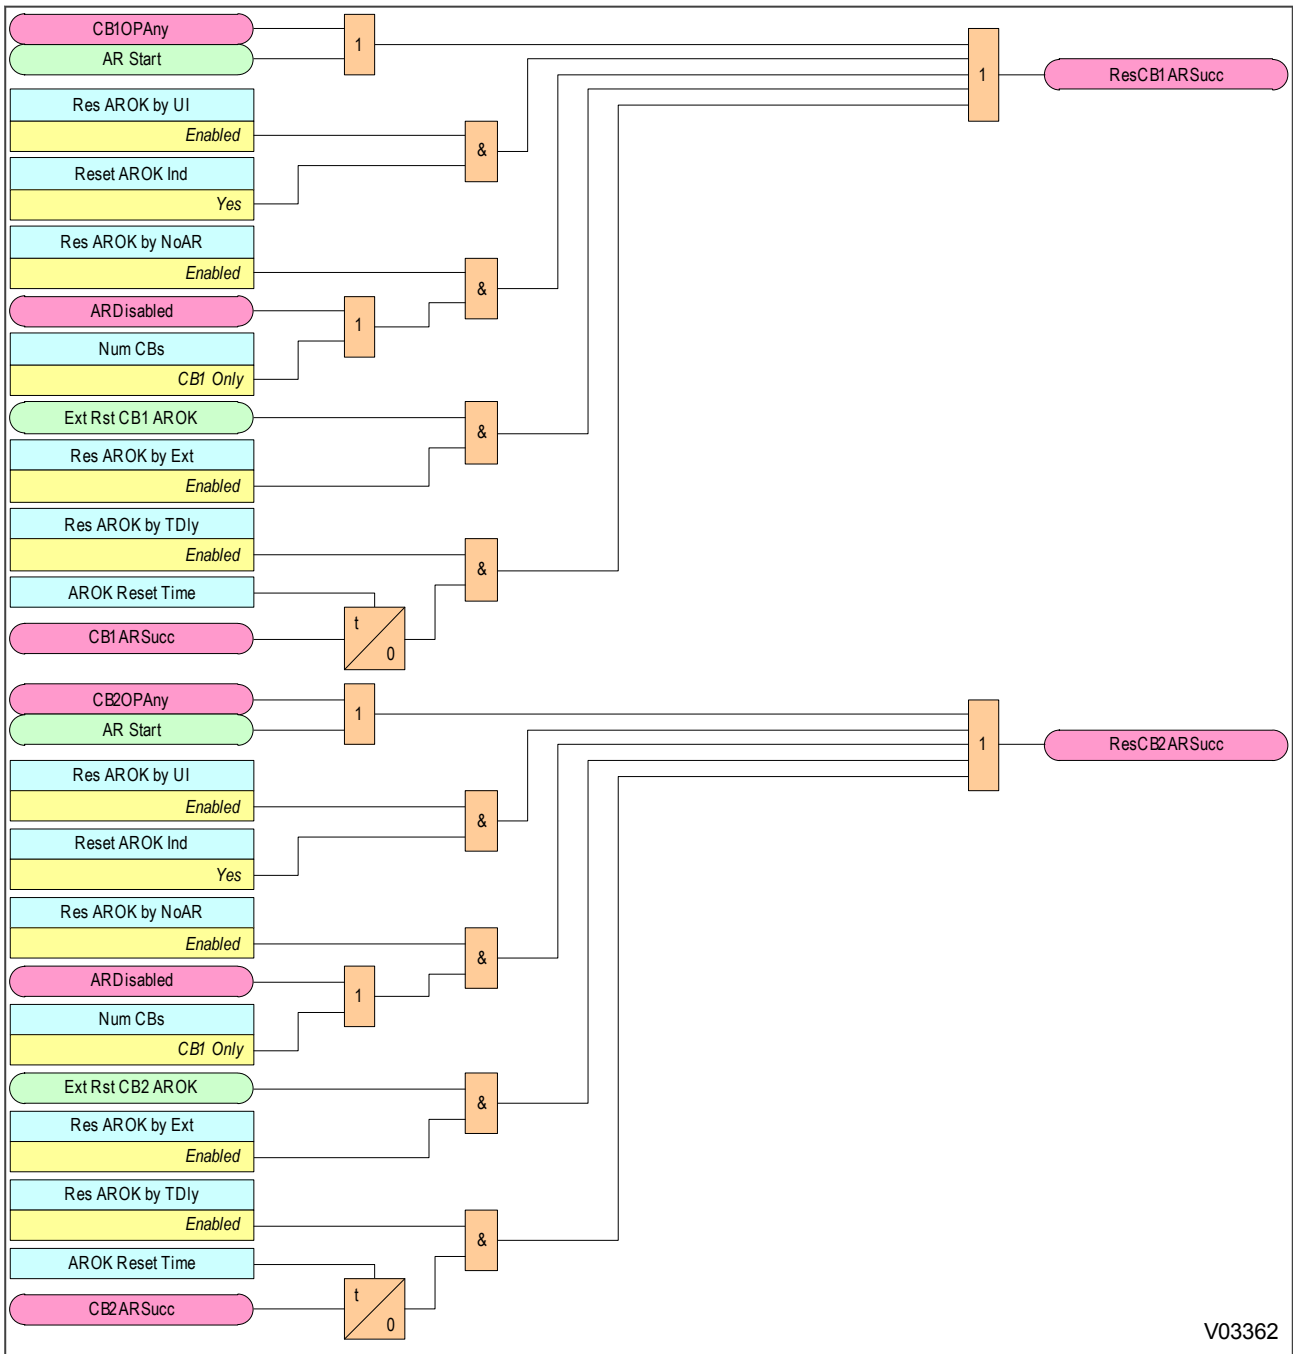

V03362

Figure 74: Autoreclose Reset Successful Indication logic diagram (Modules 37 & 38)

5.15 CB HEALTHY AND SYSTEM CHECK TIMERS

This logic provides signals to cancel Autoreclose if the circuit breaker is not healthy (for example low gas pressure) or system check conditions are not satisfied (for example required line & bus voltage conditions) when the scheme is ready to close the circuit breaker.

At the completion of a dead time, the logic starts an Autoreclose healthy timer. If a circuit breaker healthy signal becomes high before the Autoreclose healthy time is complete, the timer stops and, if all other relevant circuit breaker closing conditions are satisfied, the scheme issues a circuit breaker Autoreclose signal.

If the circuit breaker healthy signal stays low, then, at the end of the Autoreclose healthy time, a circuit breaker unhealthy alarm is raised. This forces the Autoreclose sequence to be cancelled.

Additionally, at the completion of any three-phase dead time, the logic starts an Autoreclose check synchronism timer. If the circuit breaker synchronism-check OK signal goes high before the time is complete, the timer stops and, if all other relevant circuit breaker closing conditions are satisfied, the scheme issues a circuit breaker Autoreclose signal. If the circuit breaker synchronism-check OK signal stays low, then when the Autoreclose check synchronism timer expires, an alarm is set to inform that the check synchronism is not satisfied and cancels the Autoreclose cycle.

5.15.1 CB HEALTHY AND SYSTEM CHECK TIMERS LOGIC DIAGRAM

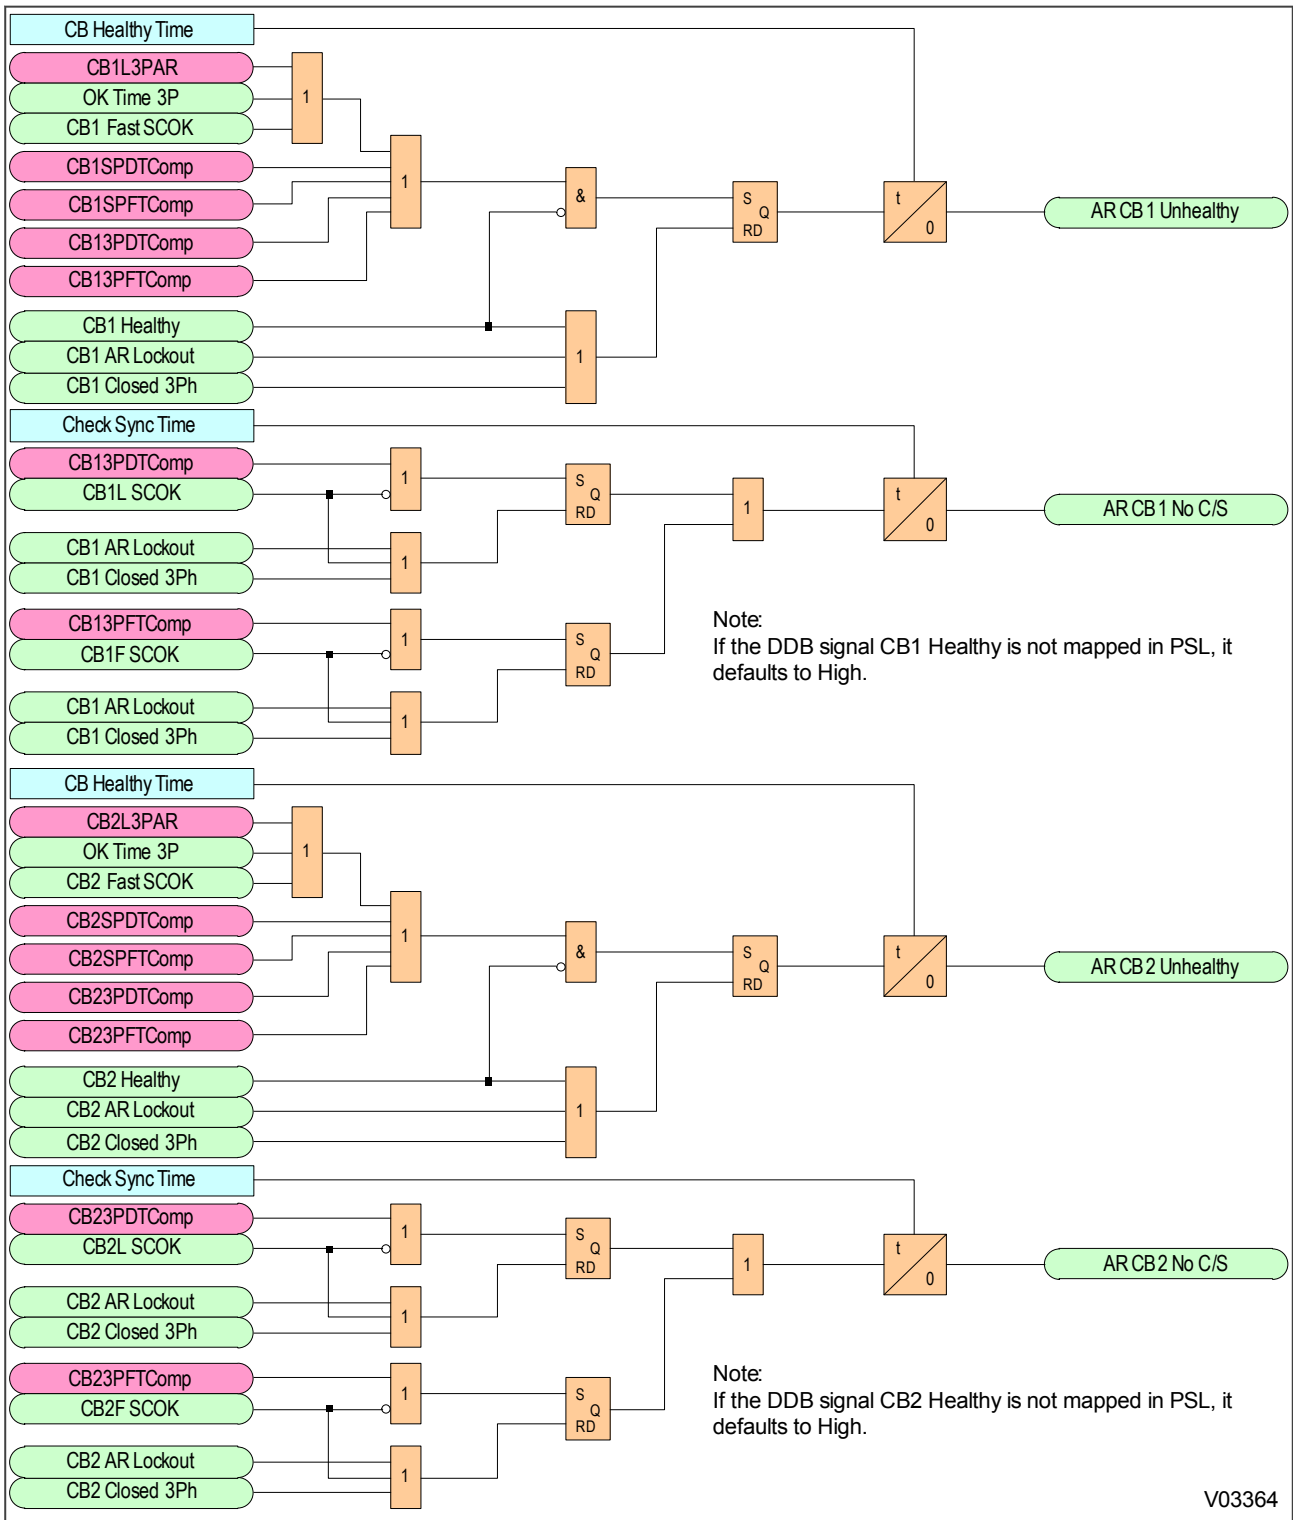


Figure 75: Circuit Breaker Healthy and System Check Timers Healthy logic diagram (Module 39)

5.16 AUTORECLOSE SHOT COUNTERS

A number of counters are provided to enable analysis of circuit breaker Autoreclose history. The counters are stored in non-volatile memory, so that the data is maintained even in the event of a failure of the auxiliary

supply. The counter values are accessible through the *CB CONTROL* column. The counters can be reset manually, or by activation of an input appropriately mapped in the PSL.

The logic provides the following summary information for each circuit breaker

- Overall total number of shots (Number of Autoreclose attempts)
- Number of successful 1st shot single-phase Autoreclose sequences
- Number of successful 1st shot three-phase Autoreclose sequences
- Number of successful 2nd shot three-phase Autoreclose sequences
- Number of successful 3rd shot three-phase Autoreclose sequences
- Number of successful 4th shot three-phase Autoreclose sequences
- Number of failed Autoreclose cycles which forced a circuit breaker to lockout

5.16.1 AUTORECLOSE SHOT COUNTERS LOGIC DIAGRAM

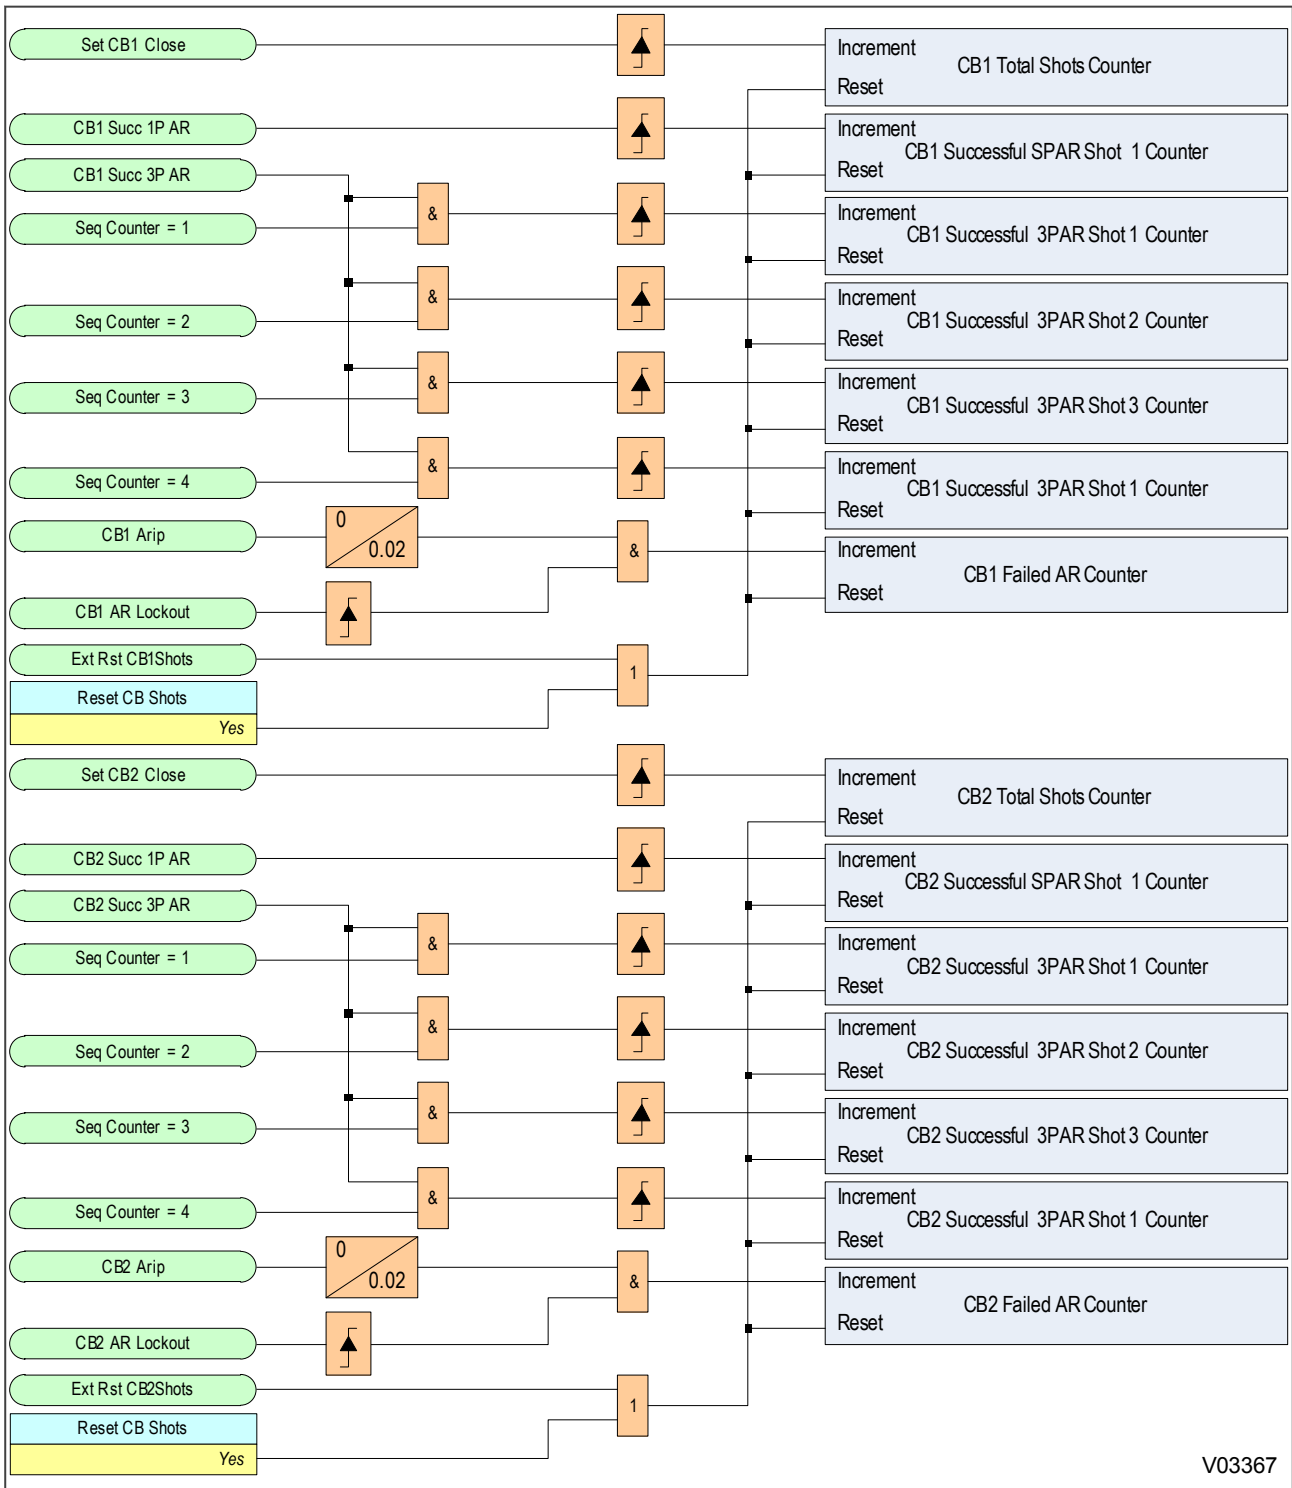


Figure 76: Autoreclose Shot Counters logic diagram (Modules 41 & 42)

5.17 CIRCUIT BREAKER CONTROL

5.17.1 CB CONTROL LOGIC DIAGRAM

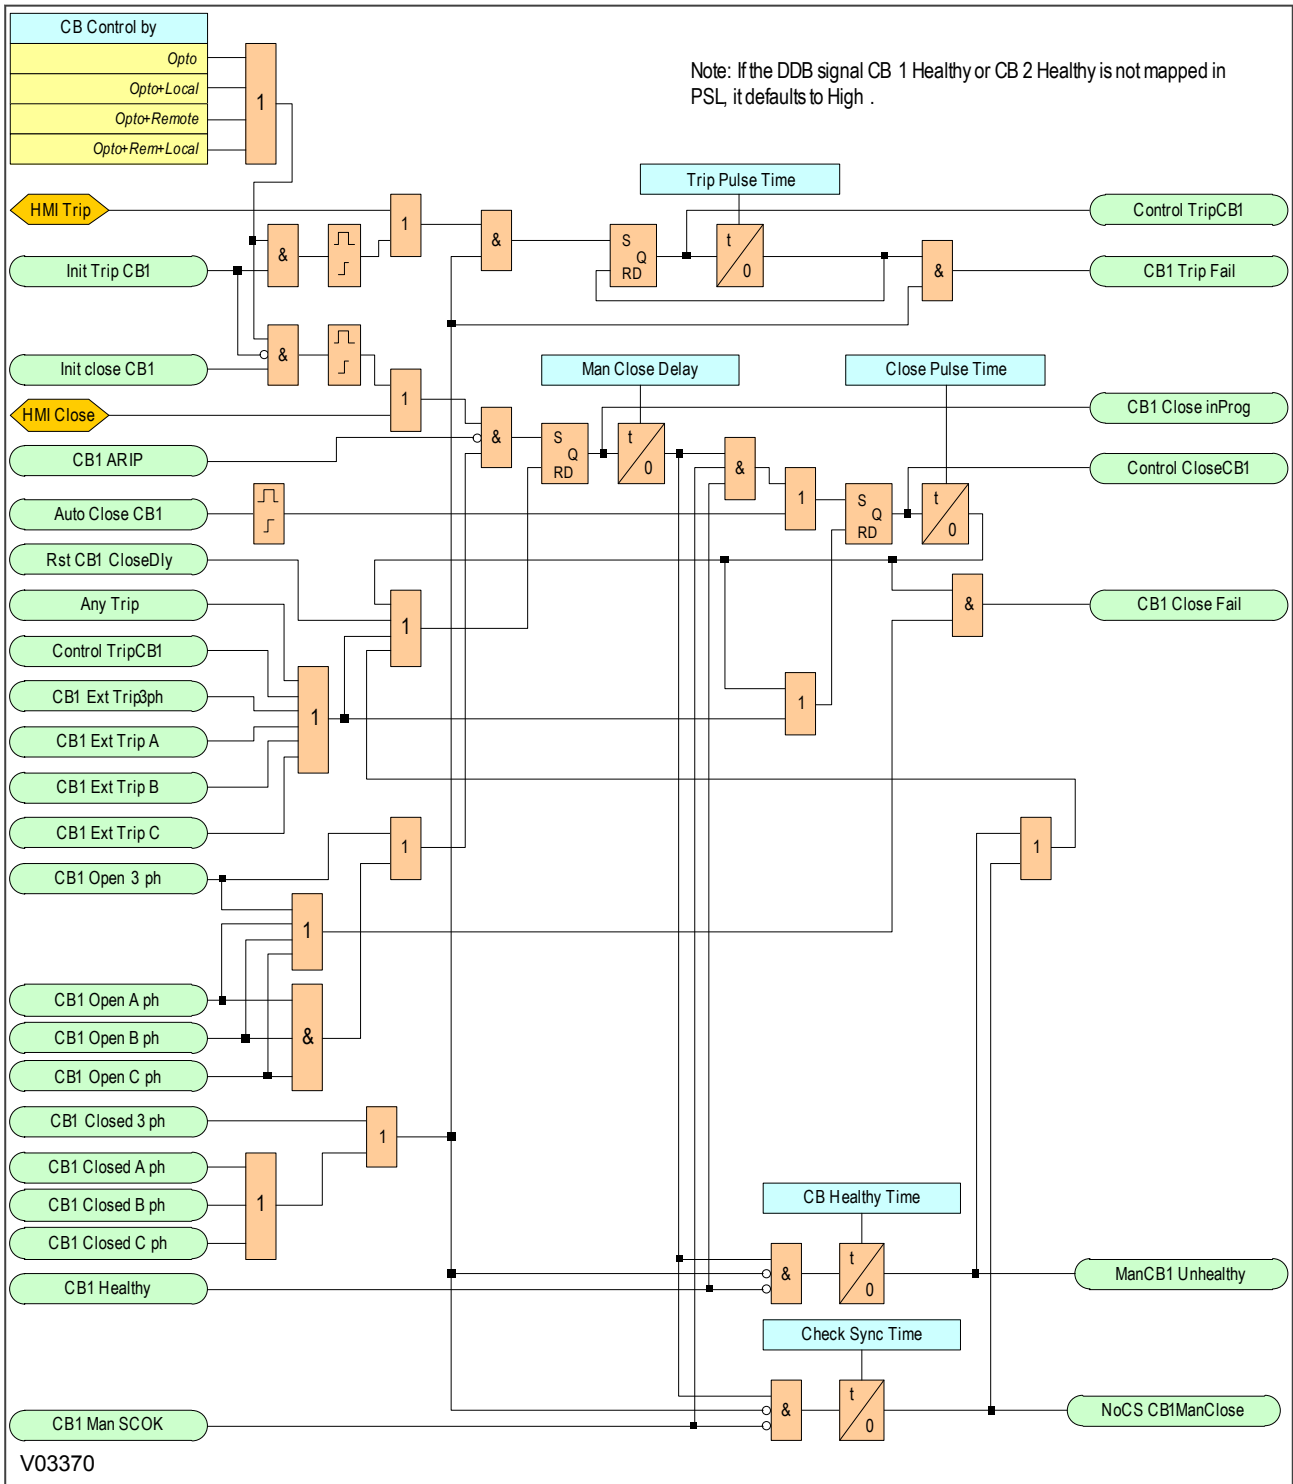


Figure 77: CB1 Control Logic (Module 43)

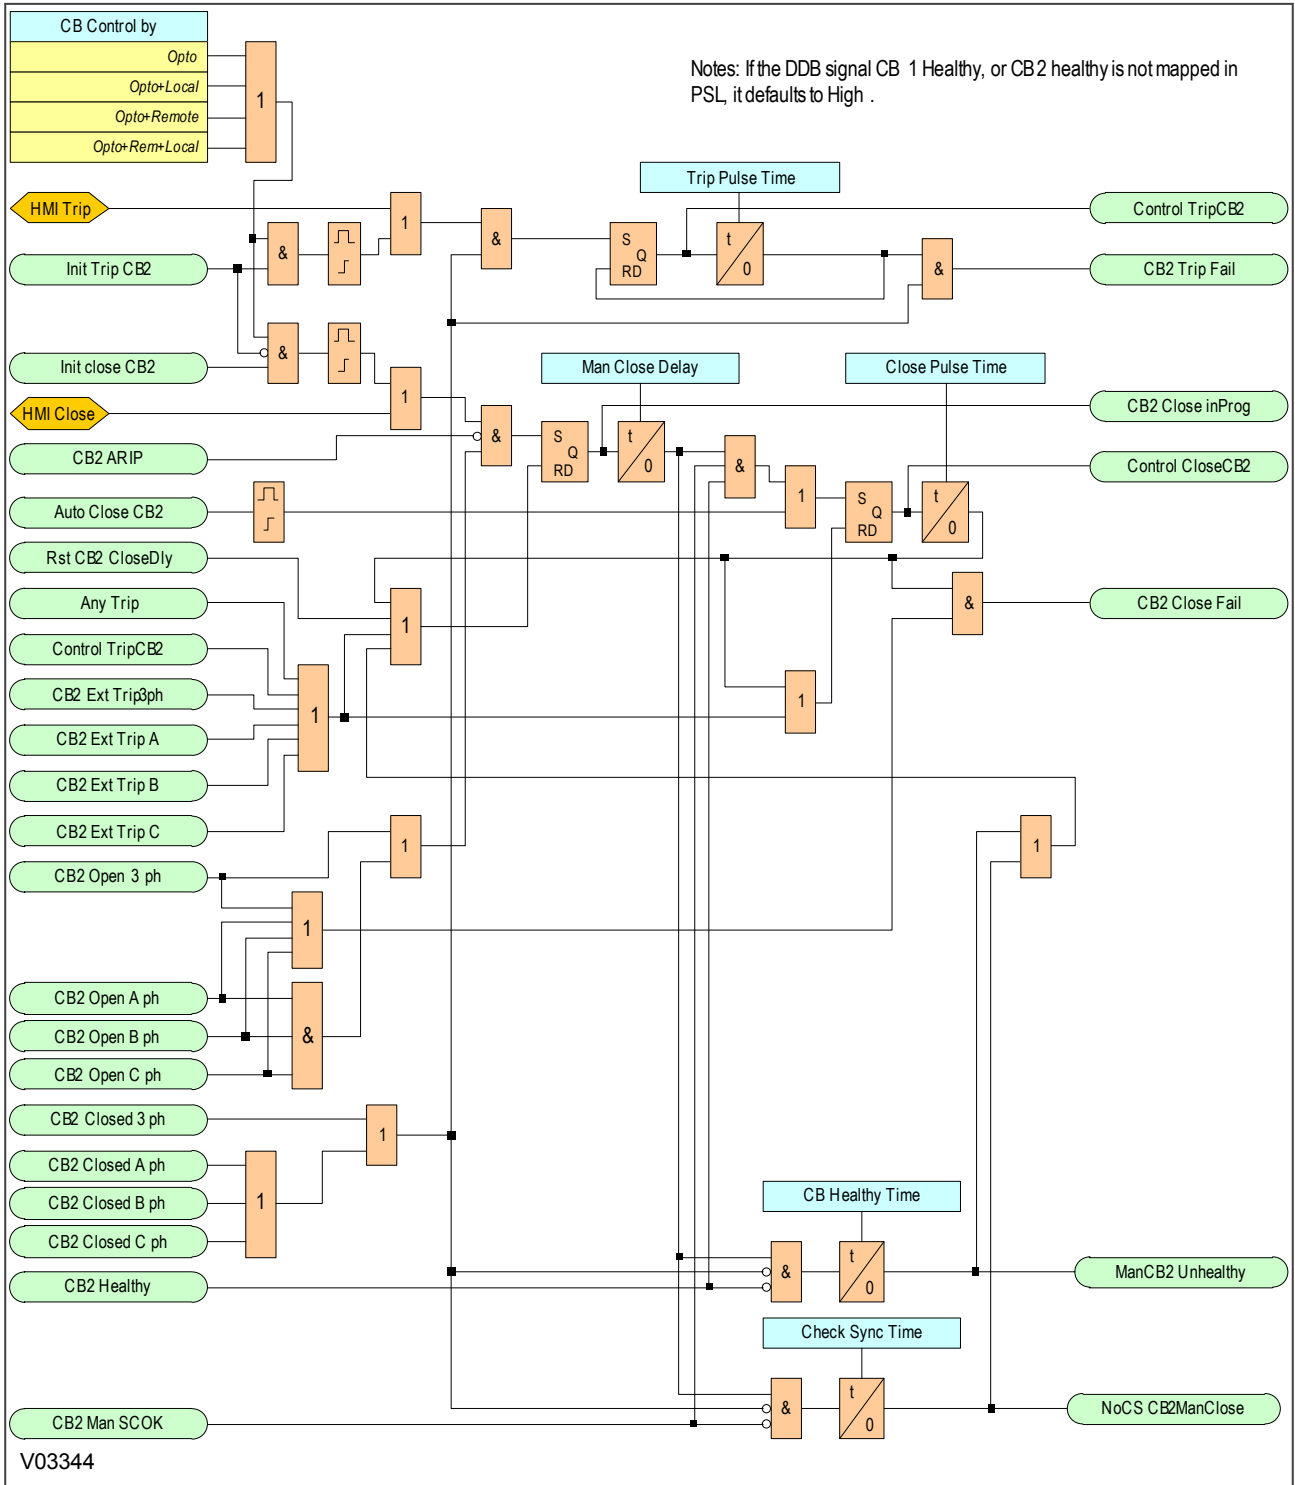


Figure 78: CB2 Control Logic (Module 44)

5.18 CIRCUIT BREAKER TRIP TIME MONITORING

The circuit breaker trip time monitoring logic checks for correct circuit breaker tripping following the issue of a protection trip signal. When the protection trip signal is issued, a timer controlled by the **Trip Pulse Time** setting in the **CB CONTROL** column is started.

If the circuit breaker trips correctly the timer resets. If Autoreclose is enabled and the timer resets, the cycle continues. If the circuit breaker fails to trip correctly within the set time, the Autoreclose cycle is forced to lock out and a signal is issued indicating that the circuit breaker failed to trip in response to the protection operation.

5.18.1 CB TRIP TIME MONITORING LOGIC DIAGRAM

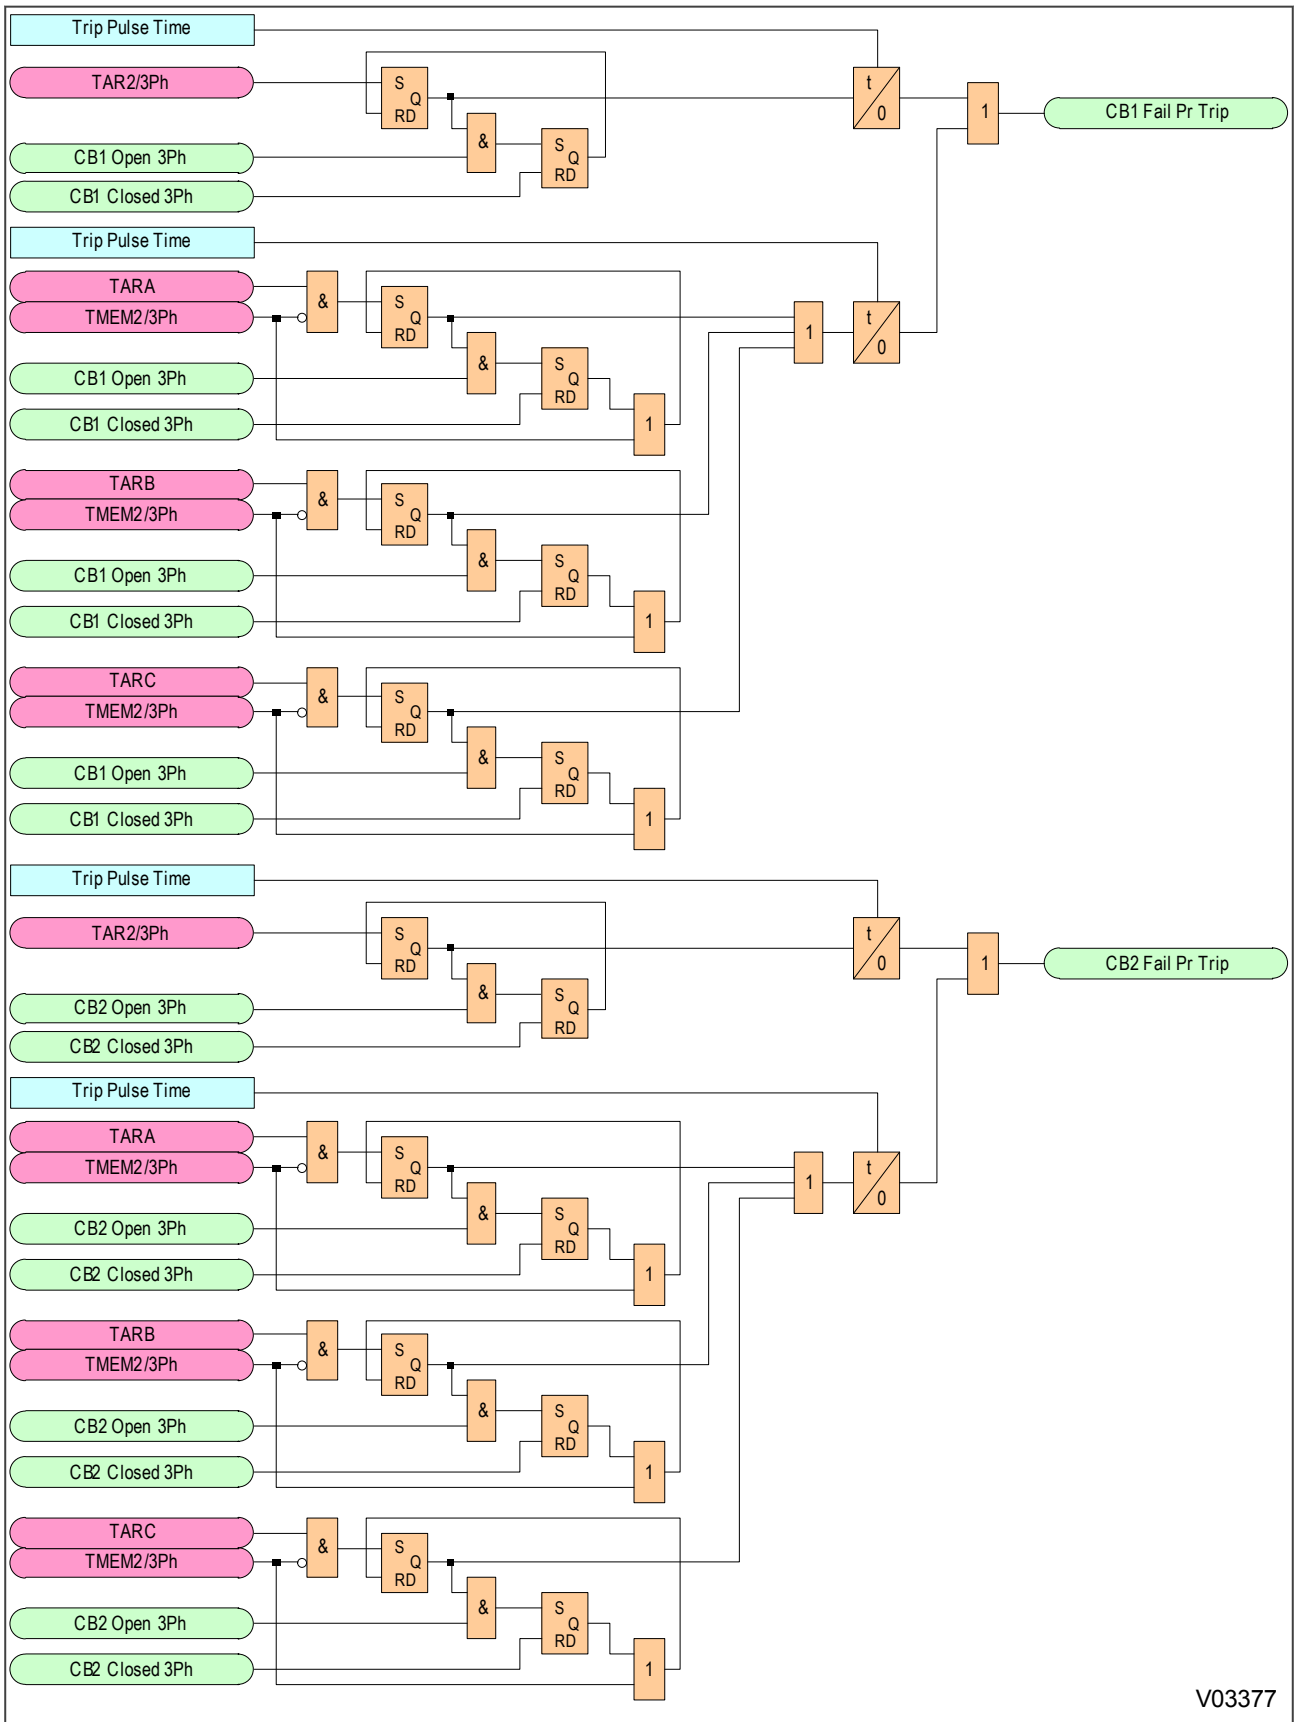


Figure 79: Circuit Breaker Trip Time Monitoring logic diagram (Modules 53 & 54)

5.19 AUTORECLOSE LOCKOUT

A number of events will cause Autoreclose lockout. If this happens an Autoreclose lockout alarm is raised. In this condition, Autoreclose cannot be initiated until the corresponding lockout has been reset.

The following events force Autoreclose lockout:

- Protection operation during reclaim time. Following the final Autoreclose attempt, if the protection operates during the reclaim time, the AR cycle goes to AR lockout and the Autoreclose function is disabled until the AR lockout condition is reset.
- Persistent fault. A fault is considered persistent if the protection re-operates after the last permitted shot.
- Block Autoreclose. If the block Autoreclose DDB is asserted whilst Autoreclose is in progress, the cycle goes to lockout.
- Protection function selection. Setting 'Block AR' against a particular protection function in the AUTORECLOSE column means that operation of the protection will block Autoreclose and force lockout.
- Circuit breaker failure to close. If a circuit breaker fails to close Autoreclose is blocked and forced to lockout.
- Circuit breaker remains open at the end of the reclaim time. An Autoreclose lockout is forced if the circuit breaker is open at the end of the reclaim time.
- Circuit breaker fails to close when the close command is issued.
- Circuit breaker fails to trip correctly.
- Three-phase dead time started by 'line dead' violation. If the line does not go dead within the **Dead Line Time** setting, the logic forces the Autoreclose sequence to lockout. Determination of when to start the timer is made in the **3PDTStart WhenLD** setting.
- Block Follower if Leader fails to close is set. If the setting **BF if Lfail CIs** in the AUTORECLOSE column is set to *Enable*, the active Follower circuit breaker will lockout if the Leader circuit breaker fails to reclose.
- Leader/Follower invalid selection using opto-isolated input. If the Leader/Follower Autoreclose mode in the AUTORECLOSE settings is set to be selected using the opto-isolated inputs, then if the logic detects an invalid Autoreclose mode combination, it forces both circuit breakers to lockout if a trip occurs.

5.19.1 CB LOCKOUT LOGIC DIAGRAM

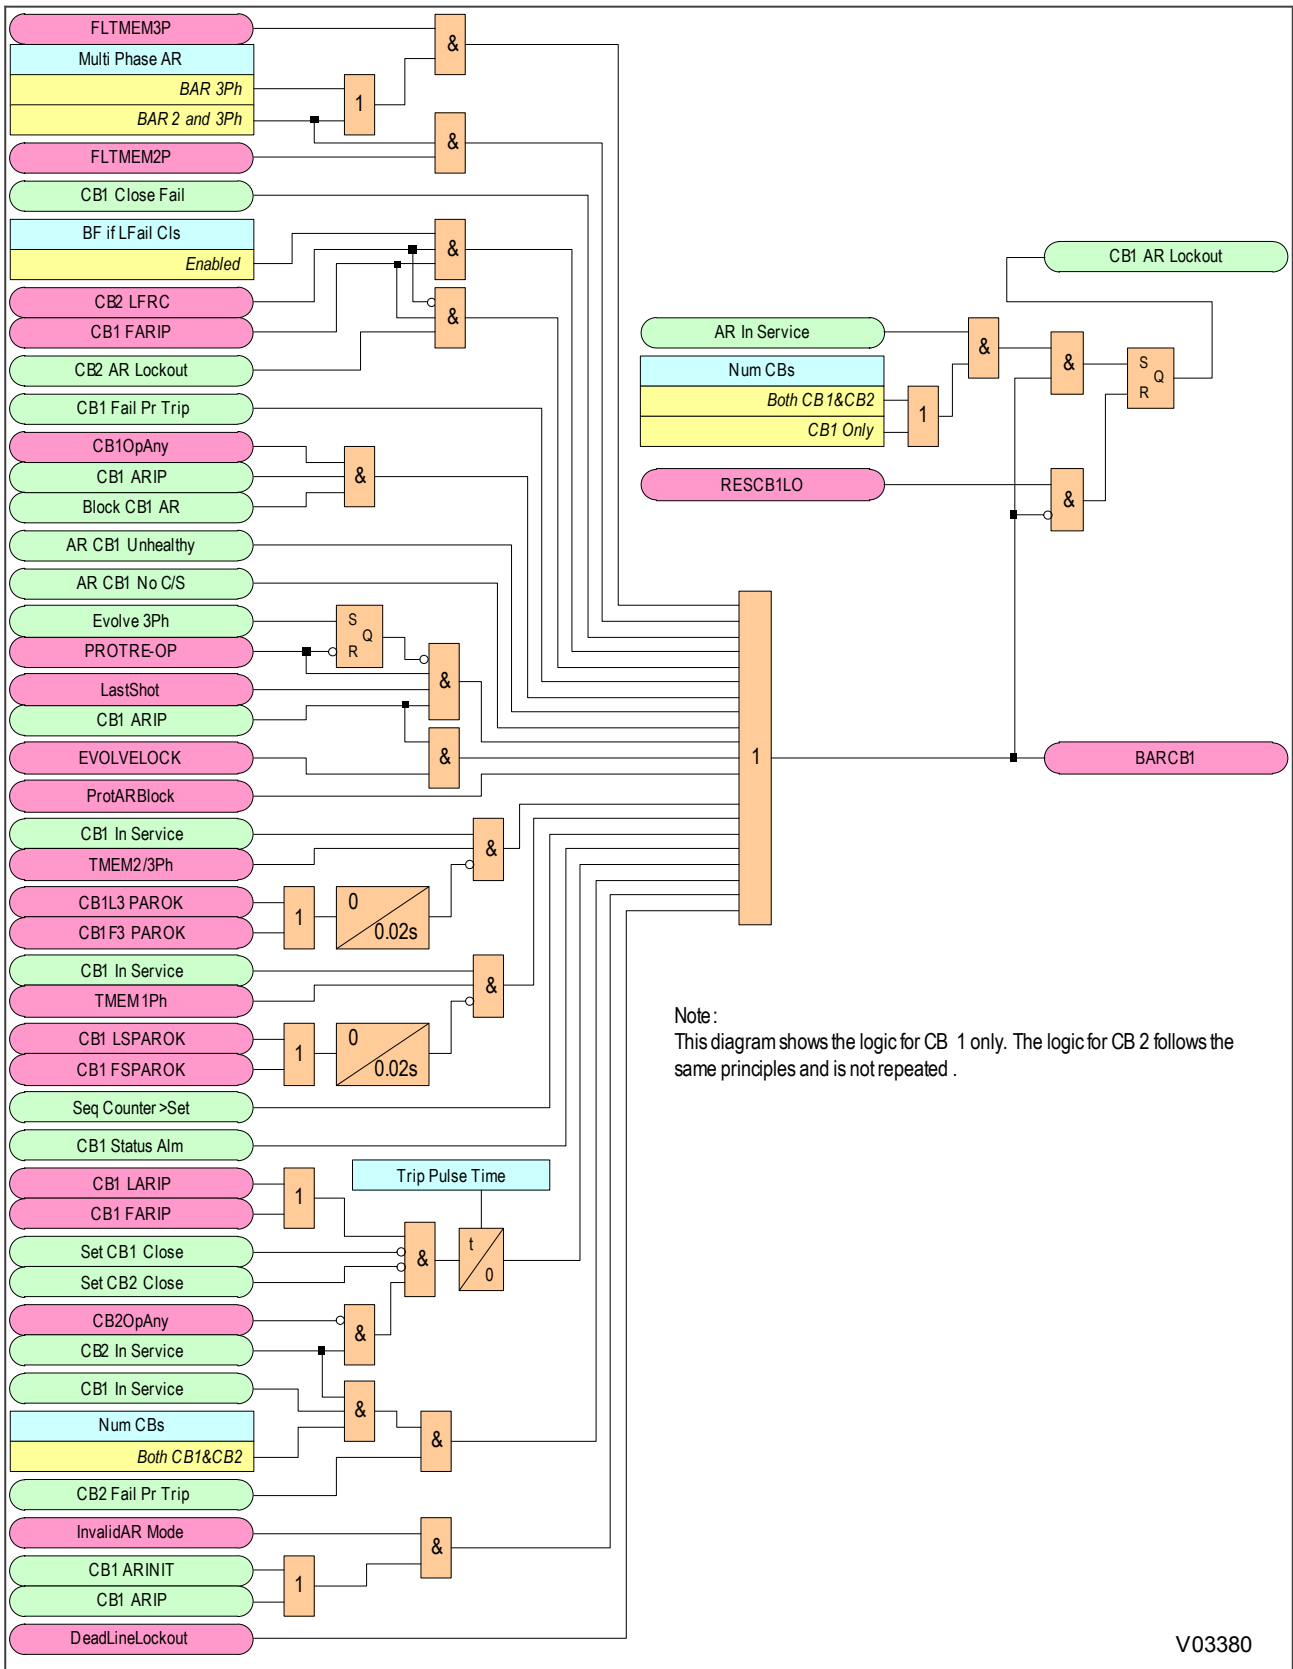


Figure 80: CB1 Lockout Logic Diagram (Module 55)

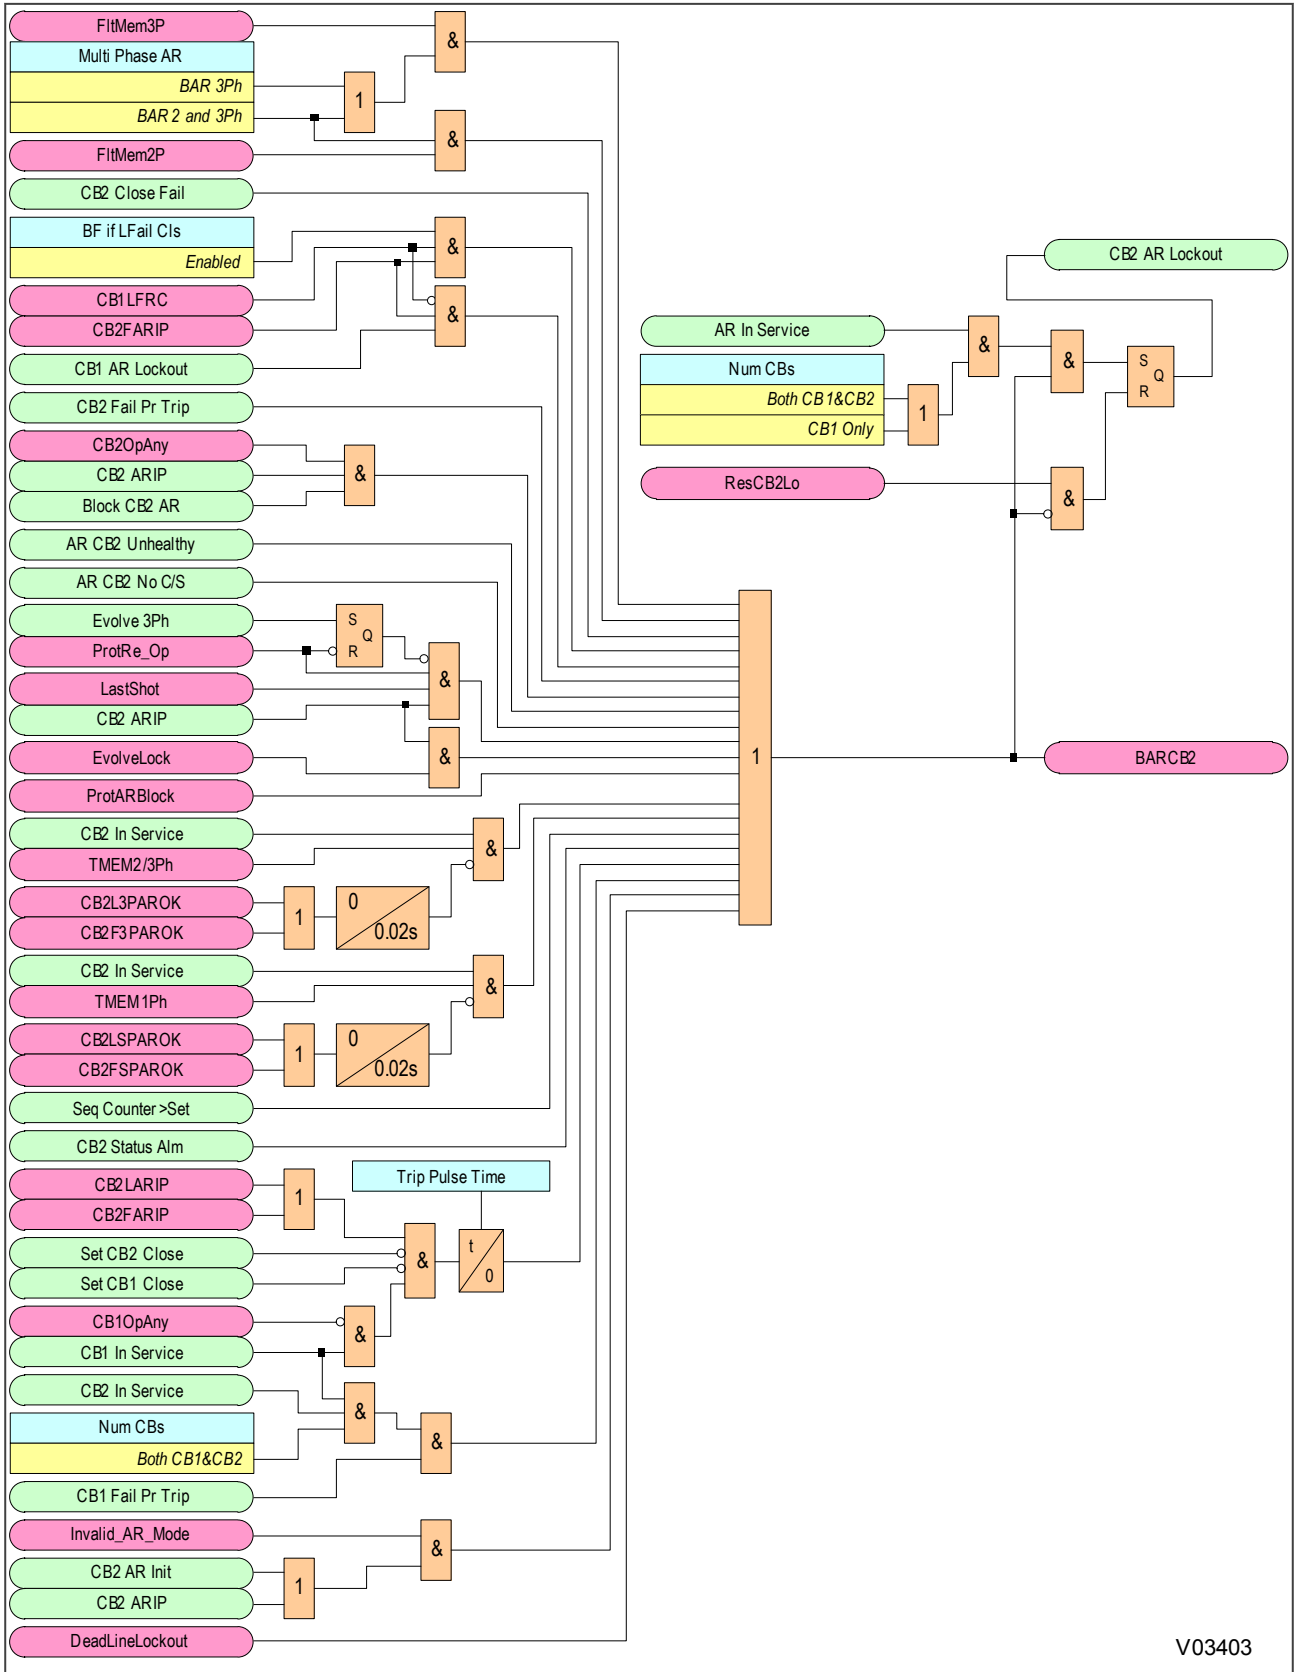


Figure 81: CB2 Lockout Logic Diagram (Module 56)

5.20 RESET CIRCUIT BREAKER LOCKOUT

Lockout conditions caused by the circuit breaker condition monitoring functions can be reset according to the condition of the **Rst CB mon LO** by setting found in the *CB CONTROL* column. There are two options; *CB Close* and *User interface*.

If set to *CB Close*, a timer setting, **CB mon LO RstDly**, becomes visible. When the circuit breaker closes, the **CB mon LO RstDly** time starts. The lockout is reset when the timer expires.

If set to *User Interface* then a command, **CB mon LO reset**, becomes visible. This command can be used to reset the lockout from a user interface.

An Autoreclose lockout generates an Autoreclose lockout alarm. Autoreclose lockout conditions can be reset by various commands and setting options found under the *CB CONTROL* column.

If **Res LO by CB IS** is set to *Enabled*, a lockout is reset if the circuit breaker is successfully closed manually. For this, the circuit breaker must remain closed long enough so that it enters the "In Service" state.


If **Res LO by UI** is set to *Enabled*, the circuit breaker lockout can be reset from a user interface using the reset circuit breaker lockout command in the *CB CONTROL* column.

If **Res LO by NoAR** is set to *Enabled*, the circuit breaker lockout can be reset by temporarily generating an **AR disabled** signal.

If **Res LO by TDelay** is set to *Enabled*, the circuit breaker lockout is automatically reset after a time delay set in the **LO Reset Time** setting.

If **Res LO by ExtDDB** is *Enabled*, the circuit breaker lockout can be reset by activation of an external input mapped in the PSL to the relevant reset lockout DDB signal.

5.20.1 RESET CB LOCKOUT LOGIC DIAGRAM

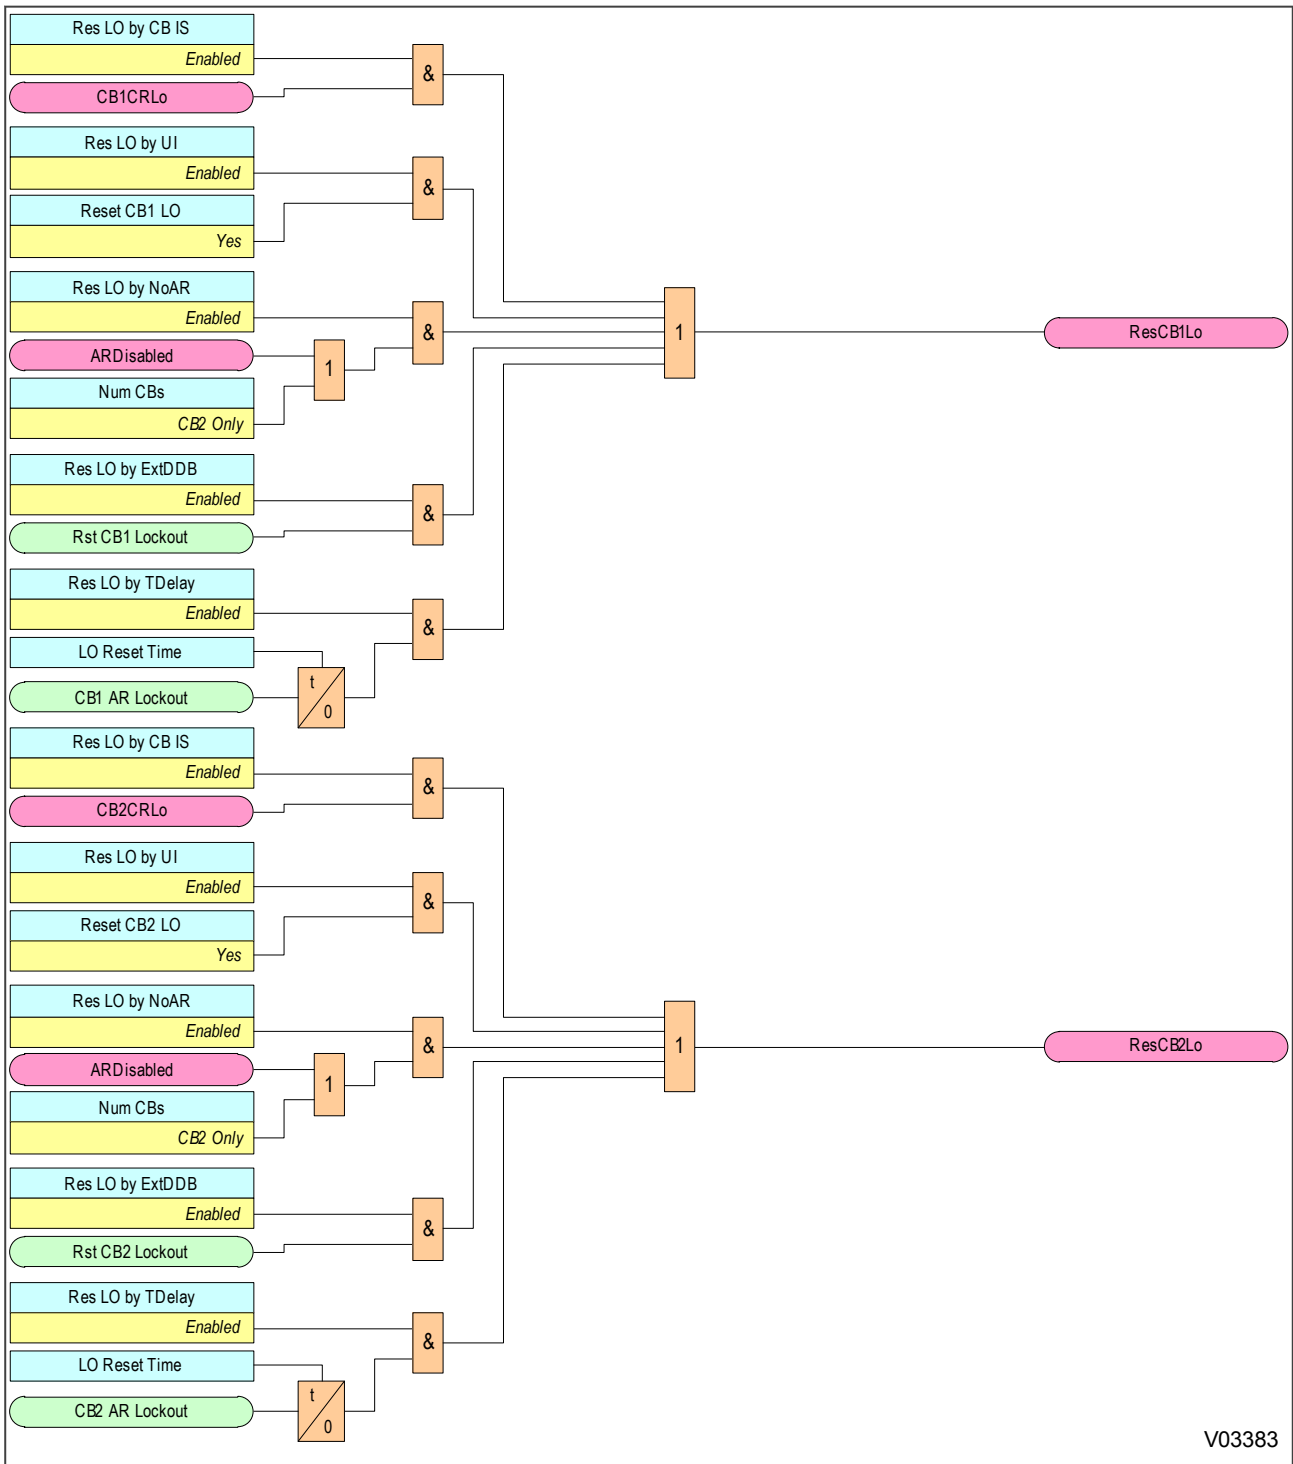

V03383

Figure 82: Reset Circuit Breaker Lockout Logic Diagram (Modules 57 & 58)

5.21 POLE DISCREPANCY

In a three-pole CB, certain combinations of poles open and closed are indicative of a problem. The Pole Discrepancy Logic combines an indication of a Pole Discrepancy condition from the CB Monitoring logic with signals from the internal Autoreclose logic to produce a combined Pole Discrepancy indication for the CB.

5.21.1 POLE DISCREPANCY LOGIC DIAGRAM

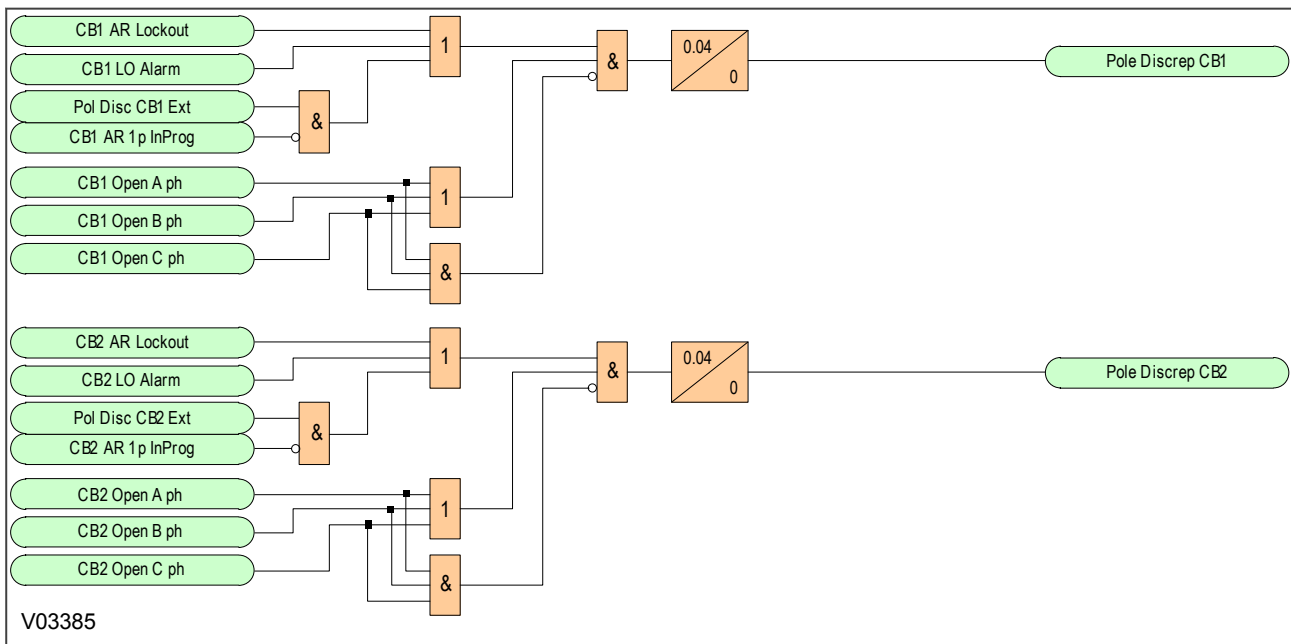


Figure 83: Pole Discrepancy Logic Diagram (Module 62)

5.22 CIRCUIT BREAKER TRIP CONVERSION

Circuit breakers should only trip single-pole or three-pole. The trip conversion logic ensures that the tripping is either single-pole or three-pole. The trip conversion logic ensures that all conditions that should cause three-pole tripping do so. Indication of the number of phases that caused tripping is provided.

5.22.1 CB TRIP CONVERSION LOGIC DIAGRAM

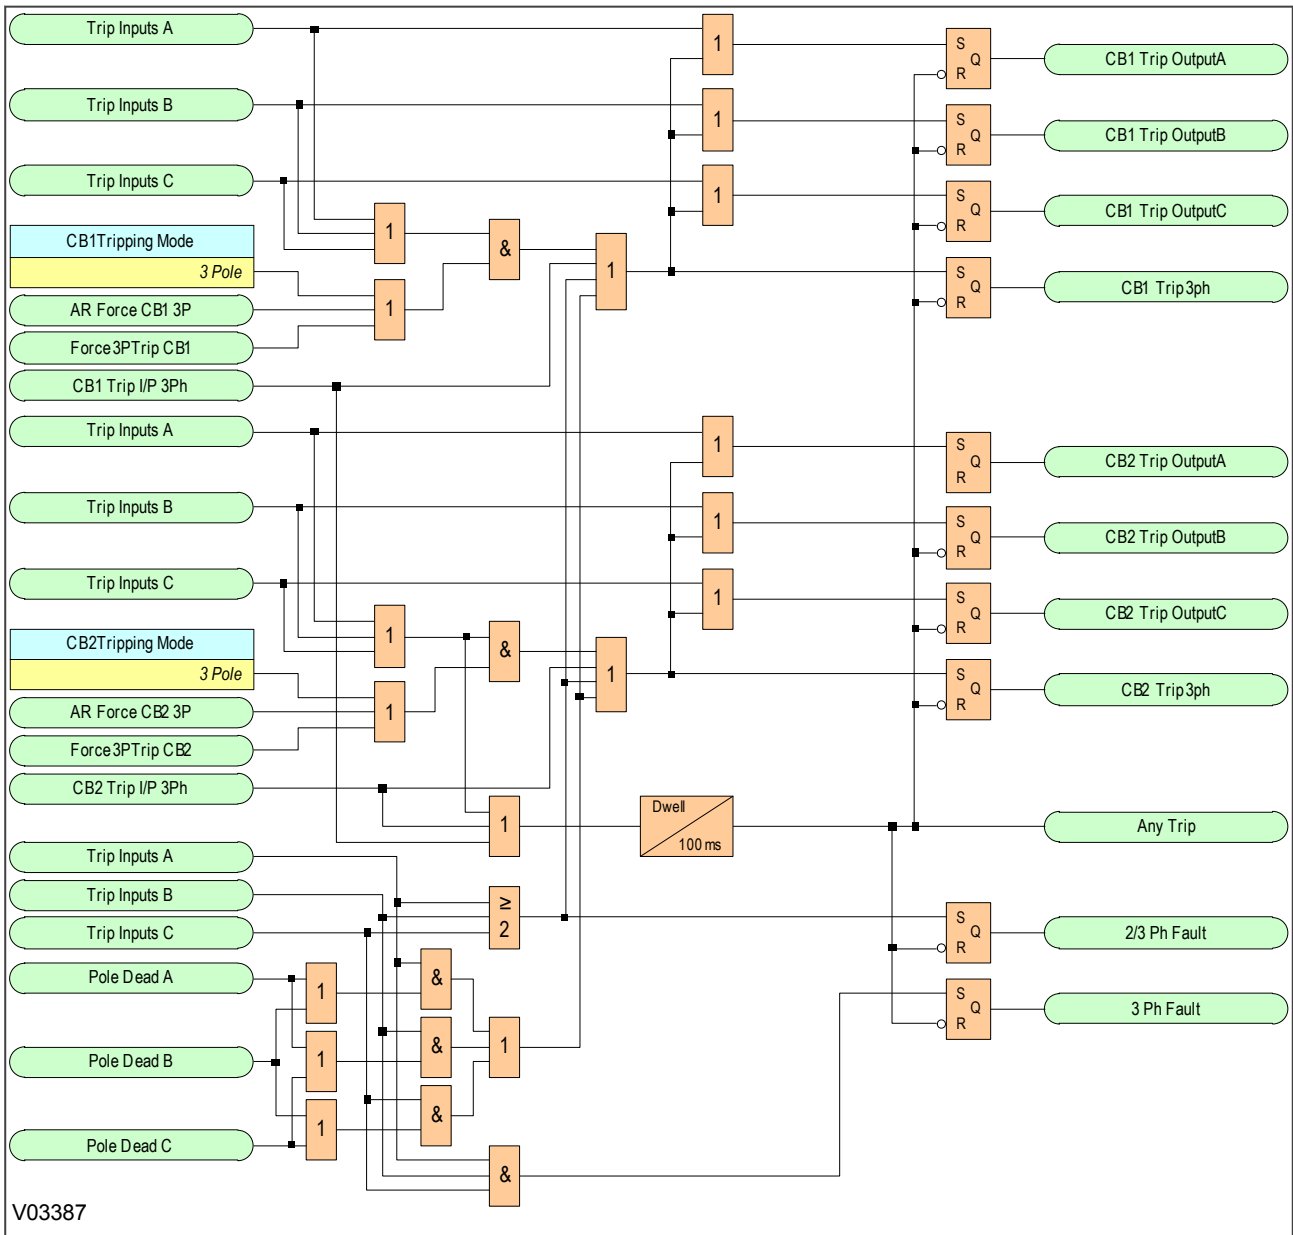


Figure 84: Circuit Breaker Trip Conversion Logic Diagram (Module 63)

5.23 MONITOR CHECKS FOR CB CLOSURE

For single-phase Autoreclose neither voltage nor synchronisation checks are needed as synchronising power should be flowing in the two healthy phases. For three-phase Autoreclose, for the first shot (and only the first shot), you can choose to attempt reclosure without performing a synchronisation check. The setting to permit Autoreclose without checking synchronising conditions is **CB SC Shot 1**.

Otherwise, synchronising checks on voltages, relative frequencies, and relative phase angles are needed to ensure that sympathetic conditions exist before CB closure is attempted.

The following diagrams detail the Monitor Checks for CB closure.

5.23.1 VOLTAGE MONITOR FOR CB CLOSURE

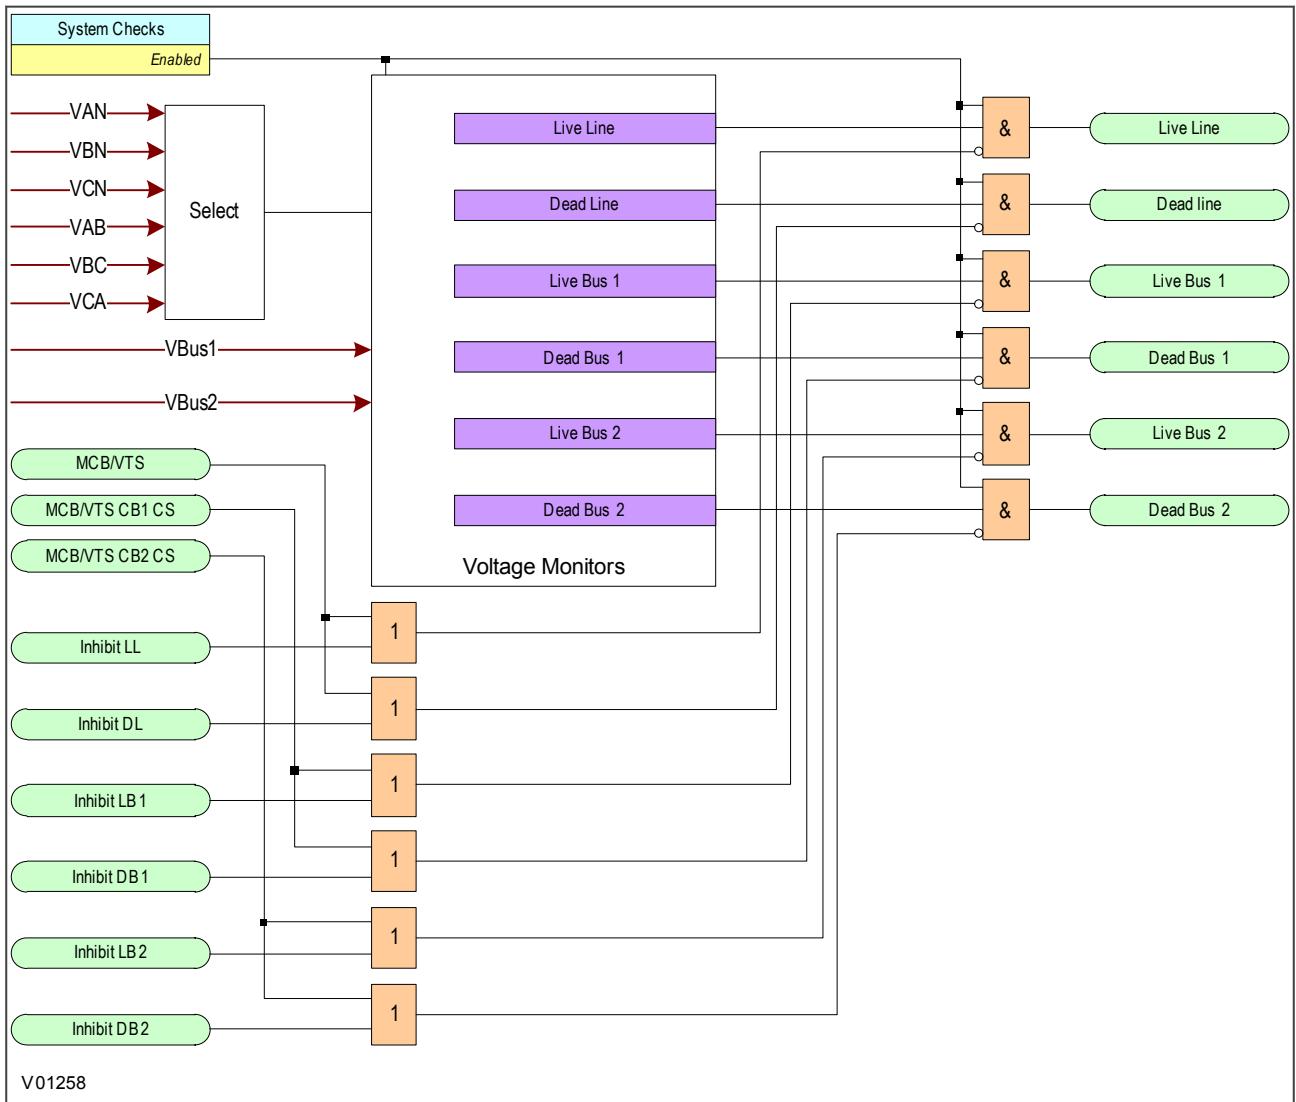


Figure 85: Voltage Monitor for CB Closure (Module 59)

5.23.2 CHECK SYNCHRONISATION MONITOR FOR CB CLOSURE

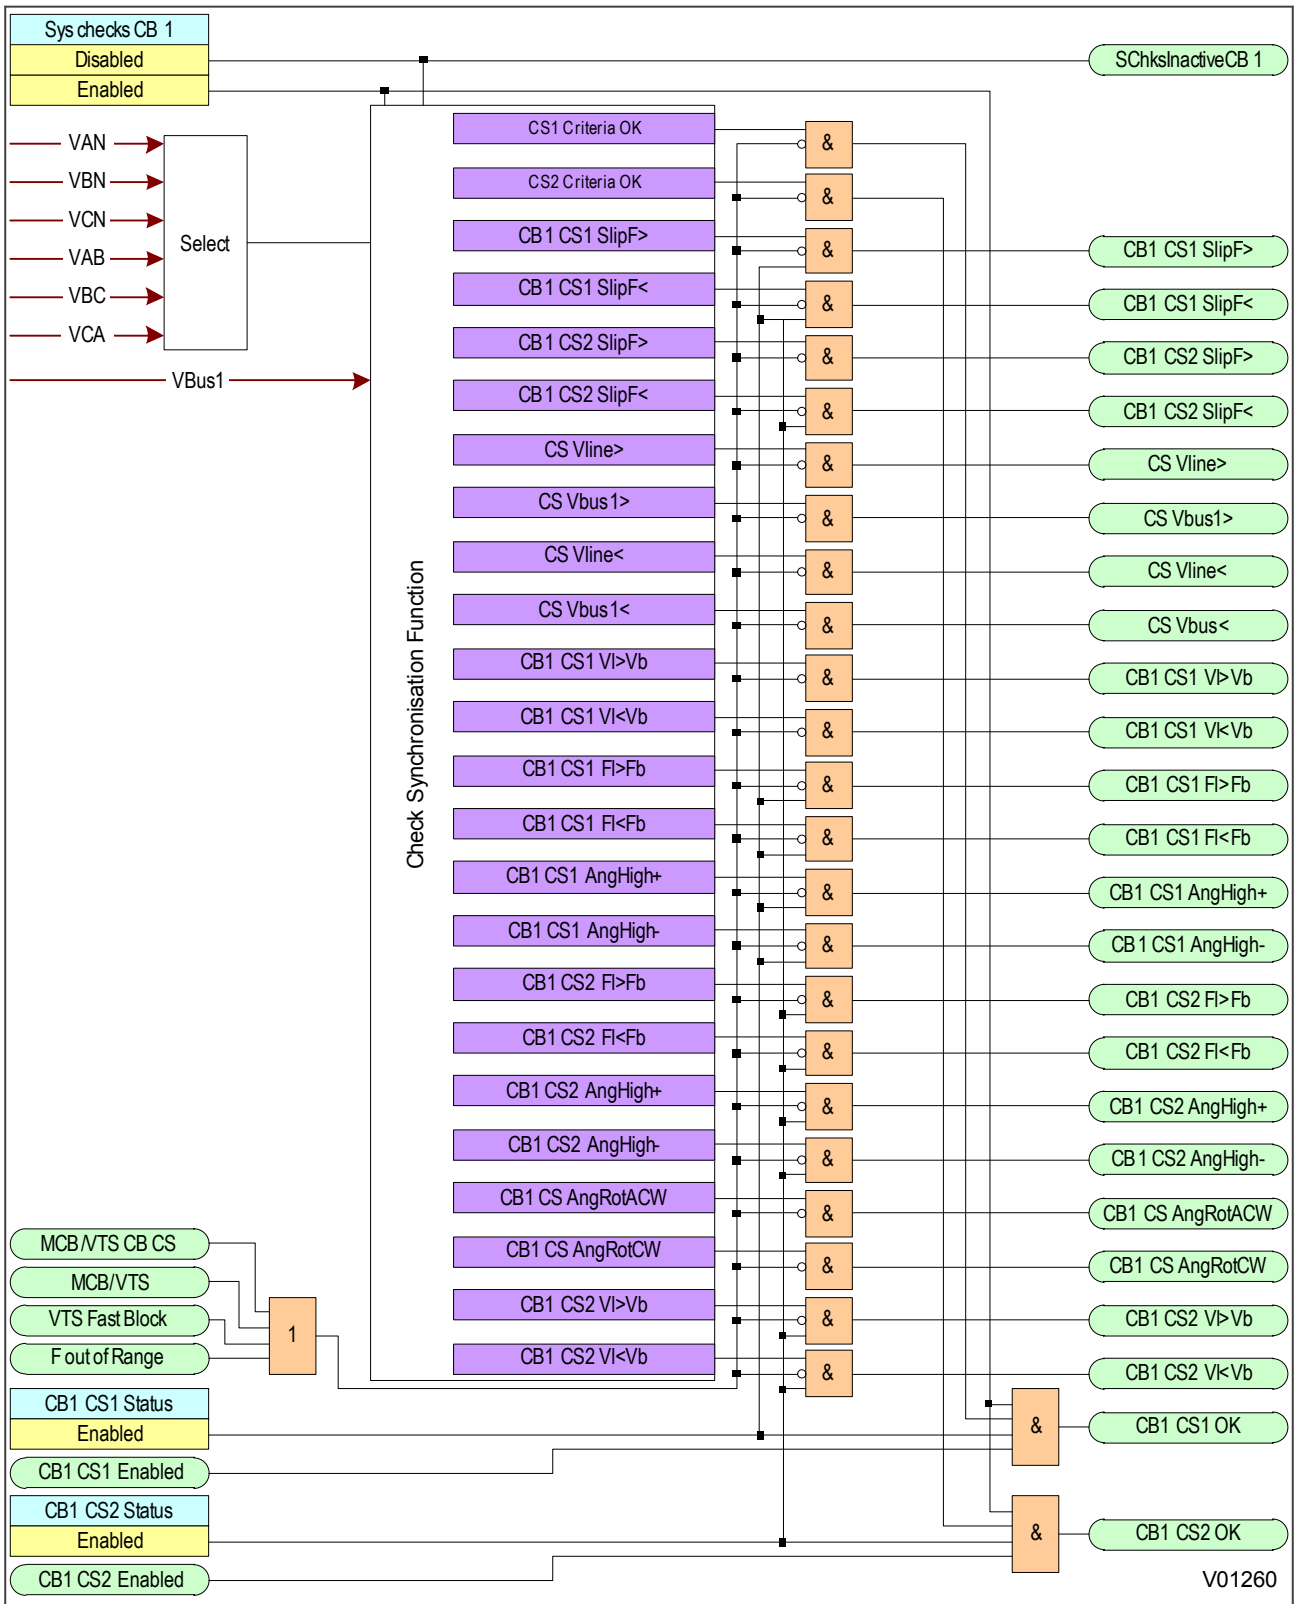


Figure 86: Check Synchronisation Monitor for CB1 closure (Module 60)

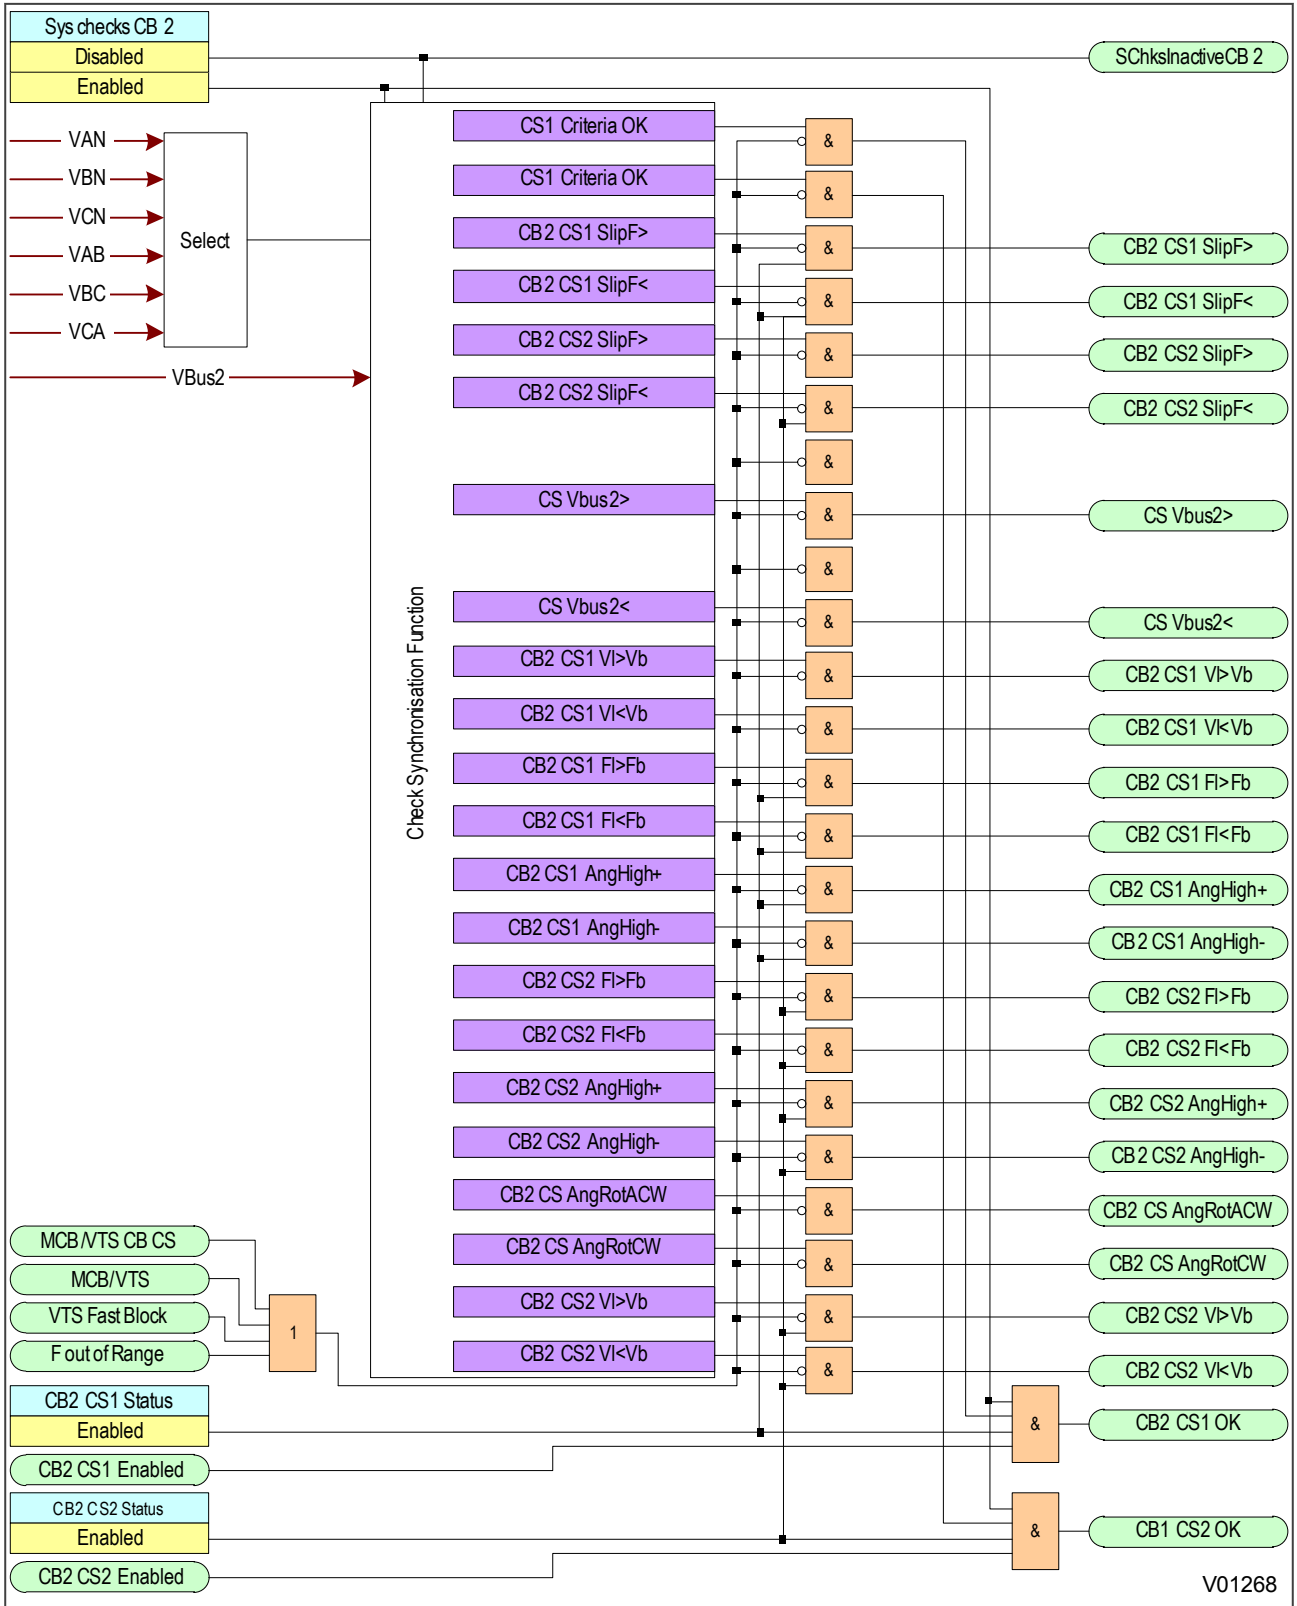


Figure 87: Check Synchronisation Monitor for CB2 closure (Module 61)

5.24 SYNCHRONISATION CHECKS FOR CB CLOSURE

Logical checking of the outputs from the CB closure monitors is performed to generate signals to indicate that it is OK to close circuit breakers.

Signals are provided to indicate that manual CB closure conditions are OK (**CB Man SCOK**), as are signals to indicate that automatic CB closure conditions are OK (**CB SCOK** and **CB Fast SCOK**). The **CB Fast SCOK** signal allows CB autoreclosure without waiting for the Dead Time to expire.

For single-phase Autoreclose no voltage or synchronism check is required as synchronising power is flowing in the two healthy phases. Three-phase Autoreclose can be performed without checking that voltages are in synchronism for the first shot (and only the first shot). The settings to permit Autoreclose without checking voltage synchronism on the first shot are:

- **CB1L SC Shot 1** for circuit breaker 1 as a leader,
- **CB1F SC Shot 1** for circuit breaker 1 as a follower,
- **CB2L SC Shot 1** for circuit breaker 2 as a leader,
- **CB2L SC Shot 1** for circuit breaker 2 as a follower.

When the circuit breaker has closed, the Autoreclose function asserts a DDB signal **Set CB1 Close**, which indicates that an attempt has been made to close the circuit breaker. At this point, the Reclaim Time starts. If the circuit breaker remains closed after the reclaim timer expires, the Autoreclose cycle is complete, and signals are generated to indicate that Autoreclose was successful. These are:

- **CB1 Succ 1P AR** (Single-phase Autoreclose CB1)
- **CB2 Succ 1P AR** (Single-phase Autoreclose CB2)
- **CB1 Succ 3P AR** (Three-phase Autoreclose CB1)
- **CB2 Succ 3P AR** (Three-phase Autoreclose CB2)

These signals increment the relevant circuit breaker successful Autoreclose shot counters, as well as resetting the Autoreclose in progress signal.

The relevant circuit breaker successful Autoreclose shot counters are:

- **CB1 SUCC SPAR** (Single-phase Autoreclose CB1)
- CB1 SUCC 3PAR Shot1 (Three-phase Autoreclose CB1, Shot 1)
- CB1 SUCC 3PAR Shot2 (Three-phase Autoreclose CB1, Shot 2)
- CB1 SUCC 3PAR Shot3 (Three-phase Autoreclose CB1, Shot 3)
- CB1 SUCC 3PAR Shot4 (Three-phase Autoreclose CB1, Shot 4)
- **CB2 SUCC SPAR** (Single-phase Autoreclose CB2)
- CB2 SUCC 3PAR Shot1 (Three-phase Autoreclose CB2, Shot 1)
- CB2 SUCC 3PAR Shot2 (Three-phase Autoreclose CB2, Shot 2)
- CB2 SUCC 3PAR Shot3 (Three-phase Autoreclose CB2, Shot 3)
- CB1 SUCC 3PAR Shot4 (Three-phase Autoreclose CB2, Shot 4)

5.24.1 THREE-PHASE AUTORECLOSE LEADER CHECK LOGIC DIAGRAM

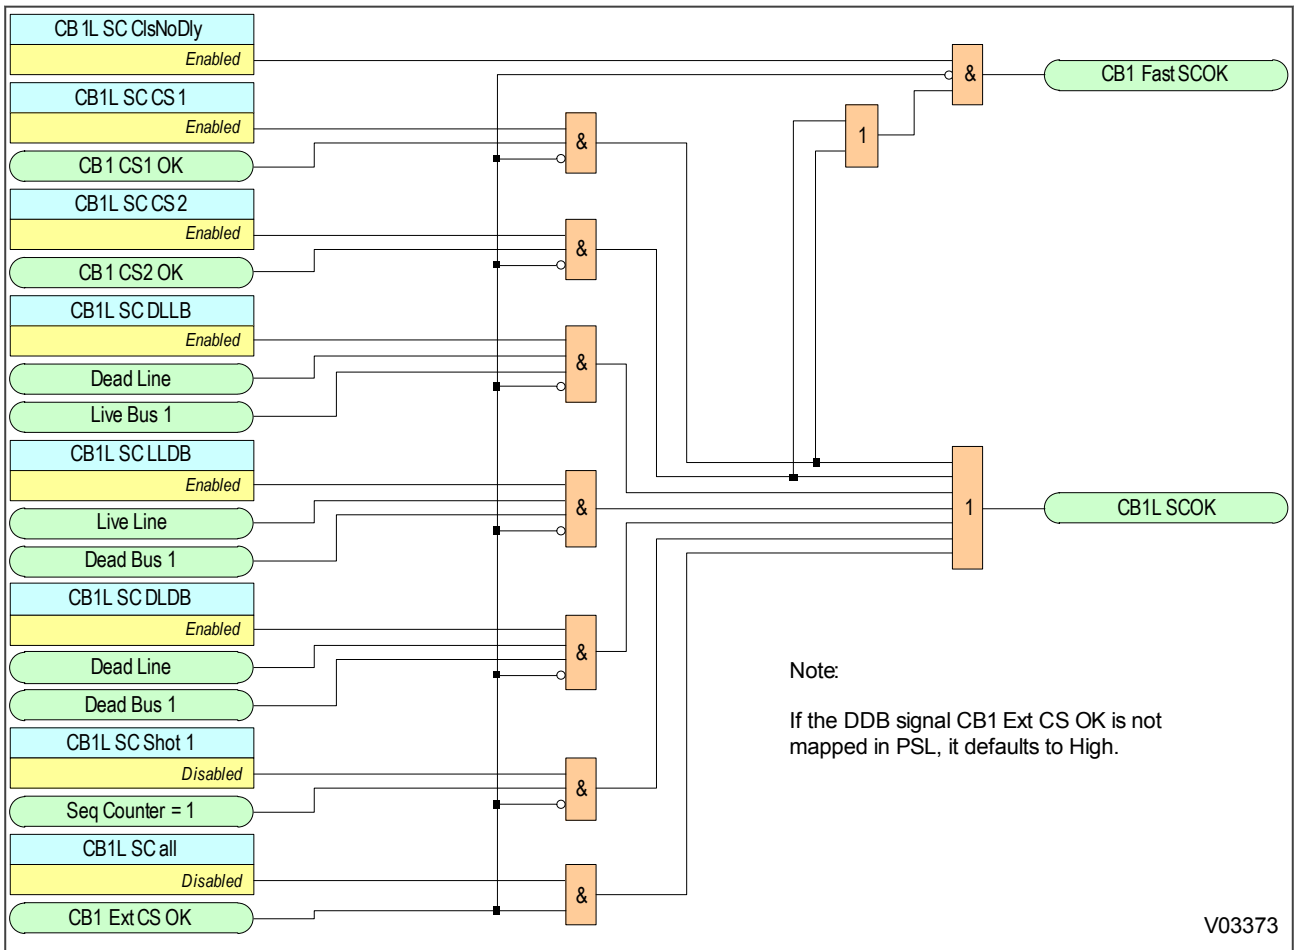


Figure 88: Three-phase AR System Check logic diagram for CB1 as leader (Module 45)

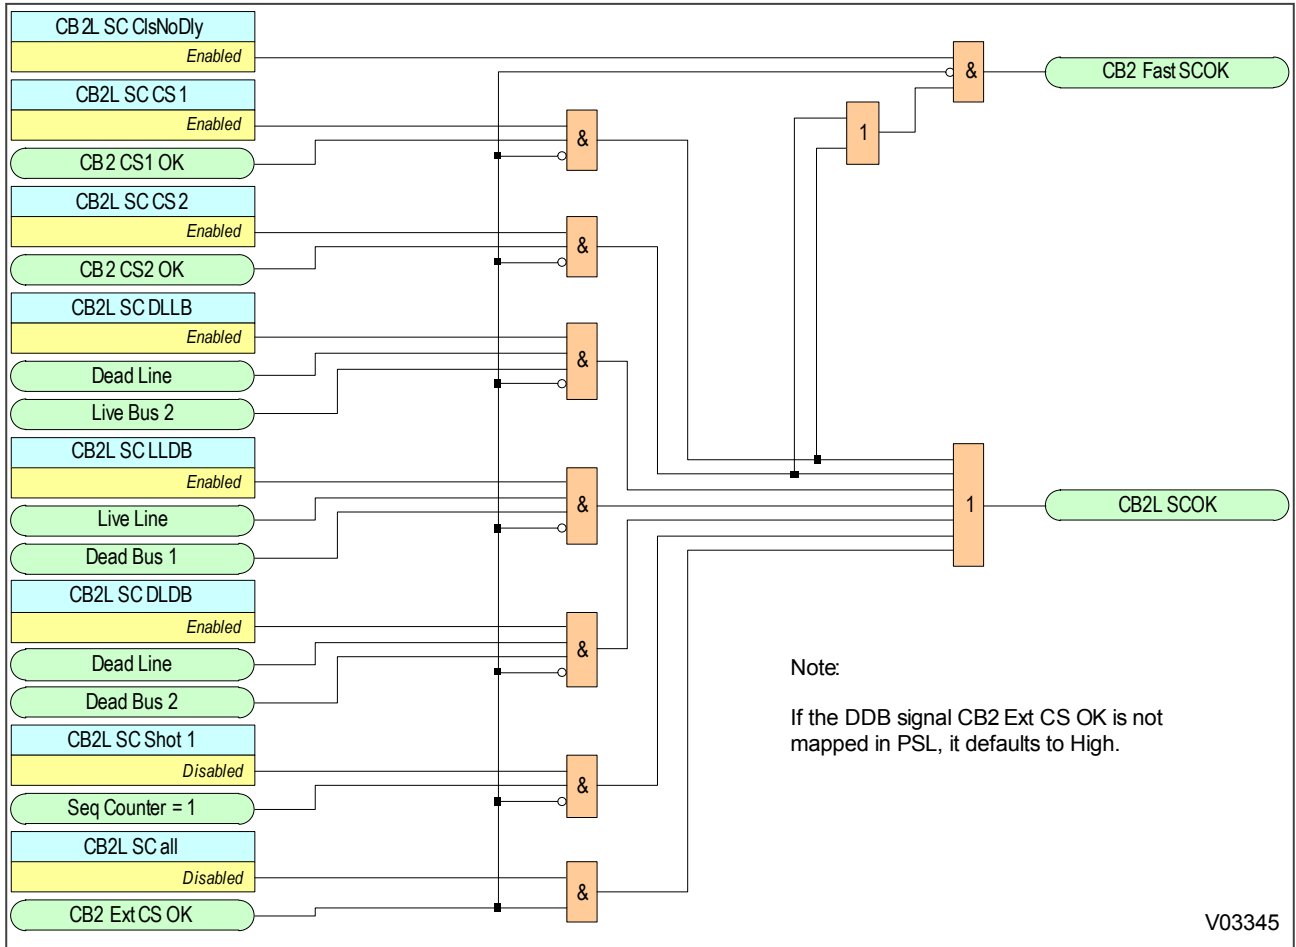


Figure 89: Three-phase AR System Check logic diagram for CB2 as leader (Module 46)

5.24.2 THREE-PHASE AUTORECLOSE FOLLOWER CHECK LOGIC DIAGRAM

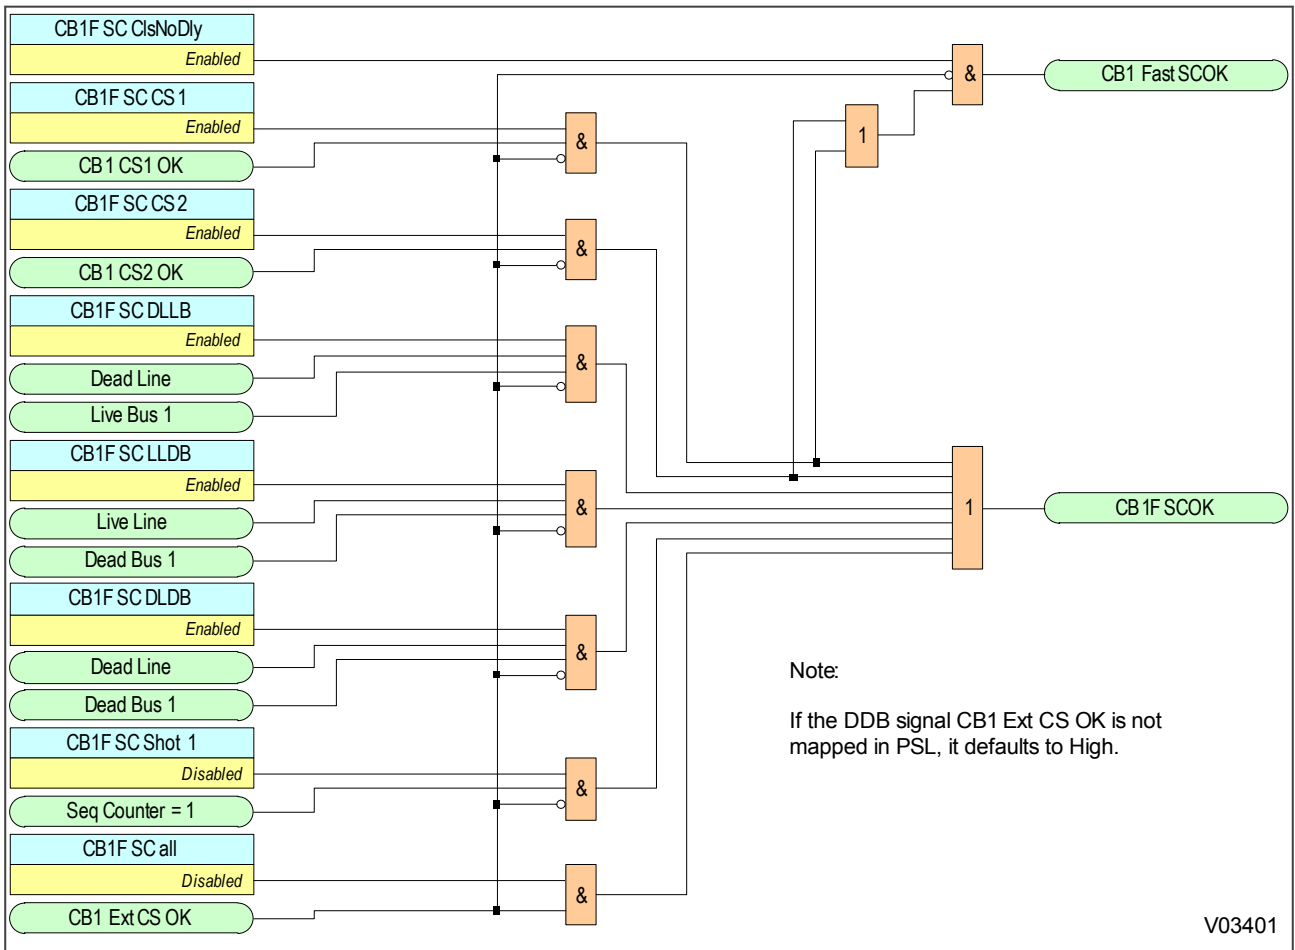


Figure 90: Three-phase AR System Check logic d for CB1 as follower (Module 47)

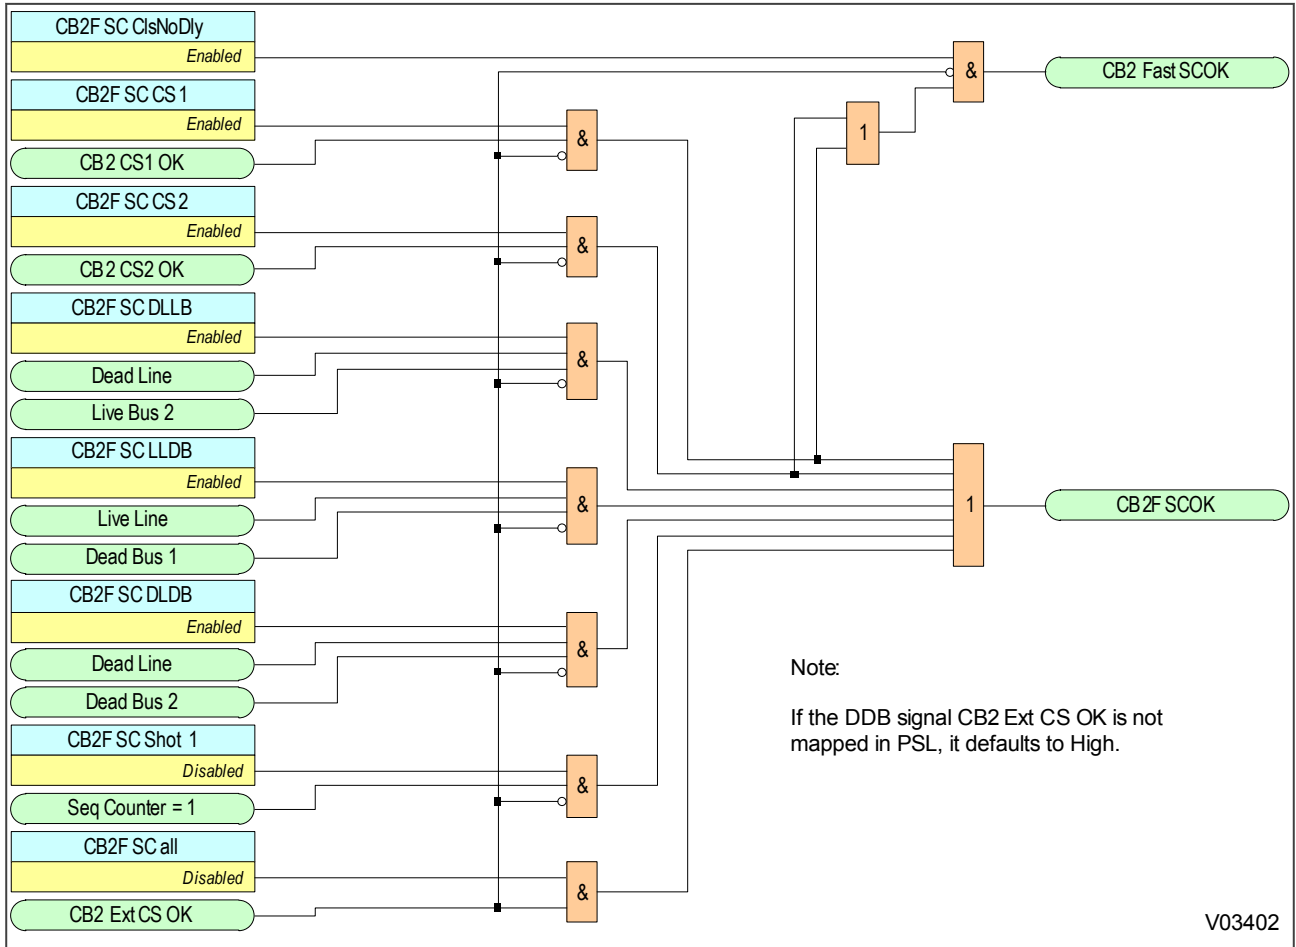


Figure 91: Three-phase AR System Check logic diagram for CB2 as follower (Module 48)

5.24.3 CB MANUAL CLOSE SYSTEM CHECK LOGIC DIAGRAM

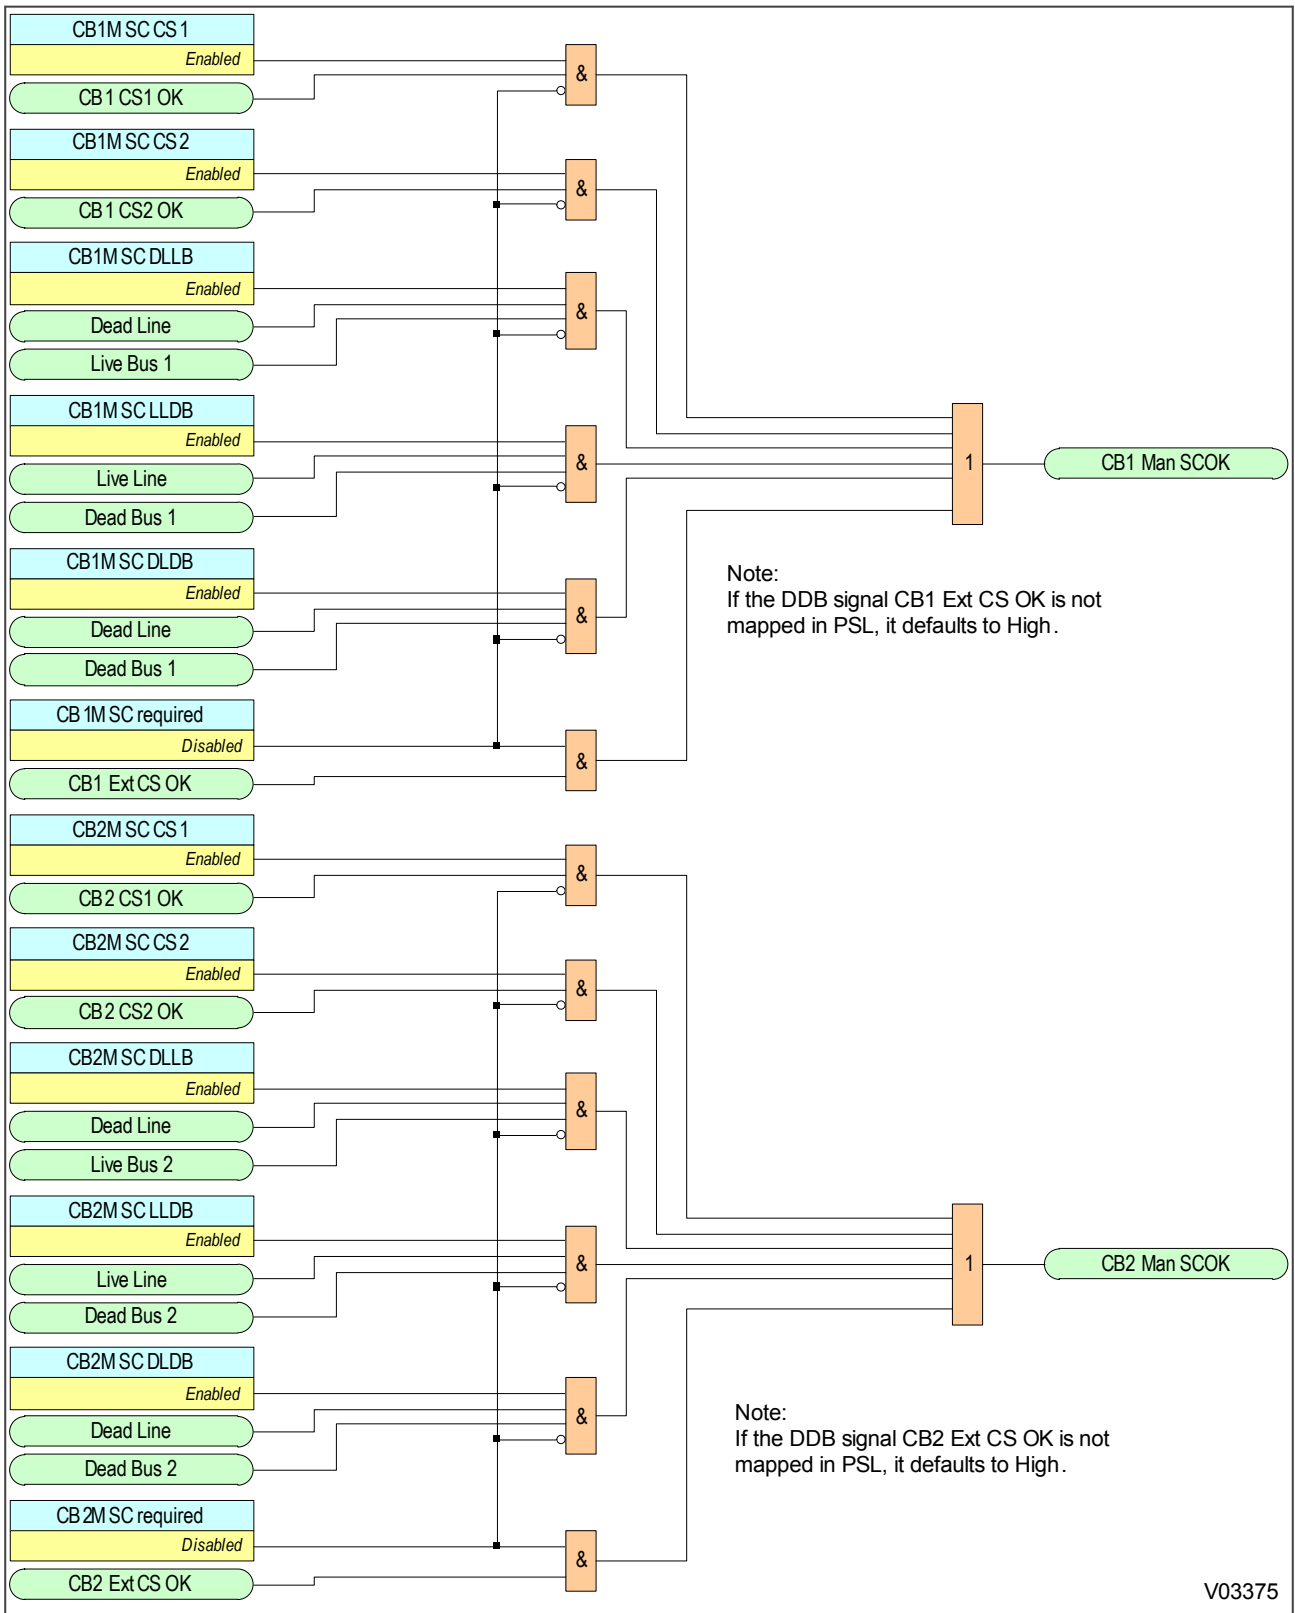


Figure 92: CB Manual Close System Check Logic Diagram (Modules 51 & 52)

6 SETTING GUIDELINES

6.1 DE-IONISING TIME GUIDANCE

The de-ionisation time of a fault arc depends on several factors such as circuit voltage, conductor spacing, fault current and duration, atmospheric conditions, wind speed and capacitive coupling from adjacent conductors. For this reason it is difficult to estimate the de-ionisation time. Circuit voltage is, generally the most significant factor and experience tells us that typical minimum de-ionising times for a three-phase fault are as follows:

- 66 kV: 100 ms
- 110 kV: 150 ms
- 132 kV: 170 ms
- 220 kV: 280 ms
- 275 kV: 300 ms
- 400 kV: 500 ms

Where single-pole high speed Autoreclose is used, the capacitive current induced between the healthy phases and the faulty phase tends to maintain the arc. This significantly increases the de-ionisation time and hence required dead time.

Single-pole Autoreclose is generally only used at transmission voltages. A typical de-ionisation time at 220 kV may be as high as 560 ms.

6.2 DEAD TIMER SETTING GUIDELINES

High speed Autoreclose may need to maintain stability on a network with two or more power sources. For high speed Autoreclose the system disturbance time should be minimised by using fast protection (typically <30 ms) and fast circuit breakers (typically <60 ms). For stability between two sources a system dead time of ≤300 ms may typically be required.

The minimum system dead time (considering just the circuit breaker) is the trip mechanism reset time plus the circuit breaker closing time.

The Autoreclose minimum dead time settings are governed primarily by two factors:

- Time taken for de-ionisation of the fault path
- Circuit breaker characteristics

It is essential that the protection fully resets during the dead time, so that correct time discrimination will be maintained after Autoreclose onto a fault. For high speed Autoreclose instantaneous reset of protection is required.

For highly interconnected systems synchronism is unlikely to be lost by the tripping out of a single line. Here the best policy may be to adopt longer dead times, to allow time for power swings resulting from the fault to settle.

6.2.1 EXAMPLE DEAD TIME CALCULATION

The following circuit breaker and system characteristics can be used for the minimum dead time calculation:

- a) Circuit breaker Operating time (Trip coil energized to Arc interruption): 50 ms
- b) Circuit breaker Opening + Reset time (Trip coil energized to trip mechanism reset): 200 ms
- c) Protection reset time: < 80 ms
- d) Circuit breaker Closing time (Close command to Contacts make): 85 ms
- e) De-ionisation time (280 ms for 3-phase, or 560 ms for 1-phase)

Three-phase de-ionisation time for 220 kV line is typically 280 ms.

The minimum Autoreclose dead time setting is therefore the greater of:

(a) + (c) = 50 ms + 80 ms = 130 ms, to allow protection reset

(a) + (e) - (d) = 50 ms + 280 ms - 85 ms = 245 ms, to allow de-ionising

In practice a few additional cycles would be added to allow for tolerances, so Dead Time 1 could be set to 300 ms or greater. The overall system dead time is found by adding (d) to the chosen settings then subtracting (a). This gives 335 ms.

A typical de-ionising time value for single-phase trip on a 220 kV line is 560 ms, so the 1 Pole Dead Time could be chosen as 600 ms or greater. The overall system dead time is found by adding (d) to the chosen settings then subtracting (a). This gives 635 ms.

6.3 RECLAIM TIME SETTING GUIDELINES

Several factors influence the choice of the reclaim timer, such as:

- Fault incidence/Past experience: Small reclaim times may be required where there is a high incidence of recurrent lightning strikes to prevent unnecessary lockout for transient faults.
- Spring charging time: For high speed Autoreclose the reclaim time may be set longer than the spring charging time. A minimum reclaim time of more than 5s may be needed to allow the circuit breaker time to recover after a trip and close before it can perform another trip-close-trip cycle. This time will depend on the duty (rating) of the circuit breaker. For delayed Autoreclose this may not be needed as the dead time can be extended by an extra circuit breaker healthy check / Autoreclose Inhibit Time window time if there is insufficient energy in the circuit breaker.
- Switchgear Maintenance: Excessive operation resulting from short reclaim times can mean shorter maintenance intervals.

When used in conjunction with distance protection, the Reclaim Time setting is generally set greater than the zone 2 delay.

6.4 AUTORECLOSE SHOT COUNTERS

In dual circuit breaker applications, the two circuit breakers are normally arranged to reclose sequentially with one designated the Leader circuit breaker reclosing after a set dead time. If the Leader circuit breaker remains closed after the dead time, the second circuit breaker referred to as the Follower recloses after a further delay, the Follower Time.

The Follower Time is provided to prevent un-necessary operation of the Follower circuit breaker. The Follower Time should be set sufficiently long as to avoid an un-necessary closure of the Follower circuit breaker where conditions are such that it would be required to trip again.

After expiry of the dead time, the Leader circuit breaker will attempt Autoreclose. The minimum value of the Follower time should allow sufficient time for the Autoreclose of the Leader circuit breaker to be considered successful.

An extreme case may be where instantaneous protection is only provided by distance elements and where Autoreclose is onto a dead line with a persistent fault at the remote end of the line.

Local end protection (Time delayed Back up protection, like distance Z2 element) may detect this fault after a time delay (typically > 200 ms). In addition to the delays associated with the back-up protection (typically >200 ms), time must be allowed for the Leader circuit breaker to re-trip (50 - 100 ms), and a safety margin needs to be added so that a minimum Follower time could be around 500 ms.

If the Autoreclose of the Leader circuit breaker is successful, the Follower circuit breaker can be allowed to Autoreclose. Delaying the Autoreclose of the Follower circuit breaker will allow any transients to decay before the switching. If the transient decay figure is known, it can be used to determine a minimum Follower Time value. The larger of the two values can then be used as the minimum Follower Time.

Note:

The Follower circuit breaker should only be reclosed if the system is healthy. In a dual circuit breaker scheme where the system is healthy, the Follower circuit breaker acts more like a bus coupler. In this case there is no need for fast switching and a time delay in excess of 1s is often appropriate. The default Follower time in this product is chosen as 5 s and this can comfortably be applied to most applications.

CB FAIL PROTECTION

CHAPTER 6

1 CHAPTER OVERVIEW

The device provides a Circuit Breaker Fail Protection function. This chapter describes the operation of this function including the principles, logic diagrams and applications.

This chapter contains the following sections:

Chapter Overview	181
Circuit Breaker Fail Protection	182
Circuit Breaker Fail Implementation	183
Circuit Breaker Fail Logic	185
Application Notes	189

2 CIRCUIT BREAKER FAIL PROTECTION

When a fault occurs, one or more protection devices will operate and issue a trip command to the relevant circuit breakers. Operation of the circuit breaker is essential to isolate the fault and prevent, or at least limit, damage to the power system. For transmission and sub-transmission systems, slow fault clearance can also threaten system stability.

For these reasons, it is common practice to install Circuit Breaker Failure protection (CBF). CBF protection monitors the circuit breaker and establishes whether it has opened within a reasonable time. If the fault current has not been interrupted following a set time delay from circuit breaker trip initiation, the CBF protection will operate, whereby the upstream circuit breakers are back-tripped to ensure that the fault is isolated.

CBF operation can also reset all start output contacts, ensuring that any blocks asserted on upstream protection are removed.

3 CIRCUIT BREAKER FAIL IMPLEMENTATION

Circuit Breaker Failure Protection is implemented in the *CB FAIL & P.DEAD* column of the relevant settings group.

3.1 CIRCUIT BREAKER FAIL TIMERS

The circuit breaker failure protection incorporates two timers, **CB Fail 1 Timer** and **CB Fail 2 Timer**, allowing configuration for the following scenarios:

- Simple CBF, where only **CB Fail 1 Timer** is enabled. For any protection trip, the **CB Fail 1 Timer** is started, and normally reset when the circuit breaker opens to isolate the fault. If breaker opening is not detected, the CB Fail 1 Timer times out and closes an output contact assigned to breaker fail (using the programmable scheme logic). This contact is used to back-trip upstream switchgear, generally tripping all infeeds connected to the same busbar section.
- A retripping scheme, plus delayed back-tripping. Here, **CB Fail 1 Timer** is used to issue a trip command to a second trip circuit of the same circuit breaker. This requires the circuit breaker to have duplicate circuit breaker trip coils. This mechanism is known as retripping. If retripping fails to open the circuit breaker, a back-trip may be issued following an additional time delay. The back-trip uses **CB Fail 2 Timer**, which was also started at the instant of the initial protection element trip.

You can configure the CBF elements **CB Fail 1 Timer** and **CB Fail 2 Timer** to operate for trips triggered by protection elements within the device. Alternatively you can use an external protection trip by allocating one of the opto-inputs to the **External Trip** DDB signal in the PSL.

You can reset the CBF from a breaker open indication (from the pole dead logic) or from a protection reset. In these cases resetting is only allowed if the undercurrent elements have also been reset. The resetting mechanism is determined by the settings **Volt Prot Reset** and **Ext Prot Reset**.

The resetting options are summarised in the following table:

Initiation (Menu Selectable)	CB Fail Timer Reset Mechanism
Current based protection	The resetting mechanism is fixed (e.g. 50/51/46/21/87) IA< operates AND IB< operates AND IC< operates AND IN< operates
Sensitive Earth Fault element	The resetting mechanism is fixed. ISEF< Operates
Non-current based protection (e.g. 27/59/81/32L)	Three options are available: <ul style="list-style-type: none"> • All I< and IN< elements operate • Protection element reset AND all I< and IN< elements operate • CB open (all 3 poles) AND all I< and IN< elements operate
External protection	Three options are available. <ul style="list-style-type: none"> • All I< and IN< elements operate • External trip reset AND all I< and IN< elements operate • CB open (all 3 poles) AND all I< and IN< elements operate

The **Remove I> Start** and **Remove IN> Start** settings are used to remove starts issued from the overcurrent and earth elements respectively following a breaker fail time out. The start is removed when the cell is set to *Enabled*.

3.2 ZERO CROSSING DETECTION

When there is a fault and the circuit breaker interrupts the CT primary current, the flux in the CT core decays to a residual level. This decaying flux introduces a decaying DC current in the CT secondary circuit known as subsidence current. The closer the CT is to its saturation point, the higher the subsidence current.

The time constant of this subsidence current depends on the CT secondary circuit time constant and it is generally long. If the protection clears the fault, the CB Fail function should reset fast to avoid maloperation due to the subsidence current. To compensate for this the device includes a zero-crossing detection algorithm, which ensures that the CB Fail re-trip and back-trip signals are not asserted while subsidence current is flowing. If all the samples within half a cycle are greater than or smaller than 0 A (10 mS for a 50 Hz system), then zero crossing detection is asserted, thereby blocking the operation of the CB Fail function. The zero-crossing detection algorithm is used after the circuit breaker in the primary system has opened ensuring that the only current flowing in the AC secondary circuit is the subsidence current.

4 CIRCUIT BREAKER FAIL LOGIC

4.1 CIRCUIT BREAKER FAIL LOGIC - PART 1

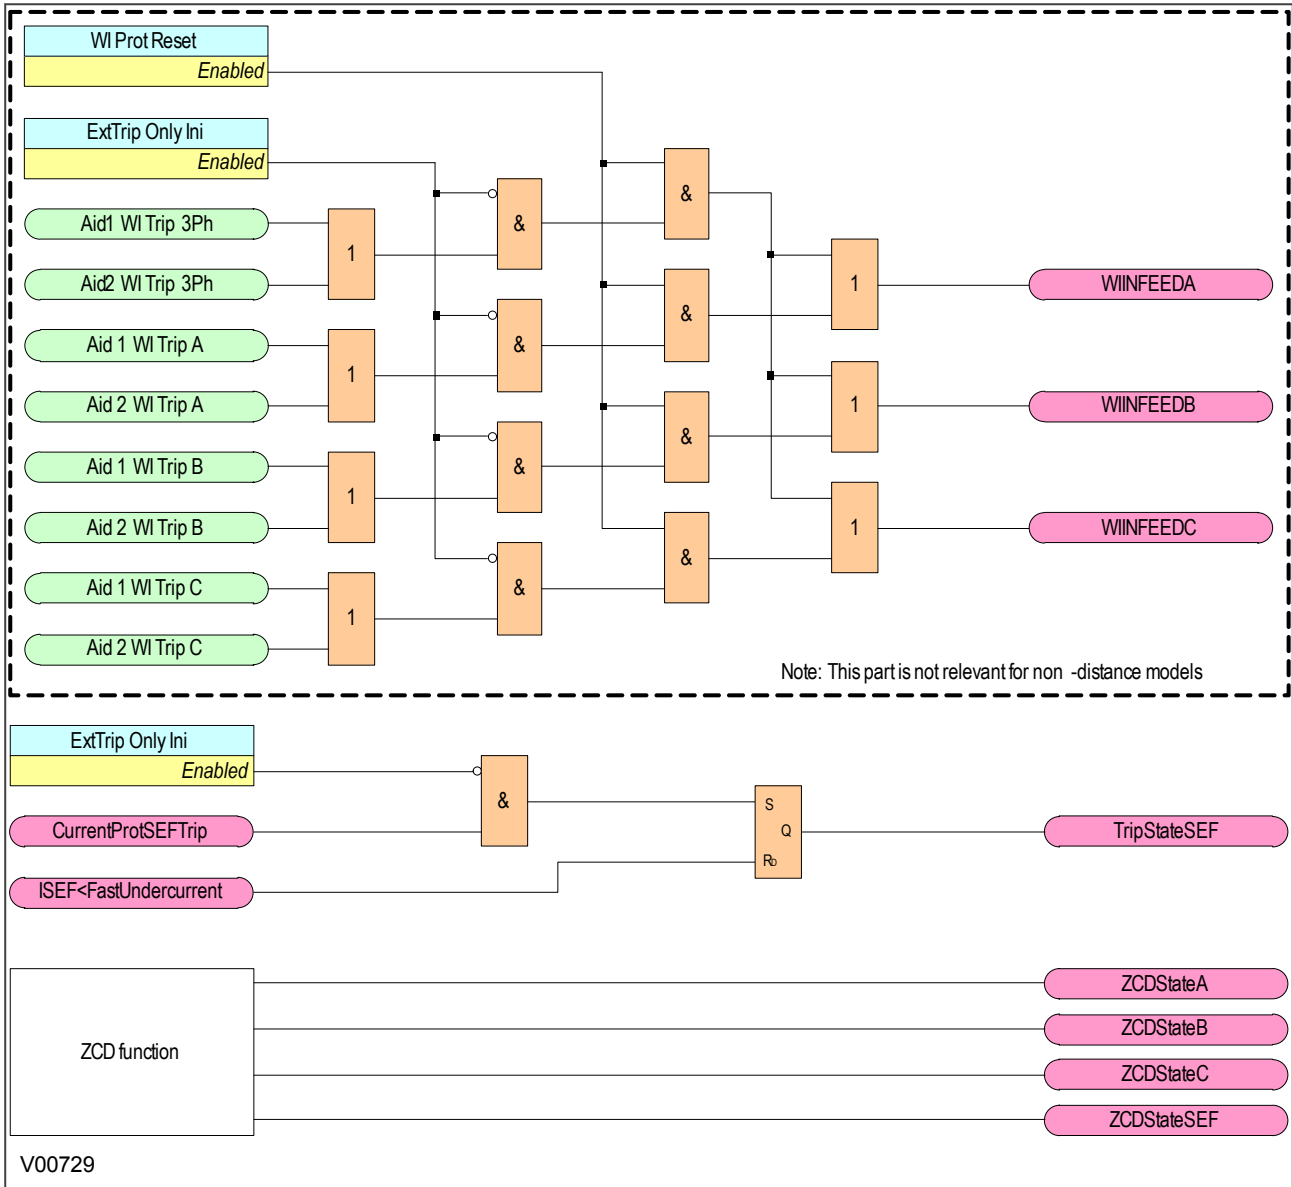


Figure 93: Circuit Breaker Fail logic - part 1

4.2 CIRCUIT BREAKER FAIL LOGIC - PART 2

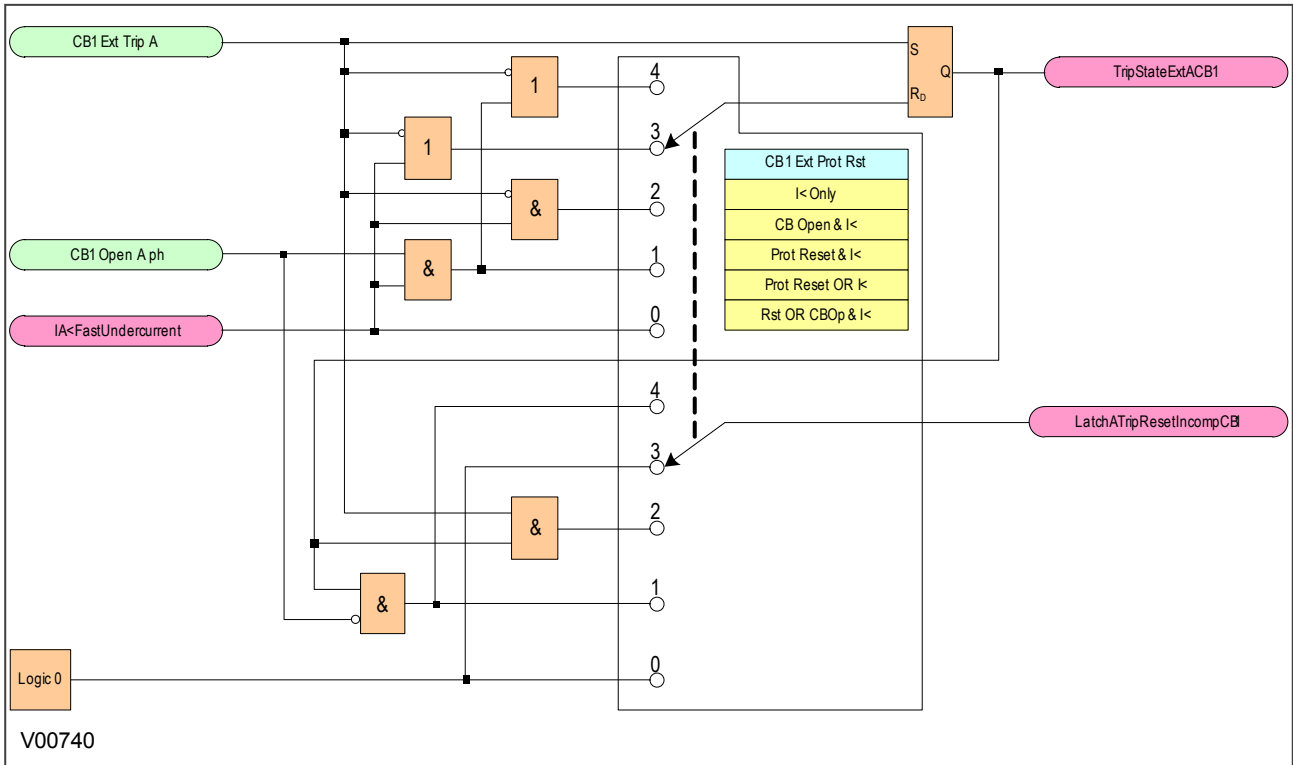


Figure 94: Circuit Breaker Fail logic - part 2

Note:

This diagram shows only phase-A for the first CB (CB1) of a dual-CB device. The diagrams for phases B and C and for the second CB (CB2) follow the same principle and are not repeated here.

4.3 CIRCUIT BREAKER FAIL LOGIC - PART 3

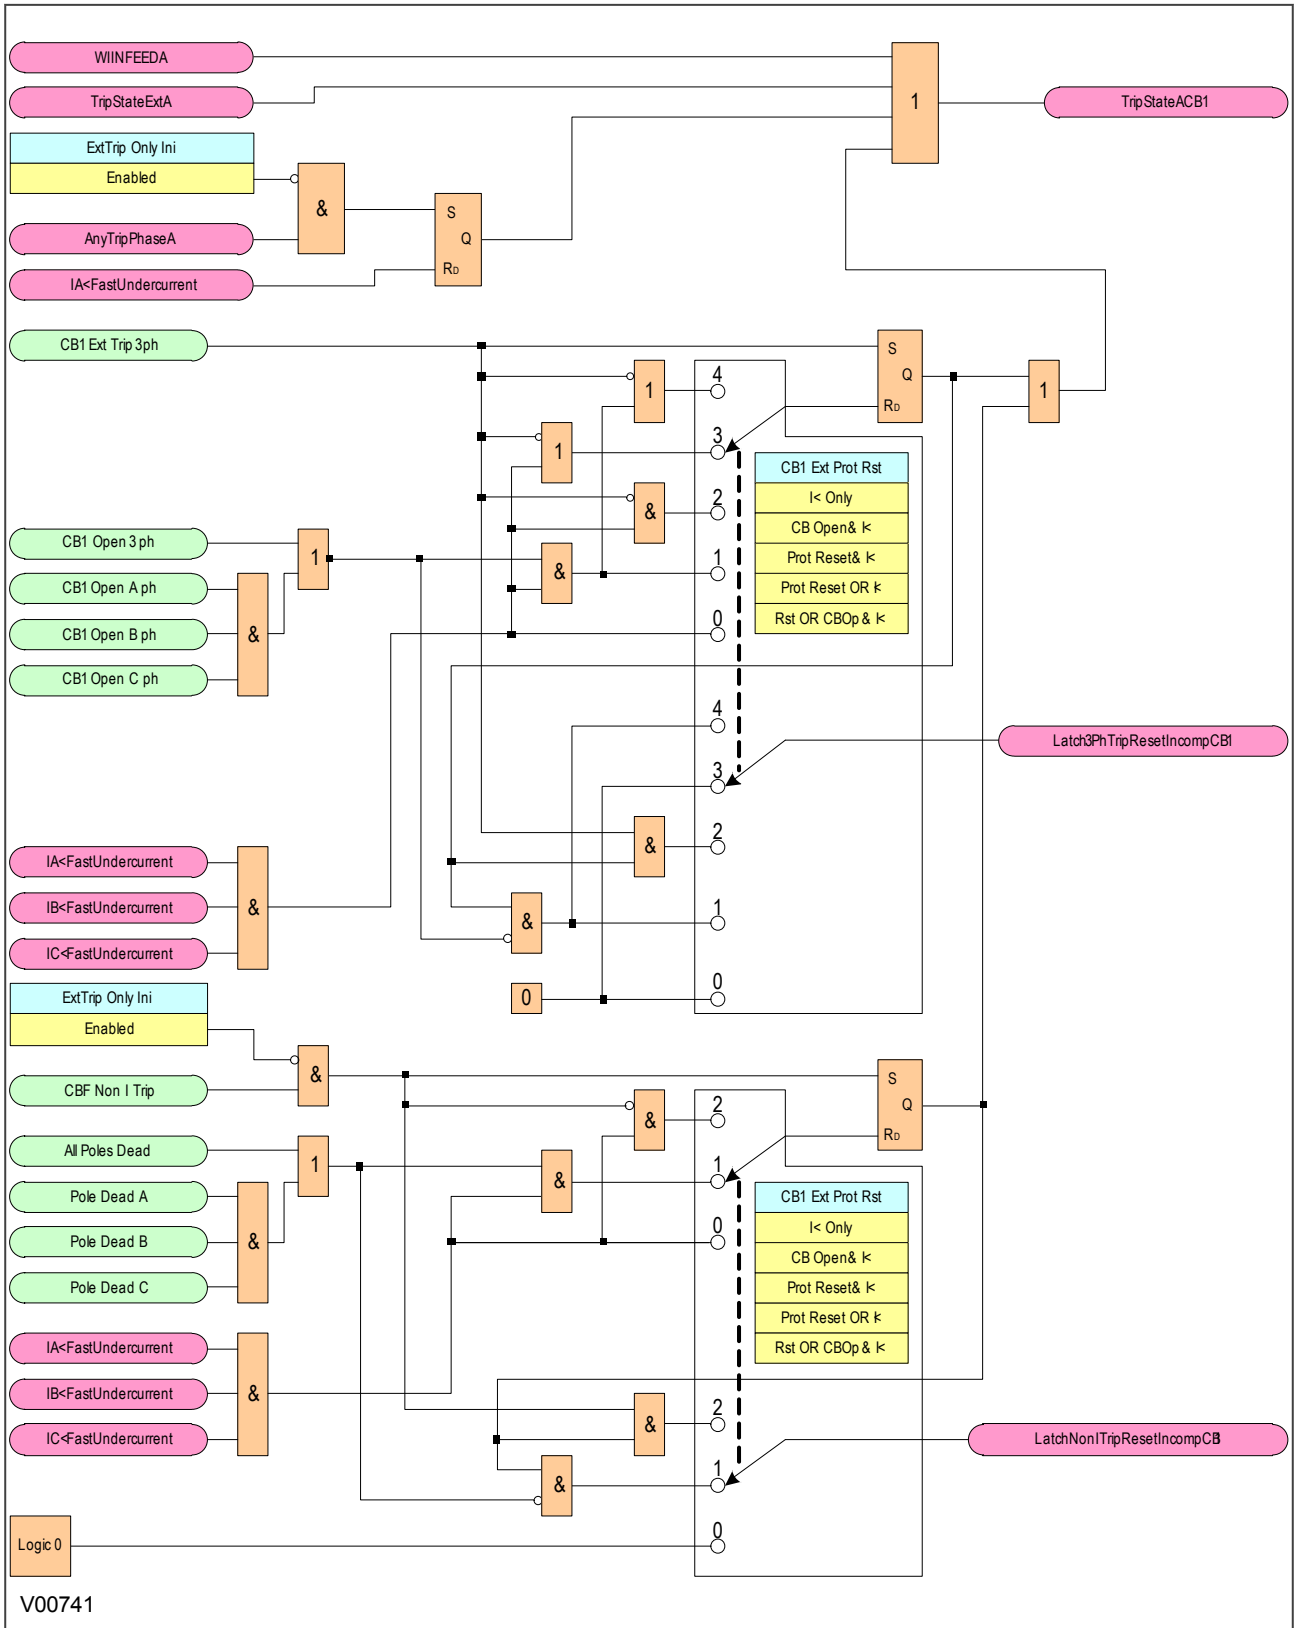


Figure 95: Circuit Breaker Fail logic - part 3

Note:

This diagram shows only first CB (CB1) of a dual-CB device. The diagrams for the second CB (CB2) follow the same principle and are not repeated here..

4.4 CIRCUIT BREAKER FAIL LOGIC - PART 4

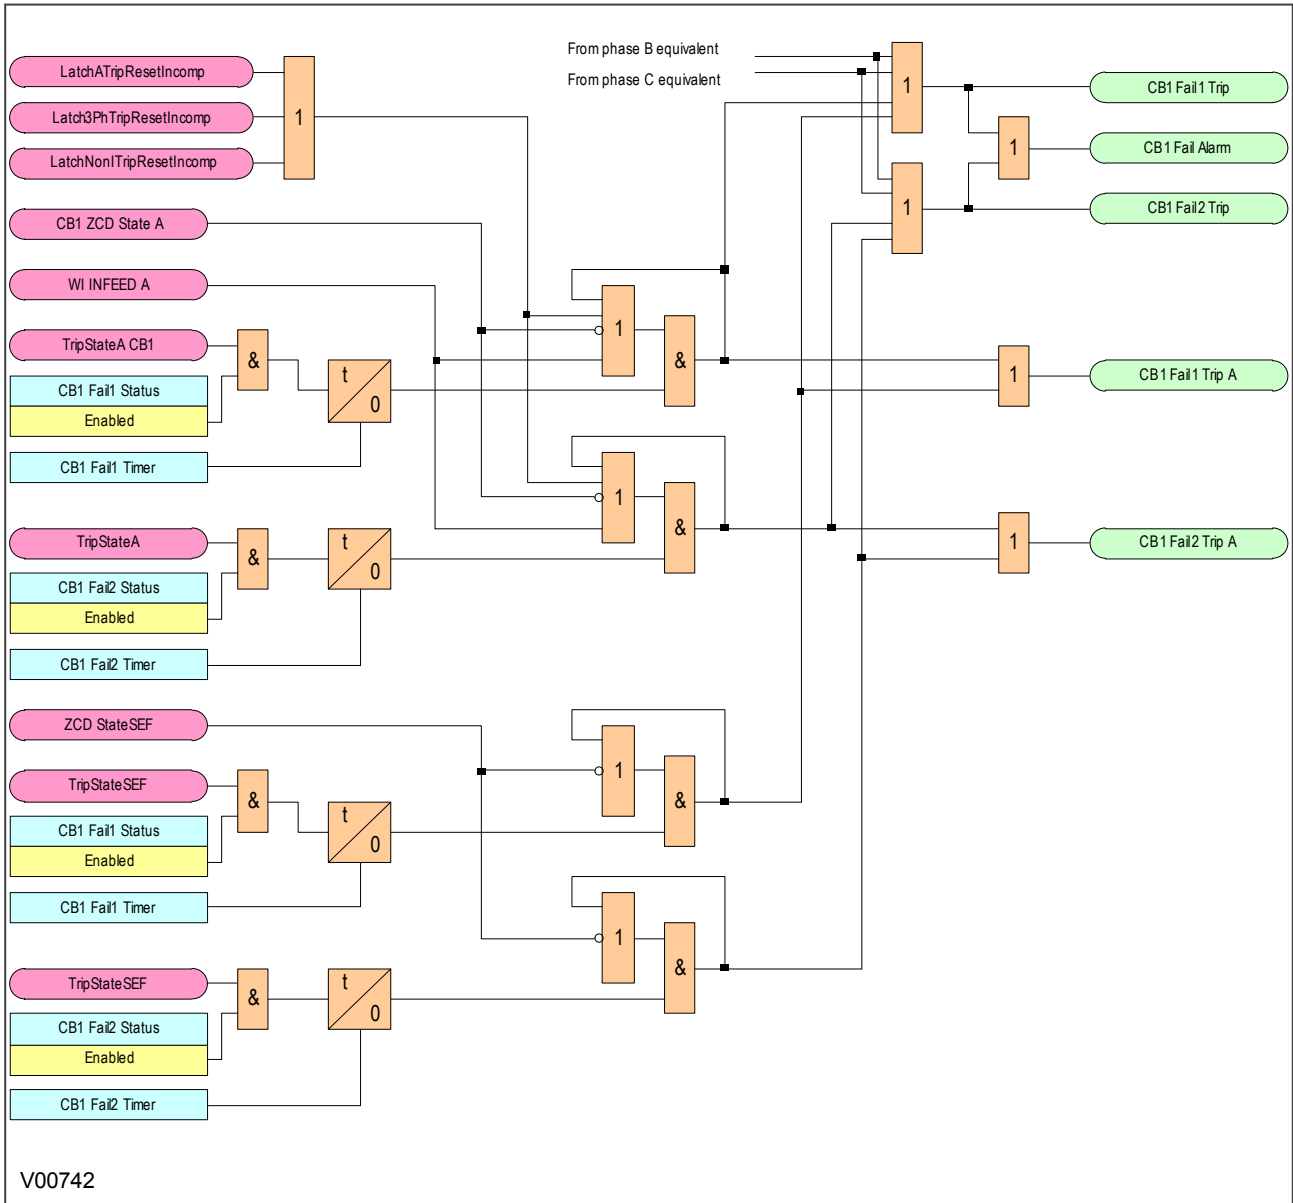


Figure 96: Circuit Breaker Fail logic - part 4

Note:

This diagram shows only phase-A for the first CB (CB1) of a dual-CB device. The diagrams for phases B and C and for the second CB (CB2) follow the same principle and are not repeated here.

5 APPLICATION NOTES

5.1 RESET MECHANISMS FOR CB FAIL TIMERS

It is common practise to use low set undercurrent elements to indicate that circuit breaker poles have interrupted the fault or load current. This covers the following situations:

- Where circuit breaker auxiliary contacts are defective, or cannot be relied on to definitely indicate that the breaker has tripped.
- Where a circuit breaker has started to open but has become jammed. This may result in continued arcing at the primary contacts, with an additional arcing resistance in the fault current path. Should this resistance severely limit fault current, the initiating protection element may reset. Therefore, reset of the element may not give a reliable indication that the circuit breaker has opened fully.

For any protection function requiring current to operate, the device uses operation of undercurrent elements to detect that the necessary circuit breaker poles have tripped and reset the CB fail timers. However, the undercurrent elements may not be reliable methods of resetting CBF in all applications. For example:

- Where non-current operated protection, such as under/overvoltage or under/overfrequency, derives measurements from a line connected voltage transformer. Here, $I <$ only gives a reliable reset method if the protected circuit would always have load current flowing. In this case, detecting drop-off of the initiating protection element might be a more reliable method.
- Where non-current operated protection, such as under/overvoltage or under/overfrequency, derives measurements from a busbar connected voltage transformer. Again using $I <$ would rely on the feeder normally being loaded. Also, tripping the circuit breaker may not remove the initiating condition from the busbar, and so drop-off of the protection element may not occur. In such cases, the position of the circuit breaker auxiliary contacts may give the best reset method.

5.2 SETTING GUIDELINES (CB FAIL TIMER)

The following timing chart shows the CB Fail timing during normal and CB Fail operation. The maximum clearing time should be less than the critical clearing time which is determined by a stability study. The CB Fail back-up trip time delay considers the maximum CB clearing time, the CB Fail reset time plus a safety margin. Typical CB clearing times are 1.5 or 3 cycles. The CB Fail reset time should be short enough to avoid CB Fail back-trip during normal operation. Phase and ground undercurrent elements must be asserted for the CB Fail to reset. The assertion of the undercurrent elements might be delayed due to the subsidence current that might be flowing through the secondary AC circuit.

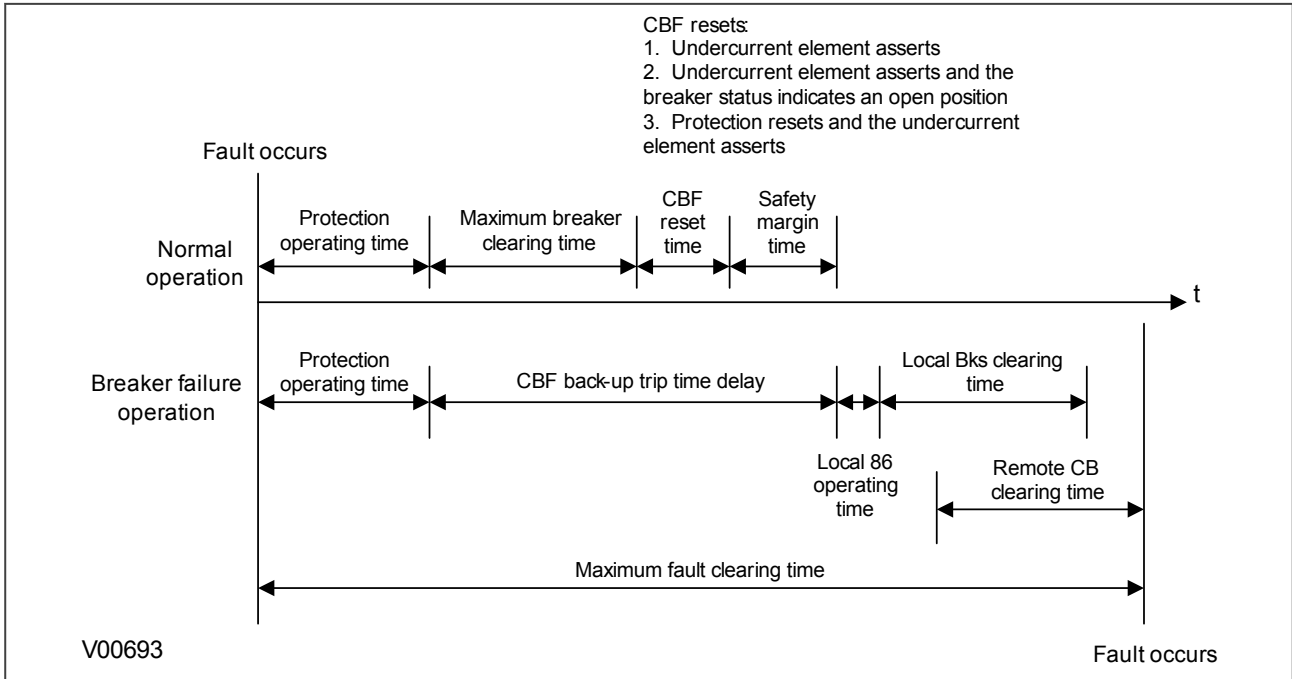


Figure 97: CB Fail timing

The following examples consider direct tripping of a 2-cycle circuit breaker. Typical timer settings to use are as follows:

CB Fail Reset Mechanism	tBF Time Delay	Typical Delay For 2 Cycle Circuit Breaker
Initiating element reset	CB interrupting time + element reset time (max.) + error in tBF timer + safety margin	50 + 50 + 10 + 50 = 160 ms
CB open	CB auxiliary contacts opening/ closing time (max.) + error in tBF timer + safety margin	50 + 10 + 50 = 110 ms
Undercurrent elements	CB interrupting time + undercurrent element (max.) + safety margin operating time	50 + 25 + 50 = 125 ms

Note:

All CB Fail resetting involves the operation of the undercurrent elements. Where element resetting or CB open resetting is used, the undercurrent time setting should still be used if this proves to be the worst case. Where auxiliary tripping relays are used, an additional 10-15 ms must be added to allow for trip relay operation.

5.3 SETTING GUIDELINES (UNDERCURRENT)

The phase undercurrent settings ($I_{<}$) must be set less than load current to ensure that $I_{<}$ operation correctly indicates that the circuit breaker pole is open. A typical setting for overhead line or cable circuits is 20% I_n . Settings of 5% of I_n are common for generator CB Fail.

The earth fault undercurrent elements must be set less than the respective trip. For example:

$$I_{N<} = (I_{N>} \text{ trip})/2$$

CURRENT PROTECTION FUNCTIONS

CHAPTER 7

1 CHAPTER OVERVIEW

The primary purpose of this product is not overcurrent protection. It does however provide a range of current protection functions to be used as backup protection. This chapter assumes you are familiar with overcurrent protection principles and does not provide detailed information here. If you require further information about general overcurrent protection principles, please refer either to Alstom Grid's NPAG publication, earlier incarnations of this technical manual, or one of our technical manuals from our P40 Agile Modular distribution range of products such as the P14x.

This chapter contains the following sections:

Chapter Overview	193
Phase Fault Overcurrent Protection	194
Negative Sequence Overcurrent Protection	197
Earth Fault Protection	200
Sensitive Earth Fault Protection	205
High Impedance REF	211
Thermal Overload Protection	213
Broken Conductor Protection	218

2 PHASE FAULT OVERCURRENT PROTECTION

Phase fault overcurrent protection is provided as a form of back-up protection that could be:

- Permanently disabled
- Permanently enabled
- Enabled only in case of VT fuse/MCB failure
- Enabled only in case of protection communication channel failure
- Enabled if VT fuse/MCB or protection communication channel fail
- Enabled if VT fuse/MCB and protection communication channel fail

In addition, each stage may be disabled by a DDB signal.

It should be noted that phase overcurrent protection is phase segregated, but the operation of any phase is mapped to 3 phase tripping in the default PSL.

The VTS element of the IED can be selected to either block the directional element or simply remove the directional control.

2.1 POC IMPLEMENTATION

Phase Overcurrent Protection is configured in the OVERCURRENT column of the relevant settings group.

The product provides four stages of three-phase overcurrent protection, each with independent time delay characteristics. The settings are independent for each stage, but for each stage, the settings apply to all phases.

Stages 1 and 2 provide a choice of operate and reset characteristics, where you can select between:

- A range of IDMT (Inverse Definite Minimum Time) curves based on IEC and IEEE standards
- A range of programmable user-defined curves
- DT (Definite Time) characteristic

This is achieved using the cells:

- ***I>(n) Function*** for the overcurrent operate characteristic
- ***I>(n) Reset Char*** for the overcurrent reset characteristic
- ***I>(n) Usr Rst Char*** for the reset characteristic for user-defined curves

where (n) is the number of the stage.

The IDMT-equipped stages, (1 and 2) also provide a Timer Hold facility. This is configured using the cells ***I>(n) tReset***, where (n) is the number of the stage. This does not apply to IEEE curves.

Stages 3 and 4 have definite time characteristics only.

2.2 DIRECTIONAL ELEMENT

If fault current can flow in both directions through a protected location, you will need to use a directional overcurrent element to determine the direction of the fault. Once the direction has been determined the device can decide whether to allow tripping or to block tripping. To determine the direction of a phase overcurrent fault, the device must compare the phase angle of the fault current with that of a known reference quantity. The phase angle of this known reference quantity must be independent of the faulted phase. Typically this will be the line voltage between the other two phases.

The phase fault elements of the IEDs are internally polarized by the quadrature phase-phase voltages, as shown in the table below:

Phase of protection	Operate current	Polarizing voltage
A Phase	IA	VBC
B Phase	IB	VCA
C Phase	IC	VAB

Under system fault conditions, the fault current vector lags its nominal phase voltage by an angle depending on the system X/R ratio. The IED must therefore operate with maximum sensitivity for currents lying in this region. This is achieved by using the IED characteristic angle (RCA). This is the angle by which the current applied to the IED must be displaced from the voltage applied to the IED to obtain maximum sensitivity.

The device provides a setting $I > \text{Char Angle}$, which is set globally for all overcurrent stages. It is possible to set characteristic angles anywhere in the range -95° to $+95^\circ$.

A directional check is performed based on the following criteria:

Directional forward

$$-90^\circ < (\text{angle}(I) - \text{angle}(V) - RCA) < 90^\circ$$

Directional reverse

$$-90^\circ > (\text{angle}(I) - \text{angle}(V) - RCA) > 90^\circ$$

For close up three-phase faults, all three voltages will collapse to zero and no healthy phase voltages will be present. For this reason, the device includes a synchronous polarisation feature that stores the pre-fault voltage information and continues to apply this to the directional overcurrent elements for a time period of a few seconds. This ensures that either instantaneous or time-delayed directional overcurrent elements will be allowed to operate, even with a three-phase voltage collapse.

2.3 POC LOGIC

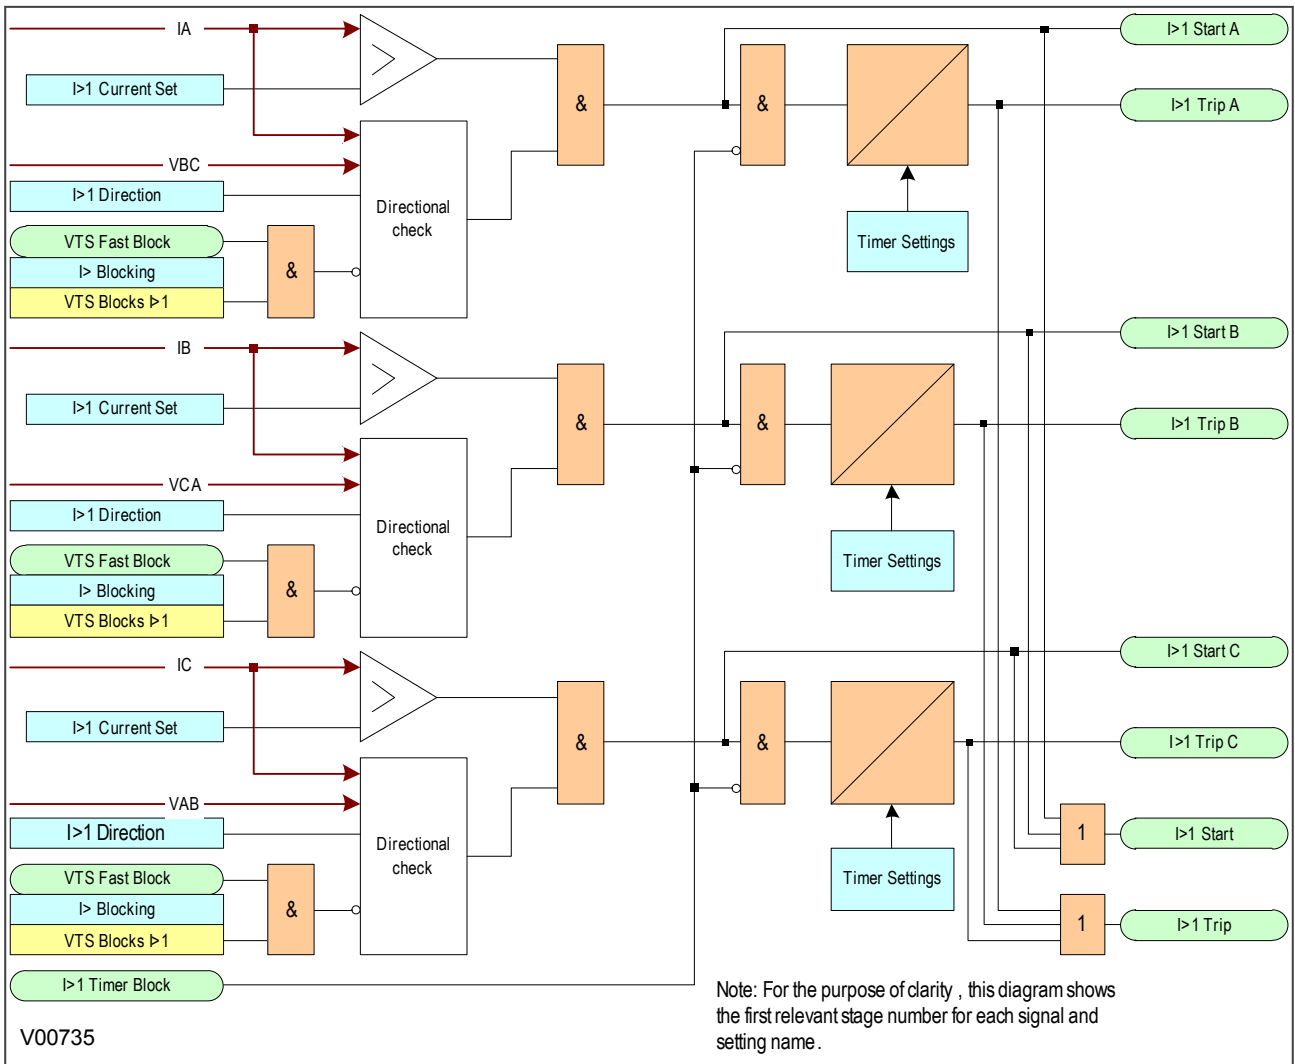


Figure 98: Phase Overcurrent Protection logic diagram

3 NEGATIVE SEQUENCE OVERCURRENT PROTECTION

When applying standard phase overcurrent protection, the overcurrent elements must be set significantly higher than the maximum load current. This limits the element's sensitivity. Most protection schemes also use an earth fault element operating from residual current, which improves sensitivity for earth faults. However, certain faults may arise which can remain undetected by such schemes. Negative Phase Sequence Overcurrent elements can help in such cases.

Any unbalanced fault condition will produce a negative sequence current component. Therefore, a negative phase sequence overcurrent element can be used for both phase-to-phase and phase-to-earth faults. Negative Phase Sequence Overcurrent protection offers the following advantages:

- Negative phase sequence overcurrent elements are more sensitive to resistive phase-to-phase faults, where phase overcurrent elements may not operate.
- In certain applications, residual current may not be detected by an earth fault element due to the system configuration. For example, an earth fault element applied on the delta side of a delta-star transformer is unable to detect earth faults on the star side. However, negative sequence current will be present on both sides of the transformer for any fault condition, irrespective of the transformer configuration. Therefore, a negative phase sequence overcurrent element may be used to provide time-delayed back-up protection for any uncleared asymmetrical faults downstream.

3.1 NEGATIVE SEQUENCE OVERCURRENT PROTECTION IMPLEMENTATION

Negative Sequence Overcurrent Protection is implemented in the *NEG SEQ O/C* column of the relevant settings group.

The product provides four stages of negative sequence overcurrent protection with independent time delay characteristics.

Stages 1, 2 provide a choice of operate and reset characteristics, where you can select between:

- A range of standard IDMT (Inverse Definite Minimum Time) curves
- DT (Definite Time)

This is achieved using the cells

- ***I2>(n) Function*** for the overcurrent operate characteristic
- ***I2>(n) Reset Char*** for the overcurrent reset characteristic

where (n) is the number of the stage.

The IDMT-capable stages, (1 and 2) also provide a Timer Hold. This is configured using the cells ***I2>(n) tReset***, where (n) is the number of the stage. This is not applicable for curves based on the IEEE standard.

Stages 3 and 4 have definite time characteristics only.

3.2 DIRECTIONAL ELEMENT

Where negative phase sequence current may flow in either direction, directional control should be used.

Directionality is achieved by comparing the angle between the negative phase sequence voltage and the negative phase sequence current. A directional element is available for all of the negative sequence overcurrent stages. This is found in the ***I2> Direction*** cell for the relevant stage. It can be set to non-directional, directional forward, or directional reverse.

A suitable characteristic angle setting (***I2> Char Angle***) is chosen to provide optimum performance. This setting should be set equal to the phase angle of the negative sequence current with respect to the inverted negative sequence voltage (***-V2***), in order to be at the centre of the directional characteristic.

3.3 NPSOC LOGIC

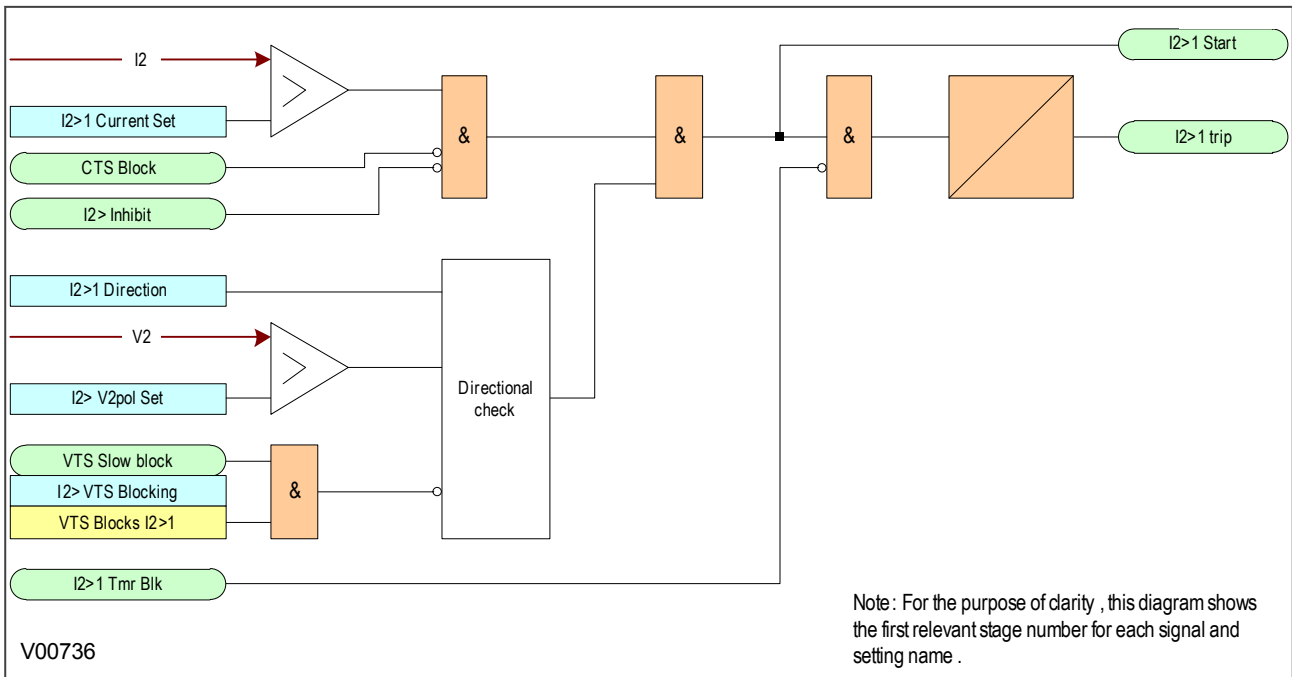


Figure 99: Negative Phase Sequence Overcurrent Protection logic diagram

3.4 APPLICATION NOTES

3.4.1 SETTING GUIDELINES (CURRENT THRESHOLD)

A negative phase sequence element can be connected in the primary supply to the transformer and set as sensitively as required to protect for secondary phase-to-earth or phase-to-phase faults. This function will also provide better protection than the phase overcurrent function for internal transformer faults. The NPS overcurrent protection should be set to coordinate with the low-side phase and earth elements for phase-to-earth and phase-to-phase faults.

The current pick-up threshold must be set higher than the negative phase sequence current due to the maximum normal load imbalance. This can be set practically at the commissioning stage, making use of the measurement function to display the standing negative phase sequence current. The setting should be at least 20% above this figure.

Where the negative phase sequence element needs to operate for specific uncleared asymmetric faults, a precise threshold setting would have to be based on an individual fault analysis for that particular system due to the complexities involved. However, to ensure operation of the protection, the current pick-up setting must be set approximately 20% below the lowest calculated negative phase sequence fault current contribution to a specific remote fault condition.

3.4.2 SETTING GUIDELINES (TIME DELAY)

Correct setting of the time delay for this function is vital. You should also be very aware that this element is applied primarily to provide back-up protection to other protection devices or to provide an alarm. It would therefore normally have a long time delay.

The time delay set must be greater than the operating time of any other protection device (at minimum fault level) that may respond to unbalanced faults such as phase overcurrent elements and earth fault elements.

3.4.3 SETTING GUIDELINES (DIRECTIONAL ELEMENT)

Where negative phase sequence current may flow in either direction through an IED location, such as parallel lines or ring main systems, directional control of the element should be employed (VT models only).

Directionality is achieved by comparing the angle between the negative phase sequence voltage and the negative phase sequence current and the element may be selected to operate in either the forward or reverse direction. A suitable relay characteristic angle setting (**I2> Char Angle**) is chosen to provide optimum performance. This setting should be set equal to the phase angle of the negative sequence current with respect to the inverted negative sequence voltage ($-V_2$), in order to be at the centre of the directional characteristic.

The angle that occurs between V_2 and I_2 under fault conditions is directly dependent on the negative sequence source impedance of the system. However, typical settings for the element are as follows:

- For a transmission system the relay characteristic angle (RCA) should be set equal to -60°
- For a distribution system the relay characteristic angle (RCA) should be set equal to -45°

For the negative phase sequence directional elements to operate, the device must detect a polarising voltage above a minimum threshold, **I2> V2pol Set**. This must be set in excess of any steady state negative phase sequence voltage. This may be determined during the commissioning stage by viewing the negative phase sequence measurements in the device.

4 EARTH FAULT PROTECTION

Earth faults are overcurrent faults where the fault current flows to earth. Earth faults are the most common type of fault.

Earth faults can be measured directly from the system by means of:

- A separate current Transformer (CT) located in a power system earth connection
- A separate Core Balance Current Transformer (CBCT)
- A residual connection of the three line CTs, where the Earth faults can be derived mathematically by summing the three measured phase currents.

Depending on the device model, it will provide one or more of the above means for Earth fault protection.

4.1 EARTH FAULT PROTECTION IMPLEMENTATION

Earth fault protection is implemented in the *EARTH FAULT* column of the relevant settings group. The element uses quantities derived internally from summing the three-phase currents.

The product provides four stages of Earth Fault protection with independent time delay characteristics, for each *EARTH FAULT* column.

Stages 1 and 2 provide a choice of operate and reset characteristics, where you can select between:

- A range of IDMT (Inverse Definite Minimum Time) curves
- DT (Definite Time)

This is achieved using the cells:

- ***IN>(n) Function*** for the overcurrent operate characteristics
- ***IN>(n) Reset Char*** for the overcurrent reset characteristic

where (n) is the number of the stage.

Stages 1 and 2 provide a Timer Hold facility. This is configured using the cells ***IN>(n) tReset***

Stages 3 and 4 can have definite time characteristics only.

Earth fault Overcurrent *IN>* can be set to:

- Permanently disabled
- Permanently enabled
- Enabled only if VT fuse/MCB fails
- Enabled only if protection communication channel fails
- Enabled if VT fuse/MCB or protection communication channel fail
- Enabled if VT fuse/MCB and protection communication channel fail

Each stage can be individually inhibited with a DDB signal ***Inhibit IN>(n)***, where n is the stage number.

4.2 IDG CURVE

The IDG curve is commonly used for time delayed earth fault protection in the Swedish market. This curve is available in stage 1 of the Earth Fault protection.

The IDG curve is represented by the following equation:

$$t_{op} = 5.8 - 1.35 \log_e \left(\frac{I}{IN > Setting} \right)$$

where:

t_{op} is the operating time

I is the measured current

$I_{N>}$ Setting is an adjustable setting, which defines the start point of the characteristic

Note:

Although the start point of the characteristic is defined by the " $I_{N>}$ " setting, the actual current threshold is a different setting called " I_{DG} ". The " I_{DG} " setting is set as a multiple of " $I_{N>}$ ".

Note:

When using an IDG Operate characteristic, DT is always used with a value of zero for the Rest characteristic.

An additional setting "IDG Time" is also used to set the minimum operating time at high levels of fault current.

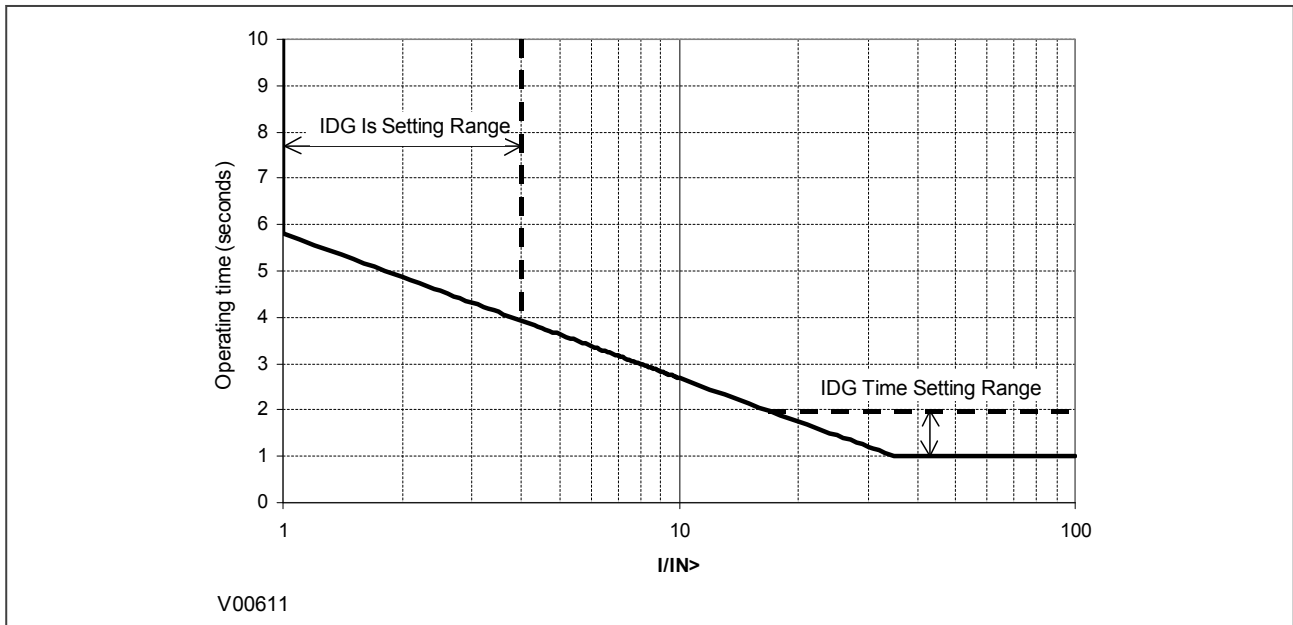


Figure 100: IDG Characteristic

4.3 DIRECTIONAL ELEMENT

If Earth fault current can flow in both directions through a protected location, you will need to use a directional overcurrent element to determine the direction of the fault. Typical systems that require such protection are parallel feeders and ring main systems.

A directional element is available for all of the Earth Fault stages. These are found in the direction setting cells for the relevant stage. They can be set to non-directional, directional forward, or directional reverse.

Directional control can be blocked by the VTS element if required.

For standard earth fault protection, two options are available for polarisation; Residual Voltage (zero sequence) or Negative Sequence.

4.3.1 RESIDUAL VOLTAGE POLARISATION

With earth fault protection, the polarising signal needs to be representative of the earth fault condition. As residual voltage is generated during earth fault conditions, this quantity is commonly used to polarise

directional earth fault elements. This is known as Zero Sequence Voltage polarisation, Residual Voltage polarisation or Neutral Displacement Voltage (NVD) polarisation.

Small levels of residual voltage could be present under normal system conditions due to system imbalances, VT inaccuracies, device tolerances etc. For this reason, the device includes a user settable threshold (**IN> VNPol set**), which must be exceeded in order for the DEF function to become operational. The residual voltage measurement provided in the *MEASUREMENTS 1* column of the menu may assist in determining the required threshold setting during the commissioning stage, as this will indicate the level of standing residual voltage present.

Note:

Residual voltage is nominally 180° out of phase with residual current. Consequently, the DEF elements are polarised from the "-Vres" quantity. This 180° phase shift is automatically introduced within the device.

The directional criteria with residual voltage polarisation is given below:

- Directional forward: $-90^\circ < (\text{angle}(\text{IN}) - \text{angle}(\text{VN} + 180^\circ) - \text{RCA}) < 90^\circ$
- Directional reverse : $-90^\circ > (\text{angle}(\text{IN}) - \text{angle}(\text{VN} + 180^\circ) - \text{RCA}) > 90^\circ$

4.3.2 NEGATIVE SEQUENCE POLARISATION

In some applications, the use of residual voltage polarisation may be not possible to achieve, or at the very least, problematic. For example, a suitable type of VT may be unavailable, or an HV/EHV parallel line application may present problems with zero sequence mutual coupling.

In such situations, the problem may be solved by using Negative Phase Sequence (NPS) quantities for polarisation. This method determines the fault direction by comparing the NPS voltage with the NPS current. The operating quantity, however, is still residual current.

This can be used for both the derived and measured standard earth fault elements. It requires a suitable voltage and current threshold to be set in cells **IN> V2pol set** and **IN> I2pol set** respectively.

Negative phase sequence polarising is not recommended for impedance earthed systems regardless of the type of VT feeding the relay. This is due to the reduced earth fault current limiting the voltage drop across the negative sequence source impedance to negligible levels. If this voltage is less than 0.5 volts the device will stop providing directionalisation.

The directional criteria with negative sequence polarisation is given below:

- Directional forward: $-90^\circ < (\text{angle}(\text{I2}) - \text{angle}(\text{V2} + 180^\circ) - \text{RCA}) < 90^\circ$
- Directional reverse : $-90^\circ > (\text{angle}(\text{I2}) - \text{angle}(\text{V2} + 180^\circ) - \text{RCA}) > 90^\circ$

4.4 EARTH FAULT PROTECTION LOGIC

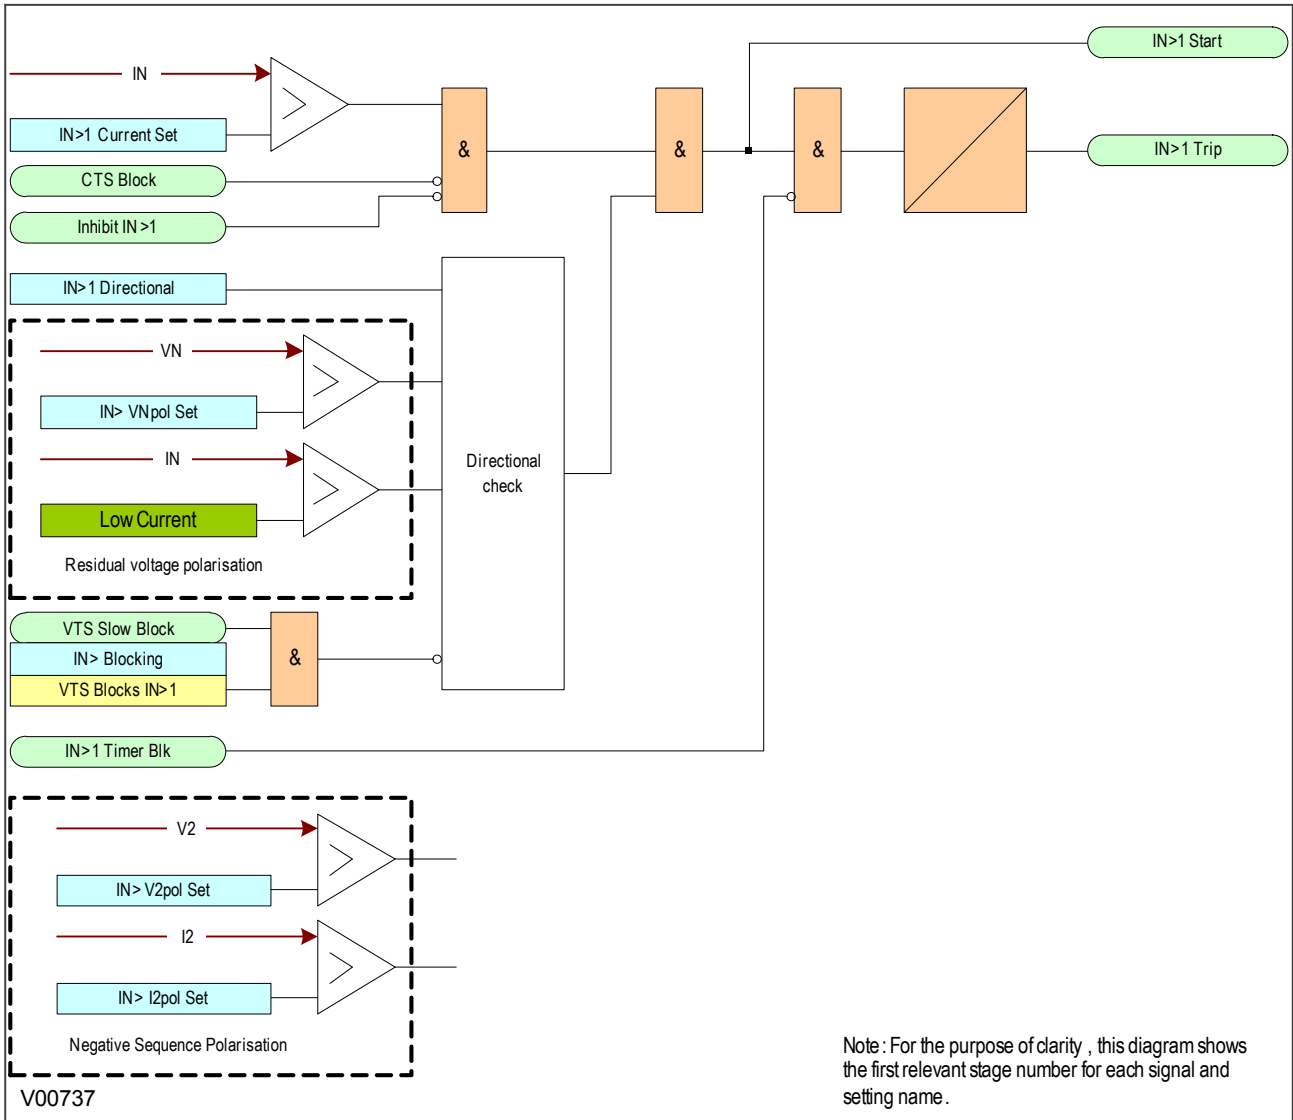


Figure 101: Earth Fault Protection logic diagram

4.5 APPLICATION NOTES

4.5.1 RESIDUAL VOLTAGE POLARISATION SETTING GUIDELINES

It is possible that small levels of residual voltage will be present under normal system conditions due to system imbalances, VT inaccuracies, IED tolerances etc. Hence, the IED includes a user settable threshold (**IN> VNPoI Set**) which must be exceeded in order for the DEF function to be operational. In practice, the typical zero sequence voltage on a healthy system can be as high as 1% (i.e. 3% residual), and the VT error could be 1% per phase. A setting between 1% and 4% is therefore typical. The residual voltage measurement may assist in determining the required threshold setting during commissioning, as this will indicate the level of standing residual voltage present.

4.5.2 SETTING GUIDELINES (DIRECTIONAL ELEMENT)

With directional earth faults, the residual current under fault conditions lies at an angle lagging the polarising voltage. Hence, negative RCA settings are required for DEF applications. This is set in the cell **► Char Angle** in the relevant earth fault menu.

We recommend the following RCA settings:

- Resistance earthed systems: 0°
- Distribution systems (solidly earthed): -45°
- Transmission systems (solidly earthed): -60°

5 SENSITIVE EARTH FAULT PROTECTION

With some earth faults, the fault current flowing to earth is limited by either intentional resistance (as is the case with some HV systems) or unintentional resistance (e.g. in very dry conditions and where the substrate is high resistance, such as sand or rock).

To provide protection in such cases, it is necessary to provide an earth fault protection system with a setting that is considerably lower than for normal line protection. Such sensitivity cannot be provided with conventional CTs, therefore SEF would normally be fed from a core balance current transformer (CBCT) mounted around the three phases of the feeder cable. Also a special measurement class SEF transformer should be used in the IED.

5.1 SEF PROTECTION IMPLEMENTATION

The product provides four stages of SEF protection with independent time delay characteristics.

Stages 1, 2 provide a choice of operate and reset characteristics, where you can select between:

- A range of IDMT (Inverse Definite Minimum Time) curves
- DT (Definite Time)

This is achieved using the cells

- ***ISEF>(n) Function*** for the overcurrent operate characteristic
- ***ISEF>(n) Reset Chr*** for the overcurrent reset characteristic

where (n) is the number of the stage.

Stages 1 and 2 also provide a Timer Hold facility. This is configured using the cells ***ISEF>(n) tReset***.

Stages 3 and 4 have definite time characteristics only.

Each stage can be individually inhibited with a DDB signal Inhibit ISEF>(n), where n is the stage number.

5.2 EPATR B CURVE

The EPATR B curve is commonly used for time-delayed Sensitive Earth Fault protection in certain markets. This curve is only available in the Sensitive Earth Fault protection stages 1 and 2. It is based on primary current settings, employing a SEF CT ratio of 100:1 A.

The EPATR_B curve has 3 separate segments defined in terms of the primary current. It is defined as follows:

Segment	Primary Current Range Based on 100A:1A CT Ratio	Current/Time Characteristic
1	ISEF = 0.5A to 6.0A	t = 432 x TMS/ISEF 0.655 secs
2	ISEF = 6.0A to 200A	t = 800 x TMS/ISEF secs
3	ISEF above 200A	t = 4 x TMS secs

where TMS (time multiplier setting) is 0.025 - 1.2 in steps of 0.025.

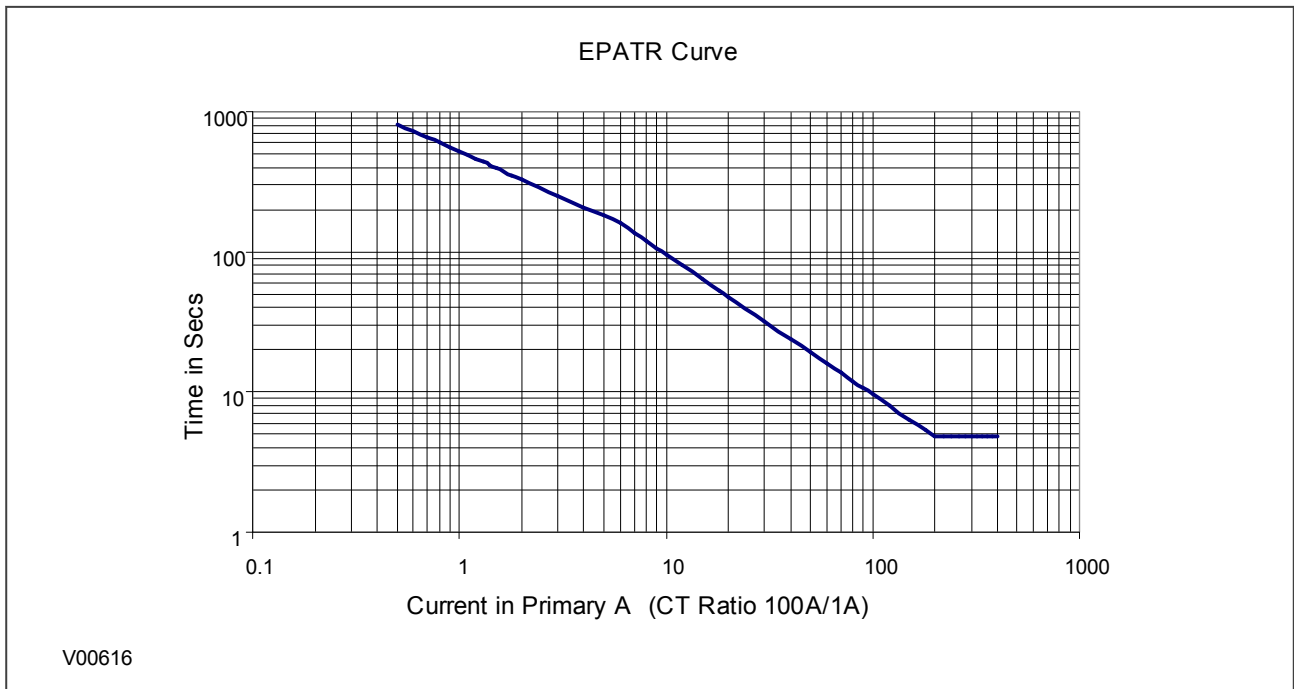


Figure 102: EPATR B characteristic shown for TMS = 1.0

5.3 SENSITIVE EARTH FAULT PROTECTION LOGIC

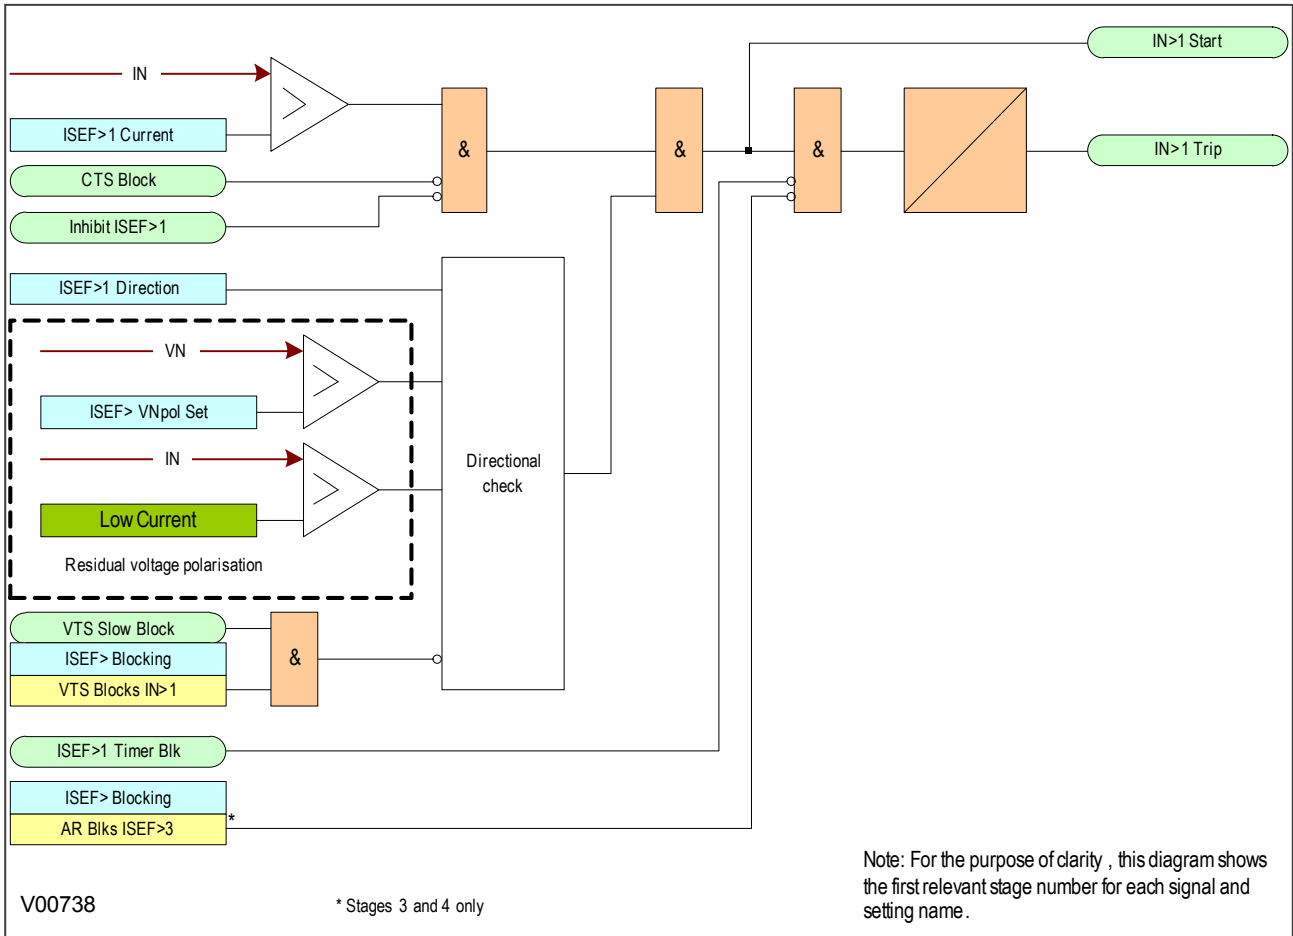


Figure 103: Sensitive Earth Fault Protection logic diagram

5.4 APPLICATION NOTES

5.4.1 INSULATED SYSTEMS

When insulated systems are used, it is not possible to detect faults using standard earth fault protection. It is possible to use a residual overvoltage device to achieve this, but even with this method full discrimination is not possible. Fully discriminative earth fault protection on this type of system can only be achieved by using a SEF (Sensitive Earth Fault) element. This type of protection detects the resultant imbalance in the system charging currents that occurs under earth fault conditions. A core balanced CT must be used for this application. This eliminates the possibility of spill current that may arise from slight mismatches between residually connected line CTs. It also enables a much lower CT ratio to be applied, thereby allowing the required protection sensitivity to be more easily achieved.

The following diagram shows an insulated system with a C-phase fault.

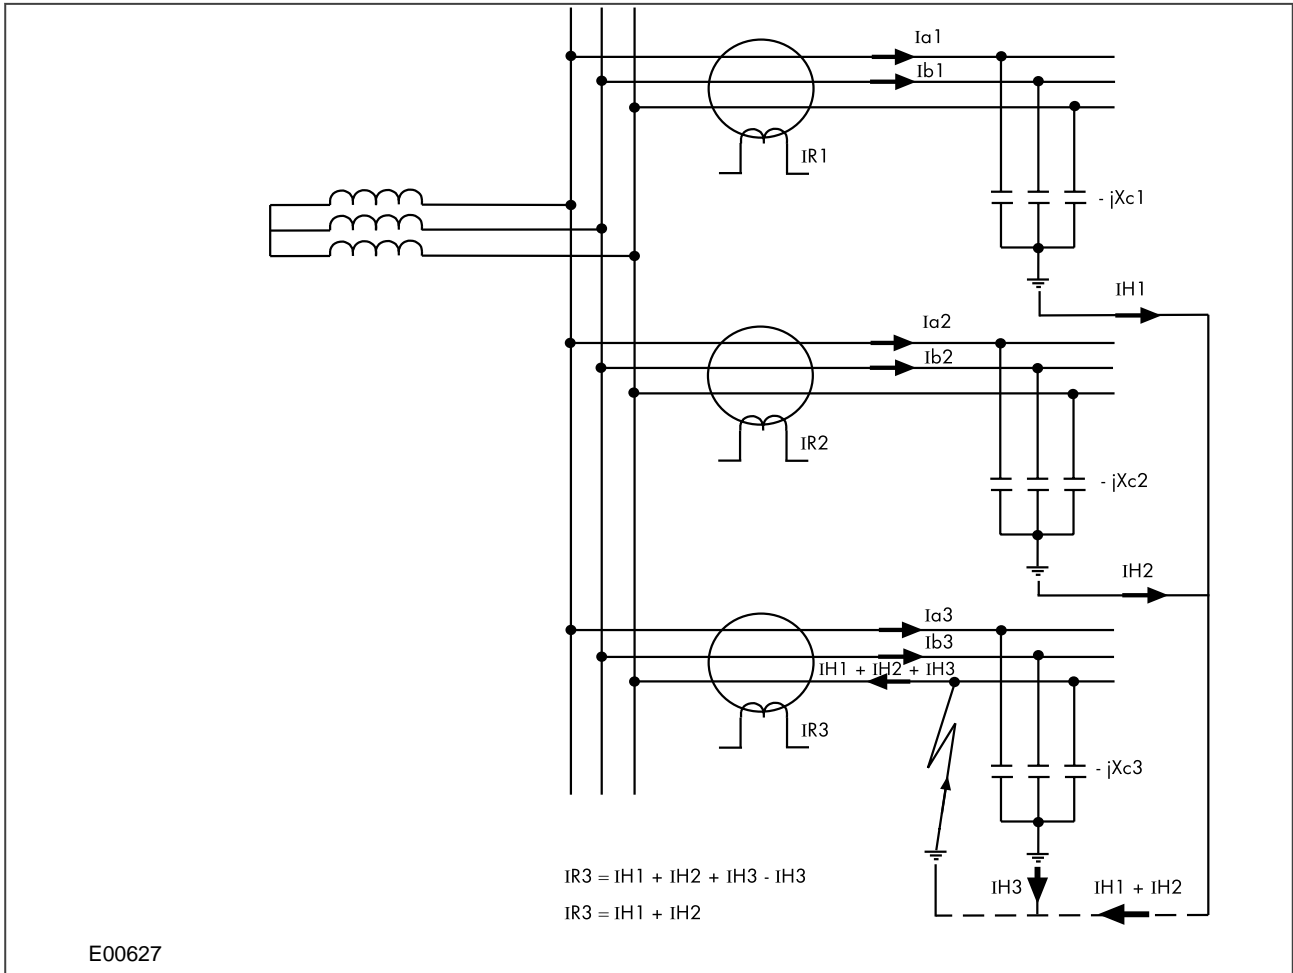


Figure 104: Current distribution in an insulated system with C phase fault

The protection elements on the healthy feeder see the charging current imbalance for their own feeder. The protection element on the faulted feeder, however, sees the charging current from the rest of the system (I_{H1} and I_{H2} in this case). Its own feeder's charging current (I_{H3}) is cancelled out.

With reference to the associated vector diagram, it can be seen that the C-phase to earth fault causes the voltages on the healthy phases to rise by a factor of $\sqrt{3}$. The A-phase charging current (I_{a1}), leads the resultant A phase voltage by 90° . Likewise, the B-phase charging current leads the resultant V_b by 90° .

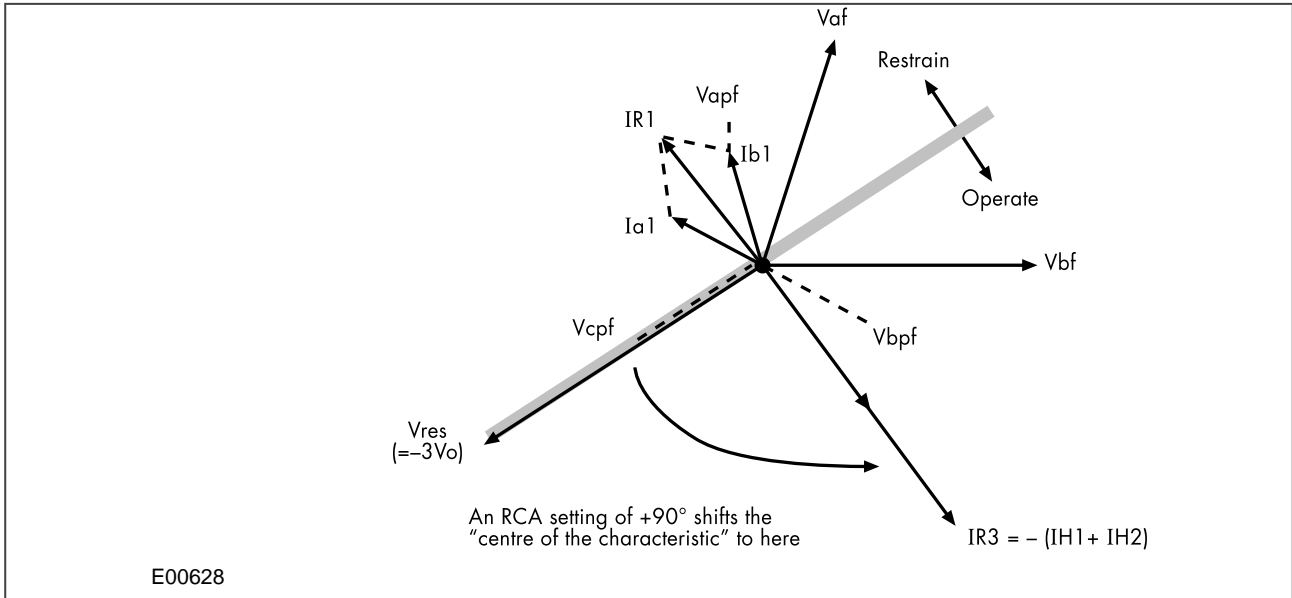


Figure 105: Phasor diagrams for insulated system with C phase fault

The current imbalance detected by a core balanced current transformer on the healthy feeders is the vector addition of I_{a1} and I_{b1} . This gives a residual current which lags the polarising voltage ($-3V_o$) by 90° . As the healthy phase voltages have risen by a factor of $\sqrt{3}$, the charging currents on these phases are also $\sqrt{3}$ times larger than their steady state values. Therefore, the magnitude of the residual current $IR1$, is equal to 3 times the steady state per phase charging current.

The phasor diagram indicates that the residual currents on the healthy and faulted feeders ($IR1$ and $IR3$ respectively) are in anti-phase. A directional element (if available) could therefore be used to provide discriminative earth fault protection.

If the polarising is shifted through $+90^\circ$, the residual current seen by the relay on the faulted feeder will lie within the operate region of the directional characteristic and the current on the healthy feeders will fall within the restrain region.

The required characteristic angle setting for the SEF element when applied to insulated systems, is $+90^\circ$. This is for the case when the protection is connected such that its direction of current flow for operation is from the source busbar towards the feeder. If the forward direction for operation were set such that it is from the feeder into the busbar, then a -90° RCA would be required.

Note:

Discrimination can be provided without the need for directional control. This can only be achieved, however, if it is possible to set the IED in excess of the charging current of the protected feeder and below the charging current for the rest of the system.

5.4.2 SETTING GUIDELINES (INSULATED SYSTEMS)

The residual current on the faulted feeder is equal to the sum of the charging currents flowing from the rest of the system. Further, the addition of the two healthy phase charging currents on each feeder gives a total charging current which has a magnitude of three times the per phase value. Therefore, the total imbalance current is equal to three times the per phase charging current of the rest of the system. A typical setting may therefore be in the order of 30% of this value, i.e. equal to the per phase charging current of the remaining system. Practically though, the required setting may well be determined on site, where suitable settings can be adopted based on practically obtained results.

When using a core-balanced transformer, care must be taken in the positioning of the CT with respect to the earthing of the cable sheath:

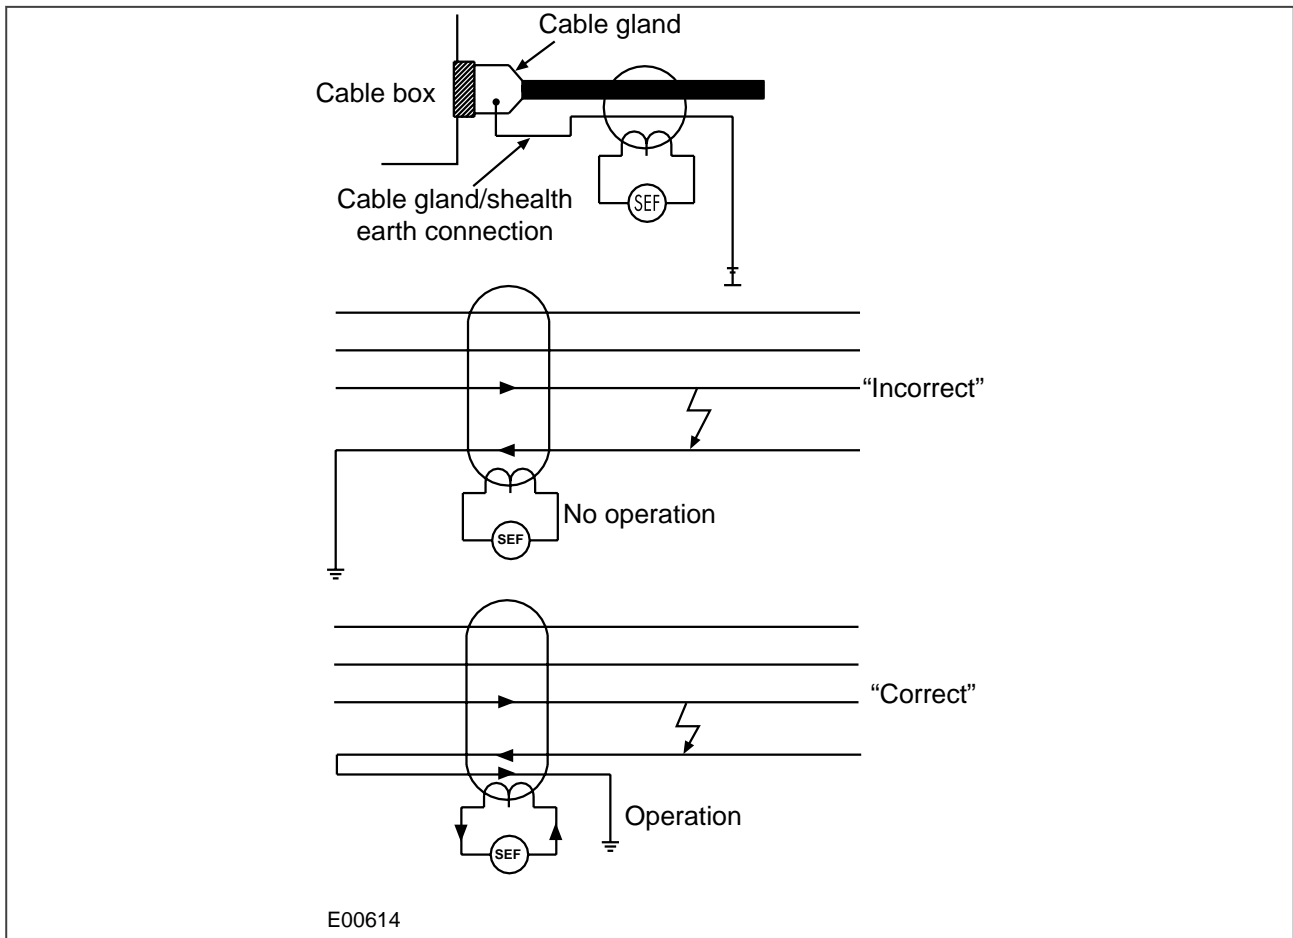


Figure 106: Positioning of core balance current transformers

If the cable sheath is terminated at the cable gland and directly earthed at that point, a cable fault (from phase to sheath) will not result in any unbalanced current in the core balance CT. Therefore, prior to earthing, the connection must be brought back through the CBCT and earthed on the feeder side. This then ensures correct relay operation during earth fault conditions.

6 HIGH IMPEDANCE REF

The device provides a high impedance restricted earth fault protection function. An external resistor is required to provide stability in the presence of saturated line current transformers. Current transformer supervision signals do not block the high impedance REF protection. The appropriate logic must be configured in PSL to block the high impedance REF when any of the above signals is asserted.

6.1 HIGH IMPEDANCE REF PRINCIPLE

This scheme is very sensitive and can protect against low levels of fault current, typical of winding faults.

High Impedance REF protection is based on the differential principle. It works on the circulating current principle as shown in the following diagram.

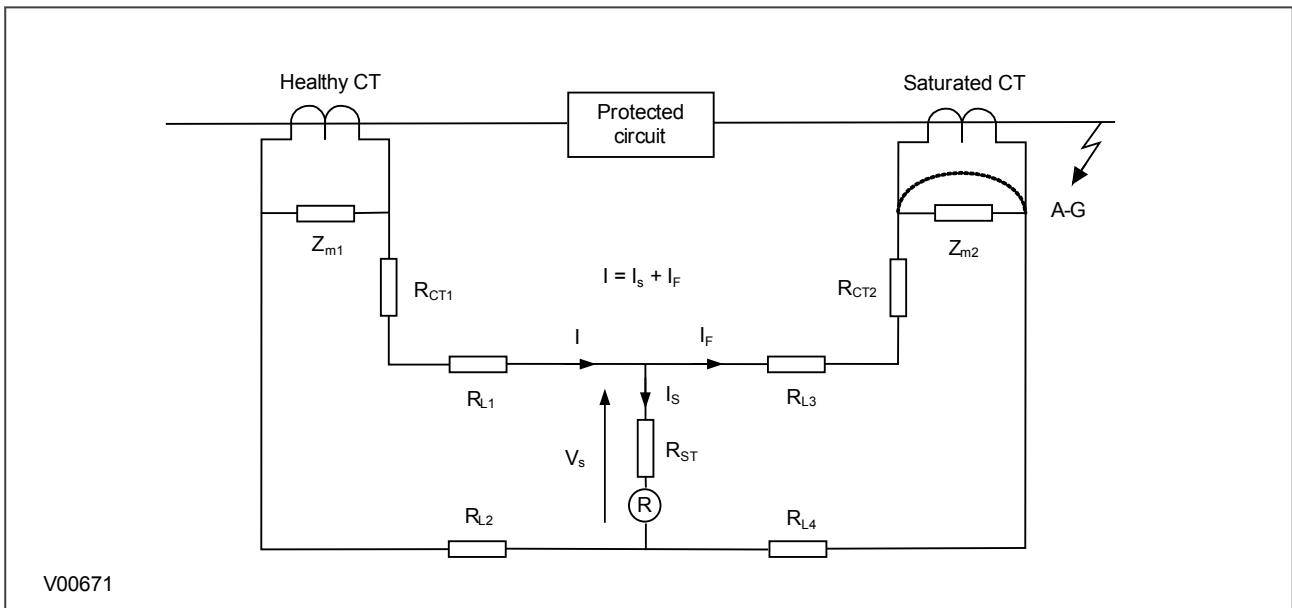


Figure 107: High Impedance REF principle

When subjected to heavy through faults the line current transformer may enter saturation unevenly, resulting in imbalance. To ensure stability under these conditions a series connected external resistor is required, so that most of the unbalanced current will flow through the saturated CT. As a result, the current flowing through the device will be less than the setting, therefore maintaining stability during external faults.


Voltage across REF element $V_s = I_F (R_{CT2} + R_{L3} + R_{L4})$

Stabilising resistor $R_{ST} = V_s / I_s - R_R$

where:

- I_F = maximum secondary through fault current
- R_R = device burden
- R_{CT} = CT secondary winding resistance
- R_{L2} and R_{L3} = Resistances of leads from the device to the current transformer
- R_{ST} = Stabilising resistor

High Impedance REF can be used for either delta windings or star windings in both solidly grounded and resistance grounded systems. The connection to a modern IED are as follows:

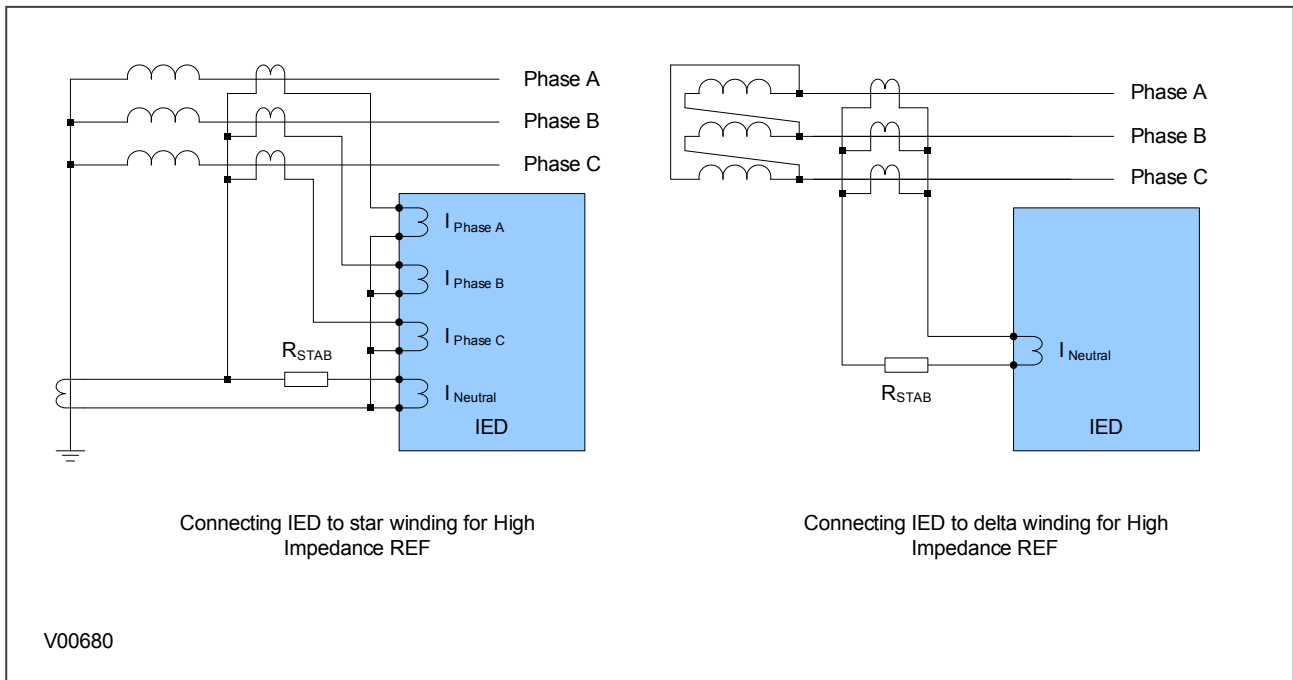**Figure 108: High Impedance REF Connection**

7 THERMAL OVERLOAD PROTECTION

The heat generated within an item of plant is the resistive loss. The thermal time characteristic is therefore based on the equation I^2Rt . Over-temperature conditions occur when currents in excess of their maximum rating are allowed to flow for a period of time.

Temperature changes during heating follow exponential time constants. The device provides two characteristics for thermal overload protection; a single time constant characteristic and a dual time constant characteristic. You select these according to the application.

7.1 SINGLE TIME CONSTANT CHARACTERISTIC

This characteristic is used to protect cables, dry type transformers and capacitor banks.

The single constant thermal characteristic is given by the equation:

$$t = -\tau \log_e \left[\frac{I^2 - (KI_{FLC})^2}{I^2 - I_p^2} \right]$$

where:

- t = time to trip, following application of the overload current I
- τ = heating and cooling time constant of the protected plant
- I = largest phase current
- I_{FLC} full load current rating (the Thermal Trip setting)
- K = a constant with the value of 1.05
- I_p = steady state pre-loading before application of the overload

7.2 DUAL TIME CONSTANT CHARACTERISTIC

This characteristic is used to protect equipment such as oil-filled transformers with natural air cooling. The thermal model is similar to that with the single time constant, except that two timer constants must be set.

For marginal overloading, heat will flow from the windings into the bulk of the insulating oil. Therefore, at low current, the replica curve is dominated by the long time constant for the oil. This provides protection against a general rise in oil temperature.

For severe overloading, heat accumulates in the transformer windings, with little opportunity for dissipation into the surrounding insulating oil. Therefore at high current levels, the replica curve is dominated by the short time constant for the windings. This provides protection against hot spots developing within the transformer windings.

Overall, the dual time constant characteristic serves to protect the winding insulation from ageing and to minimise gas production by overheated oil. Note however that the thermal model does not compensate for the effects of ambient temperature change.

The dual time constant thermal characteristic is given by the equation:

$$0.4e^{(-t/\tau_1)} + 0.6e^{(-t/\tau_2)} = \left[\frac{I^2 - (KI_{FLC})^2}{I^2 - I_p^2} \right]$$

where:

- τ_1 = heating and cooling time constant of the transformer windings
- τ_2 = heating and cooling time constant of the insulating oil

7.3 THERMAL OVERLOAD PROTECTION IMPLEMENTATION

The device incorporates a current-based thermal characteristic, using RMS load current to model heating and cooling of the protected plant. The element can be set with both alarm and trip stages.

Thermal Overload Protection is implemented in the *THERMAL OVERLOAD* column of the relevant settings group.

This column contains the settings for the characteristic type, the alarm and trip thresholds and the time constants.

7.4 THERMAL OVERLOAD PROTECTION LOGIC

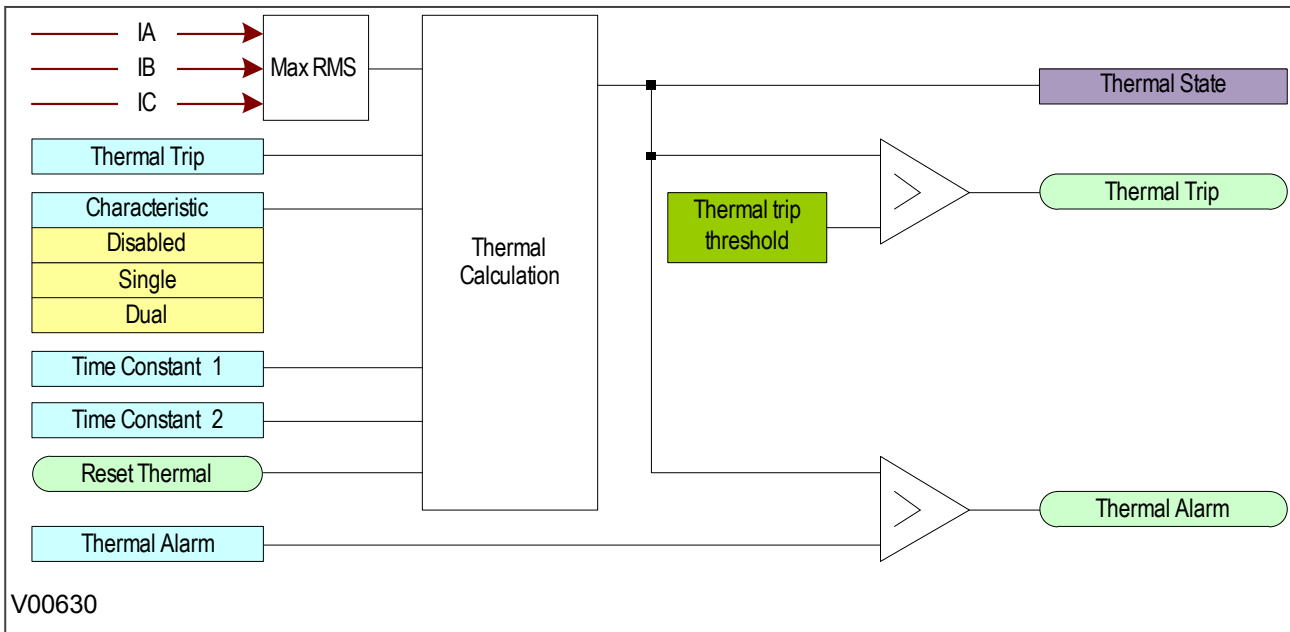


Figure 109: Thermal overload protection logic diagram

The magnitudes of the three phase input currents are compared and the largest magnitude is taken as the input to the thermal overload function. If this current exceeds the thermal trip threshold setting a start condition is asserted.

The Start signal is applied to the chosen thermal characteristic module, which has three outputs signals; alarm trip and thermal state measurement. The thermal state measurement is made available in one of the *MEASUREMENTS* columns.

The thermal state can be reset by either an opto-input (if assigned to this function using the programmable scheme logic) or the HMI panel menu.

7.5 APPLICATION NOTES

7.5.1 SETTING GUIDELINES FOR DUAL TIME CONSTANT CHARACTERISTIC


The easiest way of solving the dual time constant thermal equation is to express the current in terms of time and to use a spreadsheet to calculate the current for a series of increasing operating times using the following equation, then plotting a graph.

$$I = \sqrt{\frac{0.4I_p^2 \cdot e^{(-t/\tau_1)} + 0.6I_p^2 \cdot e^{(-t/\tau_2)} - k^2 \cdot I_{FLC}^2}{0.4e^{(-t/\tau_1)} + 0.6e^{(-t/\tau_2)} - 1}}$$

	A	B	C	D	E	F
1						
2	Time constant 1 =		300	seconds		
3	Time constant 2 =		7200	seconds		
4	Pre-overload current I_p =		0.9	per unit		
5	Full load current =		1	Amps		
6						
7	OP Time (t)	Overload current (I)				Figures based upon Equation
8	1	14.40852032				
9	1.5	11.7805774				
10	2	10.21617905				
11	2.5	9.150045407				
12	3	8.364131776				
13	3.5	7.754150044				
14	4	7.263123888				
15	4.5	6.856949012				

E00728

Figure 110: Spreadsheet calculation for dual time constant thermal characteristic

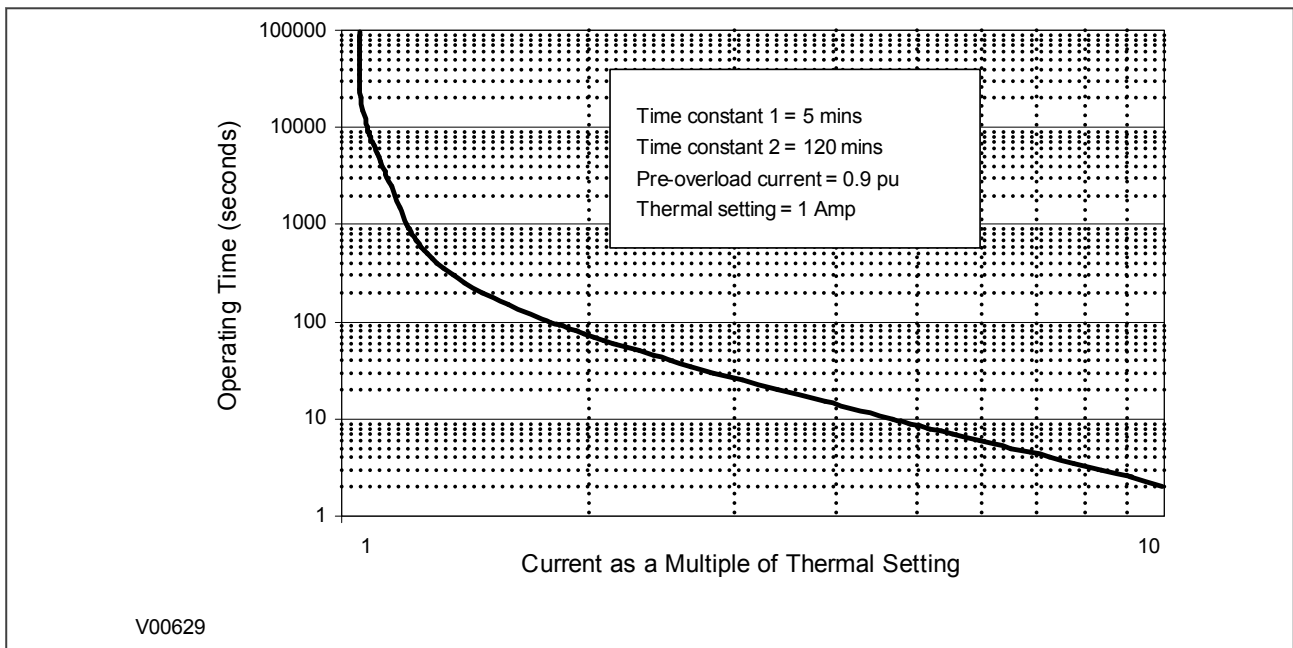

V00629

Figure 111: Dual time constant thermal characteristic

The current setting is calculated as:

Thermal Trip = Permissible continuous loading of the transformer item/CT ratio.

For an oil-filled transformer with rating 400 to 1600 kVA, the approximate time constants are:

- $\tau_1 = 5$ minutes
- $\tau_2 = 120$ minutes

An alarm can be raised on reaching a thermal state corresponding to a percentage of the trip threshold. A typical setting might be "Thermal Alarm" = 70% of thermal capacity.

Note:

The thermal time constants given in the above tables are typical only. Reference should always be made to the plant manufacturer for accurate information.

7.5.2 SETTING GUIDELINES FOR SINGLE TIME CONSTANT CHARACTERISTIC

The time to trip varies depending on the load current carried before application of the overload, i.e. whether the overload was applied from hot or cold.

The thermal time constant characteristic may be rewritten as:

$$e^{(-t/\tau)} = \left[\frac{\theta - \theta_p}{\theta - 1} \right]$$

where:

- θ = thermal state = $I^2/K^2 I_{FLC}^2$
- θ_p = pre-fault thermal state = $I_p^2/K^2 I_{FLC}^2$
- I_p is the pre-fault thermal state
- I_{FLC} is the full load current

Note:

A current of 105%Is ($K I_{FLC}$) has to be applied for several time constants to cause a thermal state measurement of 100%

The current setting is calculated as:

Thermal Trip = Permissible continuous loading of the plant item/CT ratio.

The following tables show the approximate time constant in minutes, for different cable rated voltages with various conductor cross-sectional areas, and other plant equipment.

Area mm ²	6 - 11 kV	22 kV	33 kV	66 kV
25 – 50	10 minutes	15 minutes	40 minutes	–
70 – 120	15 minutes	25 minutes	40 minutes	60 minutes
150	25 minutes	40 minutes	40 minutes	60 minutes
185	25 minutes	40 minutes	60 minutes	60 minutes
240	40 minutes	40 minutes	60 minutes	60 minutes
300	40 minutes	60 minutes	60 minutes	90 minutes

Plant type	Time Constant (Minutes)
Dry-type transformer <400 kVA	40
Dry-type transformers 400 – 800 kVA	60 - 90
Air-core Reactors	40
Capacitor Banks	10
Overhead Lines with cross section > 100 mm ²	10

Plant type	Time Constant (Minutes)
Overhead Lines	10
Busbars	60

8 BROKEN CONDUCTOR PROTECTION

One type of unbalanced fault is the 'Series' or 'Open Circuit' fault. This type of fault can arise from, among other things, broken conductors. Series faults do not cause an increase in phase current and so cannot be detected by overcurrent protection. However, they do produce an imbalance, resulting in negative phase sequence current, which can be detected.

It is possible to apply a negative phase sequence overcurrent element to detect broken conductors. However, on a lightly loaded line, the negative sequence current resulting from a series fault condition may be very close to, or less than, the full load steady state imbalance arising from CT errors and load imbalances, making it very difficult to distinguish. A regular negative sequence element would therefore not work at low load levels. To overcome this, the device incorporates a special Broken Conductor protection element.

The Broken Conductor element measures the ratio of negative to positive phase sequence current (I_2/I_1). This ratio is approximately constant with variations in load current, therefore making it more sensitive to series faults than standard negative sequence protection.

8.1 BROKEN CONDUCTOR PROTECTION IMPLEMENTATION

Broken Conductor protection is implemented in the *BROKEN CONDUCTOR* column of the relevant settings group.

This column contains the settings to enable the function, for the pickup threshold and the time delay.

8.2 BROKEN CONDUCTOR PROTECTION LOGIC

The ratio of I_2/I_1 is calculated and compared with the threshold setting. If the threshold is exceeded, the delay timer is initiated. The CTS block signal is used to block the operation of the delay timer.

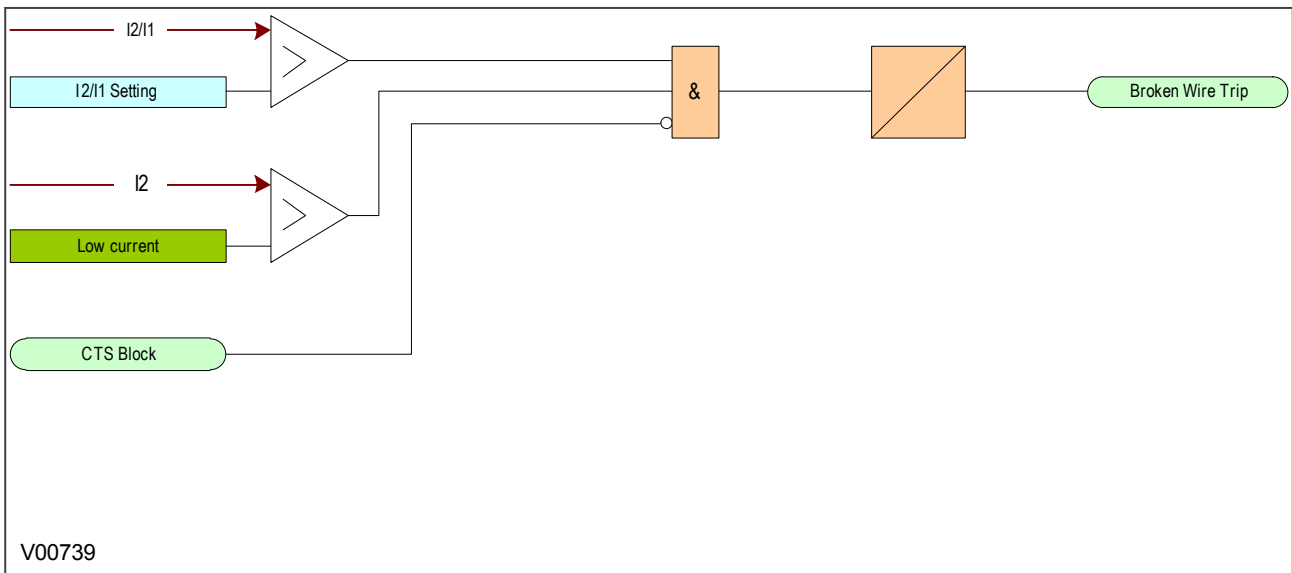


Figure 112: Broken conductor logic

8.3 APPLICATION NOTES

8.3.1 SETTING GUIDELINES

For a broken conductor affecting a single point earthed power system, there will be little zero sequence current flow and the ratio of I_2/I_1 that flows in the protected circuit will approach 100%. In the case of a multiple earthed power system (assuming equal impedances in each sequence network), the ratio I_2/I_1 will be 50%.

In practise, the levels of standing negative phase sequence current present on the system govern this minimum setting. This can be determined from a system study, or by making use of the measurement facilities at the commissioning stage. If the latter method is adopted, it is important to take the measurements during maximum system load conditions, to ensure that all single-phase loads are accounted for.

Note:

A minimum value of 8% negative phase sequence current is required for successful operation.

Since sensitive settings have been employed, we can expect that the element will operate for any unbalanced condition occurring on the system (for example, during a single pole autoreclose cycle). For this reason, a long time delay is necessary to ensure co-ordination with other protection devices. A 60 second time delay setting may be typical.

The following example was recorded by an IED during commissioning:

$$I_{full\ load} = 500A$$

$$I_2 = 50A$$

therefore the quiescent I_2/I_1 ratio = 0.1

To allow for tolerances and load variations a setting of 20% of this value may be typical: Therefore set:

$$I_2/I_1 = 0.2$$

In a double circuit (parallel line) application, using a 40% setting will ensure that the broken conductor protection will operate only for the circuit that is affected. A setting of 0.4 results in no pick-up for the parallel healthy circuit.

Set I_2/I_1 Time Delay = 60 s to allow adequate time for short circuit fault clearance by time delayed protections.

VOLTAGE PROTECTION FUNCTIONS

CHAPTER 8

1 CHAPTER OVERVIEW

The device provides a wide range of voltage protection functions. This chapter describes the operation of these functions including the principles, logic diagrams and applications.

This chapter contains the following sections:

Chapter Overview	223
Undervoltage Protection	224
Overvoltage Protection	227
Compensated Overvoltage	230
Residual Overvoltage Protection	231

2 UNDERVOLTAGE PROTECTION

Undervoltage conditions may occur on a power system for a variety of reasons, some of which are outlined below:

- Undervoltage conditions can be related to increased loads, whereby the supply voltage will decrease in magnitude. This situation would normally be rectified by voltage regulating equipment such as AVRs (Auto Voltage Regulators) or On Load Tap Changers. However, failure of this equipment to bring the system voltage back within permitted limits leaves the system with an undervoltage condition, which must be cleared.
- If the regulating equipment is unsuccessful in restoring healthy system voltage, then tripping by means of an undervoltage element is required.
- Faults occurring on the power system result in a reduction in voltage of the faulty phases. The proportion by which the voltage decreases is dependent on the type of fault, method of system earthing and its location. Consequently, co-ordination with other voltage and current-based protection devices is essential in order to achieve correct discrimination.
- Complete loss of busbar voltage. This may occur due to fault conditions present on the incomer or busbar itself, resulting in total isolation of the incoming power supply. For this condition, it may be necessary to isolate each of the outgoing circuits, such that when supply voltage is restored, the load is not connected. Therefore, the automatic tripping of a feeder on detection of complete loss of voltage may be required. This can be achieved by a three-phase undervoltage element.
- Where outgoing feeders from a busbar are supplying induction motor loads, excessive dips in the supply may cause the connected motors to stall, and should be tripped for voltage reductions that last longer than a pre-determined time.

2.1 UNDERVOLTAGE PROTECTION IMPLEMENTATION

Undervoltage Protection is implemented in the *VOLT PROTECTION* column of the relevant settings group. The Undervoltage parameters are contained within the sub-heading *UNDERVOLTAGE*.

The product provides two stages of Undervoltage protection with independent time delay characteristics.

Stage 1 provides a choice of operate characteristics, where you can select between:

- An IDMT characteristic
- DT (Definite Time)

You set this using the **V<1 Function** setting.

The IDMT characteristic is defined by the following formula:

$$t = K / (M - 1)$$

where:

- K = Time multiplier setting
- t = Operating time in seconds
- M = Measured voltage / IED setting voltage (**V<(n) Voltage Set**)

The undervoltage stages can be configured either as phase-to-neutral or phase-to-phase voltages in the **V< Measur't Mode** cell.

There is no Timer Hold facility for Undervoltage.

Stage 2 can have definite time characteristics only. This is set in the **V<2 Status** cell.

Outputs are available for single or three-phase conditions via the **V< Operate Mode** cell for each stage.

2.2 UNDERVOLTAGE PROTECTION LOGIC

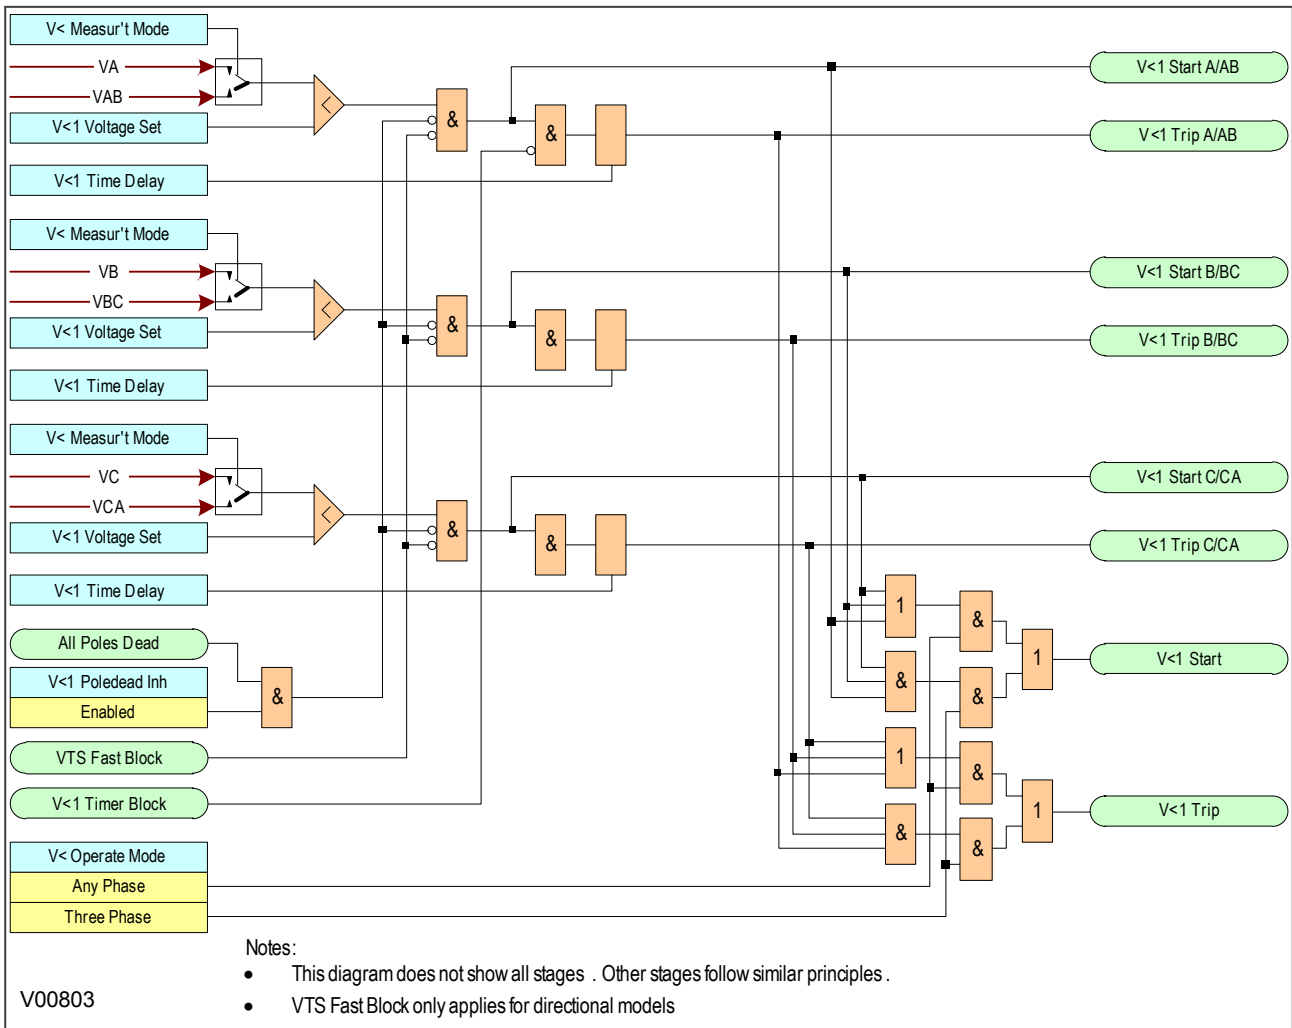


Figure 113: Undervoltage - single and three phase tripping mode (single stage)

The Undervoltage protection function detects when the voltage magnitude for a certain stage falls short of a set threshold. If this happens a **Start** signal, signifying the "Start of protection", is produced. This Start signal can be blocked by the **VTS Fast Block** signal and an **All Poles Dead** signal. This **Start** signal is applied to the timer module to produce the **Trip** signal, which can be blocked by the undervoltage timer block signal (**V<n> Timer Block**). For each stage, there are three Phase undervoltage detection modules, one for each phase. The three **Start** signals from each of these phases are OR'd together to create a 3-phase Start signal (**V<n> Start**), which can be activated when any of the three phases start (Any Phase), or when all three phases start (Three Phase), depending on the chosen **V<n> Operate Mode** setting.

The outputs of the timer modules are the trip signals which are used to drive the tripping output relay. These tripping signals are also OR'd together to create a 3-phase Trip signal, which are also controlled by the **V<n> Operate Mode** setting.

If any one of the above signals is low, or goes low before the timer has counted out, the timer module is inhibited (effectively reset) until the blocking signal goes high.

In some cases, we do not want the undervoltage element to trip; for example, when the protected feeder is de-energised, or the circuit breaker is opened, an undervoltage condition would obviously be detected, but we would not want to start protection. To cater for this, an **All Poles Dead** signal blocks the **Start** signal for each phase. This is controlled by the **V<n>Poleddead Inh** cell, which is included for each of the stages. If the cell is enabled, the relevant stage will be blocked by the integrated pole dead logic. This logic produces an

output when it detects either an open circuit breaker via auxiliary contacts feeding the opto-inputs or it detects a combination of both undercurrent and undervoltage on any one phase.

2.3 APPLICATION NOTES

2.3.1 UNDERVOLTAGE SETTING GUIDELINES

In most applications, undervoltage protection is not required to operate during system earth fault conditions. If this is the case you should select phase-to-phase voltage measurement, as this quantity is less affected by single-phase voltage dips due to earth faults.

The voltage threshold setting for the undervoltage protection should be set at some value below the voltage excursions that may be expected under normal system operating conditions. This threshold is dependent on the system in question but typical healthy system voltage excursions may be in the order of 10% of nominal value.

The same applies to the time setting. The required time delay is dependent on the time for which the system is able to withstand a reduced voltage.

If motor loads are connected, then a typical time setting may be in the order of 0.5 seconds.

3 OVERVOLTAGE PROTECTION

Overvoltage conditions are generally related to loss of load conditions, whereby the supply voltage increases in magnitude. This situation would normally be rectified by voltage regulating equipment such as AVRs (Auto Voltage Regulators) or On Load Tap Changers. However, failure of this equipment to bring the system voltage back within permitted limits leaves the system with an overvoltage condition which must be cleared.

Note:

During earth fault conditions on a power system there may be an increase in the healthy phase voltages. Ideally, the system should be designed to withstand such overvoltages for a defined period of time.

3.1 OVERVOLTAGE PROTECTION IMPLEMENTATION

Overvoltage Protection is implemented in the *VOLT PROTECTION* column of the relevant settings group. The Overvoltage parameters are contained within the sub-heading *OVERVOLTAGE*.

The product provides two stages of overvoltage protection with independent time delay characteristics.

Stage 1 provides a choice of operate characteristics, where you can select between:

- An IDMT characteristic
- DT (Definite Time)

You set this using the **V>1 Function** setting.

The IDMT characteristic is defined by the following formula:

$$t = K / (M - 1)$$

where:

- K = Time multiplier setting
- t = Operating time in seconds
- M = Measured voltage setting voltage (**V>(n) Voltage Set**)

The overvoltage stages can be configured either as phase-to-neutral or phase-to-phase voltages in the **V> Measur't Mode** cell.

There is no Timer Hold facility for Overvoltage.

Stage 2 can have definite time characteristics only. This is set in the **V>2 Status** cell.

Outputs are available for single or three-phase conditions via the **V> Operate Mode** cell for each stage.

3.2 OVERVOLTAGE PROTECTION LOGIC

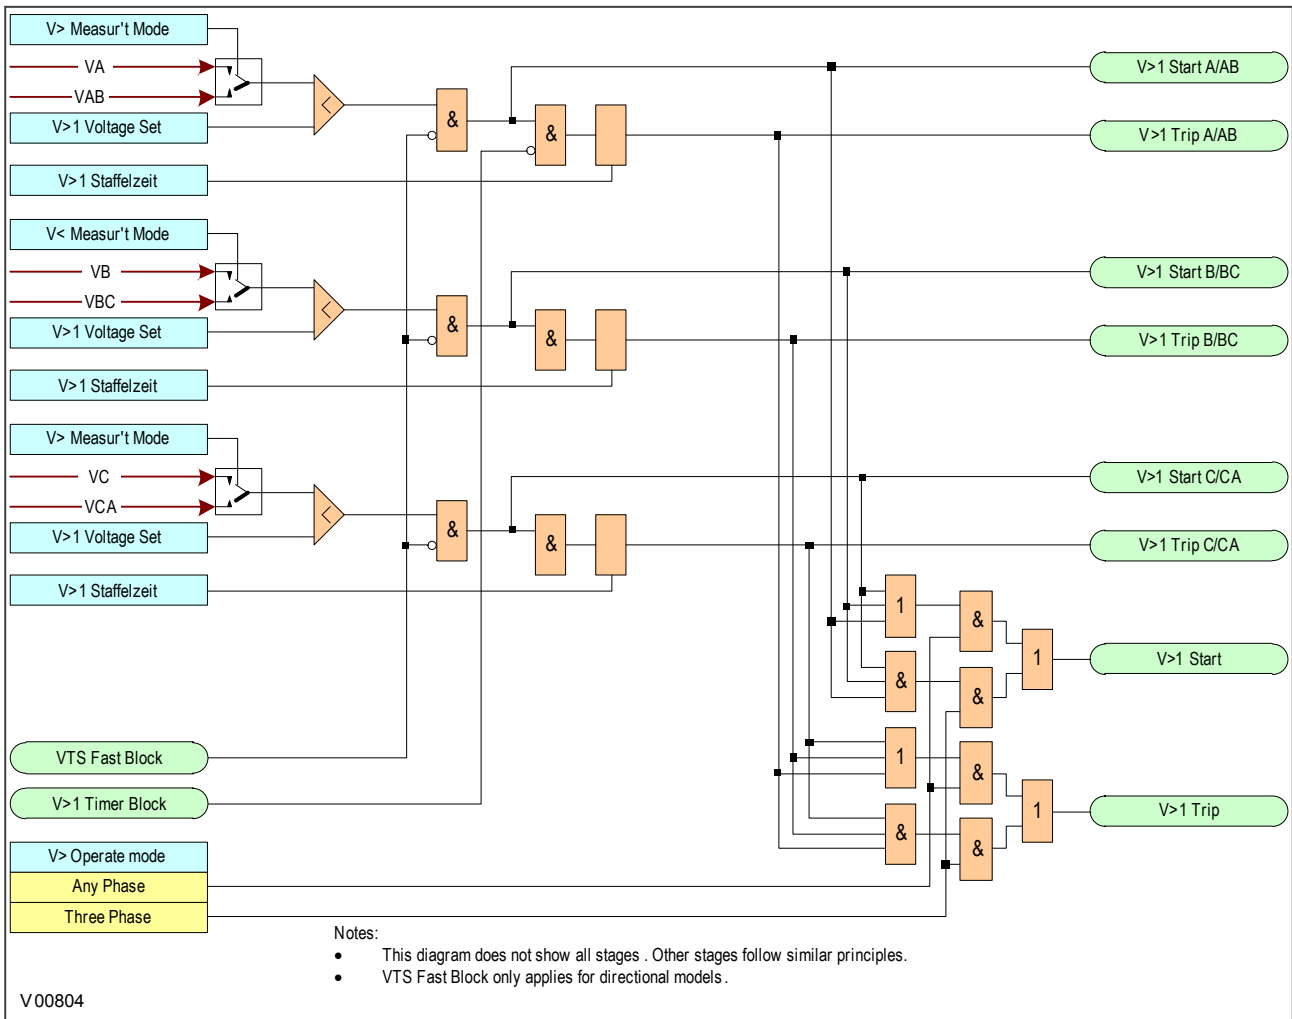


Figure 114: Overvoltage - single and three phase tripping mode (single stage)

The Overvoltage protection function detects when the voltage magnitude for a certain stage exceeds a set threshold. If this happens a **Start** signal, signifying the "Start of protection", is produced. This Start signal can be blocked by the **VTS Fast Block** signal. This start signal is applied to the timer module to produce the **Trip** signal, which can be blocked by the overvoltage timer block signal (**V>(n) Timer Block**). For each stage, there are three Phase overvoltage detection modules, one for each phase. The three **Start** signals from each of these phases are OR'd together to create a 3-phase Start signal (**V>(n) Start**), which can then be activated when any of the three phases start (Any Phase), or when all three phases start (Three Phase), depending on the chosen **V> Operate Mode** setting.

The outputs of the timer modules are the trip signals which are used to drive the tripping output relay. These tripping signals are also OR'd together to create a 3-phase Trip signal, which are also controlled by the **V> Operate Mode** setting.

If any one of the above signals is low, or goes low before the timer has counted out, the timer module is inhibited (effectively reset) until the blocking signal goes high.

3.3 APPLICATION NOTES

3.3.1 OVERVOLTAGE SETTING GUIDELINES

The provision of multiple stages and their respective operating characteristics allows for a number of possible applications:

- Definite Time can be used for both stages to provide the required alarm and trip stages.
- Use of the IDMT characteristic allows grading of the time delay according to the severity of the overvoltage. As the voltage settings for both of the stages are independent, the second stage could then be set lower than the first to provide a time-delayed alarm stage.
- If only one stage of overvoltage protection is required, or if the element is required to provide an alarm only, the remaining stage may be disabled.

This type of protection must be co-ordinated with any other overvoltage devices at other locations on the system.

4 COMPENSATED OVERVOLTAGE

The Compensated Overvoltage function calculates the positive sequence voltage at the remote terminal using the positive sequence local current and voltage and the line impedance and susceptance. This can be used on long transmission lines where Ferranti Overvoltages can develop under remote circuit breaker open conditions.

The Compensated overvoltage protection function can be set in the *VOLT PROTECTION* column under the sub heading *COMP OVERVOLTAGE*. The remote voltage is calculated using line impedance settings and the line charging admittance in the *LINE PARAMETERS* column.

The IED uses the [A,B,C,D] transmission line equivalent model given the following parameters:

- Total Impedance $Z = z \angle \theta$ ohms
- Total Susceptance $Y = y \angle -90^\circ$
- Line Length l

The remote voltage is calculated using the following equations:

$$\begin{bmatrix} \bar{V}_r \\ \bar{I}_r \end{bmatrix} = \begin{bmatrix} D-C \\ -BA \end{bmatrix} \times \begin{bmatrix} \bar{V}_s \\ \bar{I}_s \end{bmatrix}$$

where

- V_r is the voltage at the receiving end
- I_r is the current at the receiving end
- V_s is the measured voltage at the sending end
- I_s is the measured current at the sending end
- $A = D = \cosh(y.l)$
- $B = Z_c \cdot \sinh(y.l)$
- $C = Y_c \cdot \sinh(y.l)$
- $y.l = \sqrt{(Z \cdot Y)}$
- $Z_c = 1/Y_c = \sqrt{(Z/Y)}$
- Y = total line capacitive charging susceptance
- Z_c = characteristic impedance of the line (surge impedance)

There are two stages to provide both alarm and trip stages where required. Both stages can be set independently.

Stage 1 can be set to *IDMT*, *DT* or *Disabled*, in the **V1>1 Cmp Funct** cell. Stage 2 is *DT* only and is enabled or disabled in the **V1>2 Cmp Status** cell.

The IDMT characteristic on the first stage is defined by the following formula:

$$t = K / (M - 1)$$

where:

- K = Time multiplier setting
- t = Operating time in seconds
- M = Remote Calculated voltage / IED setting voltage

5 RESIDUAL OVERVOLTAGE PROTECTION

On a healthy three-phase power system, the sum of the three-phase to earth voltages is nominally zero, as it is the vector sum of three balanced vectors displaced from each other by 120°. However, when an earth fault occurs on the primary system, this balance is upset and a residual voltage is produced. This condition causes a rise in the neutral voltage with respect to earth. Consequently this type of protection is also commonly referred to as 'Neutral Voltage Displacement' or NVD for short.

This residual voltage may be derived (from the phase voltages) or measured (from a measurement class open delta VT). Derived values will normally only be used where the model does not support measured functionality (a dedicated measurement class VT). If a measurement class VT is used to produce a measured Residual Voltage, it cannot be used for other features such as Check Synchronisation.

This offers an alternative means of earth fault detection, which does not require any measurement of current. This may be particularly advantageous in high impedance earthed or insulated systems, where the provision of core balanced current transformers on each feeder may be either impractical, or uneconomic, or for providing earth fault protection for devices with no current transformers.

5.1 RESIDUAL OVERVOLTAGE PROTECTION IMPLEMENTATION

Residual Overvoltage Protection is implemented in the *RESIDUAL O/V NVD* column of the relevant settings group.

Some applications require more than one stage. For example an insulated system may require an alarm stage and a trip stage. It is common in such a case for the system to be designed to withstand the associated healthy phase overvoltages for a number of hours following an earth fault. In such applications, an alarm is generated soon after the condition is detected, which serves to indicate the presence of an earth fault on the system. This gives time for system operators to locate and isolate the fault. The second stage of the protection can issue a trip signal if the fault condition persists.

The product provides two stages of Residual Overvoltage protection with independent time delay characteristics.

Stage 1 provides a choice of operate characteristics, where you can select between:

- An IDMT characteristic
- DT (Definite Time)

The IDMT characteristic is defined by the following formula:

$$t = K / (M - 1)$$

where:

- K= Time multiplier setting
- t = Operating time in seconds
- M = Derived residual voltage setting voltage (**VN> Voltage Set**)

You set this using the **VN>1 Function** setting.

Stage 1 also provides a Timer Hold facility.

Stage 2 can have definite time characteristics only. This is set in the **VN>2 status** cell

The device derives the residual voltage internally from the three-phase voltage inputs supplied from either a 5-limb VT or three single-phase VTs. These types of VT design provide a path for the residual flux and consequently permit the device to derive the required residual voltage. In addition, the primary star point of the VT must be earthed. Three-limb VTs have no path for residual flux and are therefore unsuitable for this type of protection.

5.2 RESIDUAL OVERVOLTAGE LOGIC

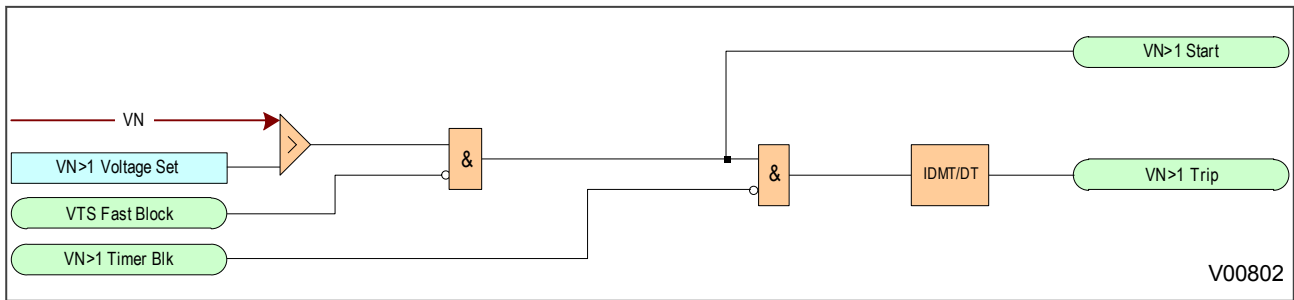


Figure 115: Residual Overvoltage logic

The Residual Overvoltage module (VN>) is a level detector that detects when the voltage magnitude exceeds a set threshold, for each stage. When this happens, the comparator output produces a **Start** signal (**VN>(n) Start**), which signifies the "Start of protection". This can be blocked by a **VTS Fast block** signal. This **Start** signal is applied to the timer module. The output of the timer module is the **VN> (n) Trip** signal which is used to drive the tripping output relay.

5.3 APPLICATION NOTES

5.3.1 CALCULATION FOR SOLIDLY EARTHED SYSTEMS

Consider a Phase-A to Earth fault on a simple radial system.

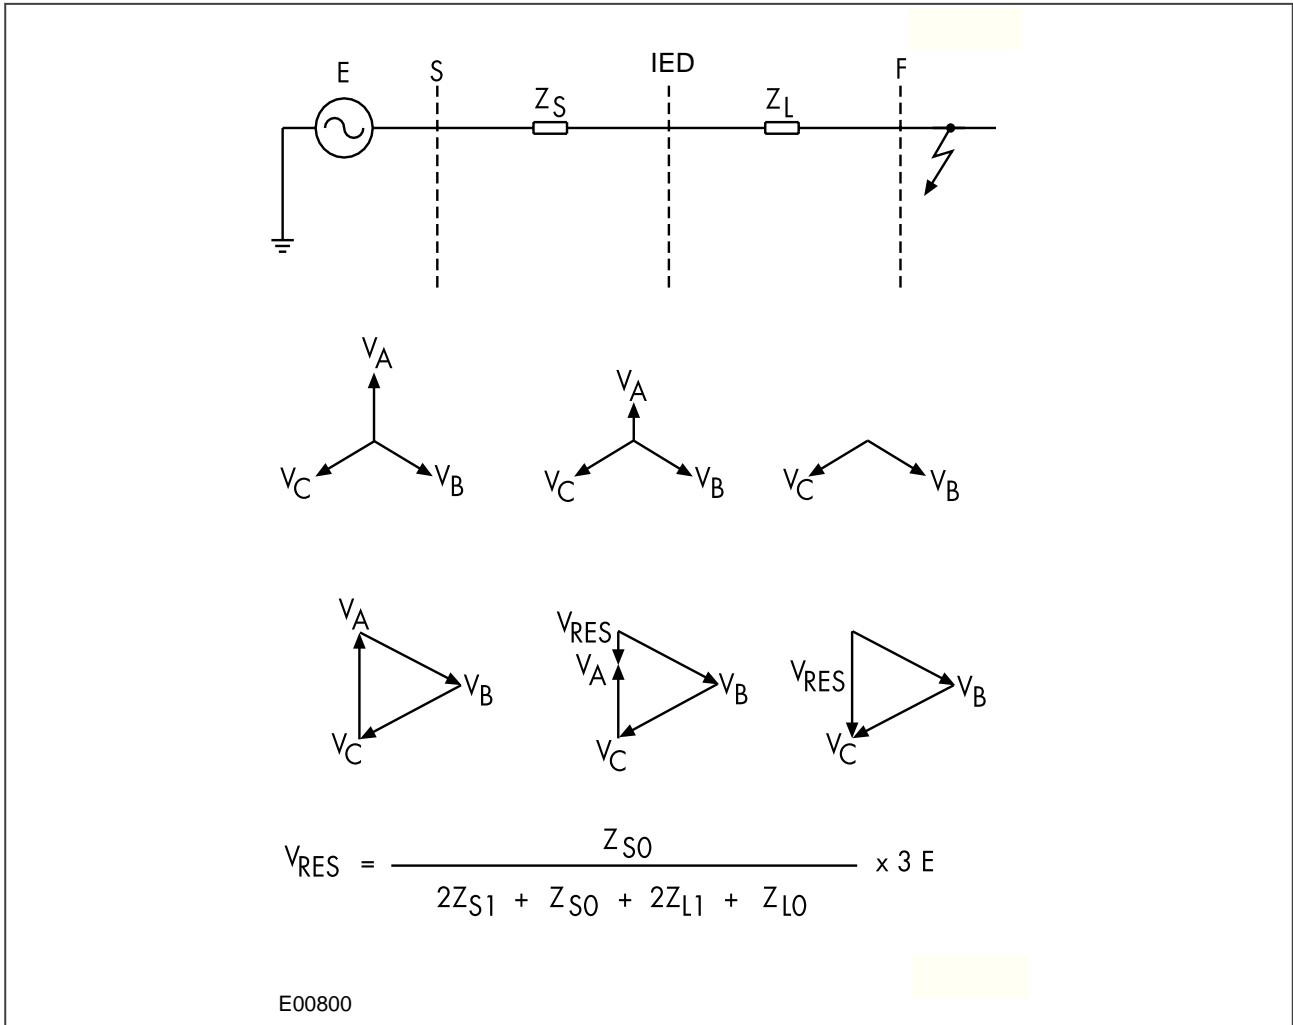


Figure 116: Residual voltage for a solidly earthed system

As can be seen from the above diagram, the residual voltage measured on a solidly earthed system is solely dependent on the ratio of source impedance behind the protection to the line impedance in front of the protection, up to the point of fault. For a remote fault far away, the Z_S/Z_L ratio will be small, resulting in a correspondingly small residual voltage. Therefore, the protection only operates for faults up to a certain distance along the system. The maximum distance depends on the device setting.

5.3.2 CALCULATION FOR IMPEDANCE EARTHED SYSTEMS

Consider a Phase-A to Earth fault on a simple radial system.

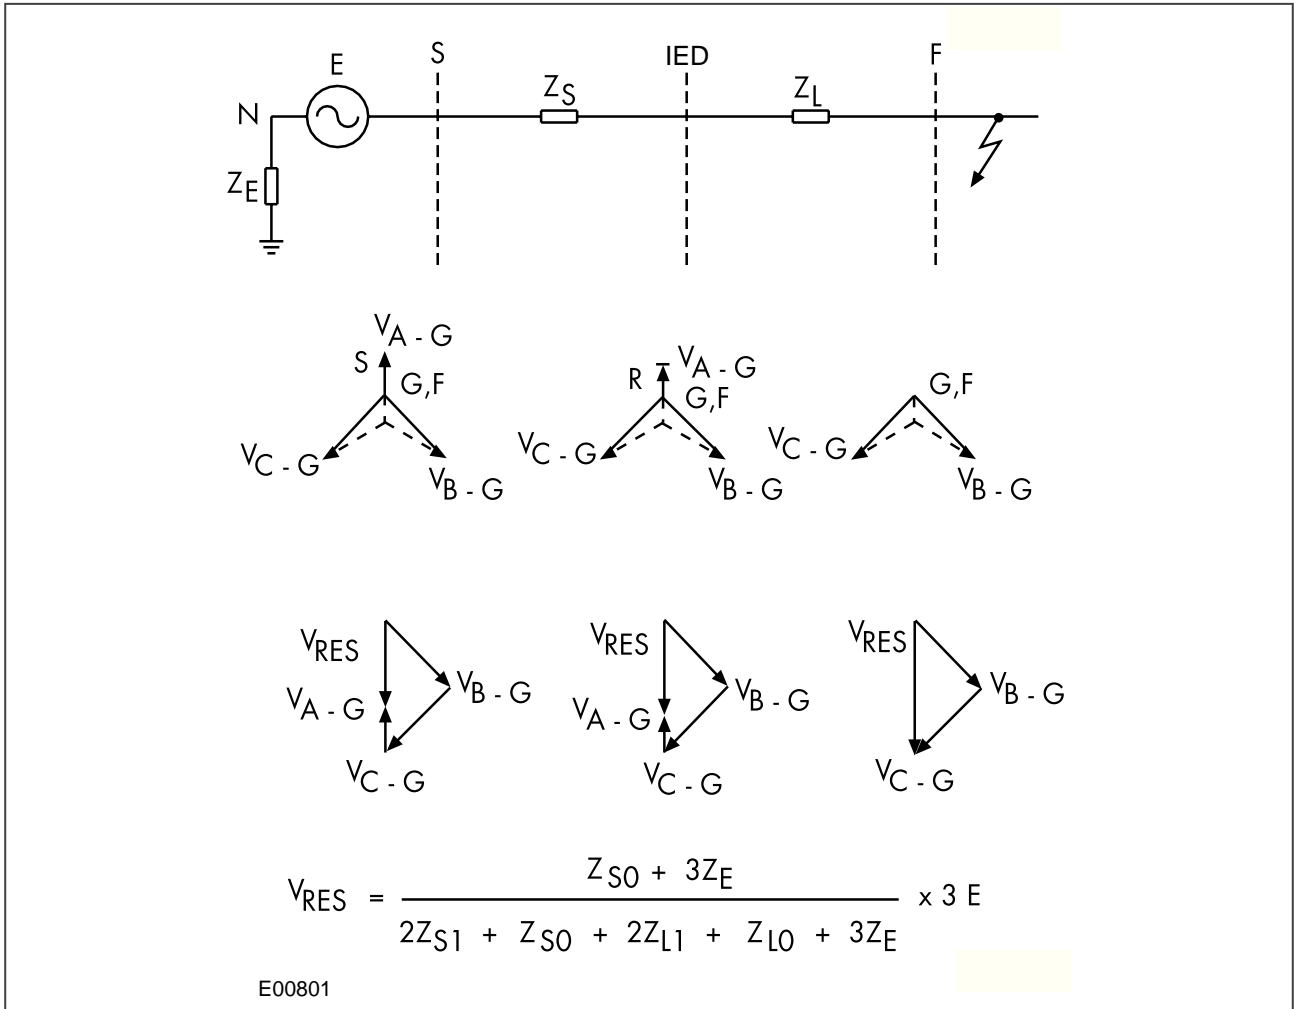


Figure 117: Residual voltage for an impedance earthed system

An impedance earthed system will always generate a relatively large degree of residual voltage, as the zero sequence source impedance now includes the earthing impedance. It follows then that the residual voltage generated by an earth fault on an insulated system will be the highest possible value (3 x phase-neutral voltage), as the zero sequence source impedance is infinite.

5.3.3 SETTING GUIDELINES

The voltage setting applied to the elements is dependent on the magnitude of residual voltage that is expected to occur during the earth fault condition. This in turn is dependent on the method of system earthing employed.

Also, you must ensure that the protection setting is set above any standing level of residual voltage that is present on the system.

FREQUENCY PROTECTION FUNCTIONS

CHAPTER 9

1 CHAPTER OVERVIEW

The device provides a range of frequency protection functions. This chapter describes the operation of these functions including the principles, logic diagrams and applications.

This chapter contains the following sections:

Chapter Overview	237
Frequency Protection	238
Independent R.O.C.O.F Protection	241

2 FREQUENCY PROTECTION

Power generation and utilisation needs to be well balanced in any industrial, distribution or transmission network. These electrical networks are dynamic entities, with continually varying loads and supplies, which are continually affecting the system frequency. Increased loading reduces the system frequency and generation needs to be increased to maintain the frequency of the supply. Conversely decreased loading increases the system frequency and generation needs to be reduced. Sudden fluctuations in load can cause rapid changes in frequency, which need to be dealt with quickly.

Unless corrective measures are taken at the appropriate time, frequency decay can go beyond the point of no return and cause widespread network collapse, which has dire consequences.

Normally, generators are rated for a particular band of frequency. Operation outside this band can cause mechanical damage to the turbine blades. Protection against such contingencies is required when frequency does not improve even after load shedding steps have been taken. This type of protection can be used for operator alarms or turbine trips in case of severe frequency decay.

Clearly a range of methods is required to ensure system frequency stability. The frequency protection in this device provides both underfrequency and overfrequency protection.

Frequency Protection is implemented in the *FREQ PROTECTION* column of the relevant settings group.

2.1 UNDERFREQUENCY PROTECTION

A reduced system frequency implies that the net load is in excess of the available generation. Such a condition can arise, when an interconnected system splits, and the load left connected to one of the subsystems is in excess of the capacity of the generators in that particular subsystem. Industrial plants that are dependent on utilities to supply part of their loads will experience underfrequency conditions when the incoming lines are lost.

Many types of industrial loads have limited tolerances on the operating frequency and running speeds (e.g. synchronous motors). Sustained underfrequency has implications on the stability of the system, whereby any subsequent disturbance may damage equipment and even lead to blackouts. It is therefore essential to provide protection for underfrequency conditions.

2.1.1 UNDERFREQUENCY PROTECTION IMPLEMENTATION

Simple underfrequency Protection is configured in the *FREQ PROTECTION* column of the relevant settings group.

The device provides 4 stages of underfrequency protection. The function uses the following settings (shown for stage 1 only - other stages follow the same principles).

- ***F<1 Status***: enables or disables underfrequency protection for the relevant stage
- ***F<1 Setting***: defines the frequency pickup setting
- ***F<1 Time Delay***: sets the time delay

2.1.2 UNDERFREQUENCY PROTECTION LOGIC

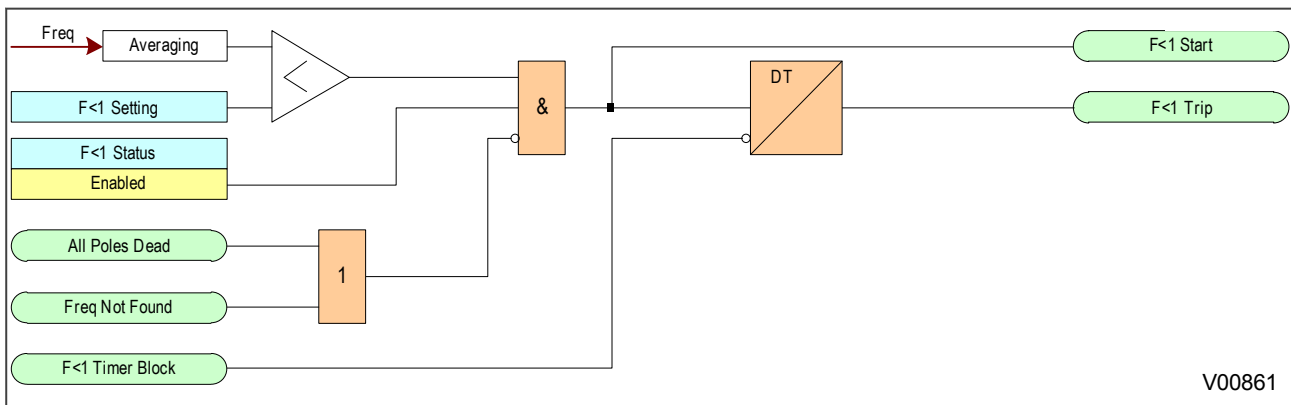


Figure 118: Underfrequency logic (single stage)

If the frequency is below the setting and not blocked the DT timer is started. If the frequency cannot be determined, the function is blocked.

2.1.3 APPLICATION NOTES

2.1.3.1 SETTING GUIDELINES

In order to minimise the effects of underfrequency, a multi-stage load shedding scheme may be used with the plant loads prioritised and grouped. During an underfrequency condition, the load groups are disconnected sequentially, with the highest priority group being the last one to be disconnected.

The effectiveness of each load shedding stage depends on the proportion of power deficiency it represents. If the load shedding stage is too small compared with the prevailing generation deficiency, then there may be no improvement in the frequency. This should be taken into account when forming the load groups.

Time delays should be sufficient to override any transient dips in frequency, as well as to provide time for the frequency controls in the system to respond. These should not be excessive as this could jeopardize system stability. Time delay settings of 5 - 20 s are typical.

The protection function should be set so that declared frequency-time limits for the generating set are not infringed. Typically, a 10% underfrequency condition should be continuously sustainable.

2.2 OVERFREQUENCY PROTECTION

An increased system frequency arises when the mechanical power input to a generator exceeds the electrical power output. This could happen, for instance, when there is a sudden loss of load due to tripping of an outgoing feeder from the plant to a load centre. Under such conditions, the governor would normally respond quickly to obtain a balance between the mechanical input and electrical output, thereby restoring normal frequency. Overfrequency protection is required as a backup to cater for cases where the reaction of the control equipment is too slow.

2.2.1 OVERFREQUENCY PROTECTION IMPLEMENTATION

Simple overfrequency Protection is configured in the FREQ PROTECTION column of the relevant settings group.

The device provides 2 stages of overfrequency protection. The function uses the following settings (shown for stage 1 only - other stages follow the same principles).

- **F>1 Status:** enables or disables underfrequency protection for the relevant stage
- **F>1 Setting:** defines the frequency pickup setting
- **F>1 Time Delay:** sets the time delay

2.2.2 OVERFREQUENCY PROTECTION LOGIC

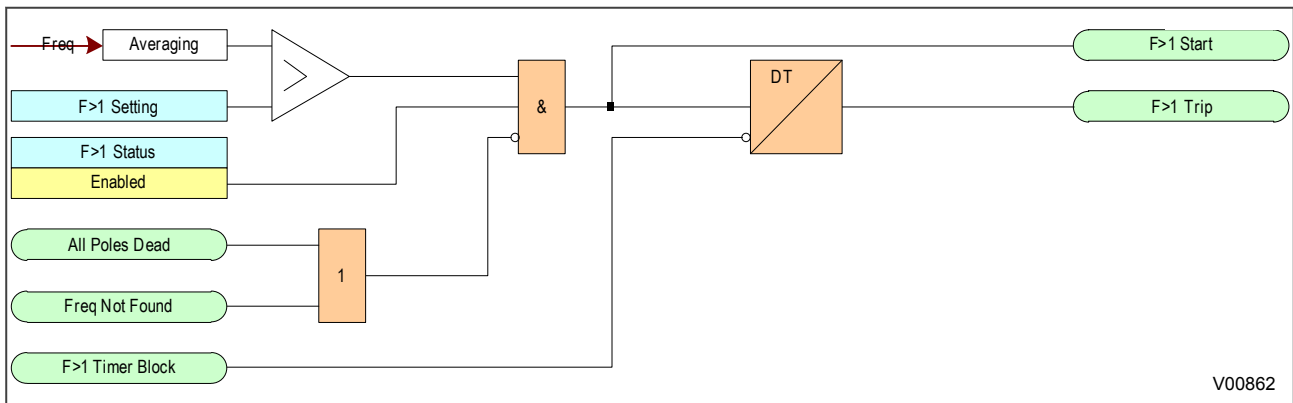


Figure 119: Overfrequency logic (single stage)

If the frequency is above the setting and not blocked, the DT timer is started and after this has timed out, the trip is produced. If the frequency cannot be determined, the function is blocked.

2.2.3 APPLICATION NOTES

2.2.3.1 SETTING GUIDELINES

Following changes on the network caused by faults or other operational requirements, it is possible that various subsystems will be formed within the power network. It is likely that these subsystems will suffer from a generation/load imbalance. The "islands" where generation exceeds the existing load will be subject to overfrequency conditions. Severe over frequency conditions may be unacceptable to many industrial loads, since running speeds of motors will be affected. The overfrequency element can be suitably set to sense this contingency.

3 INDEPENDENT R.O.C.O.F PROTECTION

Where there are very large loads, imbalances may occur that result in rapid decline in system frequency. The situation could be so bad that shedding one or two stages of load is unlikely to stop this rapid frequency decline. In such a situation, standard underfrequency protection will normally have to be supplemented with protection that responds to the rate of change of frequency. An element is therefore required which identifies the high rate of decline of frequency, and adapts the load shedding scheme accordingly.

Such protection can identify frequency variations occurring close to nominal frequency thereby providing early warning of a developing frequency problem. The element can also be used as an alarm to warn operators of unusually high system frequency variations.

3.1 INDEPENDENT R.O.C.O.F PROTECTION IMPLEMENTATION

The device provides four independent stages of protection. Each stage can respond to either rising or falling frequency conditions. This depends on whether the frequency threshold is set above or below the system nominal frequency. For example, if the frequency threshold is set above nominal frequency, the rate of change of frequency setting is considered as positive and the element will operate for rising frequency conditions. If the frequency threshold is set below nominal frequency, the setting is considered as negative and the element will operate for falling frequency conditions.

The function uses the following settings (shown for stage 1 only - other stages follow the same principles).

- **df/dt Avg. Cycles** calculates the rate of change of frequency over a fixed period of several cycles.
- **df/dt>1 Status**: determines whether the stage is for falling or rising frequency conditions
- **df/dt>1 Setting**: defines the rate of change of frequency pickup setting
- **df/dt>1 Time**: sets the time delay
- **df/dt>1 Dir'n**: sets the direction of change you wish to check (positive, negative, or both)

In addition, start, trip and timer block DDB signals are available for each stage, as well as an inhibit signal to inhibit all four stages.

3.2 INDEPENDENT R.O.C.O.F PROTECTION LOGIC

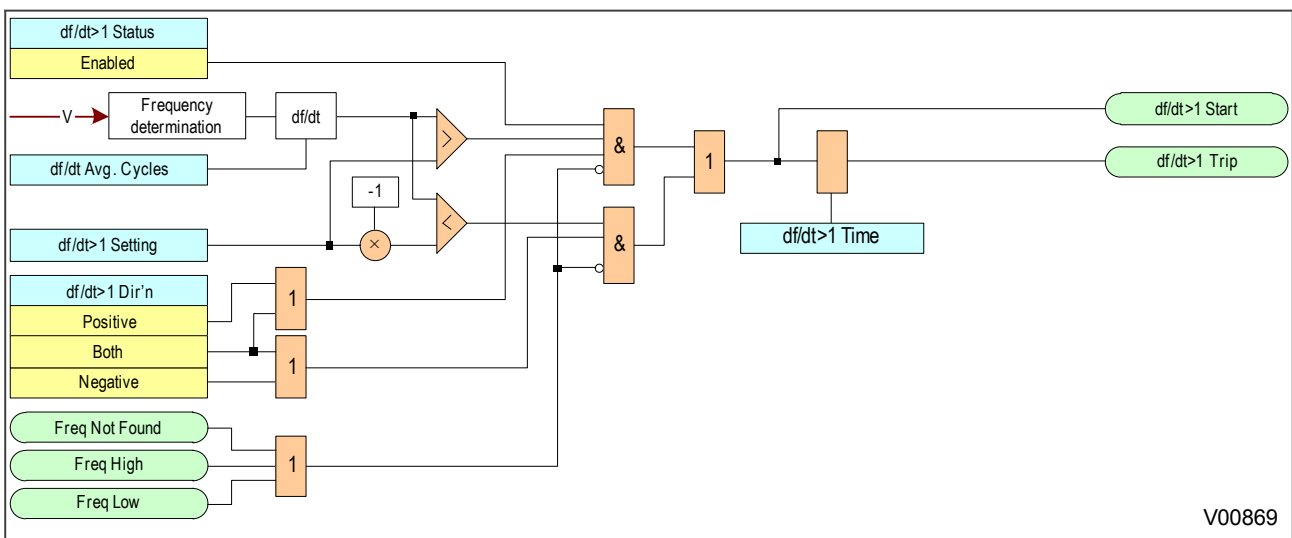


Figure 120: Rate of change of frequency logic (single stage)

MONITORING AND CONTROL

CHAPTER 10

1 CHAPTER OVERVIEW

As well as providing a range of protection functions, the product includes comprehensive monitoring and control functionality.

This chapter contains the following sections:

Chapter Overview	245
Event Records	246
Disturbance Recorder	250
Measurements	251
CB Condition Monitoring	252
CB State Monitoring	263
Circuit Breaker Control	265
Pole Dead Function	271
System Checks	273

2 EVENT RECORDS

Alstom Grid devices record events in an event log. This allows you to establish the sequence of events that led up to a particular situation. For example, a change in a digital input signal or protection element output signal would cause an event record to be created and stored in the event log. This could be used to analyse how a particular power system condition was caused. These events are stored in the IED's non-volatile memory. Each event is time tagged.

The event records can be displayed on an IED's front panel but it is easier to view them through the settings application software. This can extract the events log from the device and store it as a single .evt file for analysis on a PC.

The event records are detailed in the *VIEW RECORDS* column. The first event (0) is always the latest event. After selecting the required event, you can scroll through the menus to obtain further details.

If viewing the event with the settings application software, simply open the extracted event file. All the events are displayed chronologically. Each event is summarised with a time stamp (obtained from the **Time & Date** cell) and a short description relating to the event (obtained from the **Event Text** cell). You can expand the details of the event by clicking on the + icon to the left of the time stamp.

The following table shows the correlation between the fields in the setting application software's event viewer and the cells in the menu database.

Field in Event Viewer	Equivalent cell in menu DB	Cell reference	User settable?
Left hand column header	VIEW RECORDS → Time & Date	01 03	No
Right hand column header	VIEW RECORDS → Event Text	01 04	No
Description	SYSTEM DATA → Description	00 04	Yes
Plant reference	SYSTEM DATA → Plant Reference	00 05	Yes
Model number	SYSTEM DATA → Model Number	00 06	No
Address	Displays the Courier address relating to the event	N/A	No
Event type	VIEW RECORDS → Menu Cell Ref	01 02	No
Event Value	VIEW RECORDS → Event Value	01 05	No
Evt Unique Id	VIEW RECORDS → Evt Unique ID	01 FE	No

The device is capable of storing up to 512 event records.

In addition to the event log, there are two logs which contain duplicates of the last 5 maintenance records and the last 5 fault records. The purpose of this is to provide convenient access to the most recent fault and maintenance events.

2.1 EVENT TYPES

There are several different types of event:

- Opto-input events (Change of state of opto-input)
- Contact events (Change of state of output relay contact)
- Alarm events
- Fault record events
- Standard events
- Security events

Standard events are further sub-categorised internally to include different pieces of information. These are:

- Protection events (starts and trips)
- Maintenance record events
- Platform events

Note:

The first event in the list (event 0) is the most recent event to have occurred.

2.1.1 OPTO-INPUT EVENTS

If one or more of the opto-inputs has changed state since the last time the protection algorithm ran (which runs at several times per cycle), a new event is created, which logs the logic states of all opto-inputs. You can tell which opto-input has changed state by comparing the new event with the previous one.

The description of this event type, as shown in the **Event Text** cell is always *Logic Inputs #* where # is the batch number of the opto-inputs. This is '1', for the first batch of opto-inputs and '2' for the second batch of opto-inputs (if applicable).

The event value shown in the **Event Value** cell for this type of event is a binary string. This shows the logical states of the opto-inputs, where the Least Significant Bit (LSB), on the right corresponds to the first opto-input *Input L1*.

The same information is also shown in the **Opto I/P Status** cell in the *SYSTEM DATA* column. This information is updated continuously, whereas the information in the event log is a snapshot at the time when the event was created.

2.1.2 CONTACT EVENTS

If one or more of the output relays (also known as output contacts) has changed state since the last time the protection algorithm ran (which runs at several times per cycle), a new event is created, which logs the logic states of all output relays. You can tell which output relay has changed state by comparing the new event with the previous one.

The description of this event type, as shown in the **Event Text** cell is always *Output Contacts #* where # is the batch number of the output relay contacts. This is '1', for the first batch of output contacts and '2' for the second batch of output contacts (if applicable).

The event value shown in the **Event Value** cell for this type of event is a binary string. This shows the logical states of the output relays, where the LSB (on the right) corresponds to the first output contact *Output R1*.

The same information is also shown in the **Relay O/P Status** cell in the *SYSTEM DATA* column. This information is updated continuously, whereas the information in the event log is a snapshot at the time when the event was created.

2.1.3 ALARM EVENTS

The IED monitors itself on power up and continually thereafter. If it notices any problems, it will register an alarm event.

The description of this event type, as shown in the **Event Text** cell is cell dependent on the type of alarm and will be one of those shown in the following tables, followed by *OFF* or *ON*.

The event value shown in the **Event Value** cell for this type of event is a 32 bit binary string. There are one or more banks 32 bit registers, depending on the device model. These contain all the alarm types and their logic states (*ON* or *OFF*).

The same information is also shown in the **Alarm Status (n)** cells in the *SYSTEM DATA* column. This information is updated continuously, whereas the information in the event log is a snapshot at the time when the event was created.

2.1.4 FAULT RECORD EVENTS

An event record is created for every fault the IED detects. This is also known as a fault record.

The event type description shown in the **Event Text** cell for this type of event is always *Fault Recorded*.

The IED contains a separate register containing the latest fault records. This provides a convenient way of viewing the latest fault records and saves searching through the event log. You access these fault records using the **Select Fault** setting, where fault number 0 is the latest fault.

A fault record is triggered by the **Fault REC TRIG** signal DDB, which is assigned in the PSL. The fault recorder records the values of all parameters associated with the fault for the duration of the fault. These parameters are stored in separate Courier cells, which become visible depending on the type of fault.

The fault recorder stops recording only when:

The Start signal is reset AND the undercurrent is ON OR the Trip signal is reset, as shown below:

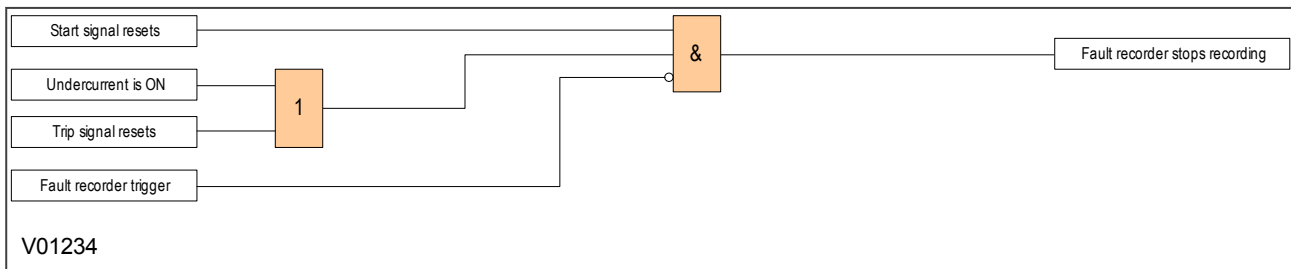


Figure 121: Fault recorder stop conditions

The event is logged as soon as the fault recorder stops. The time stamp assigned to the fault corresponds to the start of the fault. The timestamp assigned to the fault record event corresponds to the time when the fault recorder stops.

Note:

We recommend that you do not set the triggering contact to latching. This is because if you use a latching contact, the fault record would not be generated until the contact has been fully reset.

2.1.5 MAINTENANCE EVENTS

Internal failures detected by the self-test procedures are logged as maintenance records. Maintenance records are special types of standard events.

The event type description shown in the **Event Text** cell for this type of event is always *Maint Recorded*.

The **Event Value** cell also provides a unique binary code.

The IED contains a separate register containing the latest maintenance records. This provides a convenient way of viewing the latest maintenance records and saves searching through the event log. You access these fault records using the **Select Maint** setting.

The maintenance record has a number of extra menu cells relating to the maintenance event. These parameters are **Maint Text**, **Maint Type** and **Maint Data**. They contain details about the maintenance event selected with the **Select Maint** cell.

2.1.6 PROTECTION EVENTS

The IED logs protection starts and trips as individual events. Protection events are special types of standard events.

The event type description shown in the **Event Text** cell for this type of event is dependent on the protection event that occurred. Each time a protection event occurs, a DDB signal changes state. It is the name of this DDB signal followed by 'ON' or 'OFF' that appears in the **Event Text** cell.

The **Event Value** cell for this type of event is a 32 bit binary string representing the state of the relevant DDB signals. These binary strings can also be viewed in the *COMMISSION TESTS* column in the relevant DDB batch cells.

Not all DDB signals can generate an event. Those that can are listed in the *RECORD CONTROL* column. In this column, you can set which DDBs generate events.

2.1.7 SECURITY EVENTS

An event record is generated each time a setting that requires an access level is executed.

The event type description shown in the **Event Text** cell displays the type of change.

2.1.8 PLATFORM EVENTS

Platform events are special types of standard events.

The event type description shown in the **Event Text** cell displays the type of change.

3 DISTURBANCE RECORDER

The disturbance recorder feature allows you to record selected current and voltage inputs to the protection elements, together with selected digital signals. The digital signals may be inputs, outputs, or internal DDB signals. The disturbance records can be extracted using the disturbance record viewer in the settings application software. The disturbance record file can also be stored in the COMTRADE format. This allows the use of other packages to view the recorded data.

The integral disturbance recorder has an area of memory specifically set aside for storing disturbance records. The number of records that can be stored is dependent on the recording duration. The minimum duration is 0.1 s and the maximum duration is 10.5 s.

When the available memory is exhausted, the oldest records are overwritten by the newest ones.

Each disturbance record consists of a number of analogue data channels and digital data channels. The relevant CT and VT ratios for the analogue channels are also extracted to enable scaling to primary quantities.

The fault recording times are set by a combination of the **Duration** and **Trigger Position** cells. The **Duration** cell sets the overall recording time and the **Trigger Position** cell sets the trigger point as a percentage of the duration. For example, the default settings show that the overall recording time is set to 1.5 s with the trigger point being at 33.3% of this, giving 0.5 s pre-fault and 1 s post fault recording times.

With the **Trigger Mode** set to *Single*, if further triggers occurs whilst a recording is taking place, the recorder will ignore the trigger. However, with the **Trigger Mode** set to *Extended*, the post trigger timer will be reset to zero, extending the recording time.

You can select any of the IED's analogue inputs as analogue channels to be recorded. You can also map any of the opto-inputs output contacts to the digital channels. In addition, you may also map a number of DDB signals such as Starts and LEDs to digital channels.

You may choose any of the digital channels to trigger the disturbance recorder on either a low to high or a high to low transition, via the **Input Trigger** cell. The default settings are such that any dedicated trip output contacts will trigger the recorder.

It is not possible to view the disturbance records locally via the front panel LCD. You must extract these using suitable setting application software such as MiCOM S1 Agile.

4 MEASUREMENTS

4.1 MEASURED QUANTITIES

The device measures directly and calculates a number of system quantities, which are updated every second. You can view these values in the relevant MEASUREMENT columns or with the Measurement Viewer in the settings application software. Depending on the model, the device may measure and display some or more of the following quantities:

- Measured and calculated analogue current and voltage values
- Power and energy quantities
- Peak, fixed and rolling demand values
- Frequency measurements
- Thermal measurements
- Teleprotection channel measurements

4.2 MEASUREMENT SETUP

You can define the way measurements are set up and displayed using the *MEASURE'T SETUP* column and the measurements are shown in the relevant MEASUREMENTS tables.

4.3 FAULT LOCATOR

Some models provide fault location functionality. It is possible to identify the fault location by measuring the fault voltage and current magnitude and phases and presenting this information to a Fault Locator function. The fault locator is triggered whenever a fault record is generated, and the subsequent fault location data is included as part of the fault record. This information is also displayed in the **Fault Location** cell in the *VIEW RECORDS* column. This cell will display the fault location in metres, miles ohms or percentage, depending on the chosen units in the **Fault Location** cell of the *MEASURE'T SETUP* column.

The Fault Locator uses pre-fault and post-fault analogue input signals to calculate the fault location. The result is included in the fault record. The pre-fault and post-fault voltages are also presented in the fault record.

When applied to parallel circuits, mutual flux coupling can alter the impedance seen by the fault locator. The coupling contains positive, negative and zero sequence components. In practise the positive and negative sequence coupling is insignificant. The effect on the fault locator of the zero sequence mutual coupling can be eliminated using the mutual compensation feature provided.

4.4 OPTO-INPUT TIME STAMPING

Each opto-input sample is time stamped within a tolerance of +/- 1 ms with respect to the Real Time Clock. These time stamps are used for the opto event logs and for the disturbance recording. The device needs to be synchronised accurately to an external clock source such as an IRIG-B signal or a master clock signal provided in the relevant data protocol.

For both the filtered and unfiltered opto-inputs, the time stamp of an opto-input change event is the sampling time at which the change of state occurred. If multiple opto-inputs change state at the same sampling interval, these state changes are reported as a single event.

5 CB CONDITION MONITORING

The device records various statistics related to each circuit breaker trip operation, allowing an accurate assessment of the circuit breaker condition to be determined. These statistics are available in the *CB CONDITION* column. The menu cells are register values only and cannot be set directly. They may be reset, however, during maintenance. The statistics monitored are:

- **Total Current Broken:** A register stores the total amount of current that the CB has broken is stored in an accumulator, giving at any time a measure of the total amount of current that the CB has broken since the value was last reset.
- **Number of CB operations:** A counter registers the number of CB trips that have been performed for each phase, giving at any time the total number of trips that the CB has performed since the value was last reset.
- **CB Operate Time:** A register stores the total amount of time the CB has transitioned from closed to open is stored in an accumulator, giving at any time a measure of the total time that the CB has spent tripping since the values was last reset.
- **Excessive Fault Frequency:** A counter registers the number of CB trips that have been performed for all phases, giving at any time the total number of trips performed since the value was last reset.

These statistics are available in the *CB CONDITION* column. The menu cells are register values only and cannot be set directly. They may be reset, however, during maintenance.

Note:

When in Commissioning test mode the CB condition monitoring registers are not updated.

Circuit breaker lockout, can be caused by the following circuit breaker condition monitoring functions:

- Maintenance lockout
- Excessive fault frequency lockout
- Broken current lockout

If the circuit breaker is locked out, the logic generates a lockout alarm

5.1 BROKEN CURRENT ACCUMULATOR

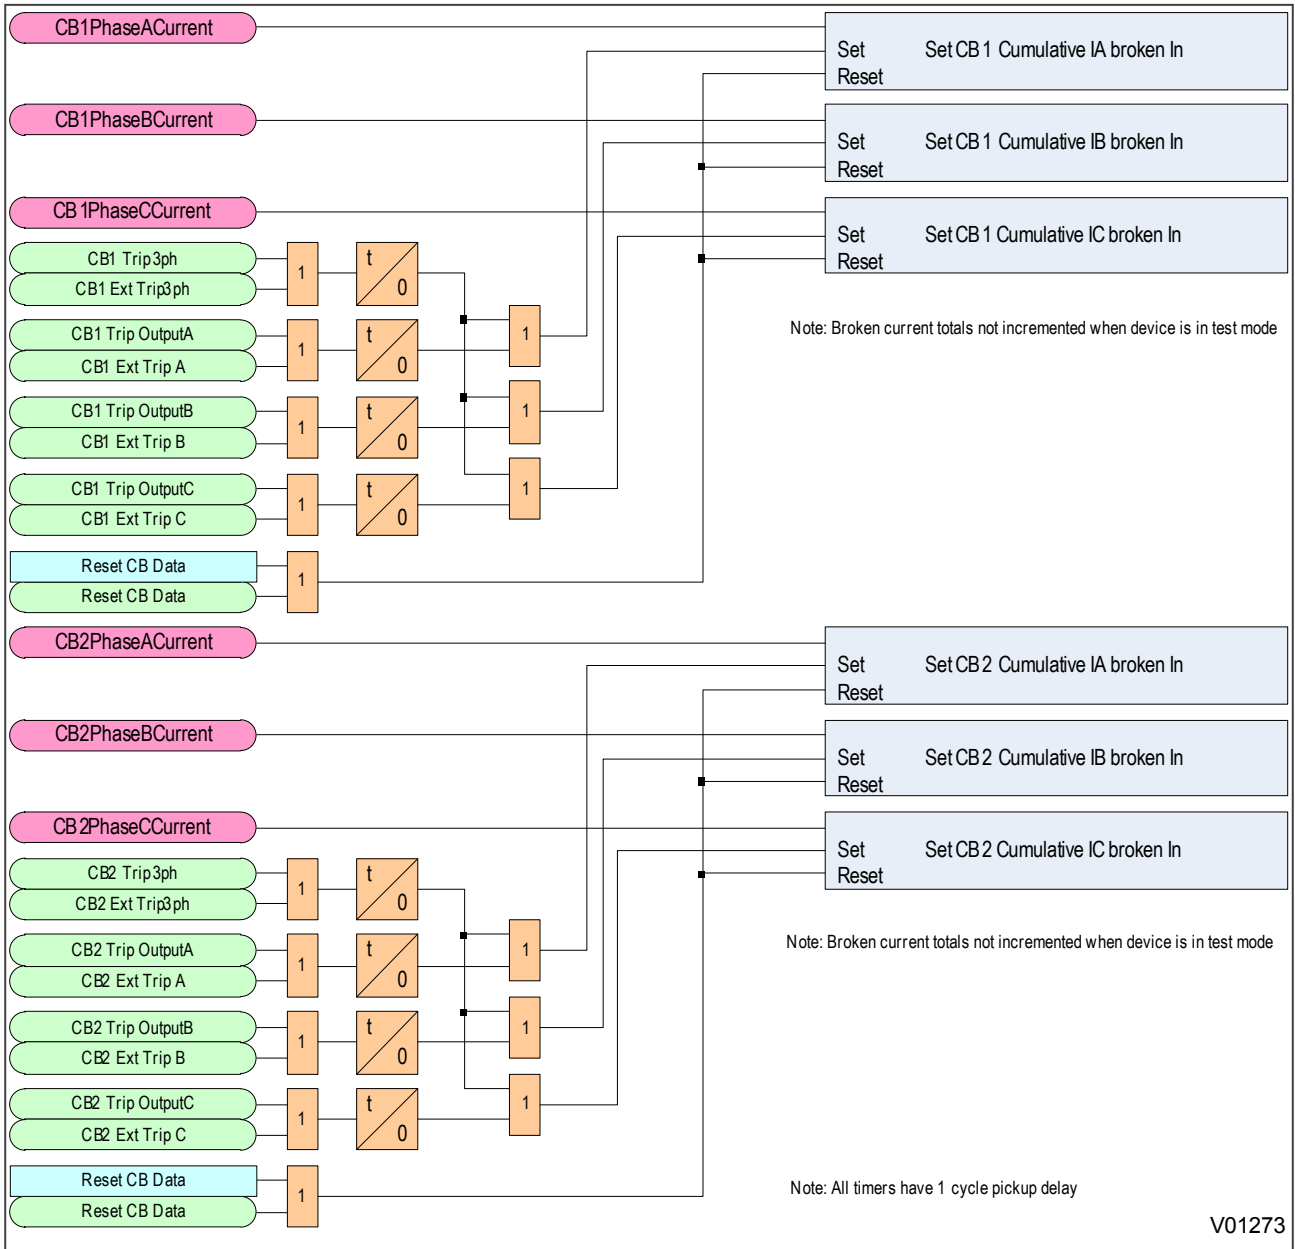


Figure 122: Broken Current Accumulator logic diagram

5.2 CB TRIP COUNTER

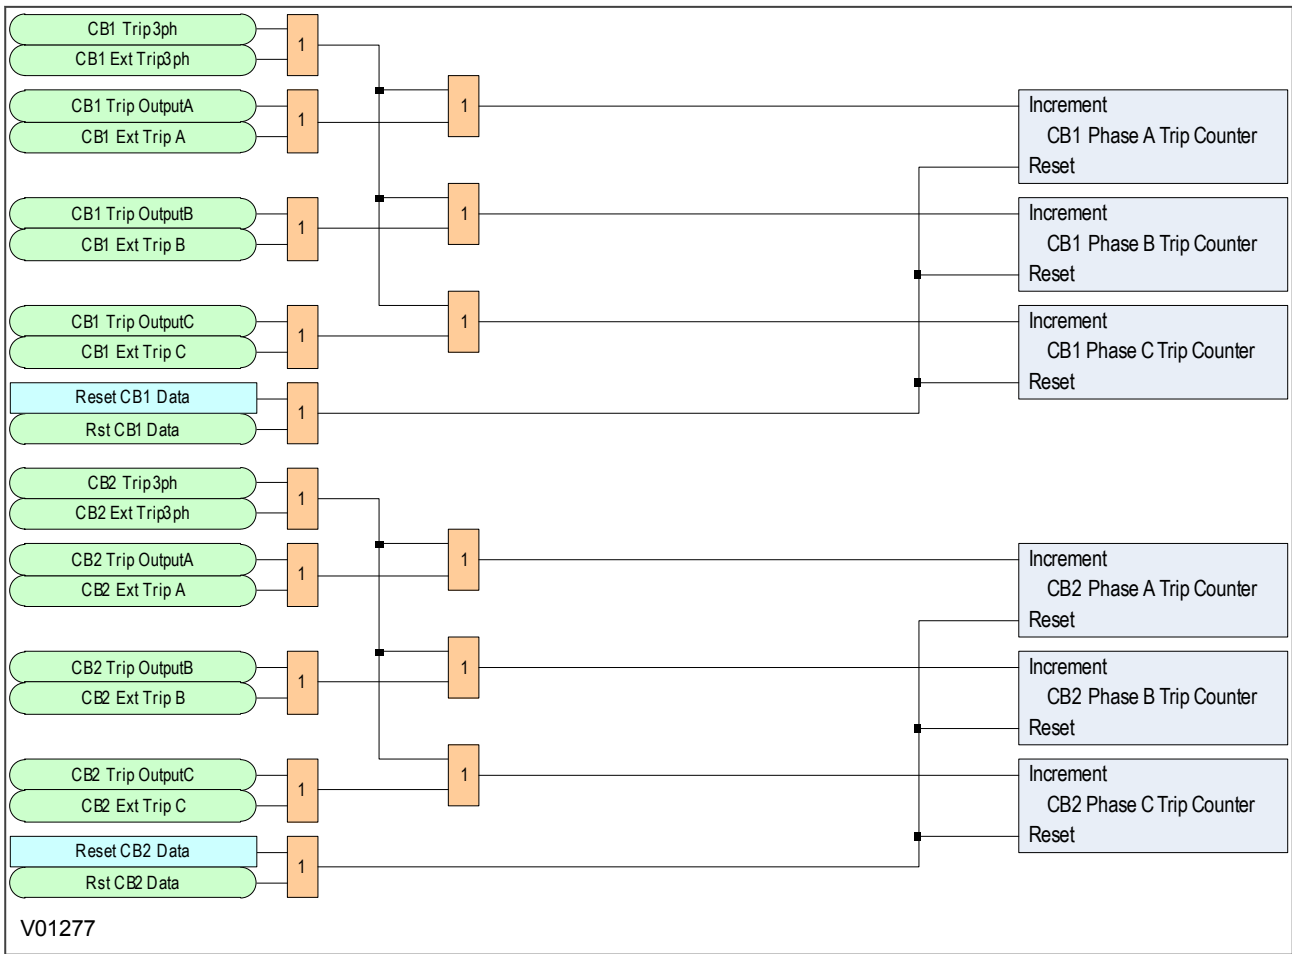


Figure 123: CB Trip Counter logic diagram

5.3 CB OPERATING TIME ACCUMULATOR

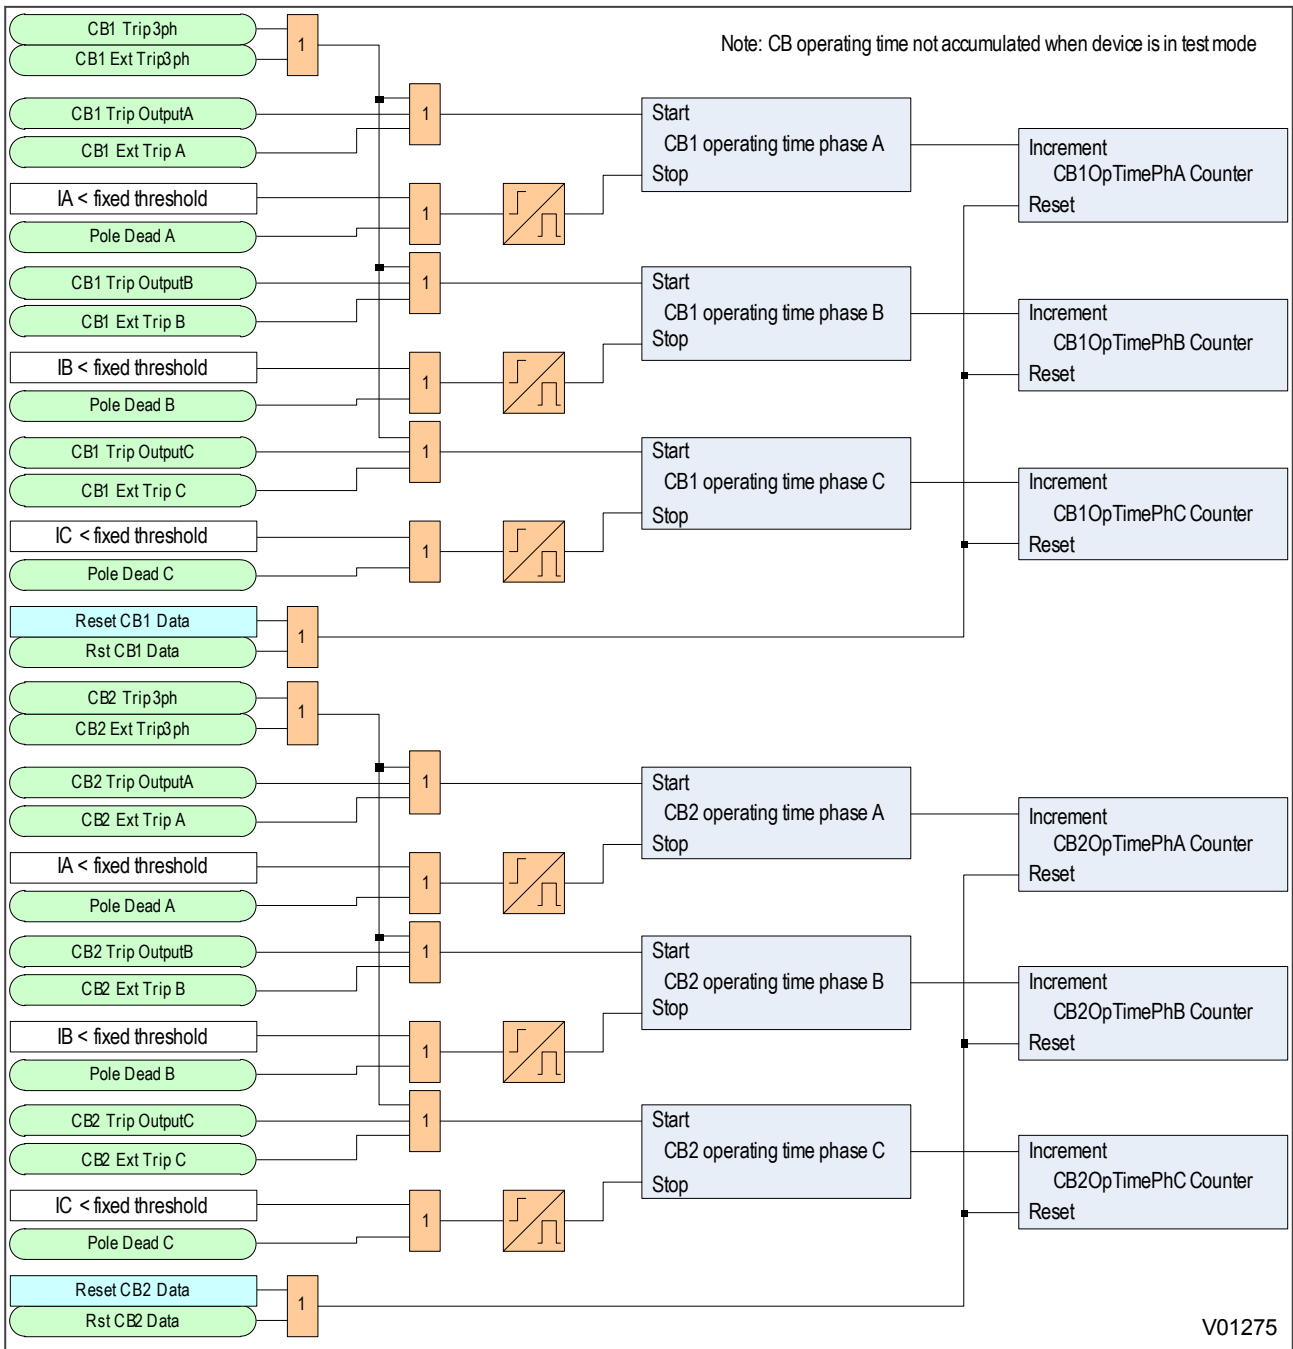


Figure 124: Operating Time Accumulator

5.4 EXCESSIVE FAULT FREQUENCY COUNTER

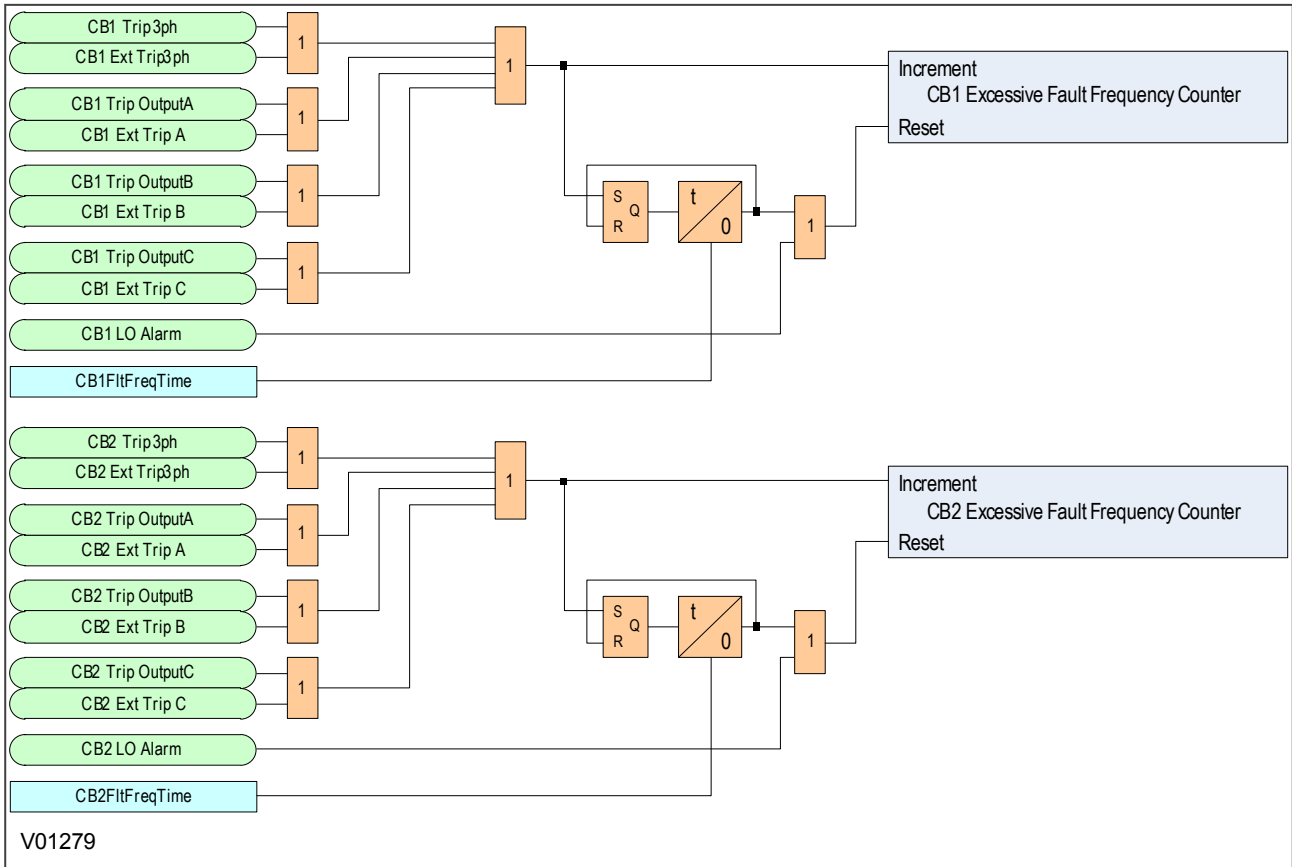


Figure 125: Excessive Fault Frequency logic diagram

5.5 RESET LOCKOUT ALARM

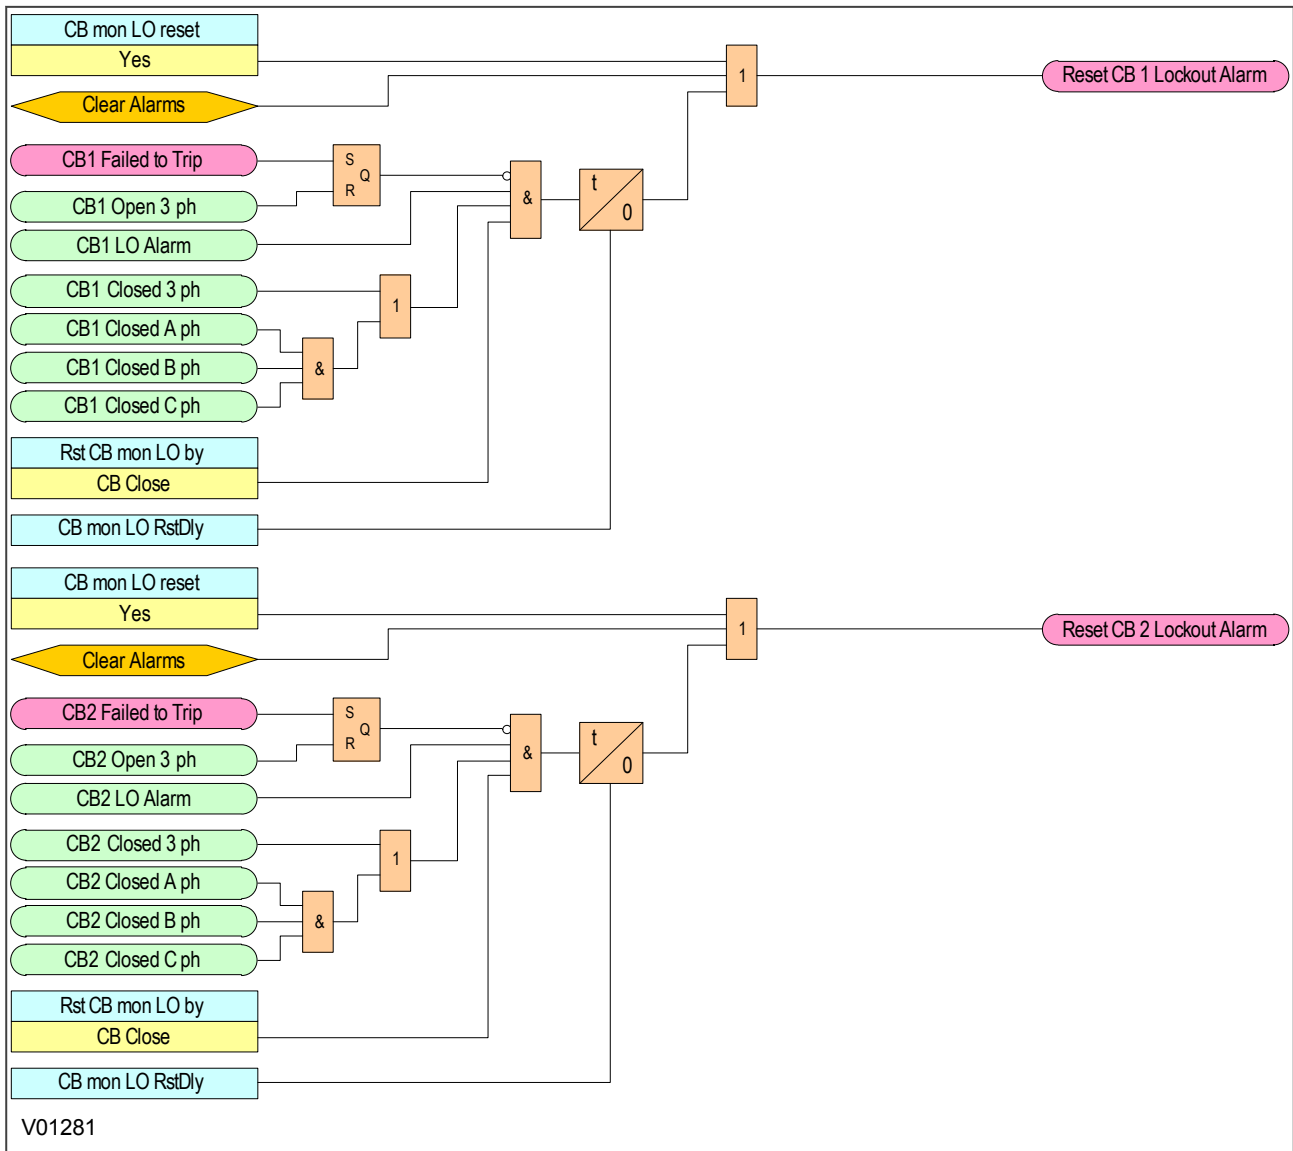


Figure 126: Reset Lockout Alarm logic diagram

5.6 CB CONDITION MONITORING LOGIC

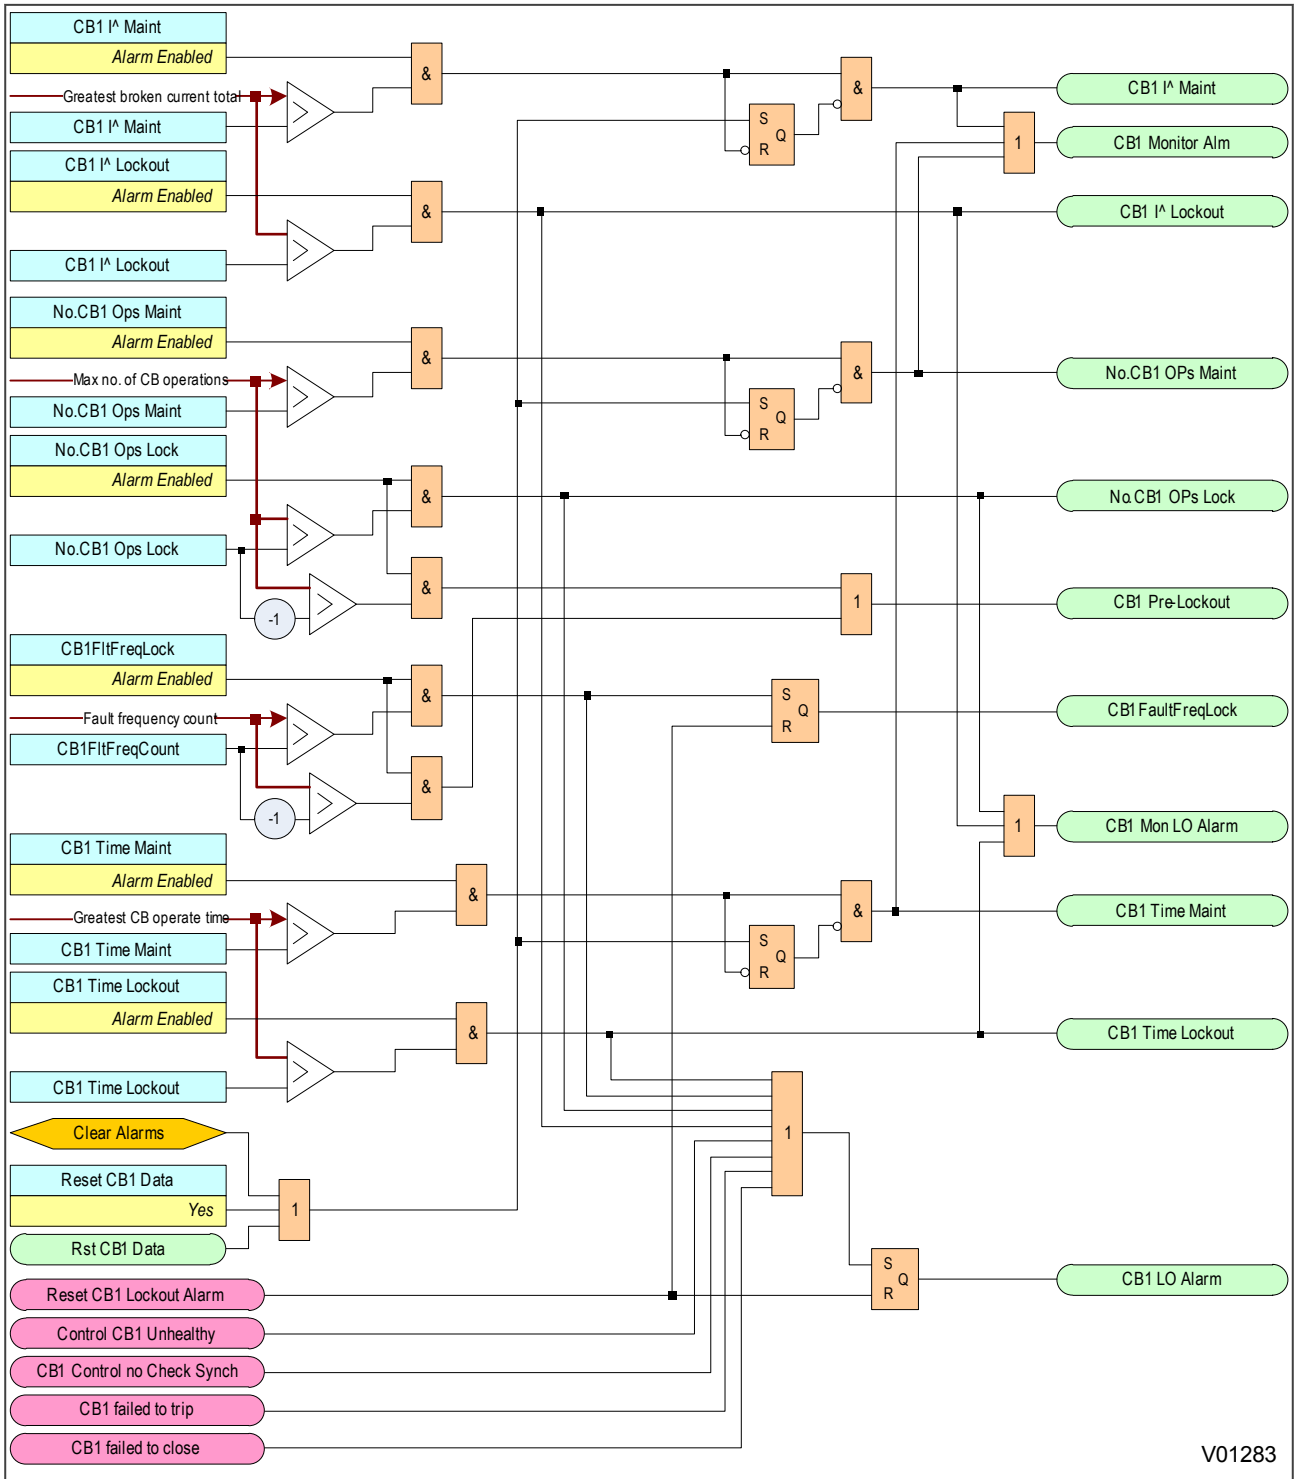


Figure 127: CB1 Condition Monitoring logic diagram

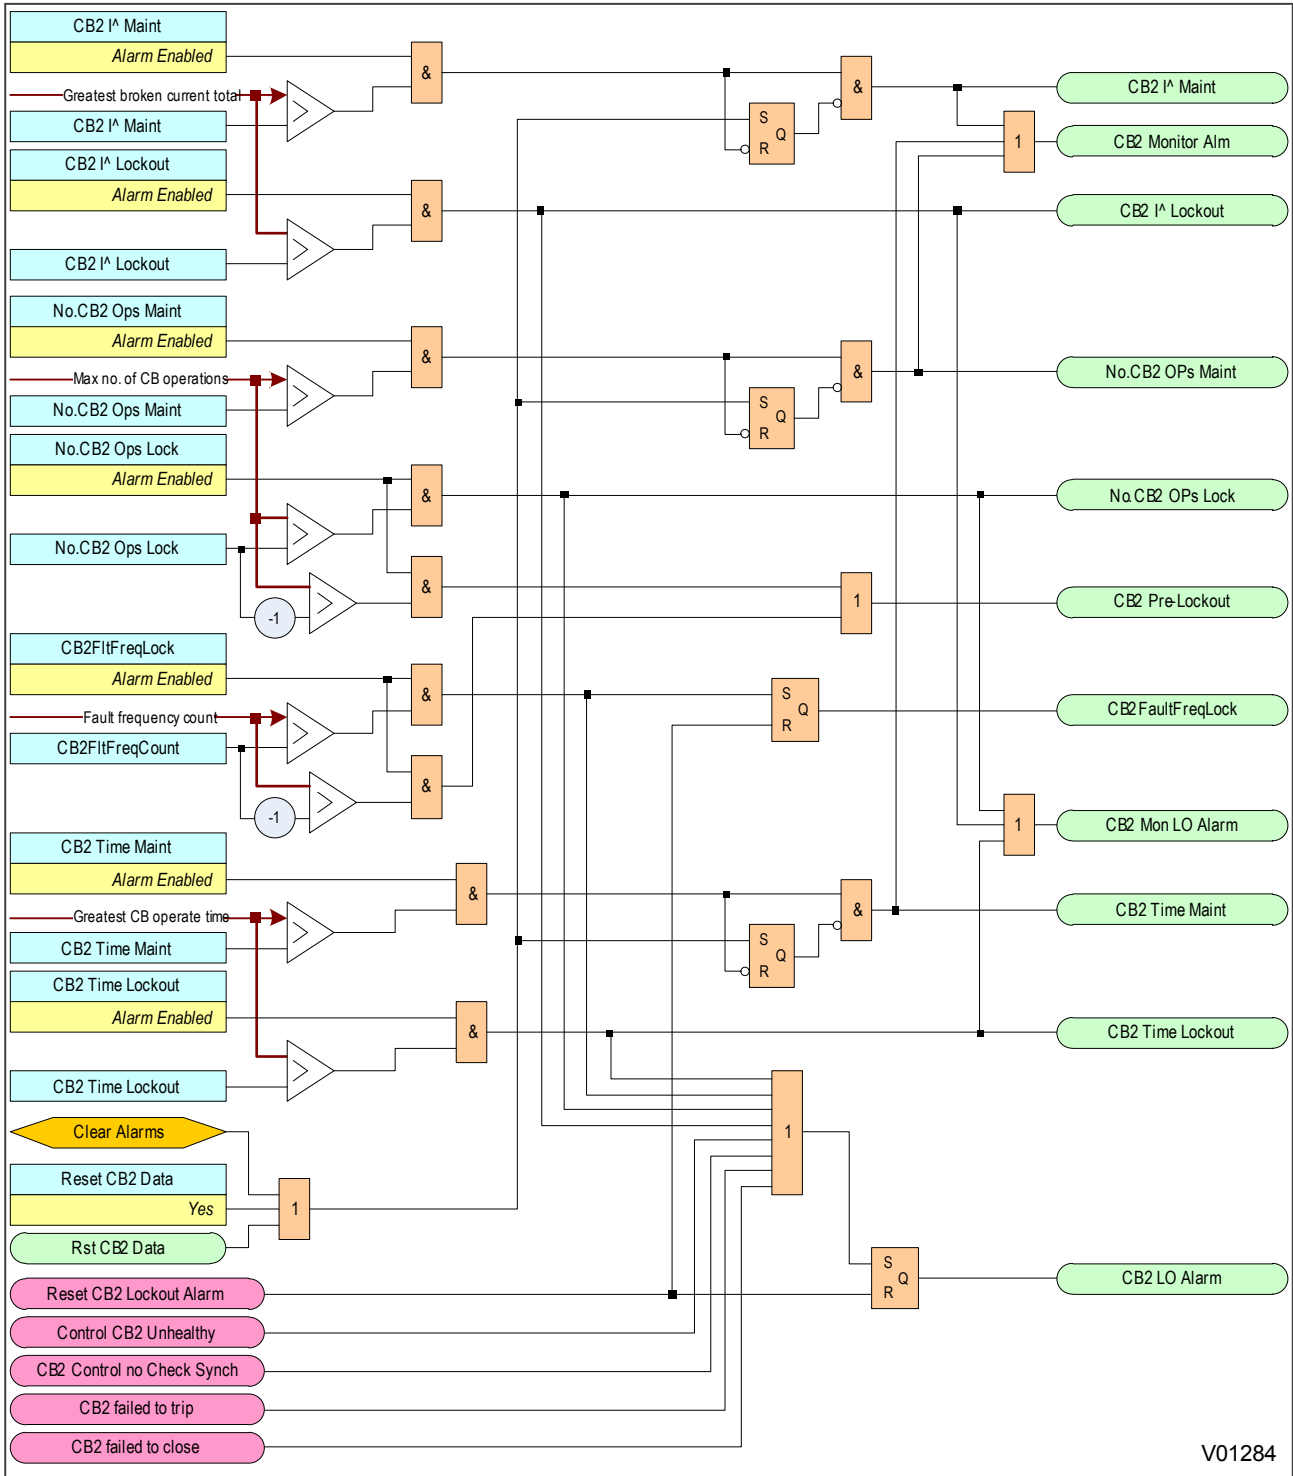


Figure 128: CB2 Condition Monitoring logic diagram

5.7 RESET CIRCUIT BREAKER LOCKOUT

Lockout conditions caused by the circuit breaker condition monitoring functions can be reset according to the condition of the **Rst CB mon LO** by setting found in the **CB CONTROL** column. There are two options; *CB Close* and *User interface*.

If set to *CB Close*, a timer setting, **CB mon LO RstDly**, becomes visible. When the circuit breaker closes, the **CB mon LO RstDly** time starts. The lockout is reset when the timer expires.

If set to *User Interface* then a command, **CB mon LO reset**, becomes visible. This command can be used to reset the lockout from a user interface.

An Autoreclose lockout generates an Autoreclose lockout alarm. Autoreclose lockout conditions can be reset by various commands and setting options found under the *CB CONTROL* column.

If **Res LO by CB IS** is set to *Enabled*, a lockout is reset if the circuit breaker is successfully closed manually. For this, the circuit breaker must remain closed long enough so that it enters the "In Service" state.

If **Res LO by UI** is set to *Enabled*, the circuit breaker lockout can be reset from a user interface using the reset circuit breaker lockout command in the *CB CONTROL* column.

If **Res LO by NoAR** is set to *Enabled*, the circuit breaker lockout can be reset by temporarily generating an **AR disabled** signal.

If **Res LO by TDelay** is set to *Enabled*, the circuit breaker lockout is automatically reset after a time delay set in the **LO Reset Time** setting.

If **Res LO by ExtDDB** is *Enabled*, the circuit breaker lockout can be reset by activation of an external input mapped in the PSL to the relevant reset lockout DDB signal.

5.7.1 RESET CB LOCKOUT LOGIC DIAGRAM

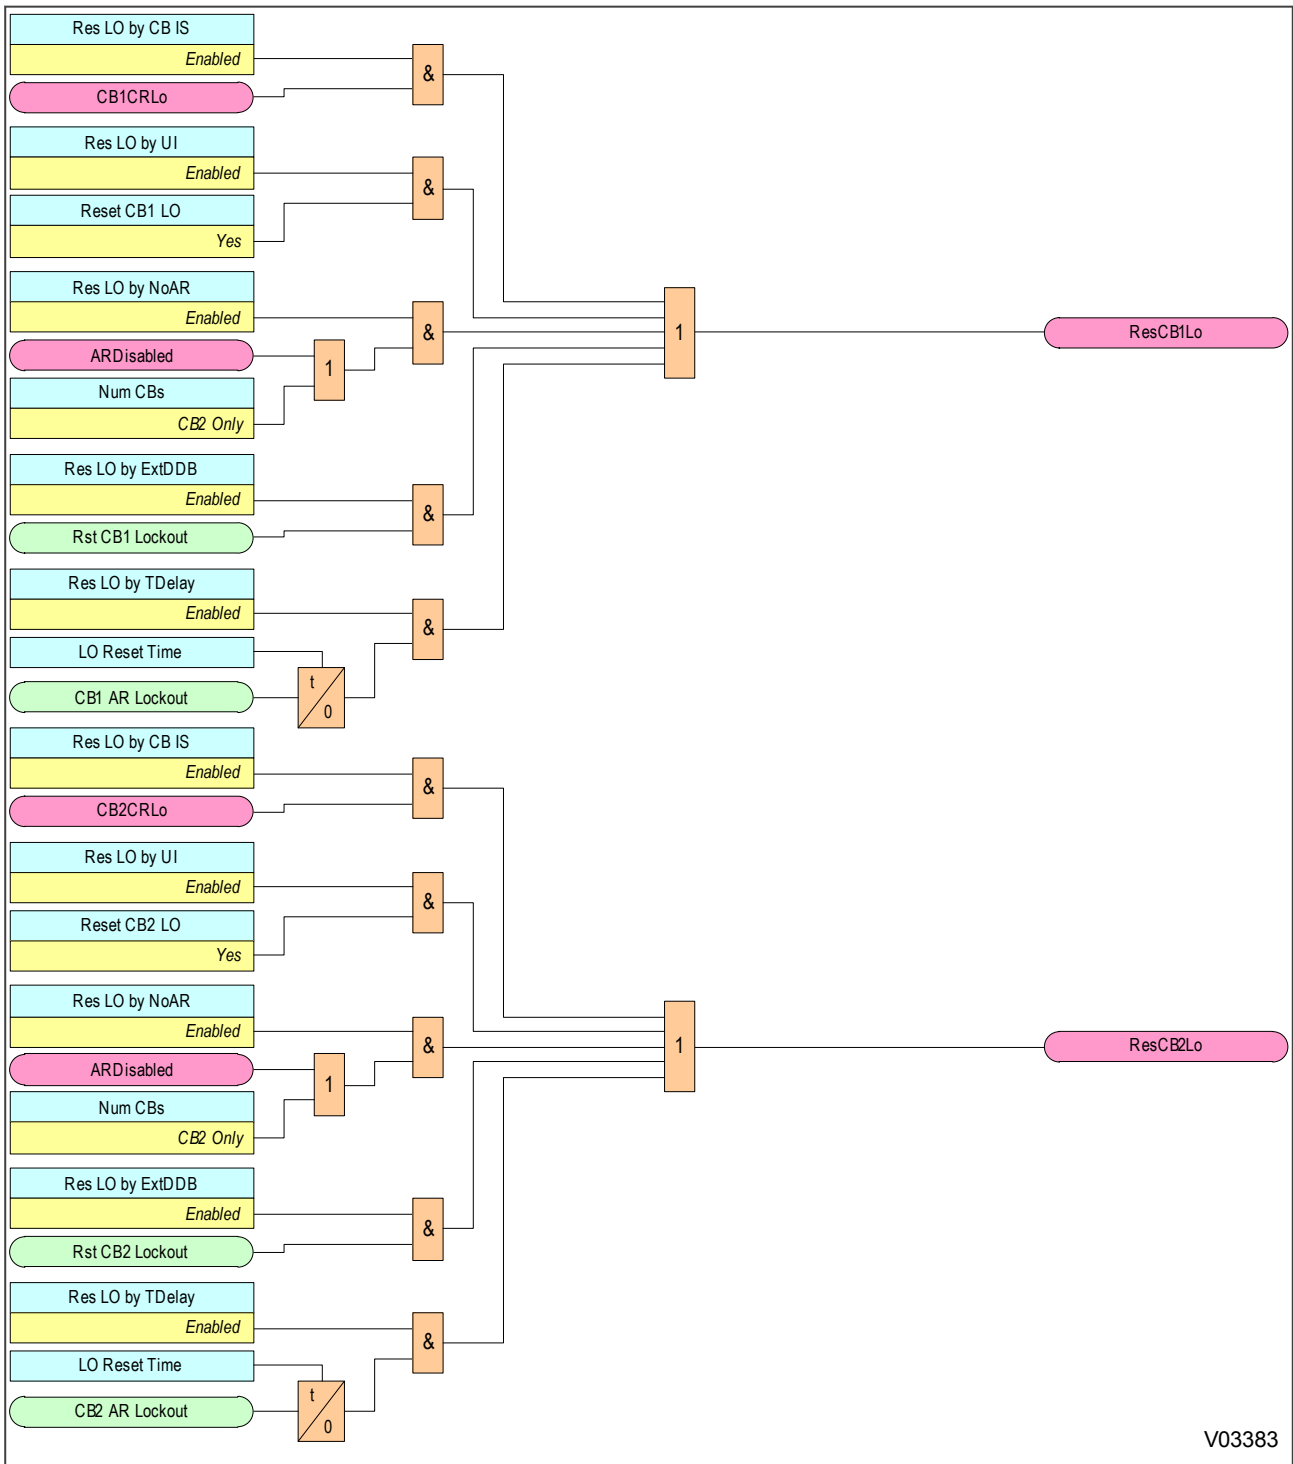


Figure 129: Reset Circuit Breaker Lockout Logic Diagram (Modules 57 & 58)

5.8 APPLICATION NOTES

5.8.1 SETTING THE THRESHOLDS FOR THE TOTAL BROKEN CURRENT

Where power lines use oil circuit breakers (OCBs), changing of the oil accounts for a significant proportion of the switchgear maintenance costs. Often, oil changes are performed after a fixed number of CB fault operations. However, this may result in premature maintenance where fault currents tend to be low, because oil degradation may be slower than would normally be expected. The Total Current Accumulator (I^{\wedge} counter) cumulatively stores the total value of the current broken by the circuit breaker providing a more accurate assessment of the circuit breaker condition.

The dielectric withstand of the oil generally decreases as a function of I^2t , where 'I' is the broken fault current and 't' is the arcing time within the interrupter tank. The arcing time cannot be determined accurately, but is generally dependent on the type of circuit breaker being used. Instead, you set a factor (**Broken I^{\wedge}**) with a value between 1 and 2, depending on the circuit breaker.

Most circuit breakers would have this value set to '2', but for some types of circuit breaker, especially those operating on higher voltage systems, a value of 2 may be too high. In such applications **Broken I^{\wedge}** may be set lower, typically 1.4 or 1.5.

The setting range for **Broken I^{\wedge}** is variable between 1.0 and 2.0 in 0.1 steps.

Note:

Any maintenance program must be fully compliant with the switchgear manufacturer's instructions.

5.8.2 SETTING THE THRESHOLDS FOR THE NUMBER OF OPERATIONS

Every circuit breaker operation results in some degree of wear for its components. Therefore routine maintenance, such as oiling of mechanisms, may be based on the number of operations. Suitable setting of the maintenance threshold will allow an alarm to be raised, indicating when preventative maintenance is due. Should maintenance not be carried out, the device can be set to lockout the autoreclose function on reaching a second operations threshold (**No. CB ops Lock**). This prevents further reclosure when the circuit breaker has not been maintained to the standard demanded by the switchgear manufacturer's maintenance instructions.

Some circuit breakers, such as oil circuit breakers (OCBs) can only perform a certain number of fault interruptions before requiring maintenance attention. This is because each fault interruption causes carbonising of the oil, degrading its dielectric properties. The maintenance alarm threshold (setting **No. CB Ops. Maint**) may be set to indicate the requirement for oil dielectric testing, or for more comprehensive maintenance. Again, the lockout threshold **No. CB Ops Lock** may be set to disable autoreclosure when repeated further fault interruptions could not be guaranteed. This minimises the risk of oil fires or explosion.

5.8.3 SETTING THE THRESHOLDS FOR THE OPERATING TIME

Slow CB operation indicates the need for mechanism maintenance. Alarm and lockout thresholds (**CB Time Maint** and **CB Time Lockout**) are provided to enforce this. They can be set in the range of 5 to 500 ms. This time relates to the interrupting time of the circuit breaker.

5.8.4 SETTING THE THRESHOLDS FOR EXCESSIVE FAULT FREQUENCY

Persistent faults will generally cause autoreclose lockout, with subsequent maintenance attention. Intermittent faults such as clashing vegetation may repeat outside of any reclaim time, and the common cause might never be investigated. For this reason it is possible to set a frequent operations counter, which allows the number of operations **Fault Freq Count** over a set time period **Fault Freq Time** to be monitored. A separate alarm and lockout threshold can be set.

6 CB STATE MONITORING

CB State monitoring is used to verify the open or closed state of a circuit breaker. Most circuit breakers have auxiliary contacts through which they transmit their status (open or closed) to control equipment such as IEDs. These auxiliary contacts are known as:

- 52A for contacts that follow the state of the CB
- 52B for contacts that are in opposition to the state of the CB

This device can be set to monitor both of these types of circuit breaker state indication. If the state is unknown for some reason, an alarm can be raised.

Some CBs provide both sets of contacts. If this is the case, these contacts will normally be in opposite states. Should both sets of contacts be open, this would indicate one of the following conditions:

- Auxiliary contacts/wiring defective
- Circuit Breaker (CB) is defective
- CB is in isolated position

Should both sets of contacts be closed, only one of the following two conditions would apply:

- Auxiliary contacts/wiring defective
- Circuit Breaker (CB) is defective

If any of the above conditions exist, an alarm will be issued after a 5 s time delay. An output contact can be assigned to this function via the programmable scheme logic (PSL). The time delay is set to avoid unwanted operation during normal switching duties.

In the CB CONTROL column there is a setting called **CB Status Input**. This cell can be set at one of the following four options:

- None
- 52A
- 52B
- Both 52A and 52B

Where *None* is selected no CB status is available. Where only 52A is used on its own then the device will assume a 52B signal opposite to the 52A signal. Circuit breaker status information will be available in this case but no discrepancy alarm will be available. The above is also true where only a 52B is used. If both 52A and 52B are used then status information will be available and in addition a discrepancy alarm will be possible, according to the following table:

Auxiliary Contact Position		CB State Detected	Action
52A	52B		
Open	Closed	Breaker open	Circuit breaker healthy
Closed	Open	Breaker closed	Circuit breaker healthy
Closed	Closed	CB failure	Alarm raised if the condition persists for greater than 5 s
Open	Open	State unknown	Alarm raised if the condition persists for greater than 5 s

6.1 CB STATE MONITOR

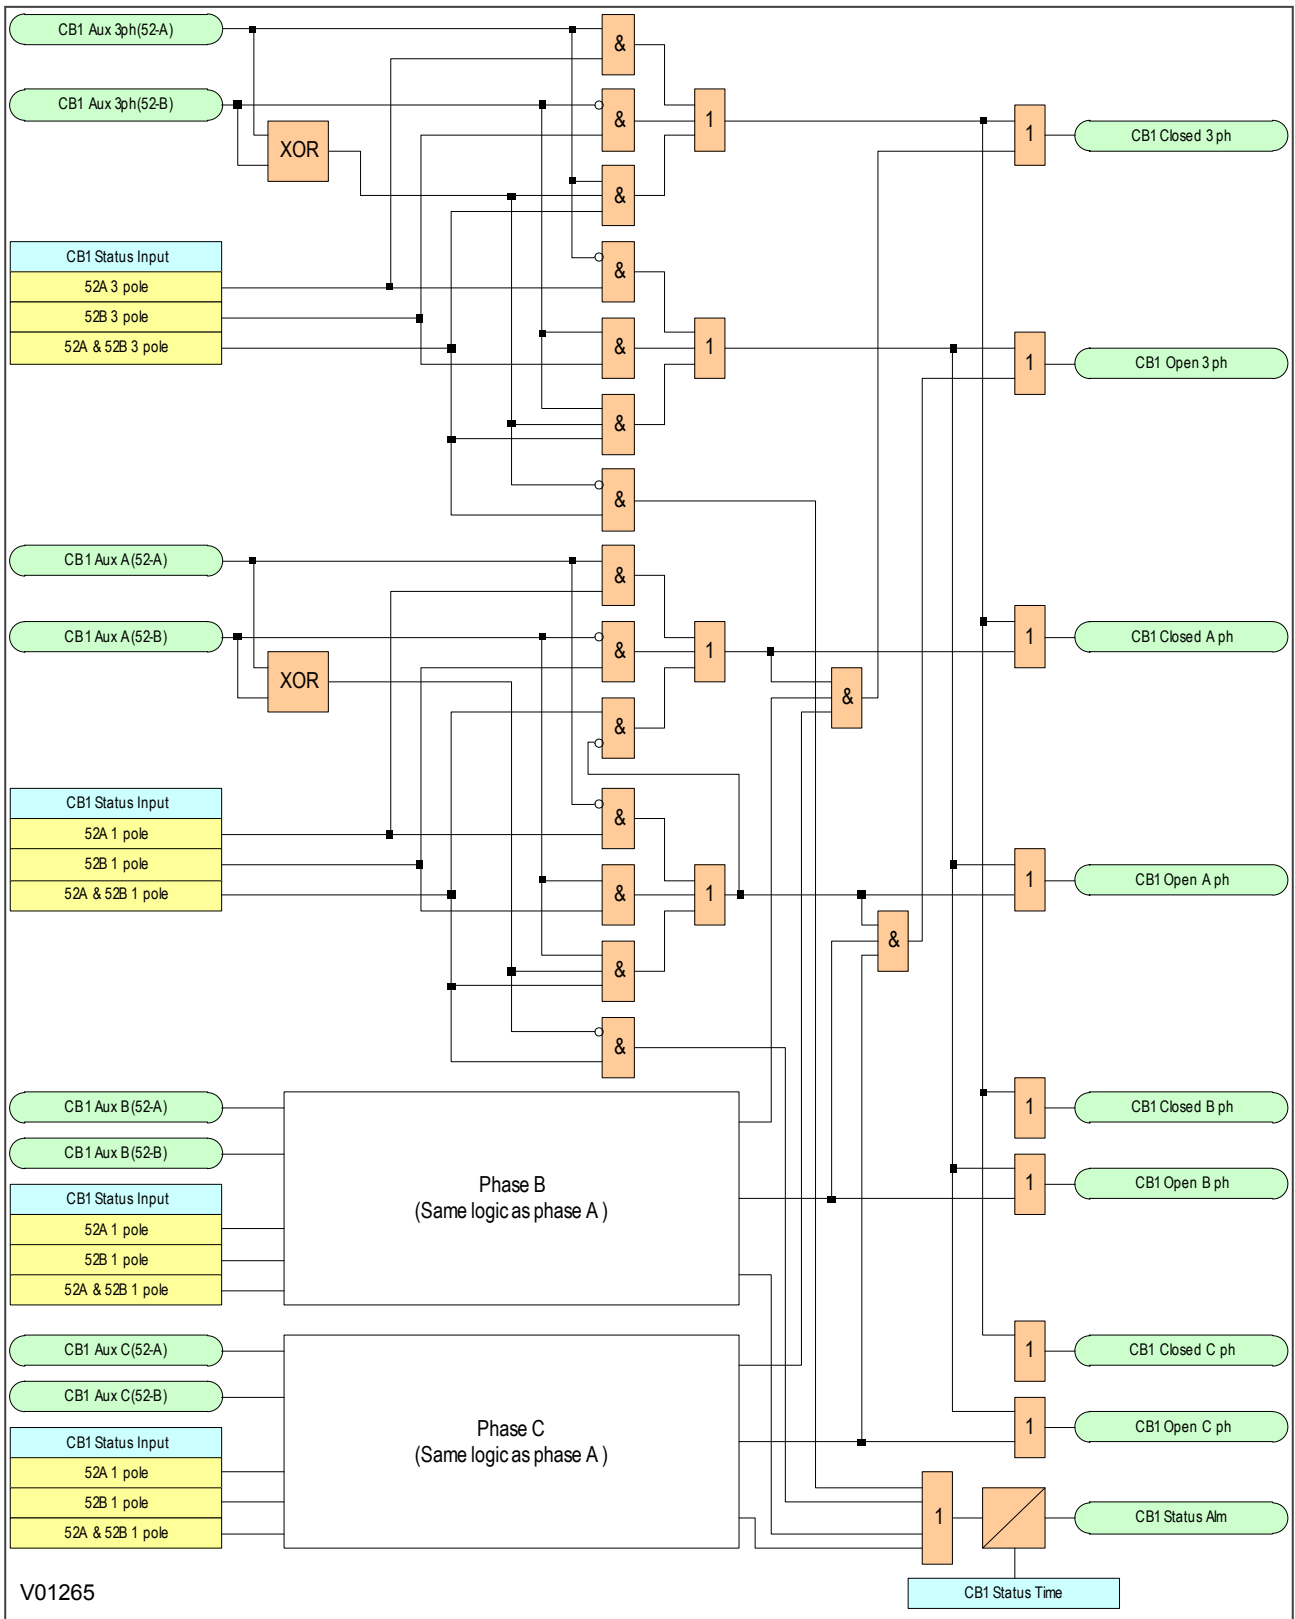


Figure 130: CB State logic diagram (Module 1)

7 CIRCUIT BREAKER CONTROL

Although some circuit breakers do not provide auxiliary contacts, most provide auxiliary contacts to reflect the state of the circuit breaker. These are:

- CBs with 52A contacts (where the auxiliary contact follows the state of the CB)
- CBs with 52B contacts (where the auxiliary contact is in the opposite state from the state of the CB)
- CBs with both 52A and 52B contacts

Circuit Breaker control is only possible if the circuit breaker in question provides auxiliary contacts. The **CB Status Input** cell in the **CB CONTROL** column must be set to the type of circuit breaker. If no CB auxiliary contacts are available then this cell should be set to *None*, and no CB control will be possible.

For local control, the **CB control by** cell should be set accordingly.

The output contact can be set to operate following a time delay defined by the setting **Man Close Delay**. One reason for this delay is to give personnel time to safely move away from the circuit breaker following a CB close command.

The control close cycle can be cancelled at any time before the output contact operates by any appropriate trip signal, or by activating the **Reset Close Dly** DDB signal.

The length of the trip and close control pulses can be set via the **Trip Pulse Time** and **Close Pulse Time** settings respectively. These should be set long enough to ensure the breaker has completed its open or close cycle before the pulse has elapsed.

If an attempt to close the breaker is being made, and a protection trip signal is generated, the protection trip command overrides the close command.

The **Reset Lockout by** setting is used to enable or disable the resetting of lockout automatically from a manual close after the time set by **Man Close RstDly**.

If the CB fails to respond to the control command (indicated by no change in the state of CB Status inputs) an alarm is generated after the relevant trip or close pulses have expired. These alarms can be viewed on the LCD display, remotely, or can be assigned to output contacts using the programmable scheme logic (PSL).

Note:

*The **CB Healthy Time** and **Sys Check time** set under this menu section are applicable to manual circuit breaker operations only. These settings are duplicated in the **AUTORECLOSE** menu for autoreclose applications.*

The **Lockout Reset** and **Reset Lockout by** settings are applicable to CB Lockouts associated with manual circuit breaker closure, CB Condition monitoring (Number of circuit breaker operations, for example) and autoreclose lockouts.

The device includes the following options for control of a single circuit breaker:

- The IED menu (local control)
- The Hotkeys (local control)
- The function keys (local control)
- The opto-inputs (local control)
- SCADA communication (remote control)

7.1 CB CONTROL USING THE IED MENU

You can control manual trips and closes with the **CB Trip/Close** command in the **SYSTEM DATA** column. This can be set to *No Operation*, *Trip*, or *Close* accordingly.

For this to work you have to set the **CB control by** cell to option 1 *Local*, option 3 *Local + Remote*, option 5 *Opto+Local*, or option 7 *Opto+Local+Remote* in the **CB CONTROL** column.

7.2 CB CONTROL USING THE HOTKEYS

The hotkeys allow you to manually trip and close the CB without the need to enter the **SYSTEM DATA** column. For this to work you have to set the **CB control by** cell to option 1 *Local*, option 3 *Local+Remote*, option 5 *Opto+Local*, or option 7 *Opto+Local+Remote* in the **CB CONTROL** column.

CB control using the hotkey is achieved by pressing the right-hand button directly below LCD screen. This button is only enabled if:

- The **CB Control by** setting is set to one of the options where local control is possible (option 1,3,5, or 7)
- The **CB Status Input** is set to '52A', '52B', or 'Both 52A and 52B'

If the CB is currently closed, the command text on the bottom right of the LCD screen will read *Trip*. Conversely, if the CB is currently open, the command text will read *Close*.

If you execute a *Trip*, a screen with the CB status will be displayed once the command has been completed. If you execute a *Close*, a screen with a timing bar will appear while the command is being executed. This screen also gives you the option to cancel or restart the close procedure. The time delay is determined by the **Man Close Delay** setting in the **CB CONTROL** menu. When the command has been executed, a screen confirming the present status of the circuit breaker is displayed. You are then prompted to select the next appropriate command or exit.

If no keys are pressed for a period of 5 seconds while waiting for the command confirmation, the device will revert to showing the CB Status. If no key presses are made for a period of 25 seconds while displaying the CB status screen, the device will revert to the default screen.

To avoid accidental operation of the trip and close functionality, the hotkey CB control commands are disabled for 10 seconds after exiting the hotkey menu.

The hotkey functionality is summarised graphically below:

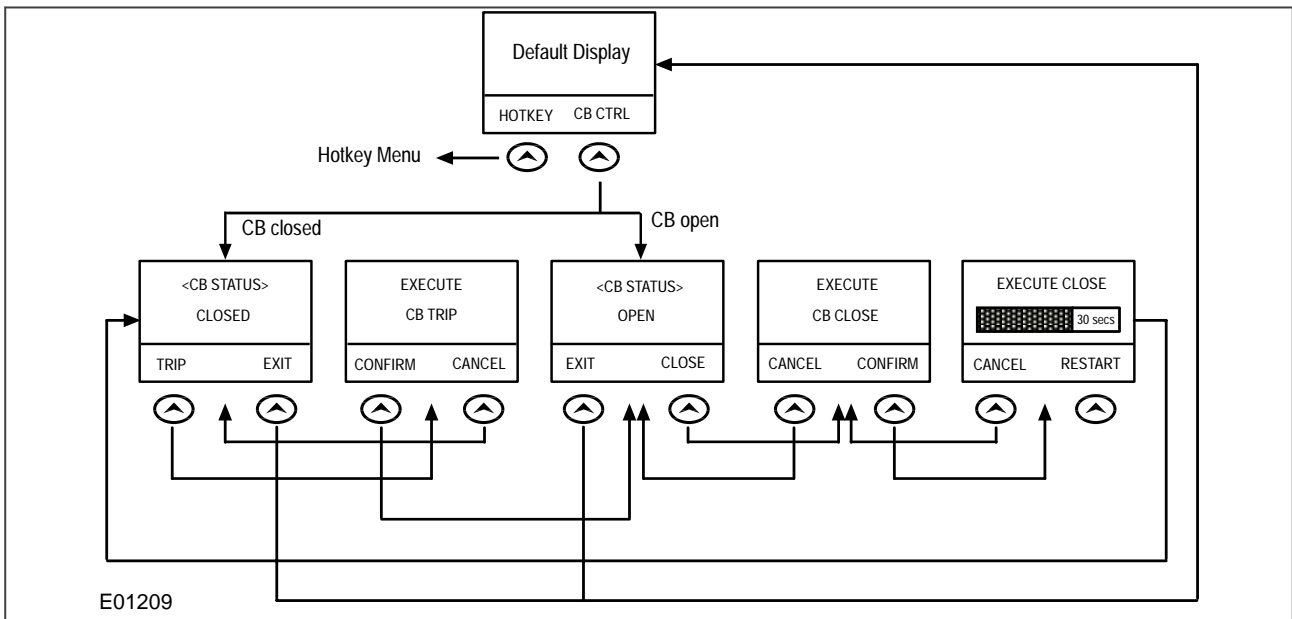


Figure 131: Hotkey menu navigation

7.3 CB CONTROL USING THE FUNCTION KEYS

For most models, you can also use the function keys to allow direct control of the circuit breaker. This has the advantage over hotkeys, that the LEDs associated with the function keys can indicate the status of the CB. The default PSL is set up such that Function key 2 initiates a trip and Function key 3 initiates a close. For this to work you have to set the CB control by cell to option 5 *Opto+Local*, or option 7 *Opto+Local+Remote* in the *CB CONTROL* column.

As shown below, function keys 2 and 3 have already been assigned to CB control in the default PSL.

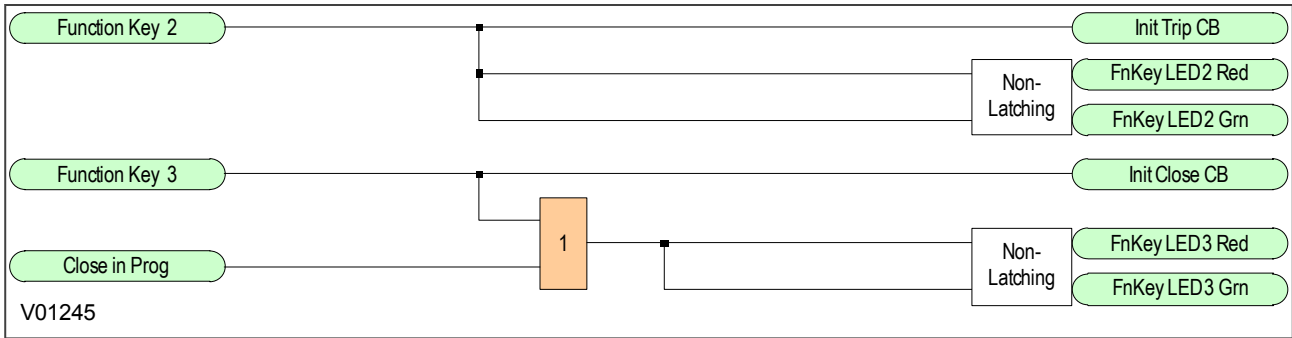


Figure 132: Default function key PSL

The programmable function key LEDs have been mapped such that they will indicate yellow whilst the keys are activated.

Note:

Not all models provide function keys.

7.4 CB CONTROL USING THE OPTO-INPUTS

Certain applications may require the use of push buttons or other external signals to control the various CB control operations. It is possible to connect such push buttons and signals to opto-inputs and map these to the relevant DDB signals.

For this to work, you have to set the **CB control by** cell to option 4 *opto*, option 5 *Opto+Local*, option 6 *Opto+Remote*, or option 7 *Opto+Local+Remote* in the *CB CONTROL* column.

7.5 REMOTE CB CONTROL

Remote CB control can be achieved by setting the **CB Trip/Close** cell in the *SYSTEM DATA* column to trip or close by using a command over a communication link.

For this to work, you have to set the **CB control by** cell to option 2 *Remote*, option 3 *Local+Remote*, option 6 *Opto+remote*, or option 7 *Opto+Local+Remote* in the *CB CONTROL* column.

We recommend that you allocate separate relay output contacts for remote CB control and protection tripping. This allows you to select the control outputs using a simple local/remote selector switch as shown below. Where this feature is not required the same output contact(s) can be used for both protection and remote tripping.

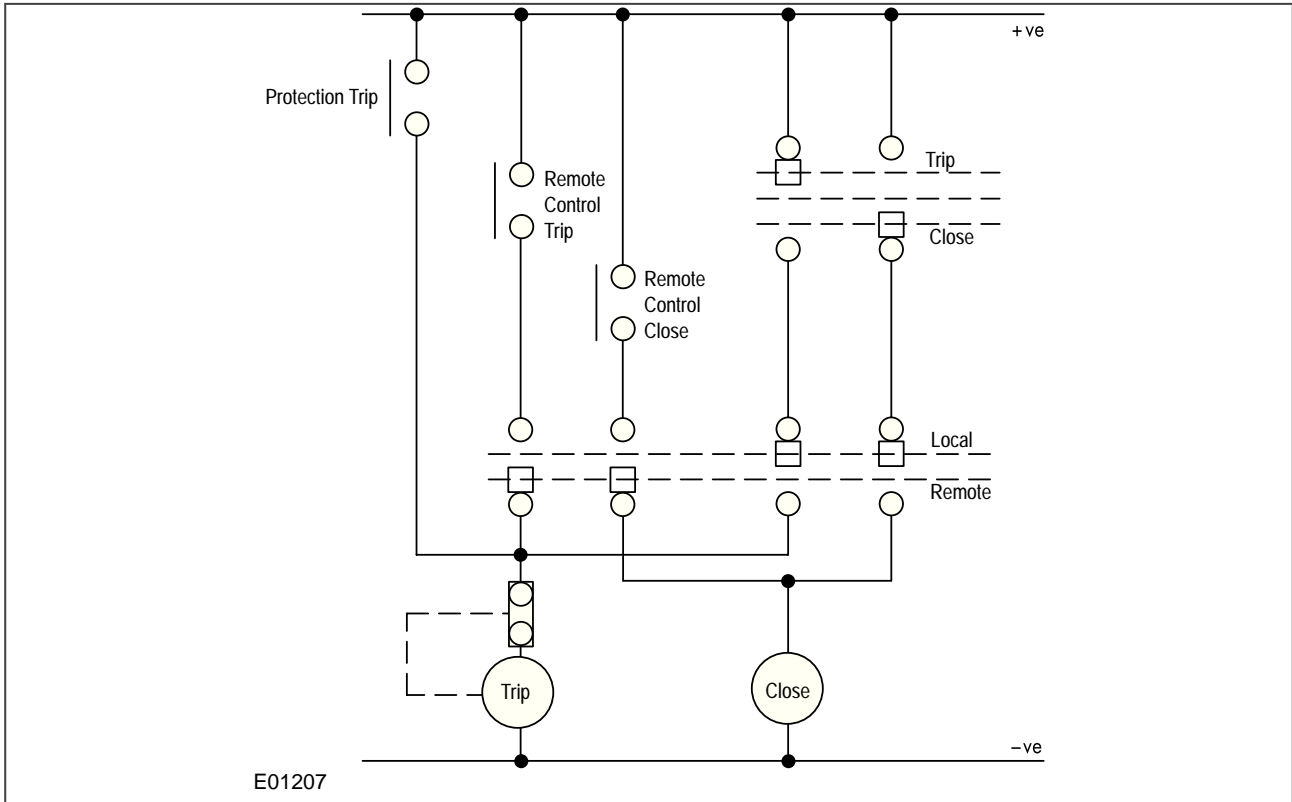


Figure 133: Remote Control of Circuit Breaker

7.6 CB HEALTHY CHECK

A CB Healthy check is available if required. This facility accepts an input to one of the opto-inputs to indicate that the breaker is capable of closing (e.g. that it is fully charged). A time delay can be set with the setting **CB Healthy Time**. If the CB does not indicate a healthy condition within the time period following a Close command, the device will lockout and alarm.

7.7 SYNCHRONISATION CHECK

Where the check synchronism function is set, this can be enabled to supervise manual circuit breaker Close commands. A circuit breaker Close command will only be issued if the Check Synchronisation criteria are satisfied. A time delay can be set with the setting **Sys Check time**. If the Check Synchronisation criteria are not satisfied within the time period following a Close command the device will lockout and alarm.

7.8 CB CONTROL AR IMPLICATIONS

An **Auto Close CB** signal from the Auto-close logic bypasses the **Man Close Delay** time, and the **CB Close** output operates immediately to close the circuit breaker.

If Autoreclose is used it may be desirable to block its operation when performing a manual close. In general, the majority of faults following a manual closure are permanent faults and it is undesirable to allow automatic reclosure.

To ensure that Autoreclose is not initiated for a manual circuit breaker closure on to a pre-existing fault, the **CB IS Time** (circuit breaker in service time) setting in the **AUTORECLOSE** menu should be set for the desired time window. This setting ensures that Autoreclose initiation is inhibited for a period equal to setting **CB IS Time** following a manual circuit breaker closure. If a protection operation occurs during the inhibit period, Autoreclose is not initiated.

Following manual circuit breaker closure, if either a single phase or a three phase fault occur, the circuit breaker is tripped three phase, but Autoreclose is not locked out for this condition.

7.9 CB CONTROL LOGIC DIAGRAM

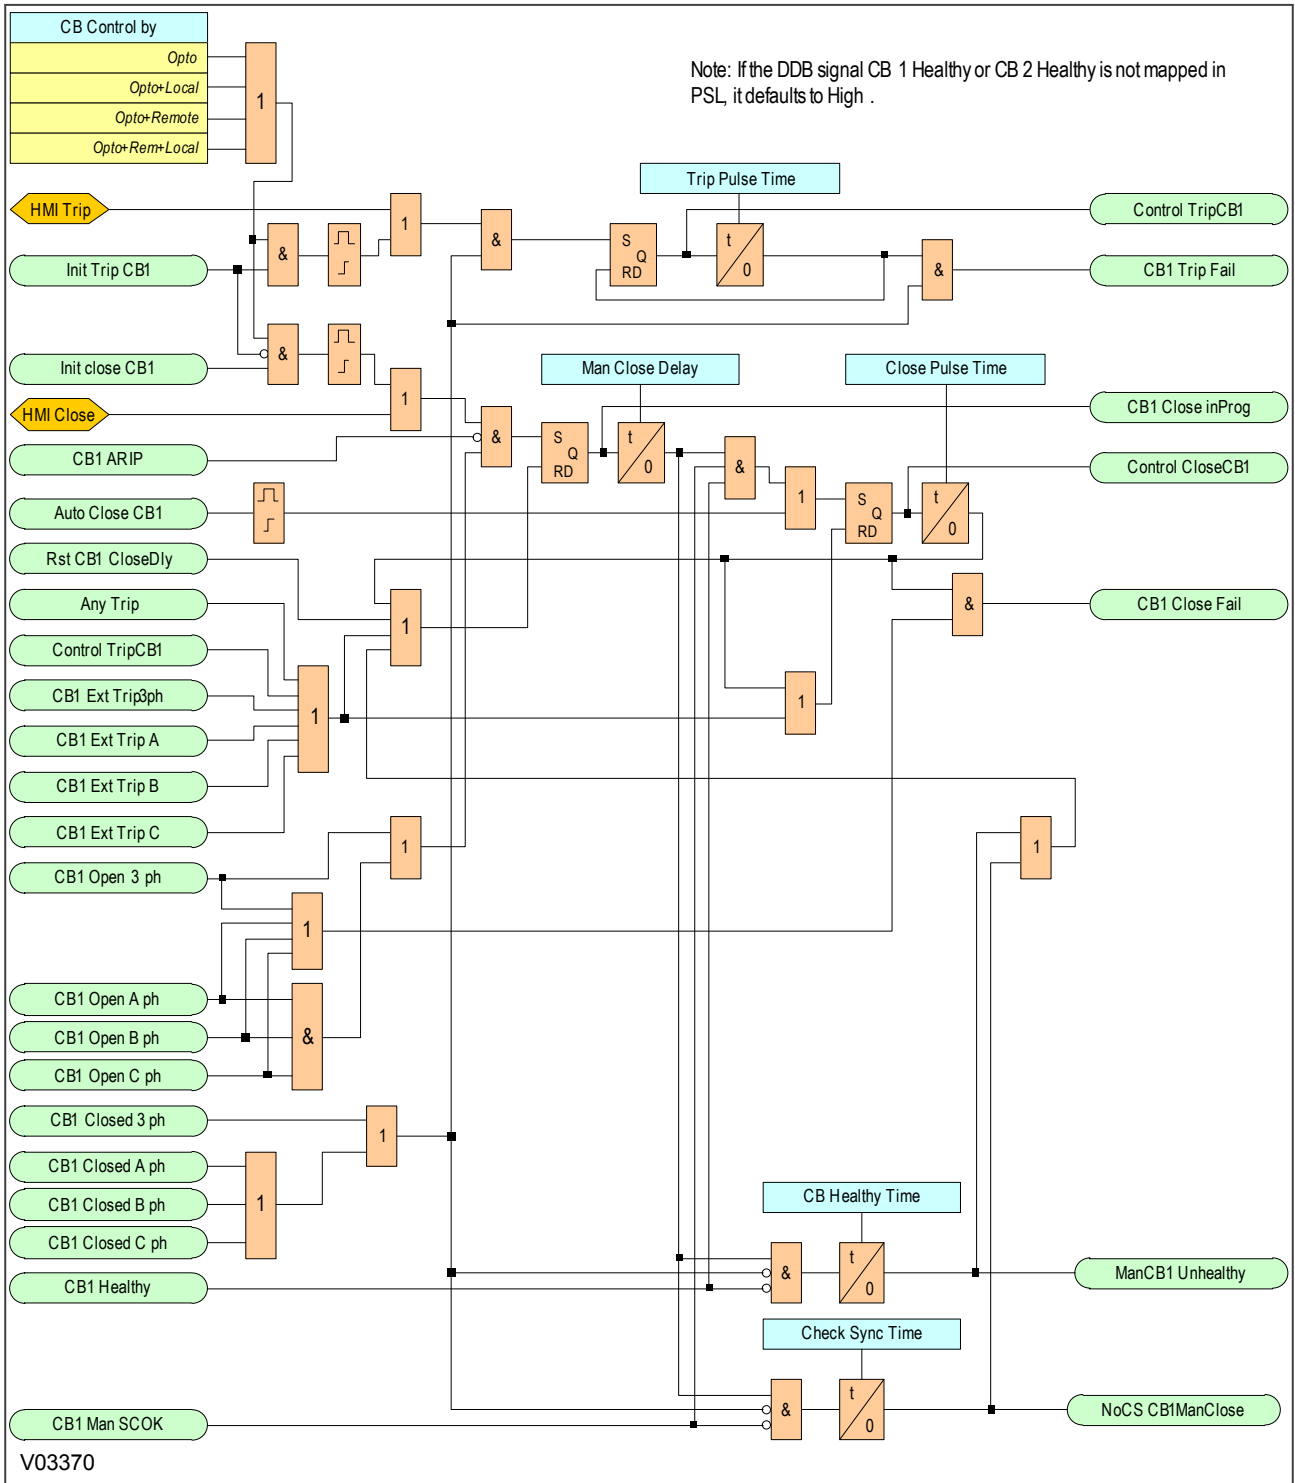


Figure 134: CB1 Control Logic (Module 43)

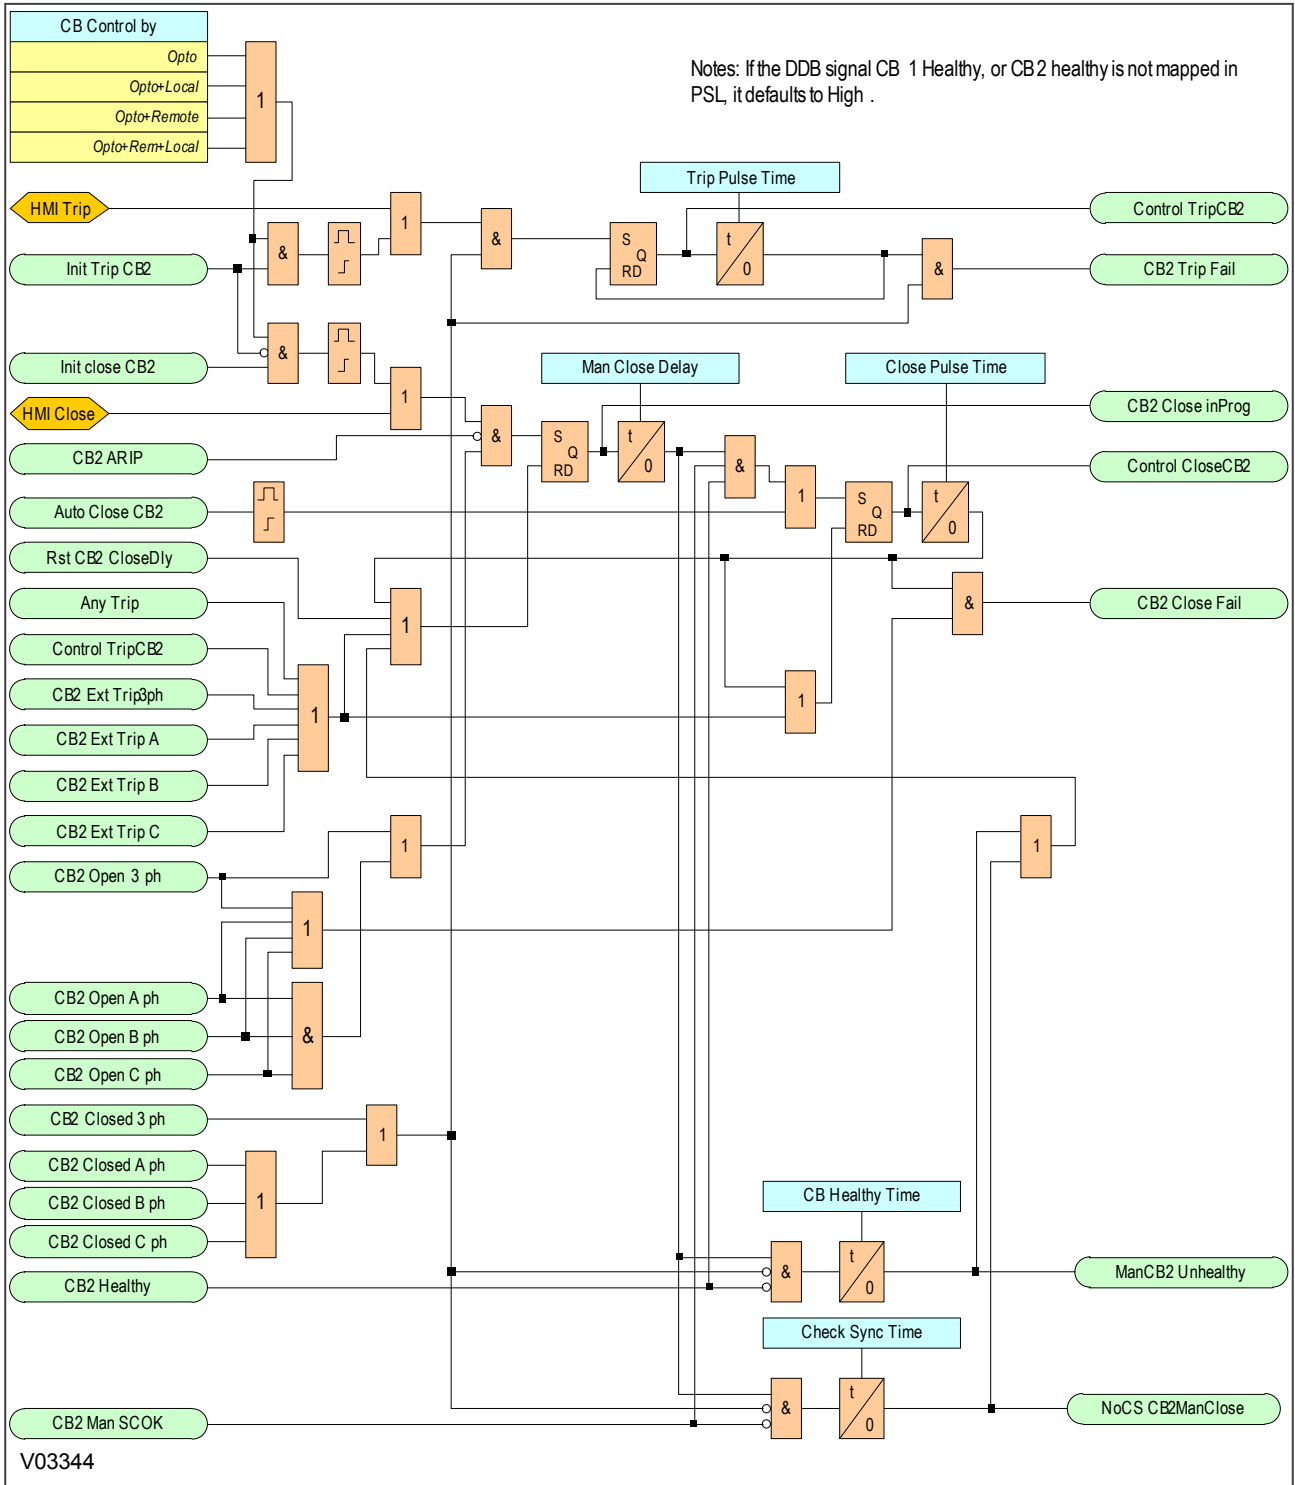


Figure 135: CB2 Control Logic (Module 44)

8 POLE DEAD FUNCTION

The Pole Dead Logic is used to determine and indicate that one or more phases of the line are not energised. A Pole Dead condition is determined either by measuring:

- the line currents and/or voltages, or
- by monitoring the status of the circuit breaker auxiliary contacts, as shown by dedicated DDB signals.

It can also be used to block operation of underfrequency and undervoltage elements where applicable.

8.1 POLE DEAD LOGIC

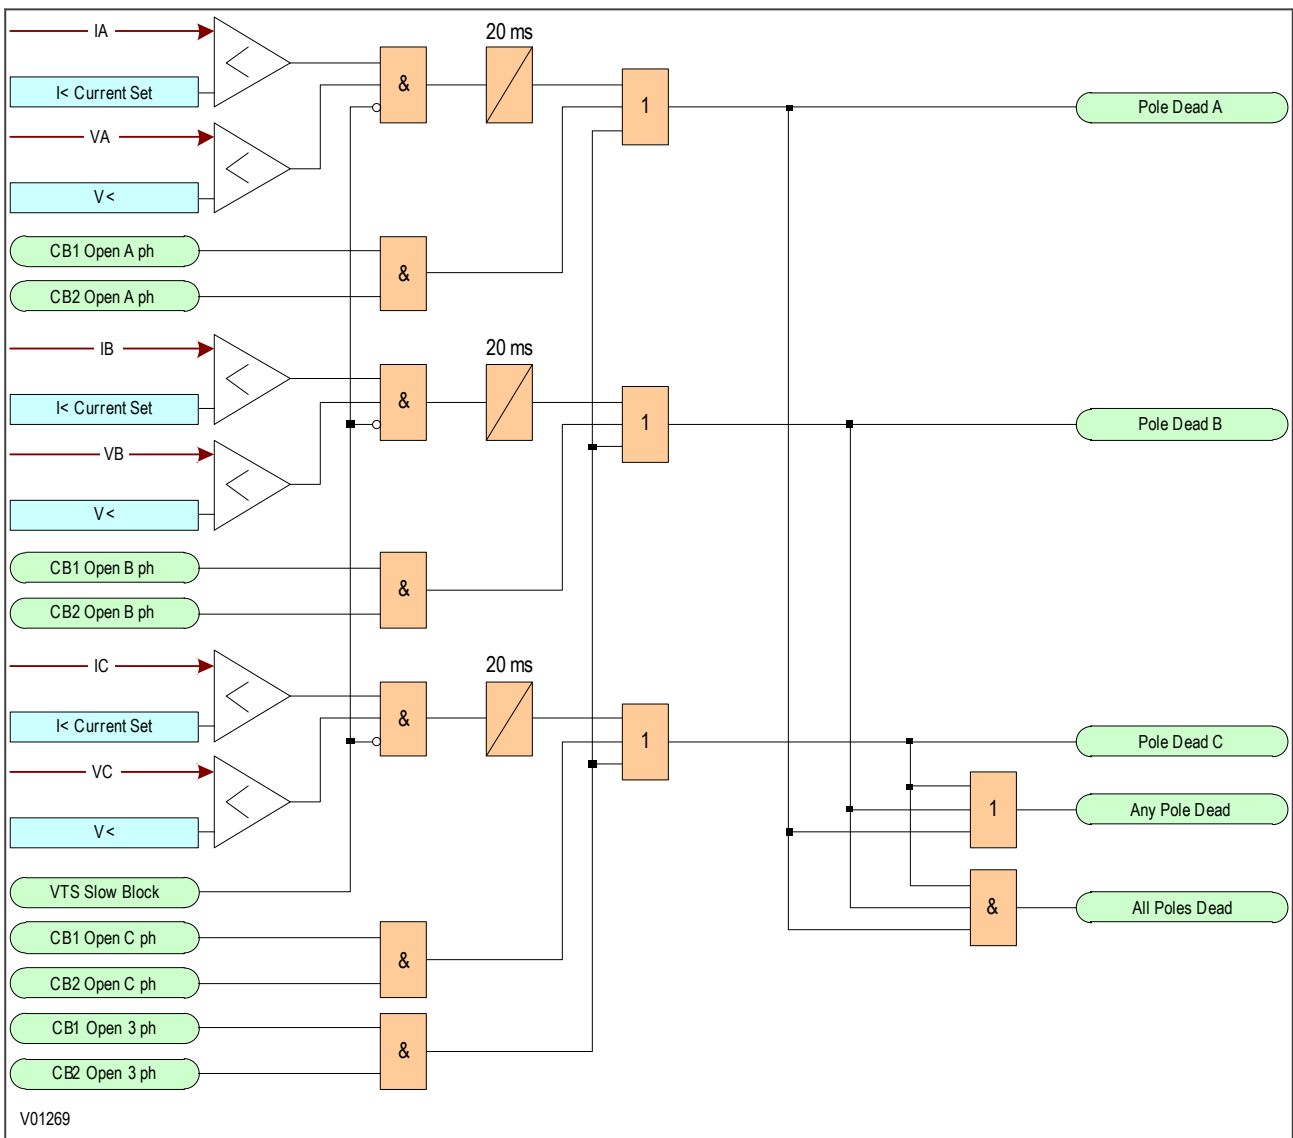


Figure 136: Pole Dead logic

If both the line current and voltage values fall below a certain threshold, or a CB Open condition is asserted from the state control logic, the device initiates a Pole Dead condition. The current and voltage thresholds can be set with the **I< Current Set** and the **V< settings** respectively, in the **CBFAIL&P.DEAD** column.

If one or more poles are dead, the device indicates which phase is dead and asserts the **Any Pole Dead** DDB signal. If all phases are dead the **Any Pole Dead** signal is accompanied by the **All Poles Dead** signal.

If the VT fails, a **VTS Slow Block** signal is taken from the VTS logic to block the Pole Dead indications that would be generated by the undervoltage and undercurrent thresholds.

9 SYSTEM CHECKS

In some situations it is possible for both "bus" and "line" sides of a circuit breaker to be live when a circuit breaker is open - for example at the ends of a feeder that has a power source at each end. Therefore, it is normally necessary to check that the network conditions on both sides are suitable, before closing the circuit breaker. This applies to both manual circuit breaker closing and autoreclosing. If a circuit breaker is closed when the line and bus voltages are both live, with a large phase angle, frequency or magnitude difference between them, the system could be subjected to an unacceptable shock, resulting in loss of stability, and possible damage to connected machines.

The System Checks functionality involves monitoring the voltages on both sides of a circuit breaker, and if both sides are live, performing a synchronisation check to determine whether any differences in voltage magnitude, phase angle or frequency are within permitted limits.

The pre-closing system conditions for a given circuit breaker depend on the system configuration, and for autoreclosing, on the selected autoreclose program. For example, on a feeder with delayed autoreclosing, the circuit breakers at the two line ends are normally arranged to close at different times. The first line end to close usually has a live bus and a dead line immediately before reclosing. The second line end circuit breaker now sees a live bus and a live line.

If there is a parallel connection between the ends of the tripped feeder the frequencies will be the same, but any increased impedance could cause the phase angle between the two voltages to increase. Therefore just before closing the second circuit breaker, it may be necessary to perform a synchronisation check, to ensure that the phase angle between the two voltages has not increased to a level that would cause unacceptable shock to the system when the circuit breaker closes.

If there are no parallel interconnections between the ends of the tripped feeder, the two systems could lose synchronism altogether and the frequency at one end could "slip" relative to the other end. In this situation, the second line end would require a synchronism check comprising both phase angle and slip frequency checks.

If the second line-end busbar has no power source other than the feeder that has tripped; the circuit breaker will see a live line and dead bus assuming the first circuit breaker has re-closed. When the second line end circuit breaker closes the bus will charge from the live line (dead bus charge).

9.1 SYSTEM CHECKS IMPLEMENTATION

The System Checks function provides *Live/Dead Voltage Monitoring*, two stages of *Check Synchronisation* and *System Split* indication.

The System Checks function is enabled or disabled by the **System Checks** setting in the *CONFIGURATION* column. If **System Checks** is disabled, the *SYSTEM CHECKS* menu becomes invisible, and a **SysChks Inactive** DDB signal is set.

The system Checks functionality can also be enabled or disabled individually for each circuit breaker by the **System Checks CB1** and **System Checks CB2** settings in the *SYSTEM CHECKS* column. For the Systems Checks functionality to be enabled, both the **System Checks** setting in the *CONFIGURATION* column AND the relevant setting (**System Checks CB1** and/or **System Checks CB2**) in the *SYSTEM CHECKS* column must be enabled. For the System Checks functionality to be disabled, either the **System Checks** setting in the *CONFIGURATION* column OR the relevant setting (**System Checks CB1** and/or **System Checks CB2**) in the *SYSTEM CHECKS* column must be disabled. In the latter case, the **SysChks Inactive** DDB signal is set.

9.1.1 VT CONNECTIONS

The device provides inputs for a three-phase "Main VT" and at least one single-phase VT for check synchronisation. Depending on the primary system arrangement, the Main VT may be located on either the line-side of the busbar-side of the circuit breaker, with the Check Sync VT on the other. Normally, the Main VT is located on the line-side (as per the default setting), but this is not always the case. For this reason, a

setting is provided where you can define this. This is the **Main VT Location** setting, which is found in the *CT AND VT RATIOS* column.

The Check Sync VT may be connected to one of the phase-to-phase voltages or phase-to-neutral voltages. This needs to be defined using the **CS Input** setting in the *CT AND VT RATIOS* column. Options are, A-B, B-C, C-A, A-N, B-N, or C-N.

9.1.2 VOLTAGE MONITORING

The settings in the *VOLTAGE MONITORS* sub-heading in the *SYSTEM CHECKS* column allow you to define the threshold at which a voltage is considered live, and a threshold at which the voltage is considered dead. These thresholds apply to both line and bus sides. If the measured voltage falls below the **Dead Voltage** setting, a DDB signal is generated (**Dead Bus**, or **Dead Line**, depending on which side is being measured). If the measured voltage exceeds the **Live Voltage** setting, a DDB signal is generated (**Live Bus**, or **Live Line**, depending on which side is being measured).

9.1.3 CHECK SYNCHRONISATION

The device provides two stages of Check Synchronisation. The first stage (CS1) is intended for use in synchronous systems. This means, where the frequencies and phase angles of both sides are compared and if the difference is within set limits, the circuit breaker is allowed to close. The second stage (CS2) is similar to stage, but has an additional adaptive setting. The second stage CS2 is intended for use in asynchronous systems, i.e. where the two sides are out of synchronism and one frequency is slipping continuously with respect to another. If the closing time of the circuit breaker is known, the CB Close command can be issued at a definite point in the cycle such that the CB closes at the point when both sides are in phase.

In situations where it is possible for the voltages on either side of a circuit breaker to be either synchronous or asynchronous, both CS1 and CS2 can be enabled to provide a CB Close signal if either set of permitted closing conditions is satisfied.

Each stage can also be set to inhibit circuit breaker closing if selected blocking conditions such as overvoltage, undervoltage or excessive voltage magnitude difference are detected. CS2 requires the phase angle difference to be decreasing in magnitude before permitting the circuit breaker to close. CS2 has an optional "Adaptive" closing feature, which issues the permissive close signal when the predicted phase angle difference immediately prior to the instant of circuit breaker main contacts closing (i.e. after CB Close time) is as close as practicable to zero.

Slip frequency is the rate of change of phase between each side of the circuit breaker, which is measured by the difference between the voltage signals on either side of the circuit breaker.

Having two system synchronism check stages available allows the circuit breaker closing to be enabled under different system conditions (for example, low slip / moderate phase angle, or moderate slip / small phase angle).

The settings specific to Check Synchronisation are found under the sub-heading *CHECK SYNC* in the *SYSTEM CHECKS* column. The only difference between the CS1 settings and the CS2 settings is that CS2 has settings for predictive closure of each CB (**CB1 CS2 Adaptive** and **CB2 CS2 Adaptive**).

9.1.4 CHECK SYNCHRONISATION VECTOR DIAGRAM

The following vector diagram represents the conditions for the System Check functionality. The Dead Volts setting is represented as a circle around the origin whose radius is equal to the maximum voltage magnitude, whereby the voltage can be considered dead. The nominal line voltage magnitude is represented by a circle around the origin whose radius is equal to the nominal line voltage magnitude. The minimum voltage magnitude at which the system can be considered as Live, is the magnitude difference between the bus and line voltages.

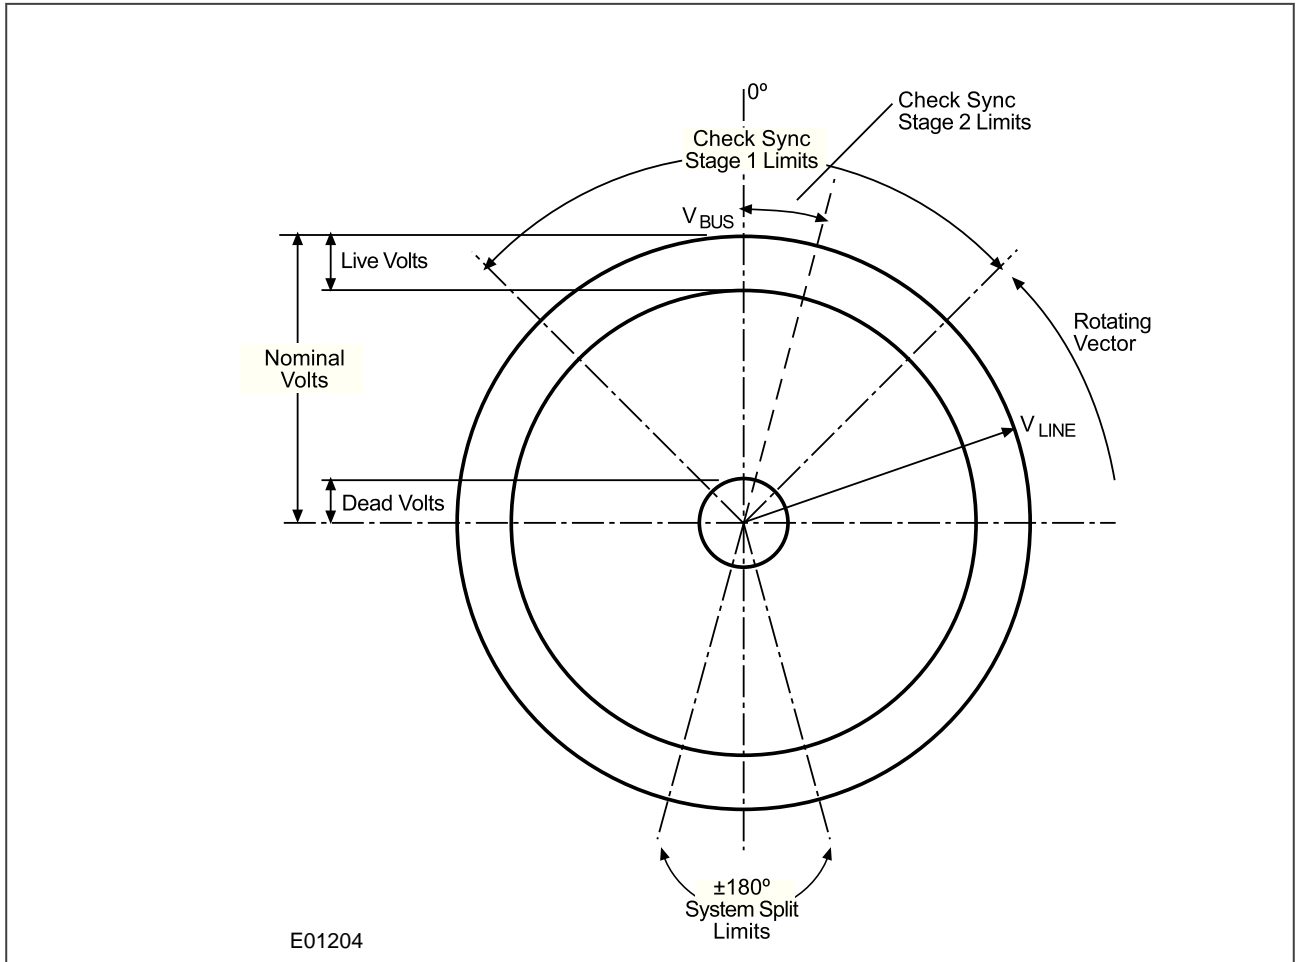


Figure 137: Check Synchronisation vector diagram

9.2 VOLTAGE MONITOR FOR CB CLOSURE

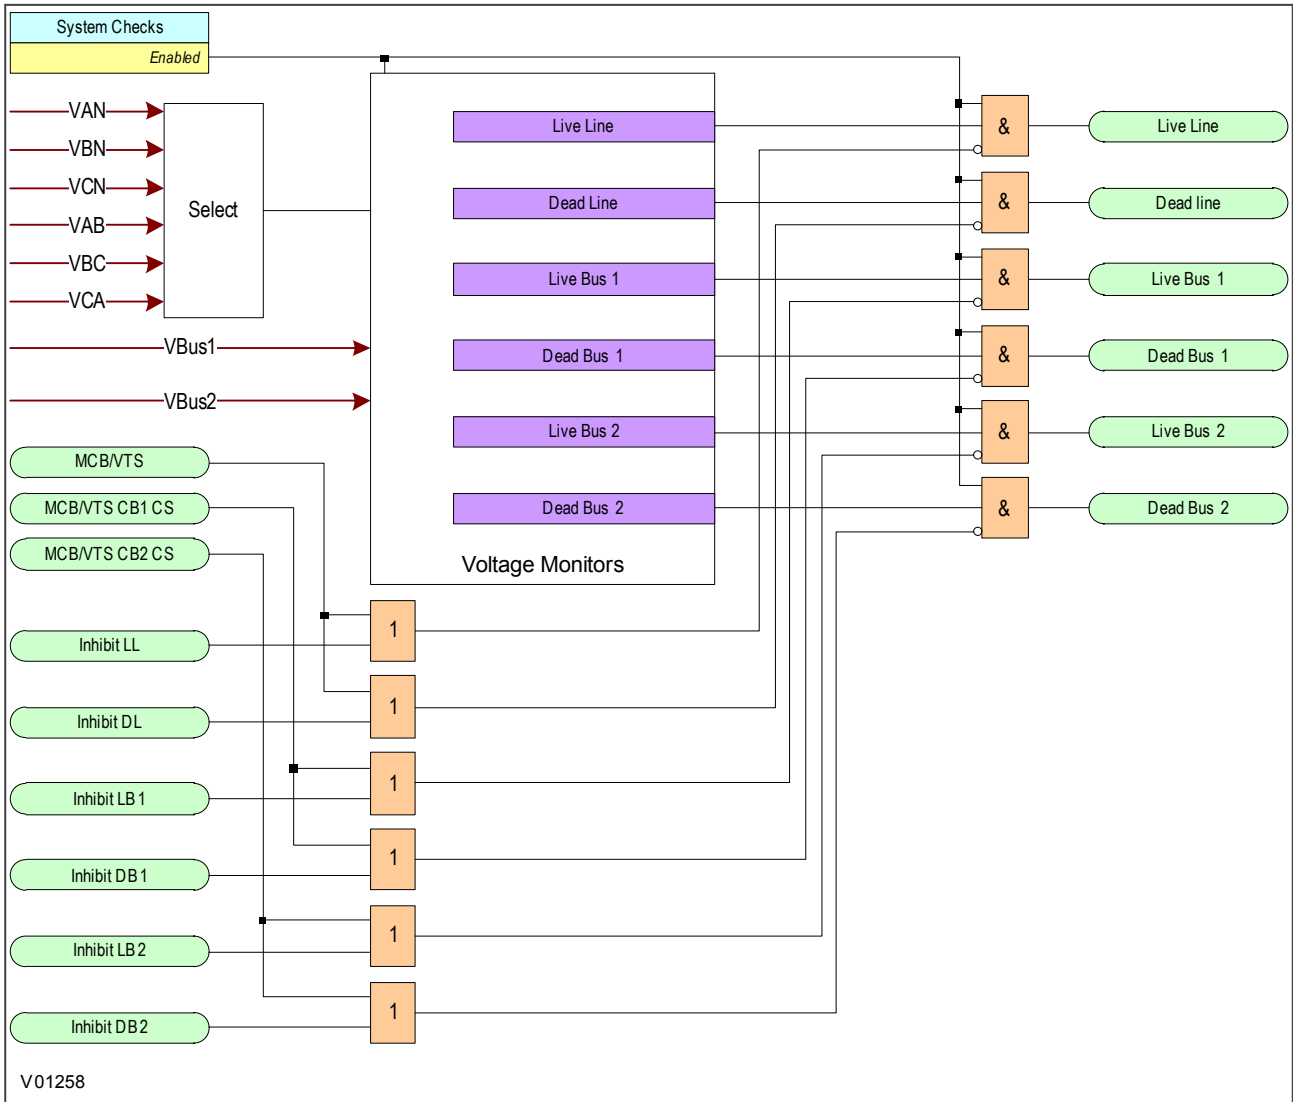


Figure 138: Voltage Monitor for CB Closure (Module 59)

9.3 CHECK SYNCHRONISATION MONITOR FOR CB CLOSURE

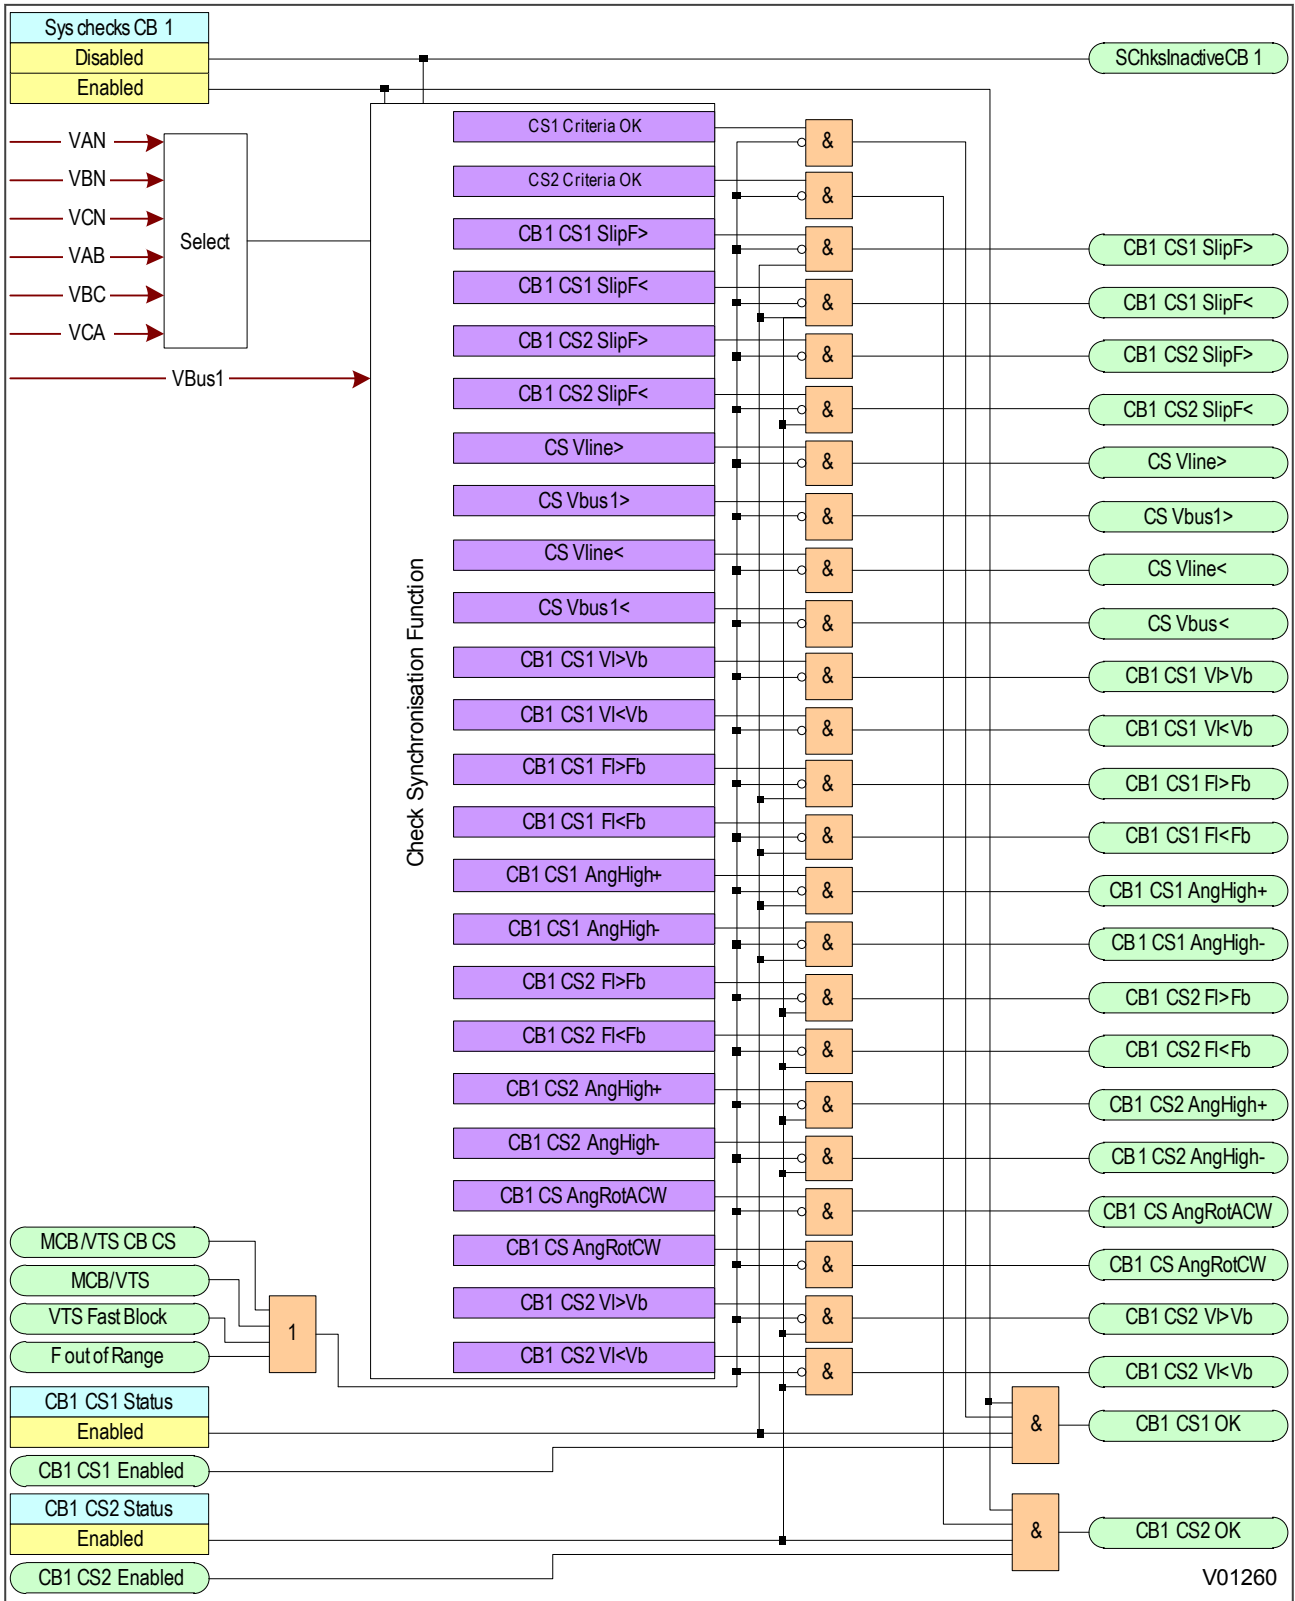


Figure 139: Check Synchronisation Monitor for CB1 closure (Module 60)

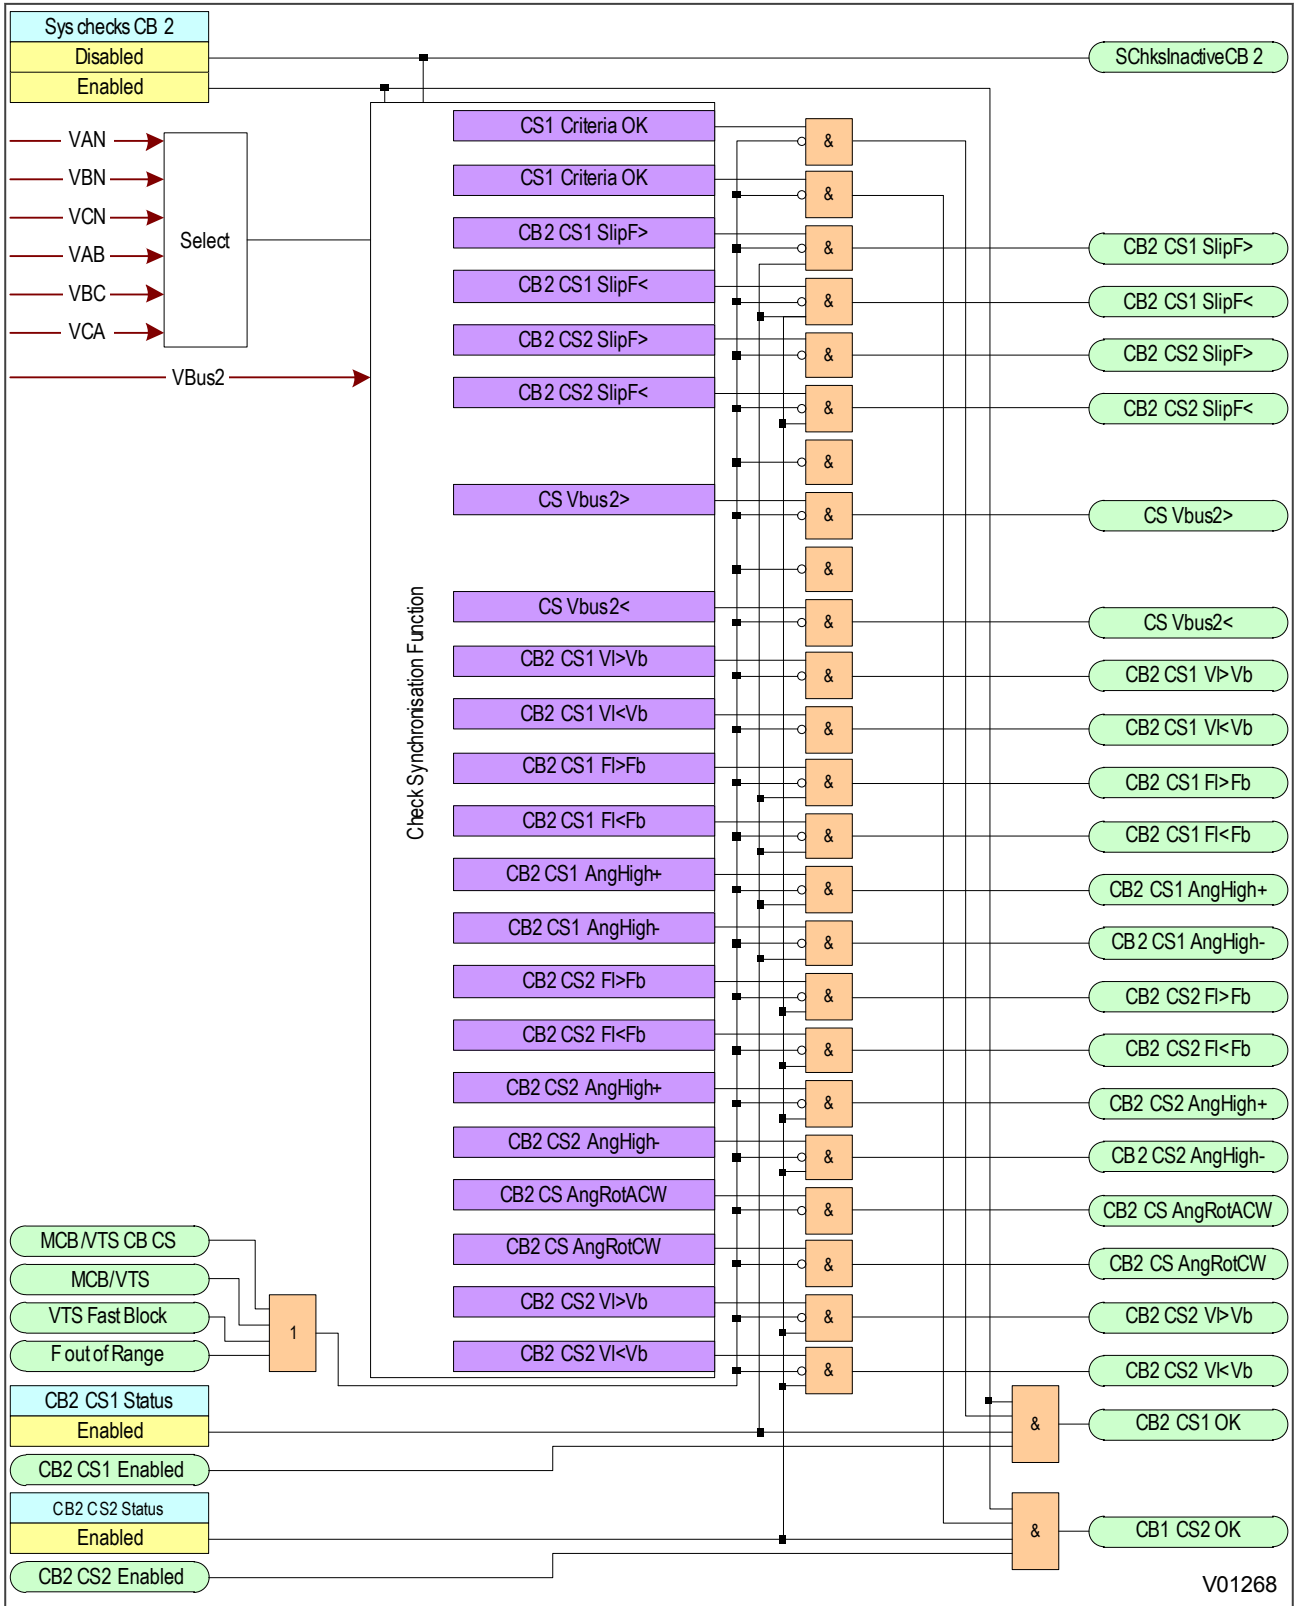


Figure 140: Check Synchronisation Monitor for CB2 closure (Module 61)

9.4 SYSTEM CHECK PSL

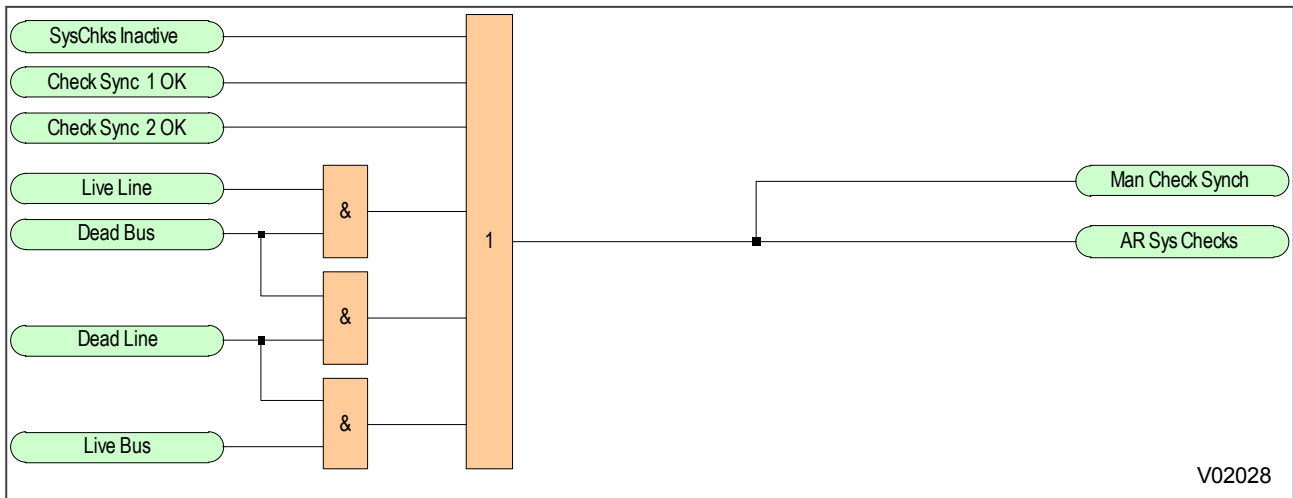


Figure 141: System Check PSL

9.5 APPLICATION NOTES

9.5.1 SLIP CONTROL

Slip control can be achieved by timer, by frequency or by both. The settings CS1 Slip Control and CS2 Slip Control are used to determine which type of slip control is to be used. As the device supports direct measurement of frequency, you would normally use frequency.

If you are using Slip Control by Timer, the combination of Phase Angle and Timer settings determines an effective maximum slip frequency, calculated as:

$$2A/360T \text{ – for CS1}$$

$$A/360T \text{ – for CS2}$$

where:

- A = Phase Angle setting in degrees
- T = Slip Timer setting in seconds

Examples

For CS1, where the Phase Angle setting is 30° and the Timer setting is 3.3 s, the “slipping” vector has to remain within $\pm 30^\circ$ of the reference vector for at least 3.3 seconds. Therefore a synchronisation check output will not be given if the slip is greater than $2 \times 30^\circ$ in 3.3 seconds.

Therefore, the maximum slip frequency = $2 \times 30 / 360 \times 3.3 = 0.0505$ hz.

For CS2, where the Phase Angle setting is 10° and the Timer setting is 0.1 sec., the slipping vector has to remain within 10° of the reference vector, with the angle decreasing, for 0.1 sec. When the angle passes through zero and starts to increase, the synchronisation check output is blocked. Therefore an output will not be given if the slip is greater than 10° in 0.1 second.

Therefore, the maximum slip frequency = $10 / 360 \times 0.1 = 0.278$ Hz.

Slip control by Timer is not practical for “large slip/small phase angle” applications, because the timer settings required are very small, sometimes less than 0.1 seconds. For these situations, slip control by frequency is better.

If Slip Control by Frequency + Timer is selected, for an output to be given, the slip frequency must be less than BOTH the set Slip Freq. value and the value determined by the Phase Angle and Timer settings.

9.5.2 USE OF CHECK SYNC 2 AND SYSTEM SPLIT

Check Sync 2 (CS2) and System Split functions are included for situations where the maximum permitted slip frequency and phase angle for synchronism checks can change due to adverse system conditions. A typical application is on a closely interconnected system, where synchronism is normally retained when a feeder is tripped. But under some circumstances, with parallel interconnections out of service, the feeder ends can drift out of synchronism when the feeder is tripped. Depending on the system and machine characteristics, the conditions for safe circuit breaker closing could be, for example:

Condition 1: For synchronized systems, with zero or very small slip:

- Slip <50 mHz; phase angle <30°

Condition 2: For unsynchronized systems, with significant slip:

- Slip < 250 mHz; phase angle <10° and decreasing

By enabling both CS1 and CS2, the device can be configured to allow CB closure if either of the two conditions is detected.

For manual circuit breaker closing with synchronism check, some utilities might prefer to arrange the logic to check initially for condition 1 only. However, if a System Split is detected before the condition 1 parameters are satisfied, the device will switch to checking for condition 2 parameters instead, based on the assumption that a significant degree of slip must be present when system split conditions are detected. This can be arranged by suitable PSL logic, using the System Check DDB signals.

9.5.3 PREDICTIVE CLOSURE OF CIRCUIT BREAKERS

The **CB1 CS2 Adaptive** and **CB1 CS2 Adaptive** settings compensate for the time taken to close the CB. When set to provide CB Close Time compensation, a predictive approach is used to close the circuit breaker ensuring that closing occurs at close to 0° therefore minimising the impact to the power system. The actual closing angle is subject to the constraints of the existing product architecture, i.e. the protection task runs twice per power system cycle, based on frequency tracking over the frequency range of 40 Hz to 70 Hz.

9.5.4 VOLTAGE AND PHASE ANGLE CORRECTION

For the Check Synchronisation function, the device needs to convert measured secondary voltages into primary voltages. In some applications, VTs either side of the circuit breaker may have different VT Ratios. In such cases, a magnitude correction factor is required.

There are some applications where the main VT is on the HV side of a transformer and the Check Sync VT is on the LV side, or vice-versa. If the vector group of the transformer is not "0", the voltages are not in phase, so phase correction is also necessary.

The correction factors are as follows and are located in the *TRANS. RATIOS* column:

- C/S V kSM, where kSM is the voltage correction factor.
- C/S Phase kSA, where kSA is the angle correction factor.

Assuming C/S input setting is A-N, then:

The line and bus voltage magnitudes are matched if $V_{a \text{ sec}} = V_{cs \text{ sec}} \times \text{C/S V kSA}$

The line and bus voltage angles are matched if $\angle V_{a \text{ sec}} = \angle V_{cs \text{ sec}} + \text{C/S Phase kSA}$

The following application scenarios show where the voltage and angular correction factors are applied to match different VT ratios:

Scenario	Physical Ratios (ph-N Values)				Setting Ratios				CS Correction Factors	
	Main VT Ratio		CS VT Ratio		Main VT Ratio (ph-ph) Always		CS VT Ratio		kSM	kSA
	Pri (kV)	Sec (V)	Pri (kV)	Sec (V)	Pri (kV)	Sec (V)	Pri (kV)	Sec (V)		
1	220/ $\sqrt{3}$	110/ $\sqrt{3}$	132/ $\sqrt{3}$	100/ $\sqrt{3}$	220	110	132	100	1.1	30°
2	220/ $\sqrt{3}$	110/ $\sqrt{3}$	220/ $\sqrt{3}$	110	220	110	127	110	0.577	0°
3	220/ $\sqrt{3}$	110/ $\sqrt{3}$	220/ $\sqrt{3}$	110/3	220	110	381	110	1.732	0°

SUPERVISION

CHAPTER 11

1 CHAPTER OVERVIEW

This chapter describes the supervision functions.

This chapter contains the following sections:

Chapter Overview	285
Voltage Transformer Supervision	286
Current Transformer Supervision	290
Trip Circuit Supervision	293

2 VOLTAGE TRANSFORMER SUPERVISION

The Voltage Transformer Supervision (VTS) function is used to detect failure of the AC voltage inputs to the protection. This may be caused by voltage transformer faults, overloading, or faults on the wiring, which usually results in one or more of the voltage transformer fuses blowing.

If there is a failure of the AC voltage input, the IED could misinterpret this as a failure of the actual phase voltages on the power system, which could result in unnecessary tripping of a circuit breaker.

The VTS logic is designed to prevent such a situation by detecting voltage input failures, which are NOT caused by power system phase voltage failure, and automatically blocking associated voltage dependent protection elements. A time-delayed alarm output is available to warn of a VTS condition.

The following scenarios are possible with respect to the failure of the VT inputs.

- Loss of one or two-phase voltages
- Loss of all three-phase voltages under load conditions
- Absence of three-phase voltages upon line energisation

2.1 LOSS OF ONE OR TWO PHASE VOLTAGES

If the power system voltages are healthy, no Negative Phase Sequence (NPS) current will be present. If however, one or two of the AC voltage inputs are missing, there will be Negative Phase Sequence voltage present, even if the actual power system phase voltages are healthy. VTS works by detecting Negative Phase Sequence (NPS) voltage without the presence of Negative Phase Sequence current. So if there is NPS voltage present, but no NPS current, it is certain that there is a problem with the voltage transformers and a VTS block should be applied to voltage dependent protection functions to prevent maloperation. The use of negative sequence quantities ensures correct operation even where three-limb or V-connected VTs are used.

The Negative Sequence VTS Element is blocked by the **Any Pole Dead** DDB signal during **SP AR Dead Time**. The resetting of the blocking signal is delayed by 240 ms after an **Any Pole Dead** condition disappears.

2.2 LOSS OF ALL THREE PHASE VOLTAGES

If all three voltage inputs are lost, there will be no Negative Phase Sequence quantities present, but the device will see that there is no voltage input. If this is caused by a power system failure, there will be a step change in the phase currents. However, if this is not caused by a power system failure, there will be no change in any of the phase currents. So if there is no measured voltage on any of the three phases and there is no change in any of the phase currents, this indicates that there is a problem with the voltage transformers and a VTS block should be applied to voltage dependent protection functions to prevent maloperation.

To avoid blocking VTS due to changing load condition, the superimposed current signal can only prevent operation of the VTS during the time window of 40 ms following the voltage collapse.

2.3 ABSENCE OF ALL THREE PHASE VOLTAGES ON LINE ENERGISATION

On line energisation there should be a change in the phase currents as a result of loading or line charging current. Under this condition we need an alternative method of detecting three-phase VT failure.

If there is no measured voltage on all three phases during line energisation, two conditions might apply:

- A three-phase VT failure
- A close-up three-phase fault.

The first condition would require VTS to block the voltage-dependent functions.

In the second condition, voltage dependent functions should not be blocked, as tripping is required.

To differentiate between these two conditions an overcurrent level detector is used (**VTS I> Inhibit**). This prevents a VTS block from being issued in case of a genuine fault. This overcurrent level detector is only enabled for 240 ms following line energization (based on an **All Poles Dead** signal drop off). It must still be set in excess of any non-fault based currents on line energisation (load, line charging current, transformer inrush current if applicable), but below the level of current produced by a close-up three-phase fault.

If the line is closed where a three-phase VT failure is present, the overcurrent detector will not operate and a VTS block will be applied. Closing onto a three-phase fault will result in operation of the overcurrent detector and prevent a VTS block being applied.

2.4 VTS IMPLEMENTATION

VTS is implemented in the *SUPERVISION* column of the relevant settings group.

The following settings are relevant for VT Supervision:

- **VTS Mode:** determines the mode of operation (Measured + MCB, Measured Only, MCB Only)
- **VTS Status:** determines whether the VTS Operate output will be a blocking output or an alarm indication only
- **VTS Reset Mode:** determines whether the Reset is to be manual or automatic
- **VTS Time Delay:** determines the operating time delay
- **VTS I> Inhibit:** inhibits VTS operation in the case of a phase overcurrent fault
- **VTS I2> Inhibit:** inhibits VTS operation in the case of a negative sequence overcurrent fault

VTS is only enabled during a live line condition (as indicated by the pole dead logic) to prevent operation under dead system conditions.

Thresholds

The negative sequence thresholds used by the element are:

- $V2 = 10 \text{ V}$ (fixed)
- $I2 = 0.05 \text{ to } 0.5 I_n$ settable (default $0.05 I_n$).

The phase voltage level detectors are:

- Drop off = 10 V (fixed)
- Pickup = 30 V (fixed)

The sensitivity of the superimposed current elements is fixed at $0.1 I_n$.

Fuse Fail

The device includes a setting (**VT Connected**) in the *CT AND VT RATIOS* column, which determines whether there are voltage transformers connected to it. If set to *Yes*, this setting has no effect.

If set to *No* it causes the VTS logic to set the **VTS Slow Block** and **VTS Fast Block** DDBs, but not raise any alarms. It also disables the VTS function. This prevents the pole dead logic working incorrectly if there is no voltage or current. It also blocks the distance, under voltage and other voltage-dependant functions. However, it does not affect the CB open part of the logic.

A VTS condition can be raised by a mini circuit breaker (MCB) status input, by internal logic using IED measurement, or both. The setting **VTS Mode** is used to select the method of indicating VT failure.

2.5 VTS LOGIC

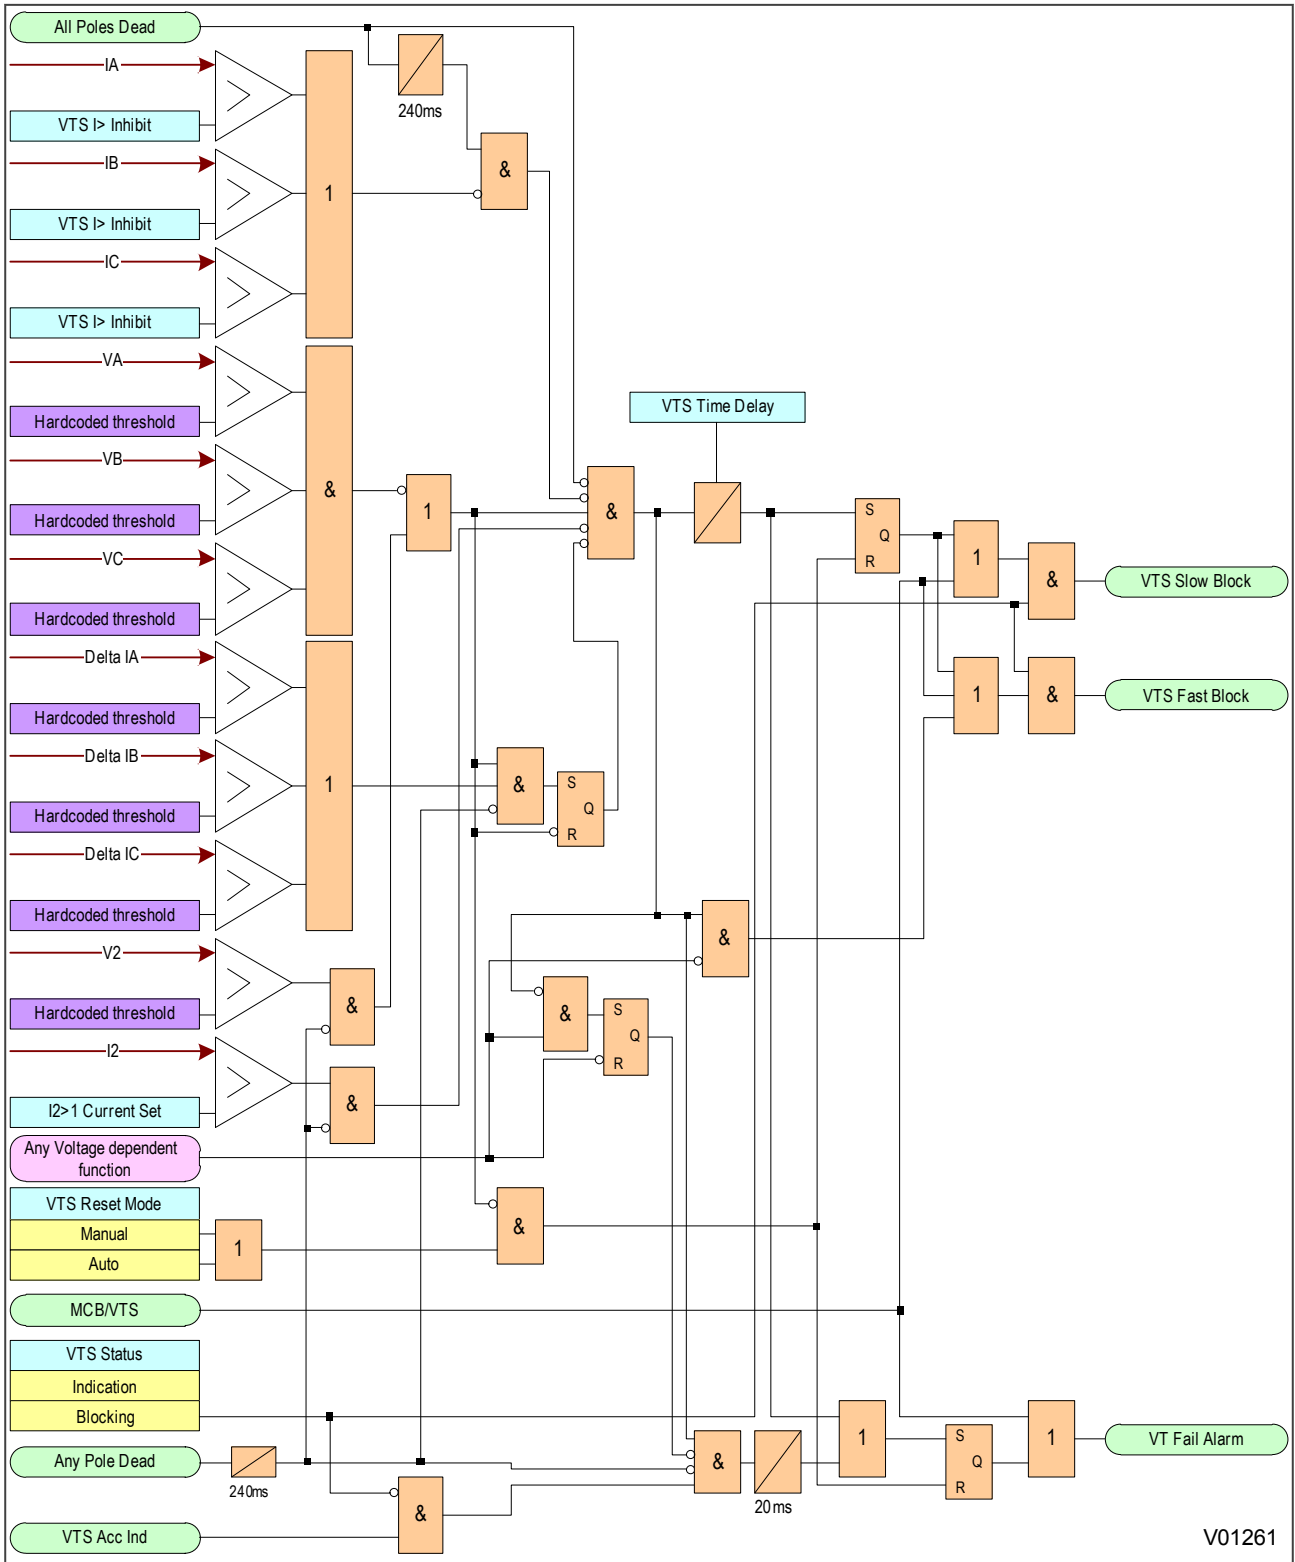


Figure 142: VTS logic

The IED may respond as follows, on operation of any VTS element:

- VTS set to provide alarm indication only
- Optional blocking of voltage-dependent protection elements
- Optional conversion of directional overcurrent elements to non-directional protection (by setting the relevant current protection status cells to *Enabled VTS*. In this case, the directional setting cells are automatically set to *non-directional*.)

The **VTS I> Inhibit** or **VTS I2> Inhibit** elements are used to override a VTS block if a fault occurs that could trigger the VTS logic. However, once the VTS block is set, subsequent system faults must not override the block. Therefore the VTS block is latched after a settable time delay (**VTS Time Delay**). Once the signal has latched, there are two methods of resetting. The first is manually using the front panel HMI, or remote communications (if the VTS condition has been removed). The second is in Auto mode, by restoring the 3 phase voltages above the phase level detector settings mentioned previously.

VTS Status can be set to *Disabled*, *Blocking* or *Indication*. If **VTS Status** is set to *Blocking*, a VTS condition will block operation of the relevant protection elements. In this case, a VTS indication is given after the **VTS Time Delay** has expired. If it is set to *Indication*, there is a risk of maloperation because protection elements are not blocked. In this case the VTS indication is given before the **VTS Time Delay** expires, if a trip signal is given (in this case a signal from the VTS acceleration logic is used as an input).

This scheme also operates correctly under very low load or even no load conditions. To achieve this, it uses a combination of time delayed signals derived from the DDB signals **VTS Fast Block** and **All Poles Dead**, to generate the distance blocking DDB signal called **VTS Blk Distance**.

Note:

*All non-distance voltage-dependent elements are blocked by the **VTS Fast Block** DDB.*

If a miniature circuit breaker (MCB) is used to protect the voltage transformer output circuits, MCB auxiliary contacts can be used to indicate a three-phase output disconnection. It is possible for the VTS logic to operate correctly without this input, but this facility has been provided to maintain compatibility with some practises. Energising an opto-isolated input assigned to the **MCB/VTS** provides the necessary block.

The VTS function is inhibited if:

- An **All Poles Dead** DDB signal is present
- Any phase overcurrent condition exists
- A Negative Phase Sequence current exists
- If the phase current changes over the period of 1 cycle

3 CURRENT TRANSFORMER SUPERVISION

The Current Transformer Supervision function (CTS) is used to detect failure of the AC current inputs to the protection. This may be caused by internal current transformer faults, overloading, or faults on the wiring. If there is a failure of the AC current input, the protection could misinterpret this as a failure of the actual phase currents on the power system, which could result in maloperation. Also, interruption in the AC current circuits can cause dangerous CT secondary voltages to be generated.

3.1 CTS IMPLEMENTATION

If the power system currents are healthy, no zero sequence voltage are derived. However, if one or more of the AC current inputs are missing, a zero sequence current would be derived, even if the actual power system phase currents are healthy. Standard CTS works by detecting a derived zero sequence current where there is no corresponding derived zero sequence voltage.

The voltage transformer connection used must be able to refer zero sequence voltages from the primary to the secondary side. Therefore, this element should only be enabled where the VT is of a five-limb construction, or comprises three single-phase units with the primary star point earthed.

The CTS function is implemented in the *SUPERVISION* column of the relevant settings group, under the sub-heading *CT SUPERVISION*.

The following settings are relevant for CT Supervision:

- **CTS Status:** to disable or enable CTS
- **CTS VN< Inhibit:** inhibits CTS if the zero sequence voltage exceeds this setting
- **CTS IN> Set:** determines the level of zero sequence current
- **CTS Time Delay:** determines the operating time delay

3.2 STANDARD CTS LOGIC

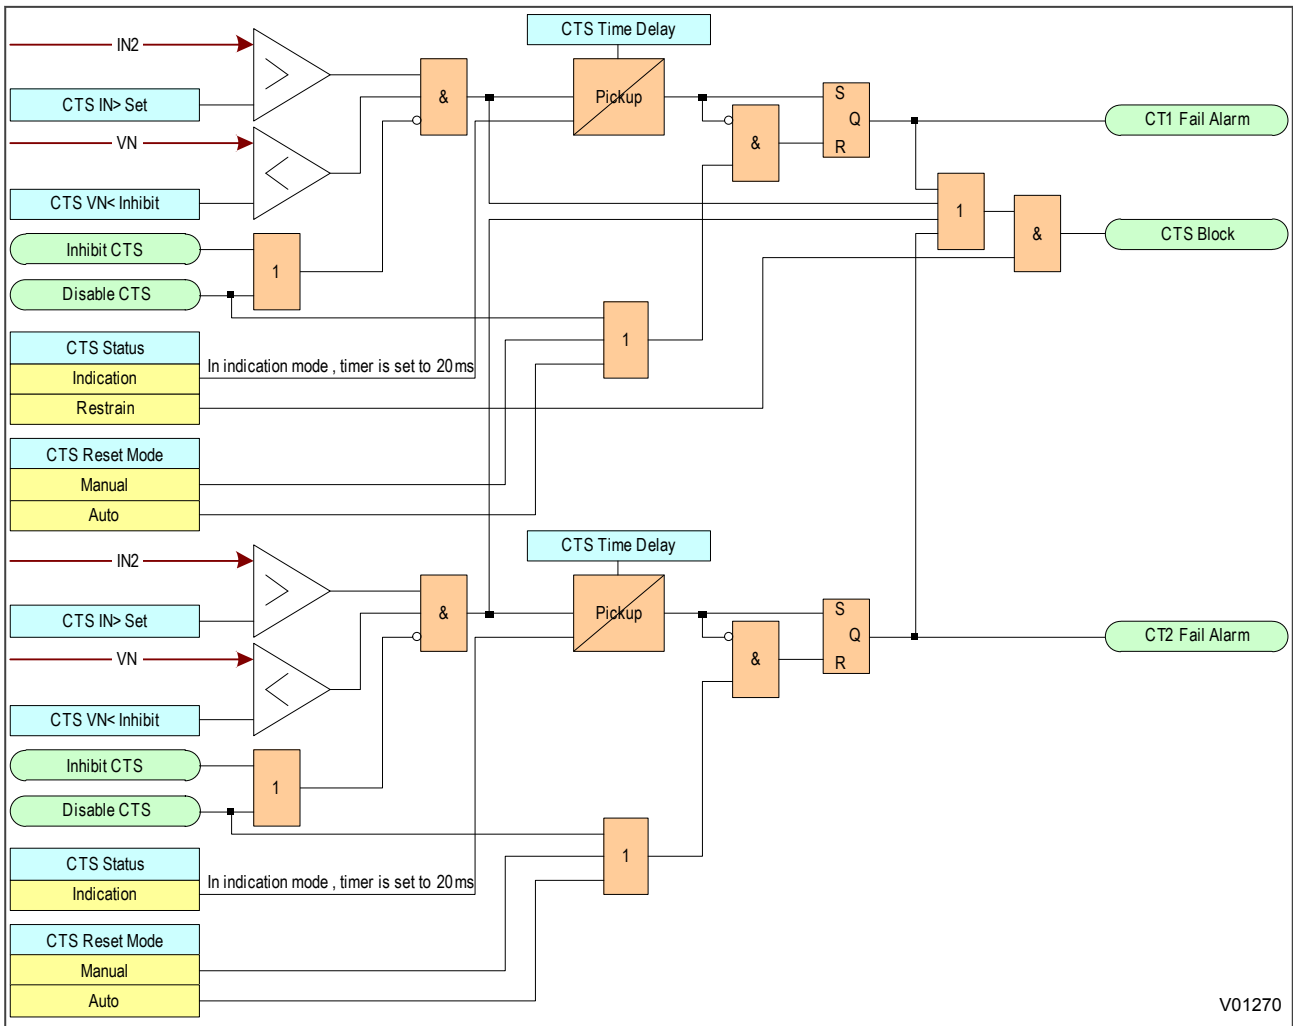


Figure 143: Standard CTS

3.3 CTS BLOCKING

Both the standard and differential CTS methods block protection elements operating from derived quantities, such as Broken conductor, derived earth fault and negative sequence overcurrent. Measured quantities such as DEF can be selectively blocked by designing an appropriate PSL scheme.

Differential CTS can be used to restrain the differential protection if required.

3.4 APPLICATION NOTES

3.4.1 SETTING GUIDELINES

The residual voltage setting, **CTS VN< Inhibit** and the residual current setting, **CTS IN> Set**, should be set to avoid unwanted operation during healthy system conditions. For example:

- **CTS VN< Inhibit** should be set to 120% of the maximum steady state residual voltage.
- **CTS IN> Set** will typically be set below minimum load current.
- **CTS Time Delay** is generally set to 5 seconds.

Where the magnitude of residual voltage during an earth fault is unpredictable, the element can be disabled to prevent protection elements being blocked during fault conditions.

4 TRIP CIRCUIT SUPERVISION

In most protection schemes, the trip circuit extends beyond the IED enclosure and passes through components such as links, relay contacts, auxiliary switches and other terminal boards. Such complex arrangements may require dedicated schemes for their supervision.

There are two distinctly separate parts to the trip circuit; the trip path, and the trip coil. The trip path is the path between the IED enclosure and the CB cubicle. This path contains ancillary components such as cables, fuses and connectors. A break in this path is possible, so it is desirable to supervise this trip path and to raise an alarm if a break should appear in this path.

The trip coil itself is also part of the overall trip circuit, and it is also possible for the trip coil to develop an open-circuit fault.

This product supports a number of trip circuit supervision (TCS) schemes.

4.1 TRIP CIRCUIT SUPERVISION SCHEME 1

This scheme provides supervision of the trip coil with the CB open or closed, however, it does not provide supervision of the trip path whilst the breaker is open. The CB status can be monitored when a self-reset trip contact is used. However, this scheme is incompatible with latched trip contacts, as a latched contact will short out the opto-input for a time exceeding the recommended Delayed Drop-off (DDO) timer setting of 400 ms, and therefore does not support CB status monitoring. If you require CB status monitoring, further opto-inputs must be used.

Note:

A 52a CB auxiliary contact follows the CB position. A 52b auxiliary contact is the opposite.

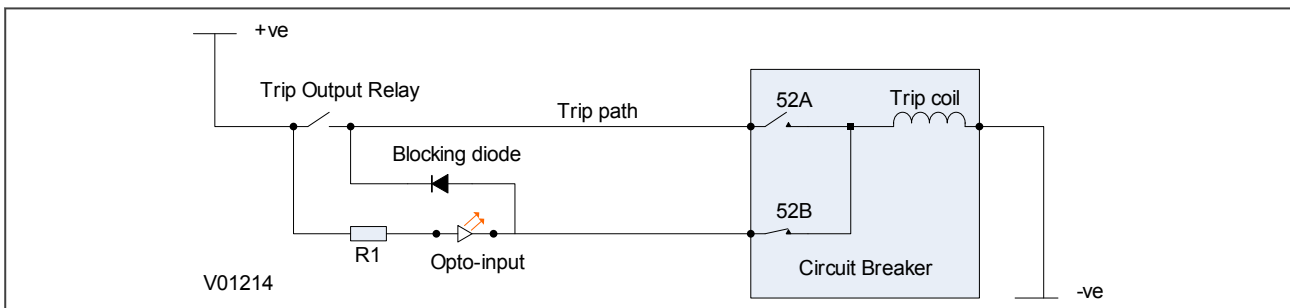


Figure 144: TCS Scheme 1

When the CB is closed, supervision current passes through the opto-input, blocking diode and trip coil. When the CB is open, supervision current flows through the opto-input and into the trip coil via the 52b auxiliary contact. This means that *Trip Coil* supervision is provided when the CB is either closed or open, however *Trip Path* supervision is only provided when the CB is closed. No supervision of the trip path is provided whilst the CB is open (pre-closing supervision). Any fault in the trip path will only be detected on CB closing, after a 400 ms delay.

4.1.1 RESISTOR VALUES

The supervision current is a lot less than the current required by the trip coil to trip a CB. The opto-input limits this supervision current to less than 10 mA. If the opto-input were to be short-circuited however, it could be possible for the supervision current to reach a level that could trip the CB. For this reason, a resistor R1 is often used to limit the current in the event of a short-circuited opto-input. This limits the current to less than 60mA. The table below shows the appropriate resistor value and voltage setting for this scheme.

Trip Circuit Voltage	Opto Voltage Setting with R1 Fitted	Resistor R1 (ohms)
48/54	24/27	1.2k
110/125	48/54	2.7k
220/250	110/125	5.2k



Warning:
This Scheme is not compatible with Trip Circuit voltages of less than 48 V.

4.1.2 PSL FOR TCS SCHEME 1

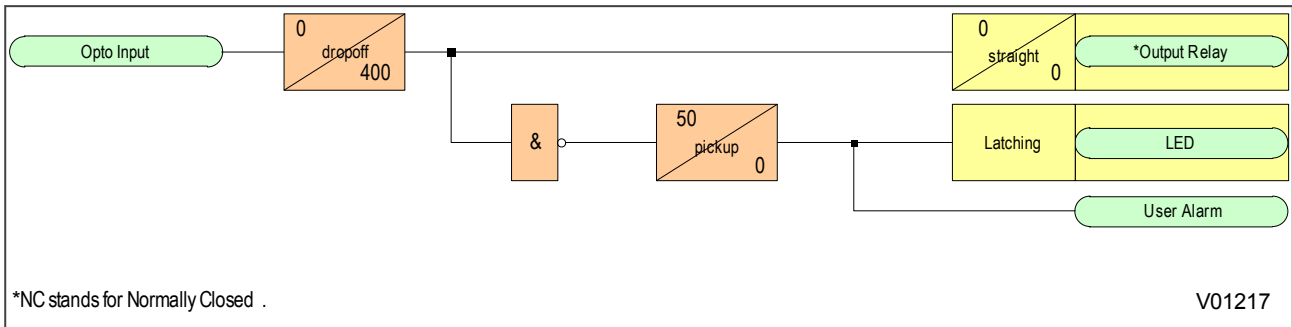


Figure 145: PSL for TCS Scheme 1

The opto-input can be used to drive a Normally Closed Output Relay, which in turn can be used to drive alarm equipment. The signal can also be inverted to drive a latching programmable LED and a user alarm DDB signal.

The DDO timer operates as soon as the opto-input is energised, but will take 400 ms to drop off/reset in the event of a trip circuit failure. The 400 ms delay prevents a false alarm due to voltage dips caused by faults in other circuits or during normal tripping operation when the opto-input is shorted by a self-reset trip contact. When the timer is operated the NC (normally closed) output relay opens and the LED and user alarms are reset.

The 50 ms delay on pick-up timer prevents false LED and user alarm indications during the power up time, following a voltage supply interruption.

4.2 TRIP CIRCUIT SUPERVISION SCHEME 2

This scheme provides supervision of the trip coil with the breaker open or closed but does not provide pre-closing supervision of the trip path. However, using two opto-inputs allows the IED to correctly monitor the circuit breaker status since they are connected in series with the CB auxiliary contacts. This is achieved by assigning one opto-input to the 52a contact and another opto-input to the 52b contact. Provided the **CB Status** setting in the **CB CONTROL** column is set to *Both 52A and 52B*, the IED will correctly monitor the status of the breaker. This scheme is also fully compatible with latched contacts as the supervision current will be maintained through the 52b contact when the trip contact is closed.

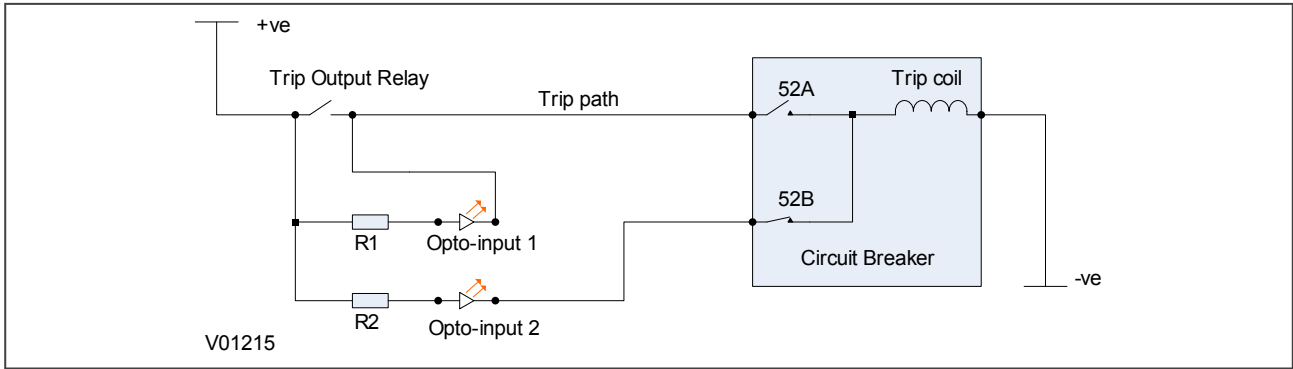


Figure 146: TCS Scheme 2

When the breaker is closed, supervision current passes through opto input 1 and the trip coil. When the breaker is open current flows through opto input 2 and the trip coil. No supervision of the trip path is provided whilst the breaker is open. Any fault in the trip path will only be detected on CB closing, after a 400 ms delay.

4.2.1 RESISTOR VALUES

Optional resistors R1 and R2 can be added to prevent tripping of the CB if either opto-input is shorted. The table below shows the appropriate resistor value and voltage setting for this scheme.

Trip Circuit Voltage	Opto Voltage Setting with R1 Fitted	Resistor R1 and R2 (ohms)
48/54	24/27	1.2k
110/125	48/54	2.7k
220/250	110/125	5.2k



Warning:
This Scheme is not compatible with Trip Circuit voltages of less than 48 V.

4.2.2 PSL FOR TCS SCHEME 2

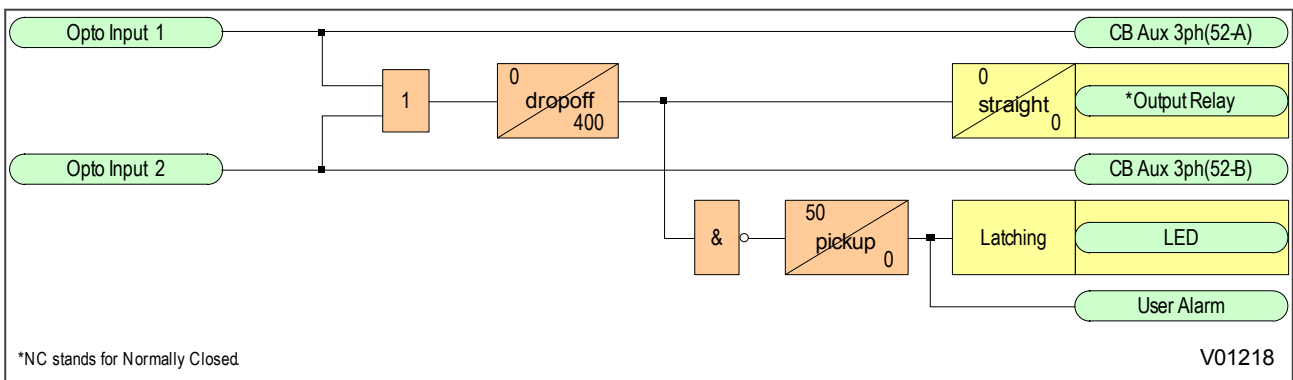


Figure 147: PSL for TCS Scheme 2

In TCS scheme 2, both opto-inputs must be low before a trip circuit fail alarm is given.

4.3 TRIP CIRCUIT SUPERVISION SCHEME 3

TCS Scheme 3 is designed to provide supervision of the trip coil with the breaker open or closed. It provides pre-closing supervision of the trip path. Since only one opto-input is used, this scheme is not compatible with latched trip contacts. If you require CB status monitoring, further opto-inputs must be used.

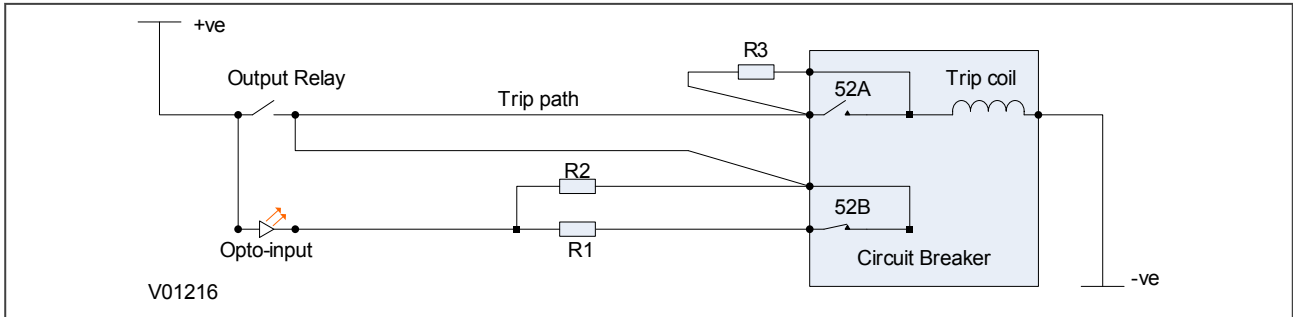


Figure 148: TCS Scheme 3

When the CB is closed, supervision current passes through the opto-input, resistor R2 and the trip coil. When the CB is open, current flows through the opto-input, resistors R1 and R2 (in parallel), resistor R3 and the trip coil. The supervision current is maintained through the trip path with the breaker in either state, therefore providing pre-closing supervision.

4.3.1 RESISTOR VALUES

Resistors R1 and R2 are used to prevent false tripping, if the opto-input is accidentally shorted. However, unlike the other two schemes. This scheme is dependent upon the position and value of these resistors. Removing them would result in incomplete trip circuit monitoring. The table below shows the resistor values and voltage settings required for satisfactory operation.

Trip Circuit Voltage	Opto Voltage Setting with R1 Fitted	Resistor R1 & R2 (ohms)	Resistor R3 (ohms)
48/54	24/27	1.2k	600
110/250	48/54	2.7k	1.2k
220/250	110/125	5.0k	2.5k



Warning:
This Scheme is not compatible with Trip Circuit voltages of less than 48 V.

4.3.2 PSL FOR TCS SCHEME 3

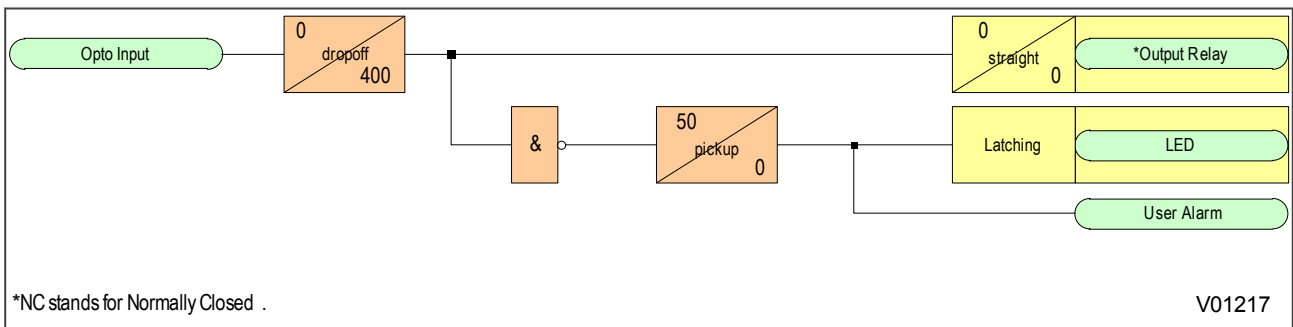


Figure 149: PSL for TCS Scheme 3

DIGITAL I/O AND PSL CONFIGURATION

CHAPTER 12

1 CHAPTER OVERVIEW

This chapter introduces the PSL (Programmable Scheme Logic) Editor, and describes the configuration of the digital inputs and outputs. It provides an outline of scheme logic concepts and the PSL Editor. This is followed by details about allocation of the digital inputs and outputs, which require the use of the PSL Editor. A separate "Settings Application Software" document is available that gives a comprehensive description of the PSL, but enough information is provided in this chapter to allow you to allocate the principal digital inputs and outputs.

This chapter contains the following sections:

Chapter Overview	299
Configuring Digital Inputs and Outputs	300
Scheme Logic	301
Configuring the Opto-Inputs	304
Assigning the Output Relays	305
Fixed Function LEDs	306
Configuring Programmable LEDs	307
Function Keys	309
Control Inputs	310

2 CONFIGURING DIGITAL INPUTS AND OUTPUTS

Configuration of the digital inputs and outputs in this product is very flexible. You can use a combination of settings and programmable logic to customise them to your application. You can access some of the settings using the keypad on the front panel, but you will need a computer running the settings application software to fully interrogate and configure the properties of the digital inputs and outputs.

The settings application software includes an application called the PSL Editor (Programmable Scheme Logic Editor). The PSL Editor lets you allocate inputs and outputs according to your specific application. It also allows you to apply attributes to some of the signals such as a drop-off delay for an output contact.

In this product, digital inputs and outputs that are configurable are:

- Optically isolated digital inputs (opto-inputs). These can be used to monitor the status of associated plant.
- Output relays. These can be used for purposes such as initiating the tripping of circuit breakers, providing alarm signals, etc..
- Programmable LEDs. The number and colour of the programmable LEDs varies according to the particular product being applied.
- Function keys and associated LED indications. These are not provided on all products, but where they are, each function key has an associated tri-colour LED.
- IEC 61850 GOOSE inputs and outputs. These are only provided on products that have been specified for connection to an IEC61850 system, and the details of the GOOSE are presented in the documentation on IEC61850.

3 SCHEME LOGIC

The product is supplied with pre-loaded Fixed Scheme Logic (FSL) and Programmable Scheme Logic (PSL).

The Scheme Logic is a functional module within the IED, through which all mapping of inputs to outputs is handled. The scheme logic can be split into two parts; the Fixed Scheme Logic (FSL) and the Programmable Scheme Logic (PSL). It is built around a concept called the digital data bus (DDB). The DDB encompasses all of the digital signals (DDBs) which are used in the FSL and PSL. The DDBs included digital inputs, outputs, and internal signals.

The FSL is logic that has been hard-coded in the product. It is fundamental to correct interaction between various protection and/or control elements. It is fixed and cannot be changed.

The PSL gives you a facility to develop custom schemes to suit your application if the factory-programmed default PSL schemes do not meet your needs. Default PSL schemes are programmed before the product leaves the factory. These default PSL schemes have been designed to suit typical applications and if these schemes suit your requirements, you do not need to take any action. However, if you want to change the input-output mappings, or to implement custom scheme logic, you can change these, or create new PSL schemes using the PSL editor.

The PSL consists of components such as logic gates and timers, which combine and condition DDB signals.

The logic gates can be programmed to perform a range of different logic functions and. The number of inputs to a logic gate are not limited. The timers can be used either to create a programmable delay or to condition the logic outputs. Output contacts and programmable LEDs have dedicated conditioners.

The PSL logic is event driven. Only the part of the PSL logic that is affected by the particular input change that has occurred is processed. This minimises the amount of processing time used by the PSL ensuring industry leading performance.

The following diagram shows how the scheme logic interacts with the rest of the IED.

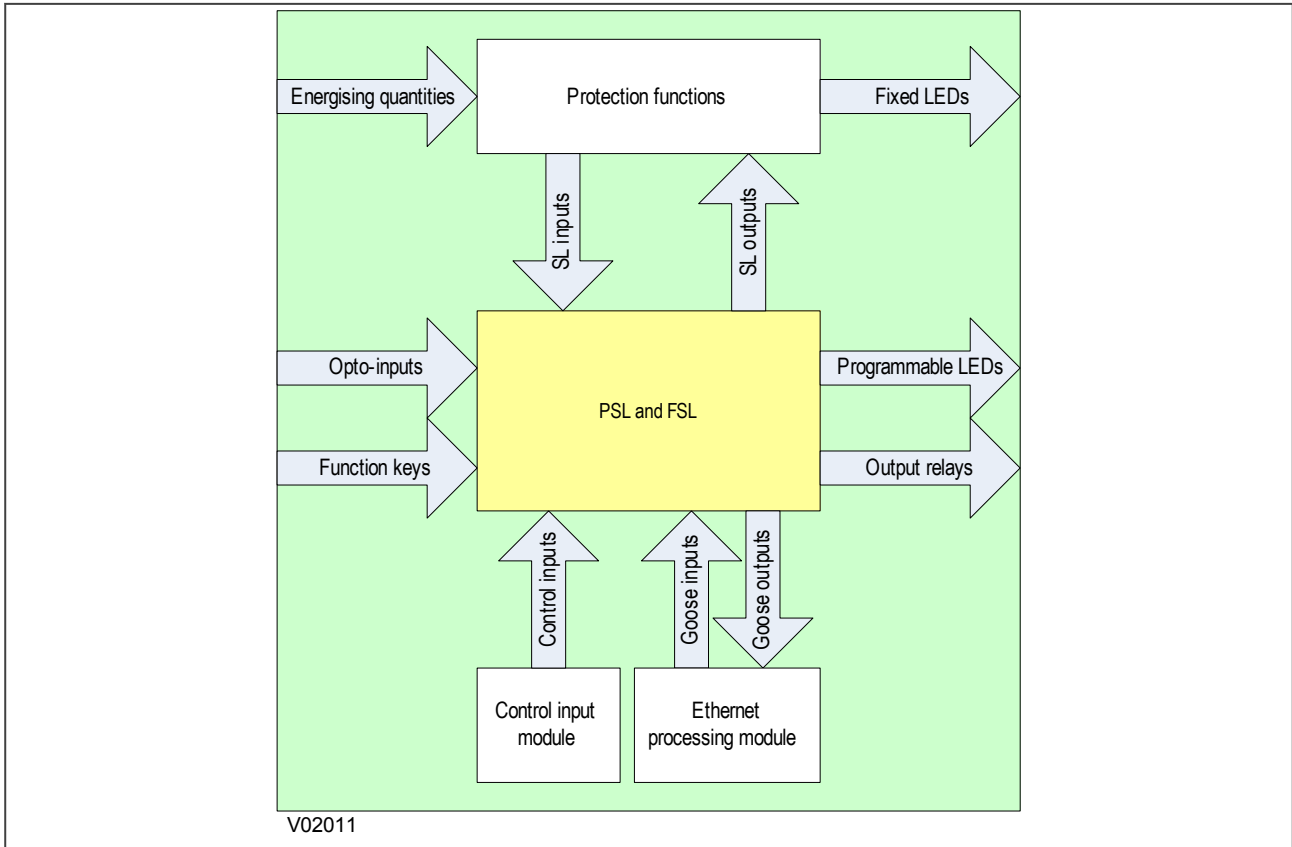


Figure 150: Scheme Logic Interfaces

3.1 PSL EDITOR

The Programmable Scheme Logic (PSL) is a module of programmable logic gates and timers in the IED, which can be used to create customised logic to qualify how the product manages its response to system conditions. The IED's digital inputs are combined with internally generated digital signals using logic gates, timers, and conditioners. The resultant signals are then mapped to digital outputs signals including output relays and LEDs.

The PSL Editor is a tool in the settings application software that allows you to create and edit scheme logic diagrams. You can use the default scheme logic which has been designed to suit most applications, but if it does not suit your application you can change it. If you create a different scheme logic with the software, you need to upload it to the device to apply it.

3.2 PSL SCHEMES

Your product is shipped with default scheme files. These can be used without modification for most applications, or you can choose to use them as a starting point to design your own scheme. You can also create a new scheme from scratch. To create a new scheme, or to modify an existing scheme, you will need to launch the settings application software. You then need to open an existing PSL file, or create a new one, for the particular product that you are using, and then open a PSL file. If you want to create a new PSL file, you should select **File** then **New** then **Blank scheme...** This action opens a default file appropriate for the device in question, but deletes the diagram components from the default file to leave an empty diagram with configuration information loaded. To open an existing file, or a default file, simply double-click on it.

3.3 PSL SCHEME VERSION CONTROL

To help you keep track of the PSL loaded into products, a version control feature is included. The user interface contains a *PSL DATA* column, which can be used to track PSL modifications. A total of 12 cells are contained in the *PSL DATA* column; 3 for each setting group.

Grp(n) PSL Ref: When downloading a PSL scheme to an IED, you will be prompted to enter the relevant group number and a reference identifier. The first 32 characters of the reference identifier are displayed in this cell. The horizontal cursor keys can scroll through the 32 characters as the LCD display only displays 16 characters.

Example:

Grp (n) PSL Ref

Date/time: This cell displays the date and time when the PSL scheme was downloaded to the IED.

Example:

18 Nov 2002 08:59:32.047

Grp(n) PSL ID: This cell displays a unique ID number for the downloaded PSL scheme.

Example:

Grp (n) PSL ID ID - 2062813232

4 CONFIGURING THE OPTO-INPUTS

The number of optically isolated status inputs (opto-inputs) depends on the specific model supplied. The use of the inputs will depend on the application, and their allocation is defined in the programmable scheme logic (PSL). In addition to the PSL assignment, you also need to specify the expected input voltage. Generally, all opto-inputs will share the same input voltage range, but if different voltage ranges are being used, this device can accommodate them.

In the *OPTO CONFIG* column there is a global nominal voltage setting. If all opto-inputs are going to be energised from the same voltage range, you select the appropriate value in the setting. If you select *Custom* in the setting, then the cells **Opto Input 1**, **Opto Input 2**, etc. become visible. You use these cells to set the voltage ranges for each individual opto-input.

Within the *OPTO CONFIG* column there are also settings to control the filtering applied to the inputs, as well as the pick-up/drop-off characteristic.

The filter control setting provides a bit string with a bit associated with all opto-inputs. Setting the bit to '1' means that a half-cycle filter is applied to the inputs. This helps to prevent incorrect operation in the event of power system frequency interference on the wiring. Setting the field to '0' removes the filter and provides for faster operation.

The **Characteristic** setting is a single setting that applies to all the opto-inputs. It is used to set the pick-up/drop-off ratios of the input signals. As standard it is set to 80% pick-up and 60% drop-off, but you can change it to other available thresholds if that suits your operational requirements.

5 ASSIGNING THE OUTPUT RELAYS


Relay contact action is controlled using the PSL. DDB signals are mapped in the PSL and drive the output relays. The driving of an output relay is controlled by means of a relay output conditioner. Several choices are available for how output relay contacts are conditioned. For example, you can choose whether operation of an output relay contact is latched, has delay on pick-up, or has a delay on drop-off. You make this choice in the **Contact Properties** window associated with the output relay conditioner.

To map an output relay in the PSL you should use the Contact Conditioner button in the toolbar to import it. You then condition it according to your needs. The output of the conditioner respects the attributes you have assigned.

The toolbar button for a Contact Conditioner looks like this:



The PSL contribution that it delivers looks like this:

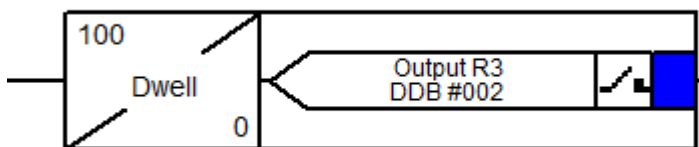

Note:

Contact Conditioners are only available if they have not all been used. In some default PSL schemes, all Contact Conditioners might have been used. If that is the case, and you want to use them for something else, you will need to re-assign them.

On the toolbar there is another button associated with the relay outputs. The button looks like this:



This is the "Contact Signal" button. It allows you to put replica instances of a conditioned output relay into the PSL, preventing you having to make cross-page connections which might detract from the clarity of the scheme.

6 FIXED FUNCTION LEDS

Four fixed-function LEDs on the left-hand side of the front panel indicate the following conditions.

- Trip (Red) switches ON when the IED issues a trip signal. It is reset when the associated fault record is cleared from the front display. Also the trip LED can be configured as self-resetting.
- Alarm (Yellow) flashes when the IED registers an alarm. This may be triggered by a fault, event or maintenance record. The LED flashes until the alarms have been accepted (read), then changes to constantly ON. When the alarms are cleared, the LED switches OFF.
- Out of service (Yellow) is ON when the IED's functions are unavailable.
- Healthy (Green) is ON when the IED is in correct working order, and should be ON at all times. It goes OFF if the unit's self-tests show there is an error in the hardware or software. The state of the healthy LED is reflected by the watchdog contacts at the back of the unit.

6.1 TRIP LED LOGIC

When a trip occurs, the trip LED is illuminated. It is possible to reset this with a number of ways:

- Directly with a reset command (by pressing the Clear Key)
- With a reset logic input
- With self-resetting logic

You enable the automatic self-resetting with the **Sys Fn Links** cell in the *SYSTEM DATA* column. A '0' disables self resetting and a '1' enables self resetting.

The reset occurs when the circuit is reclosed and the **Any Pole Dead** signal has been reset for three seconds providing the **Any Start** signal is inactive. The reset is prevented if the **Any Start** signal is active after the breaker closes.

The Trip LED logic is as follows:

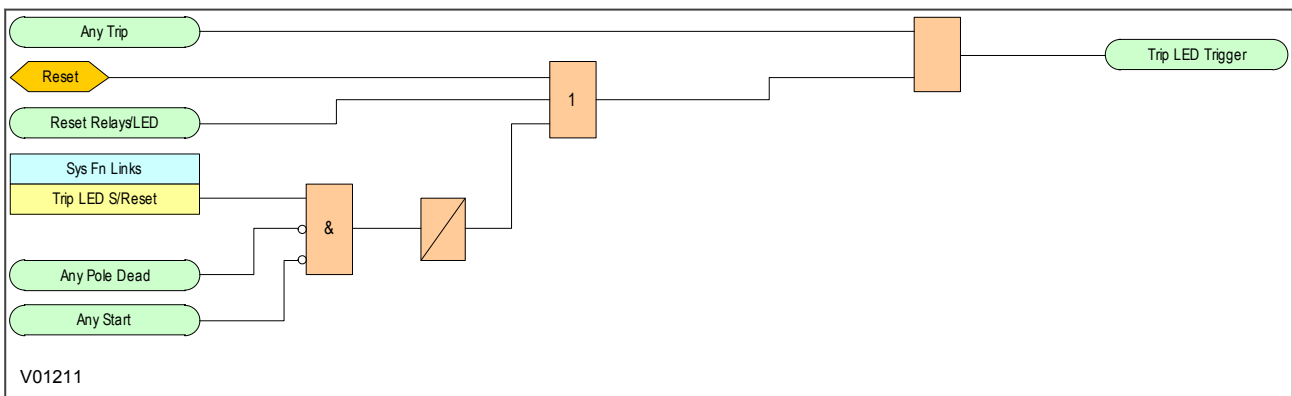


Figure 151: Trip LED logic

7 CONFIGURING PROGRAMMABLE LEDs

There are three types of programmable LED signals which vary according to the model being used. These are:

- Single-colour programmable LED. These are red when illuminated.
- Tri-colour programmable LED. These can be illuminated red, green, or amber.
- Tri-colour programmable LED associated with a Function Key. These can be illuminated red, green, or amber.

DDB signals are mapped in the PSL and used to illuminate the LEDs. For single-coloured programmable LEDs there is one DDB signal per LED. For tri-coloured LEDs there are two DDB signals associated with the LED. Asserting **LED # Grn** will illuminate the LED green. Asserting **LED # Red** will illuminate the LED red. Asserting both DDB signals will illuminate the LED amber.


The illumination of an LED is controlled by means of a conditioner. Using the conditioner, you can decide whether the LEDs reflect the real-time state of the DDB signals, or whether illumination is latched pending user intervention.

To map an LED in the PSL you should use the LED Conditioner button in the toolbar to import it. You then condition it according to your needs. The output(s) of the conditioner respect the attribute you have assigned.

The toolbar button for a tri-colour LED looks like this:




The PSL contribution that it delivers looks like this:

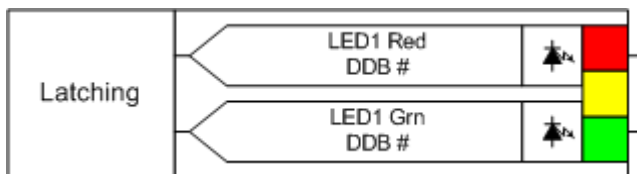

The toolbar button for a single-colour LED looks like this:



The PSL contribution that it delivers looks like this.



Note:

LED Conditioners are only available if they have not all been used up, and in some default PSL schemes they might be. If that is the case and you want to use them for something else, you will need to re-assign them.

On the toolbar there is another button associated with the LEDs. For a tri-coloured LED the button looks like this:



For a single-colour LED it looks like this:



It is the "LED Signal" button. It allows you to put replica instances of a conditioned LED into the PSL, preventing you having to make cross-page connections which might detract from the clarity of the scheme.

8 FUNCTION KEYS

For most models, a number of programmable function keys are available. This allows you to assign function keys to control functionality via the programmable scheme logic (PSL). Each function key is associated with a programmable tri-colour LED, which you can program to give the desired indication on activation of the function key.

These function keys can be used to trigger any function that they are connected to as part of the PSL. The function key commands are found in the *FUNCTION KEYS* column.

Each function key is associated with a DDB signal as shown in the DDB table. You can map these DDB signals to any function available in the PSL.

The ***Fn Key Status*** cell displays the status (energised or de-energised) of the function keys by means of a binary string, where each bit represents a function key starting with bit 0 for function key 1.

Each function key has three settings associated with it, as shown:

- ***Fn Key (n)***, which enables or disables the function key
- ***Fn Key (n) Mode***, which allows you to configure the key as toggled or normal
- ***Fn Key (n) label***, which allows you to define the function key text that is displayed

The ***Fn Key (n)*** cell is used to enable (unlock) or disable (unlock) the function key signals in PSL. The Lock setting has been provided to prevent further activation on subsequent key presses. This allows function keys that are set to *Toggled* mode and their DDB signal active 'high', to be locked in their active state therefore preventing any further key presses from deactivating the associated function. Locking a function key that is set to the "Normal" mode causes the associated DDB signals to be permanently off. This safety feature prevents any inadvertent function key presses from activating or deactivating critical functions.

When the ***Fn Key (n) Mode*** cell is set to *Toggle*, the function key DDB signal output will remain in the set state until a reset command is given. In the *Normal* mode, the function key DDB signal will remain energised for as long as the function key is pressed and will then reset automatically. In this mode, a minimum pulse duration can be programmed by adding a minimum pulse timer to the function key DDB output signal.

The ***Fn Key Label*** cell makes it possible to change the text associated with each individual function key. This text will be displayed when a function key is accessed in the function key menu, or it can be displayed in the PSL.

The status of all function keys are recorded in non-volatile memory. In case of auxiliary supply interruption their status will be maintained.

9 CONTROL INPUTS

The control inputs are software switches, which can be set or reset locally or remotely. These inputs can be used to trigger any PSL function to which they are connected. There are three setting columns associated with the control inputs: *CONTROL INPUTS*, *CTRL I/P CONFIG* and *CTRL I/P LABELS*. These are listed in the Settings and Records appendix at the end of this manual.

ELECTRICAL TELEPROTECTION

CHAPTER 13

1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	313
Introduction	314
Teleprotection Scheme Principles	315
Implementation	316
Configuration	317
Connecting to Electrical InterMiCOM	319
Application Notes	320

2 INTRODUCTION

Electrical Teleprotection is an optional feature that uses communications links to create protection schemes. It can be used to replace hard wiring between dedicated relay output contacts and digital input circuits. Two products equipped with electrical teleprotection can connect and exchange commands using a communication link. It is typically used to implement teleprotection schemes.

Using full duplex communications, eight binary command signals can be sent in each direction between connected products. The communication connection complies with the EIA(RS)232 standard. Ports may be connected directly, or using modems. Alternatively EIA(RS)232 converters can be used for connecting to other media such as optical fibres.

Communications statistics and diagnostics enable you to monitor the integrity of the communications link, and a loopback feature is available to help with testing.

3 TELEPROTECTION SCHEME PRINCIPLES

Teleprotection schemes use signalling to convey a trip command to remote circuit breakers to isolate circuits. Three types of teleprotection commands are commonly encountered:

- Direct Tripping
- Permissive Tripping
- Blocking Scheme

3.1 DIRECT TRIPPING

In direct tripping applications (often described by the generic term: “intertripping”), teleprotection signals are sent directly to a master trip device. Receipt of a command causes circuit breaker operation without any further qualification. Communication must be reliable and secure because any signal detected at the receiving end causes a trip of the circuit at that end. The communications system must be designed so that interference on the communication circuit does not cause spurious trips. If a spurious trip occurs, the primary system might be unnecessarily isolated.

3.2 PERMISSIVE TRIPPING

Permissive trip commands are monitored by a protection device. The circuit breaker is tripped when receipt of the command coincides with a ‘start’ condition being detected by the protection at the receiving. Requirements for the communications channel are less onerous than for direct tripping schemes, since receipt of an incorrect signal must coincide with a ‘start’ of the receiving end protection for a trip operation to take place. Permissive tripping is used to speed up tripping for faults occurring within a protected zone.

4 IMPLEMENTATION

Electrical InterMiCOM is configured using a combination of settings in the *INTERMICOM COMMS* column, settings in the *INTERMICOM CONF* column, and the programmable scheme logic (PSL).

The eight command signals are mapped to DDB signals within the product using the PSL.

Signals being sent to a remote terminal are referenced in the PSL as ***IM Output 1 - IM Output 8***. Signals received from the remote terminal are referenced as ***IM Input 1 - IM Input 8***.

Note:

As well as the optional Modem InterMiCOM, some products are available with a feature called InterMiCOM64 (IM64). The functionality and assignment of commands in InterMiCOM and InterMiCOM64 are similar, but they act independently and are configured independently.

5 CONFIGURATION

Electrical Teleprotection is compliant with IEC 60834-1:1999. For your application, you can customise individual command signals to the differing requirements of security, speed, and dependability as defined in this standard.

You customise the command signals using the **IM# Cmd Type** cell in the *INTERMICOM CONF* column.

Any command signal can be configured for:

- Direct intertripping by selecting 'Direct'. (this is the most secure signalling but incurs a time delay to deliver the security).
- Blocking applications by selecting 'Blocking'. (this is the fastest signalling)
- Permissive intertripping applications by selecting 'Permissive'. (this is dependable signalling that balances speed and security)

You can also select to 'Disable' the command.

Note:

When used in the context of a setting, '#' specifies which command signal (1-8) bit is being configured.

To ensure that command signals are processed only by their intended recipient, the command signals are packaged into a message (sometimes referred to as a telegram) which contains an address field. A sending device sets a pattern in this field. A receiving device must be set to match this pattern in the address field before the commands will be acted upon. 10 patterns have been carefully chosen for maximum security. You need to choose which ones to use, and set them using the **Source Address** and **Receive Address** cells in the *INTERMICOM COMMS* column.

The value set in the **Source Address** of the transmitting device should match that set in the **Receive Address** of the receiving device. For example set **Source Address** to 1 at a local terminal and set **Receive Address** to 1 at the remote terminal.

The Source Address and Receive Address settings in the device should be set to different values to avoid false operation under inadvertent loopback conditions.

Where more than one pair of devices is likely to share a communication link, you should set each pair to use a different pair of address values.

Electrical InterMiCOM has been designed to be resilient to noise on communications links, but during severe noise conditions, the communication may fail. If this is the case, an alarm is raised and you can choose how the input signals are managed using the **IM# FallBackMode** cell in the *INTERMICOM CONF* column:

- If you choose *Latched*, the last valid command to be received can be maintained until a new valid message is received.
- If you choose *Default*, the signal will revert to a default value after the period defined in the **IM# FrameSyncTim** setting has expired. You choose the default value using the **IM# DefaultValue** setting.

Subsequent receipt of a full valid message will reset the alarm, and the new command signals will be used.

As well as the settings described above, you will need to assign input and output signals in the Programmable Scheme Logic (PSL). Use the 'Integral Tripping' buttons to create the logic you want to apply. A typical example is shown below.

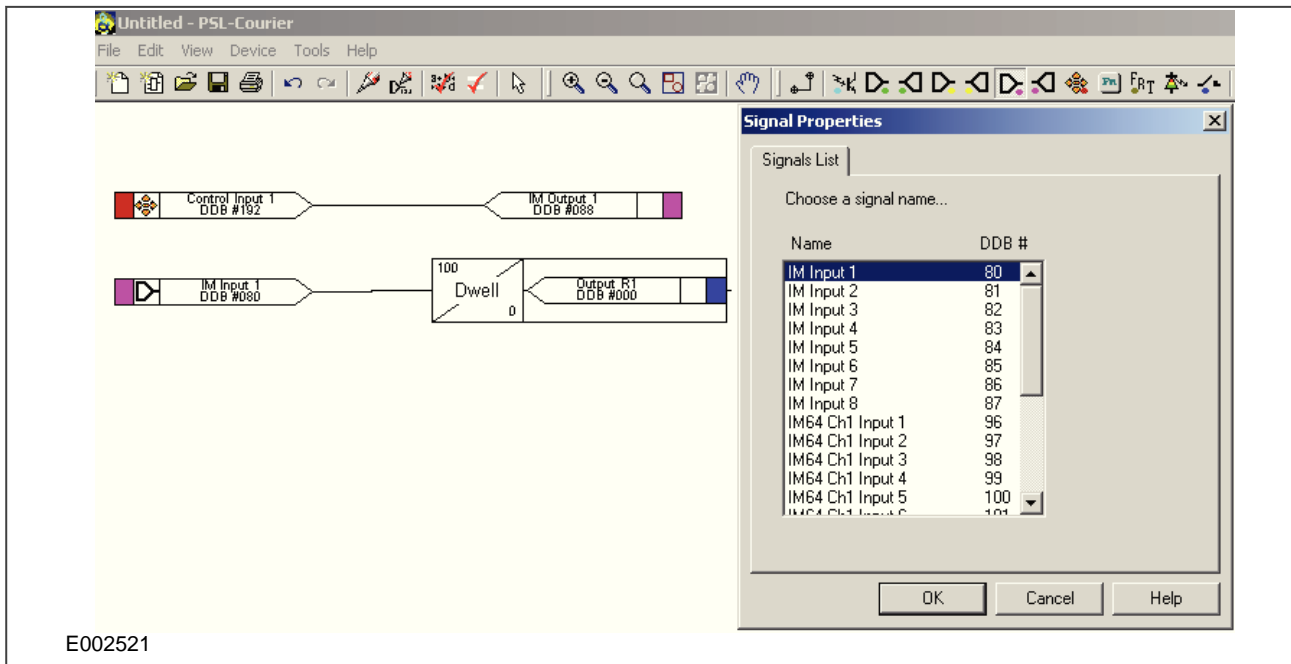


Figure 152: Example assignment of InterMiCOM signals within the PSL

Note:

When an Electrical InterMiCOM signal is sent from a local terminal, only the remote terminal will react to the command. The local terminal will only react to commands initiated at the remote terminal.

6 CONNECTING TO ELECTRICAL INTERMICOM

Electrical InterMiCOM uses EIA(RS)232 communication presented on a 9-pin 'D' type connector. The connector is labelled SK5 and is located at the bottom of the 2nd Rear communication board. The port is configured as standard DTE (Data Terminating Equipment).

6.1 SHORT DISTANCE

EIA(RS)232 is suitable for short distance connections only - less than 15m. Where this limitation is not a problem, direct connection between devices is possible. For this case, inter-device connections should be made as shown below the figure below.

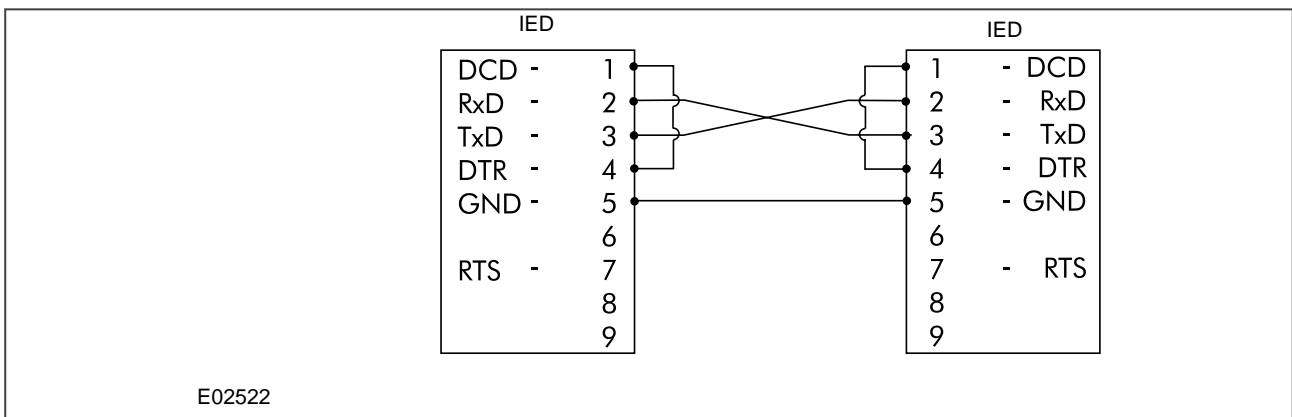


Figure 153: Direct connection

For direct connection, the maximum baud rate can generally be used.

6.2 LONG DISTANCE

EIA(RS)232 is suitable for short distance connections only - less than 15m. Where this limitation is a problem, direct connection between devices is not possible. For this case, inter-device connections should be made as shown below the figure below.

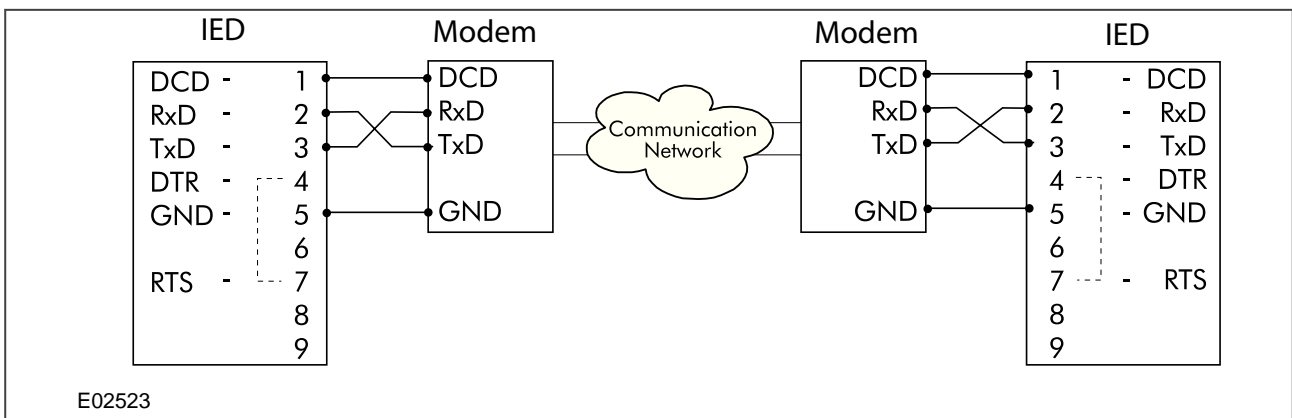


Figure 154: Indirect connection using modems

This type of connection should be used when connecting to devices that have the ability to control the DCD line. The baud rate should be chosen to be suitable for the communications network. If the Modem does not support the DCD function, the DCD terminal on the IED should be connected to the DTR terminal.

7 APPLICATION NOTES

Electrical InterMiCOM settings are contained within two columns; *INTERMICOM COMMS* and *INTERMICOM CONF*. The *INTERMICOM COMMS* column contains all the settings needed to configure the communications, as well as the channel statistics and diagnostic facilities. The *INTERMICOM CONF* column sets the mode of each command signal and defines how they operate in case of signalling failure.

Short metallic direct connections and connections using fire-optic converters will generally be set to have the highest signalling speed of 19200b/s. Due to this high signalling rate, the difference in operating time between the direct, permissive, and blocking type signals is small. This means you can select the most secure signalling command type ('Direct' intertrip) for all commands. You do this with the **IM# Cmd Type** settings. For these applications you should set the **IM# Fallback Mode** to *Default*. You should also set a minimal intentional delay by setting **IM# FrameSyncTim** to 10 msec. This ensures that whenever two consecutive corrupt messages are received, the command will immediately revert to the default value until a new valid message is received.

For applications that use Modem and/or multiplexed connections, the trade-off between speed, security, and dependability is more critical. Choosing the fastest baud rate (data rate) to achieve maximum speed may appear attractive, but this is likely to increase the cost of the telecommunications equipment. Also, telecommunication services operating at high data rates are more prone to interference and suffer from longer re-synchronisation times following periods of disruption. Taking into account these factors we recommend a maximum baud rate setting of 9600 bps. As baud rates decrease, communications become more robust with fewer interruptions, but overall signalling times increase.

At slower baud rates, the choice of signalling mode becomes significant. You should also consider what happens during periods of noise when message structure and content can be lost.

- In 'Blocking' mode, the likelihood of receiving a command in a noisy environment is high. In this case, we recommend you set **IM# Fallback Mode** to *Default*, with a reasonably long **IM# FrameSyncTim** setting. Set **IM# DefaultValue** to '1'. This provides a substitute for a received blocking signal, applying a failsafe for blocking schemes.
- In 'Direct' mode, the likelihood of receiving commands in a noisy environment is small. In this case, we recommend you set **IM# Fallback Mode** to *Default* with a short **IM# FrameSyncTim** setting. Set **IM# DefaultValue** to '0'. This means that if a corrupt message is received, InterMiCOM will use the default value. This provides a substitute for the intertrip signal not being received, applying a failsafe for direct intertripping schemes.
- In 'Permissive' mode, the likelihood of receiving a valid command under noisy communications conditions is somewhere between that of the 'Blocking' mode and the 'Direct' intertrip mode. In this case, we recommended you set **IM# Fallback Mode** to *Latched*.

The table below presents recommended **IM# FrameSyncTim** settings for the different signalling modes and baud rates:

Baud Rate	Minimum Recommended "IM# FrameSyncTim" Setting		Minimum Setting (ms)	Maximum Setting (ms)
	Direct Intertrip Mode	Blocking Mode		
600	100	250	100	1500
1200	50	130	50	1500
2400	30	70	30	1500
4800	20	40	20	1500
9600	10	20	10	1500
19200	10	10	10	1500

Note:

*As we have recommended Latched operation, the table does not contain recommendations for 'Permissive' mode. However, if you do select 'Default' mode, you should set **IM# FrameSyncTim** greater than those listed above. If you set **IM# FrameSyncTim** lower than the minimum setting listed above, the device could interpret a valid change in a message as a corrupted message.*

We recommend a setting of 25% for the communications failure alarm.

COMMUNICATIONS

CHAPTER 14

1 CHAPTER OVERVIEW

This product supports Substation Automation System (SAS), and Supervisory Control and Data Acquisition (SCADA) communication. The support embraces the evolution of communications technologies that have taken place since microprocessor technologies were introduced into protection, control, and monitoring devices which are now ubiquitously known as Intelligent Electronic Devices for the substation (IEDs).

As standard, all products support rugged serial communications for SCADA and SAS applications. By option, any product can support Ethernet communications for more advanced SCADA and SAS applications.

This chapter contains the following sections:

Chapter Overview	325
Communication Interfaces	326
Serial Communication	327
Standard Ethernet Communication	330
Redundant Ethernet Communication	331
Simple Network Management Protocol (SNMP)	354
Data Protocols	361
Read Only Mode	390
Time Synchronisation	392

2 COMMUNICATION INTERFACES

The products have a number of standard and optional communication interfaces. The standard and optional hardware and protocols are summarised below:

Port	Availability	Physical layer	Use	Data Protocols
Front	Standard	RS232	Local settings	Courier
Rear Port 1 (RP1 copper)	Standard	RS232 / RS485 / K-Bus	SCADA Remote settings	Courier, MODBUS, IEC60870-5-103, DNP3.0 (order option)
Rear Port 1 (RP1 fibre)	Optional	Fibre	SCADA Remote settings	Courier, MODBUS, IEC60870-5-103, DNP3.0 (order option)
Rear Port 2 (RP2)	Optional	RS232 / RS485 / K-Bus	SCADA Remote settings	SK4: Courier only SK5: InterMicom only
Ethernet	Optional	Ethernet	IEC 61850 or DNP3 Remote settings	IEC 61850, Courier (tunnelled) or DNP3.0 (order option)

Note:
Optional communications boards are always fitted into slot A.

Note:
When the optional fibre board is used for serial SCADA communication over optical fibre, the fibre port assumes designation RP1. The RP1 copper ports on the power supply board are then disabled.

Note:
It is only possible to fit one optional communications board, therefore RP2 and Ethernet communications are mutually exclusive.

3 SERIAL COMMUNICATION

The physical layer standards that are used for serial communications for SCADA purposes are:

- EIA(RS)485 (often abbreviated to RS485)
- K-Bus (a proprietary customization of RS485)

EIA(RS)232 is used for local communication with the IED (for transferring settings and downloading firmware updates).

RS485 is similar to RS232 but for longer distances and it allows daisy-chaining and multi-dropping of IEDs.

K-Bus is a proprietary protocol quite similar to RS485, but it cannot be mixed on the same link as RS485. Unlike RS485, K-Bus signals applied across two terminals are not polarised.

It is important to note that these are not data protocols. They only describe the physical characteristics required for two devices to communicate with each other.

For a description of the K-Bus standard see [K-Bus](#) (on page 328) and Alstom Grid's K-Bus interface guide reference R6509.

A full description of the RS485 is available in the published standard.

3.1 EIA(RS)232 BUS

The EIA(RS)232 interface uses the IEC 60870-5 FT1.2 frame format.

The device supports an IEC 60870-5 FT1.2 connection on the front-port. This is intended for temporary local connection and is not suitable for permanent connection. This interface uses a fixed baud rate of 19200 bps, 11-bit frame (8 data bits, 1 start bit, 1 stop bit, even parity bit), and a fixed device address of '1'.

EIA(RS)232 interfaces are polarised.

3.2 EIA(RS)485 BUS

The RS485 two-wire connection provides a half-duplex, fully isolated serial connection to the IED. The connection is polarized but there is no agreed definition of which terminal is which. If the master is unable to communicate with the product, and the communication parameters match, then it is possible that the two-wire connection is reversed.

The RS485 bus must be terminated at each end with 120 Ω 0.5 W terminating resistors between the signal wires.

The RS485 standard requires that each device be directly connected to the actual bus. Stubs and tees are forbidden. Loop bus and Star topologies are not part of the RS485 standard and are also forbidden.

Two-core screened twisted pair cable should be used. The final cable specification is dependent on the application, although a multi-strand 0.5 mm² per core is normally adequate. The total cable length must not exceed 1000 m. It is important to avoid circulating currents, which can cause noise and interference, especially when the cable runs between buildings. For this reason, the screen should be continuous and connected to ground at one end only, normally at the master connection point.

The RS485 signal is a differential signal and there is no signal ground connection. If a signal ground connection is present in the bus cable then it must be ignored. At no stage should this be connected to the cable's screen or to the product's chassis. This is for both safety and noise reasons.

It may be necessary to bias the signal wires to prevent jabber. Jabber occurs when the signal level has an indeterminate state because the bus is not being actively driven. This can occur when all the slaves are in receive mode and the master is slow to turn from receive mode to transmit mode. This may be because the master is waiting in receive mode, in a high impedance state, until it has something to transmit. Jabber causes the receiving device(s) to miss the first bits of the first character in the packet, which results in the slave rejecting the message and consequently not responding. Symptoms of this are; poor response times

(due to retries), increasing message error counts, erratic communications, and in the worst case, complete failure to communicate.

3.2.1 EIA(RS)485 BIASING REQUIREMENTS

Biasing requires that the signal lines be weakly pulled to a defined voltage level of about 1 V. There should only be one bias point on the bus, which is best situated at the master connection point. The DC source used for the bias must be clean to prevent noise being injected.

Note:

Some devices may be able to provide the bus bias, in which case external components would not be required.

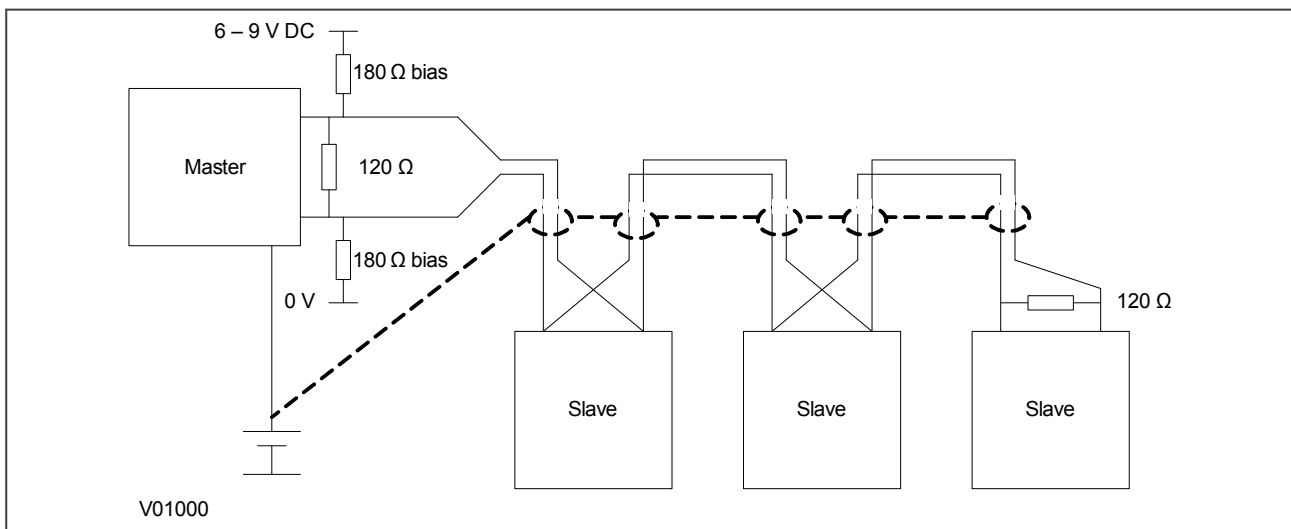


Figure 155: RS485 biasing circuit



Warning:

It is extremely important that the 120 Ω termination resistors are fitted. Otherwise the bias voltage may be excessive and may damage the devices connected to the bus.

3.3 K-BUS

K-Bus is a robust signalling method based on RS485 voltage levels. K-Bus incorporates message framing, based on a 64 kbps synchronous HDLC protocol with FM0 modulation to increase speed and security.

The rear interface is used to provide a permanent connection for K-Bus, which allows multi-drop connection.

A K-Bus spur consists of up to 32 IEDs connected together in a multi-drop arrangement using twisted pair wiring. The K-Bus twisted pair connection is non-polarised.

It is not possible to use a standard EIA(RS)232 to EIA(RS)485 converter to convert IEC 60870-5 FT1.2 frames to K-Bus. A protocol converter, namely the KITZ101, KITZ102 or KITZ201, must be used for this purpose. Please consult Alstom Grid for information regarding the specification and supply of KITZ devices. The following figure demonstrates a typical K-Bus connection.

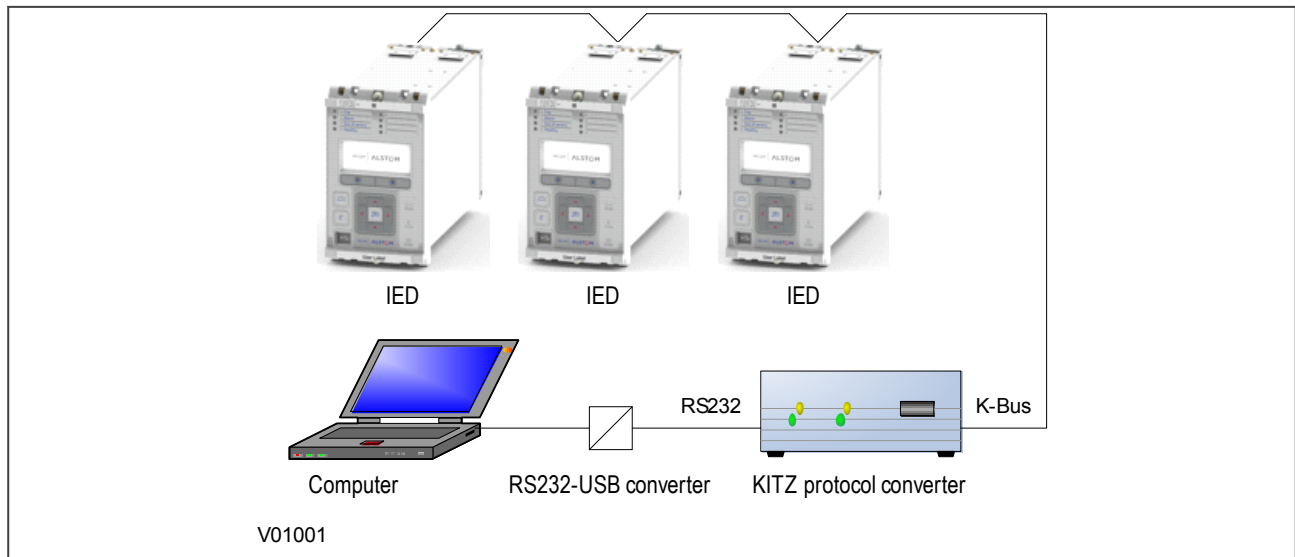


Figure 156: Remote communication using K-Bus

Note:

An RS232-USB converter is only needed if the local computer does not provide an RS232 port.

Further information about K-Bus is available in the publication R6509: K-Bus Interface Guide, which is available on request.

4 STANDARD ETHERNET COMMUNICATION

The type of Ethernet board depends on the chosen model. The available boards and their features are described in the Hardware Design chapter of this manual.

The Ethernet interface is required for either IEC 61850 or DNP3 over Ethernet (protocol must be selected at time of order). With either of these protocols, the Ethernet interface also offers communication with the settings application software for remote configuration and record extraction.

Fibre optic connection is recommended for use in permanent connections in a substation environment, as it offers advantages in terms of noise rejection. The fibre optic port provides 100 Mbps communication and uses type BFOC 2.5 (ST) connectors. Fibres should be suitable for 1300 nm transmission and be multimode 50/125 µm or 62.5/125 µm.

Connection can also be made to a 10Base-T or a 100Base-TX Ethernet switch using the RJ45 port.

4.1 HOT-STANDBY ETHERNET FAILOVER

This is used for products which are fitted with a standard Ethernet board. The standard Ethernet board has one fibre and one copper interface. If there is a fault on the fibre channel it can switch to the copper channel, or vice versa.

When this function detects a link failure, it generates the NIC Fail Alarm. The failover timer then starts, which has a settable timeout. During this time, the Hot Standby Failover function continues to check the status of the other channel. If the link failure recovers before the failover timer times out, the channels are not swapped over. If there is still a fail when the failover timer times out and the other channel status is ok, the channels are swapped over. The Ethernet controller is then reconfigured and the link is renegotiated.

To set the function, use the IEC 61850 Configurator tool in the Settings Application Software.

5 REDUNDANT ETHERNET COMMUNICATION

Redundancy is required where a single point of failure cannot be tolerated. It is required in critical applications such as substation automation. Redundancy acts as an insurance policy, providing an alternative route if one route fails.

Ethernet communication redundancy is available for most Alstom Grid products, using a Redundant Ethernet Board (REB). The REB is a Network Interface Card (NIC), which incorporates an integrated Ethernet switch. The board provides two Ethernet transmitter/receiver pairs.

By ordering option, a number of different protocols are available to provide the redundancy according to particular system requirements.

In addition to the two Ethernet transmitter/receiver pairs, the REB provides link activity indication in the form of LEDs, link fail indication in the form of watchdog contacts, and a dedicated time synchronisation input.

The dedicated time synchronisation input is designed to connect to an IRIG-B signal. Both modulated and un-modulated IRIG-B formats are supported according to the selected option. Simple Network Time Protocol (SNTP) is supported over the Ethernet communications.

5.1 SUPPORTED PROTOCOLS

A range of Redundant Ethernet Boards are available to support different protocols for different requirements. One of the key requirements of substation redundant communications is "bumpless" redundancy. This means the ability to transfer from one communication path to another without noticeable consequences. Standard protocols of the time could not meet the demanding requirements of network availability for substation automation solutions. Switch-over times were unacceptably long. For this reason, companies developed proprietary protocols. More recently, however, standard protocols, which support bumpless redundancy (namely PRP and HSR) have been developed and ratified.

As well as supporting standard non-bumpless protocols such as RSTP, the REB was originally designed to support bumpless redundancy, using proprietary protocols (SHP, DHP) before the standard protocols became available. Since then, variants have been produced for the newer standard protocols.

REB variants for each of the following protocols are available:

- PRP (Parallel Redundancy Protocol)
- HSR (High-availability Seamless Redundancy)
- RSTP (Rapid Spanning Tree Protocol)
- SHP (Self-Healing Protocol)
- DHP (Dual Homing Protocol)

PRP and HSR are open standards, so their implementation is compatible with any standard PRP or HSR device respectively. PRP provides "bumpless" redundancy. RSTP is also an open standard, so its implementation is compatible with any standard RSTP devices. RSTP provides redundancy, however, it is not "bumpless".

SHP and DHP are proprietary protocols intended for use with specific Alstom Grid products:

- SHP is compatible with the C264-SWR212 as well as H35x multimode switches.
- DHP is compatible with the C264-SWD212 as well as H36x multimode switches.

Both SHP and DHP provide "bumpless" redundancy.

Note:

The protocol you require must be selected at the time of ordering.

5.2 PARALLEL REDUNDANCY PROTOCOL

PRP (Parallel Redundancy Protocol) is defined in IEC 62439-3. PRP provides bumpless redundancy and meets the most demanding needs of substation automation. The PRP implementation of the REB is compatible with any standard PRP device.

PRP uses two independent Ethernet networks operating in parallel. PRP systems are designed so that there should be no common point of failure between the two networks, so the networks have independent power sources and are not connected together directly.

Devices designed for PRP applications have two ports attached to two separate networks and are called Doubly Attached Nodes (DAN). A DAN has two ports, one MAC address and one IP address.

The sending node replicates each frame and transmits them over both networks. The receiving node processes the frame that arrives first and discards the duplicate. Therefore there is no distinction between the working and backup path. The receiving node checks that all frames arrive in sequence and that frames are correctly received on both ports.

Devices such as printers that have a single Ethernet port can be connected to either of the networks but will not directly benefit from the PRP principles. Such devices are called Singly Attached Nodes (SAN). For devices with a single Ethernet port that need to connect to both LANs, this can be achieved by employing Ethernet Redundancy Boxes (sometimes abbreviated to RedBox). Devices with a single Ethernet port that connect to both LANs by means of a RedBox are known as Virtual DAN (VDAN).

The figure below summarises DAN, SAN, VDAN, LAN, and RedBox connectivity.

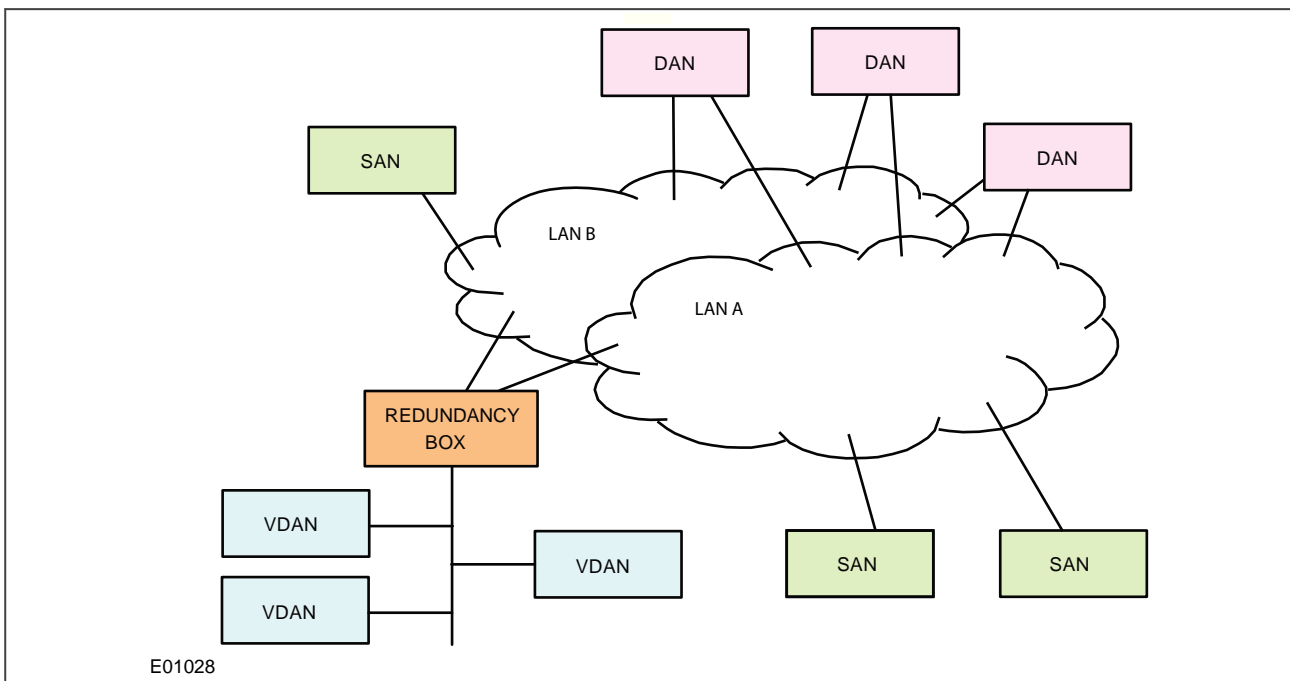


Figure 157: IED attached to separate LANs

In a DAN, both ports share the same MAC address so it does not affect the way devices talk to each other in an Ethernet network (Address Resolution Protocol at layer 2). Every data frame is seen by both ports.

When a DAN sends a frame of data, the frame is duplicated on both ports and therefore on both LAN segments. This provides a redundant path for the data frame if one of the segments fails. Under normal conditions, both LAN segments are working and each port receives identical frames.

5.3 HIGH-AVAILABILITY SEAMLESS REDUNDANCY (HSR)

HSR is standardized in IEC 62439-3 (clause 5) for use in ring topology networks. Similar to PRP, HSR provides bumpless redundancy and meets the most demanding needs of substation automation. HSR has become the reference standard for ring-topology networks in the substation environment. The HSR implementation of the redundancy Ethernet board (REB) is compatible with any standard HSR device.

HSR works on the premise that each device connected in the ring is a doubly attached node running HSR (referred to as DANH). Similar to PRP, singly attached nodes such as printers are connected via Ethernet Redundancy Boxes (RedBox).

5.3.1 HSR MULTICAST TOPOLOGY

When a DANH is sending a multicast frame, the frame (C frame) is duplicated (A frame and B frame), and each duplicate frame A/B is tagged with the destination MAC address and the sequence number. The frames A and B differ only in their sequence number, which is used to identify one frame from the other. Each frame is sent to the network via a separate port. The destination DANH receives two identical frames, removes the HSR tag of the first frame received and passes this (frame D) on for processing. The other duplicate frame is discarded. The nodes forward frames from one port to the other unless it was the node that injected it into the ring.


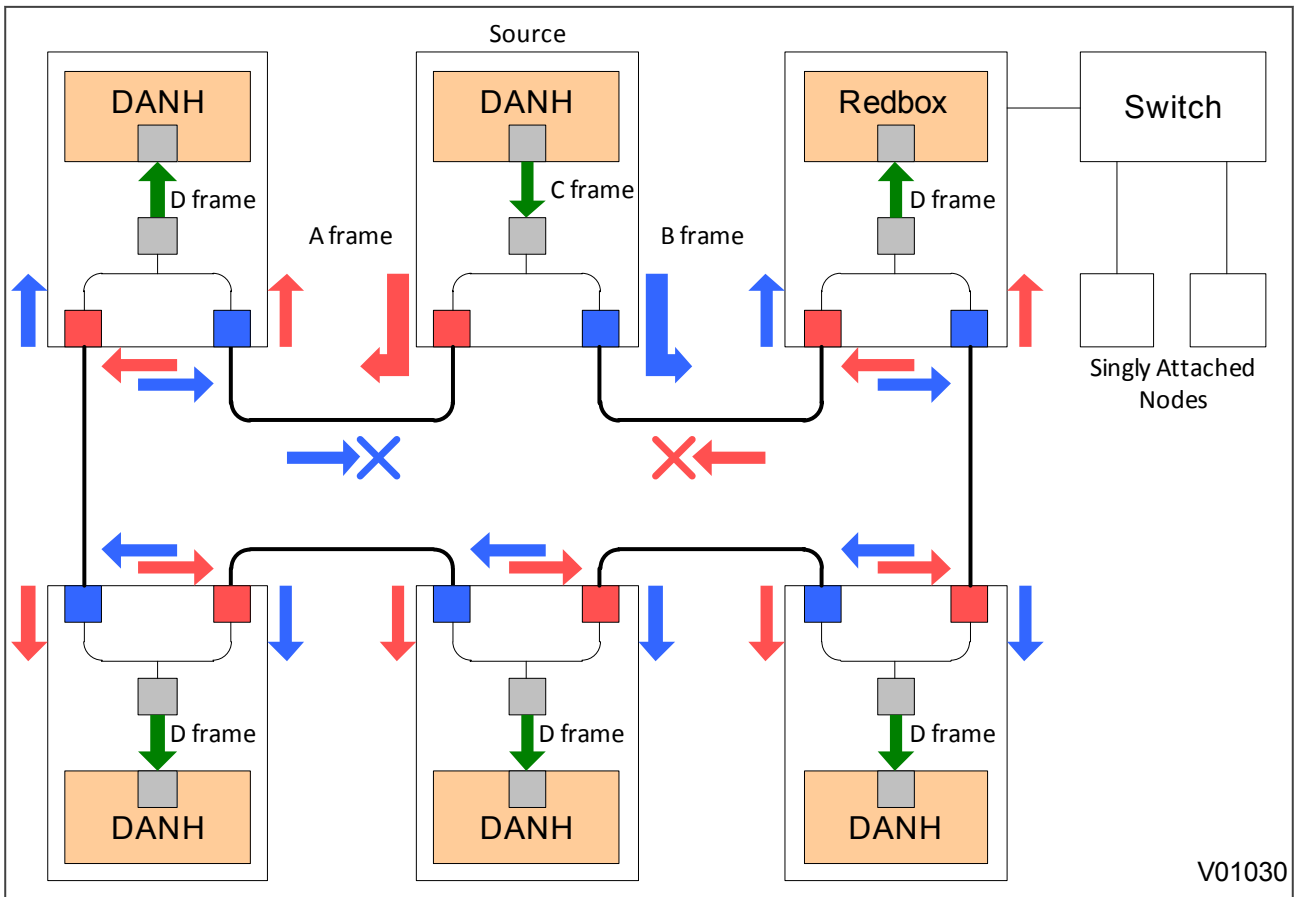


Figure 158: HSR multicast topology

Only about half of the network bandwidth is available in HSR for multicast or broadcast frames because both duplicate frames A & B circulate the full ring.

5.3.2 HSR UNICAST TOPOLOGY

With unicast frames, there is just one destination and the frames are sent to that destination alone. All non-recipient devices simply pass the frames on. They do not process them in any way. In other words, D frames are produced only for the receiving DANH. This is illustrated below.

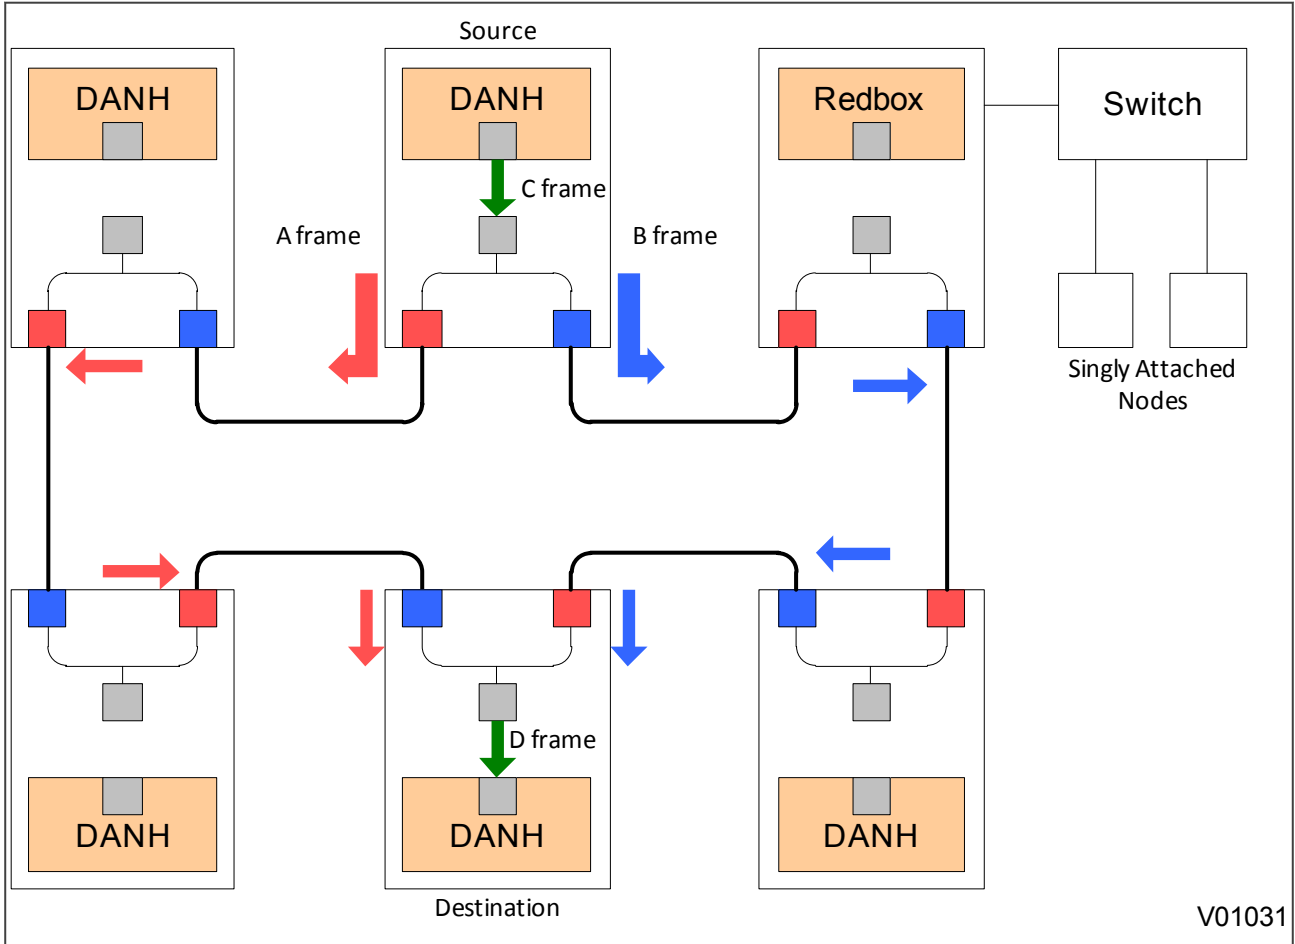

V01031

Figure 159: HSR unicast topology

For unicast frames, the whole bandwidth is available as both frames A & B stop at the destination node.

5.3.3 HSR APPLICATION IN THE SUBSTATION

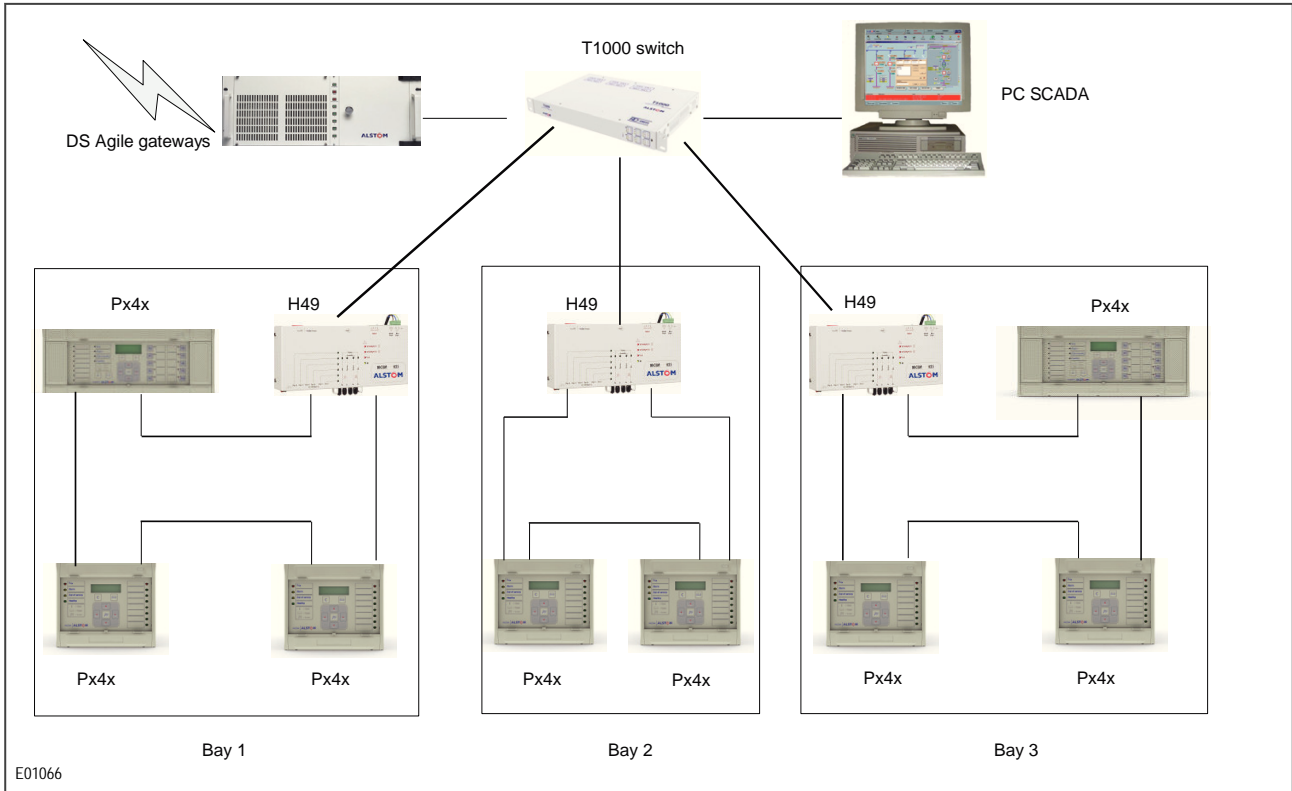


Figure 160: HSR application in the substation

5.4 RAPID SPANNING TREE PROTOCOL

RSTP is a standard used to quickly reconnect a network fault by finding an alternative path. It stops network loops whilst enabling redundancy. It can be used in star or ring connections as shown in the following figure.

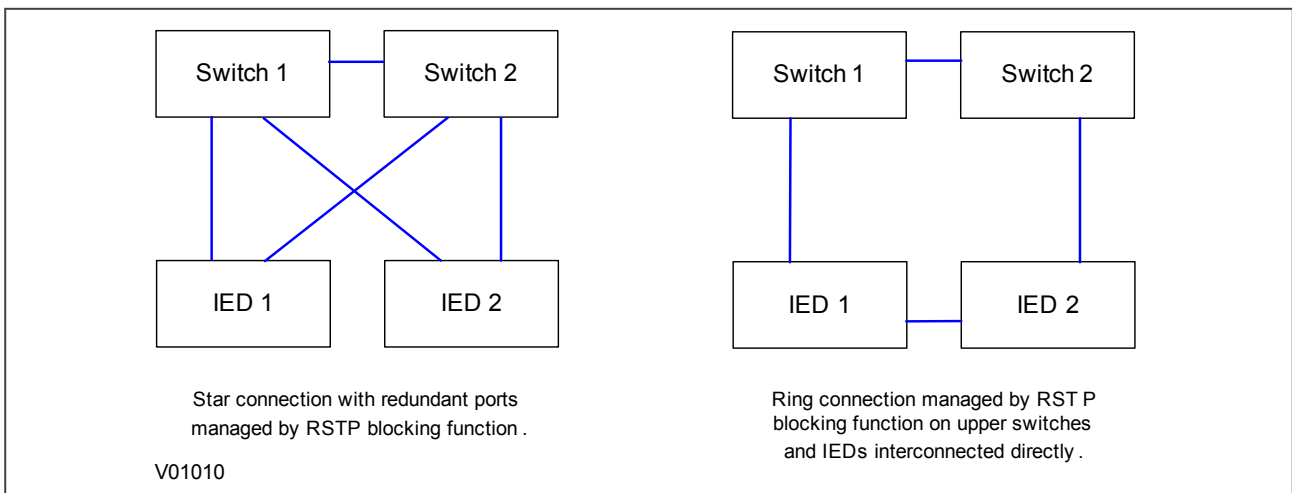


Figure 161: IED attached to redundant Ethernet star or ring circuit

The RSTP implementation in this product is compatible with any devices that use RSTP.

RSTP can recover network faults quickly, but the fault recovery time depends on the number of devices on the network and the network topology. A typical figure for the fault recovery time is 300ms. RSTP cannot, therefore, achieve the “bumpless” redundancy that some other protocols can.

Refer to IEEE 802.1W 2004 standard for detailed information about how fault recovery times are affected.

5.5 SELF HEALING PROTOCOL

The Self-Healing Protocol (SHP) implemented in the REB is a proprietary protocol that responds to the constraints of critical time applications such as the GOOSE messaging of IEC 61850.

It is designed, primarily, to be used on PACiS Substation Automation Systems that employ the C264-SWR212 and/or H35x switches.

SHP is applied to double-ring network topologies. If adjacent devices detect a break in the ring, then they re-route communication traffic to restore communication as outlined in the figure below.

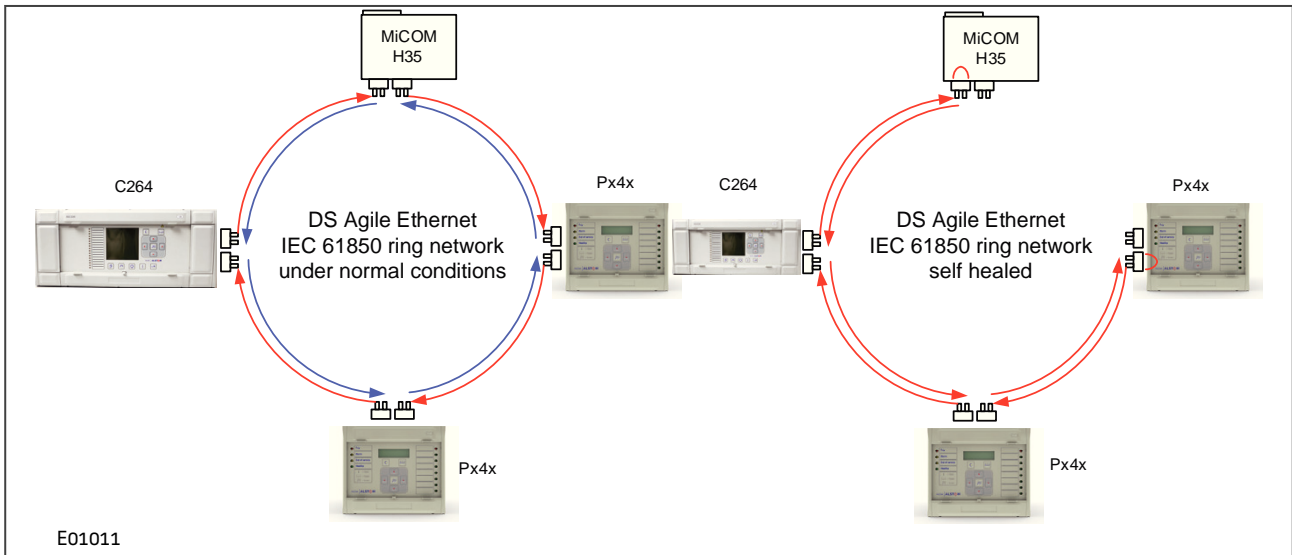


Figure 162: IED, bay computer and Ethernet switch with self healing ring facilities

A Self-Healing Management function (SHM) manages the ring.

Under healthy conditions, frames are sent on the main ring (primary fibre) in one direction, with short check frames being sent every 5 μs in the opposite direction on the back-up ring (secondary fibre).

If the main ring breaks, the SHMs at either side of the break start the network self-healing. On one side of the break, received messages are no longer sent to the main ring, but are sent to the back-up ring instead. On the other side of the break, messages received on the back-up ring are sent to the main ring and communications are re-established. This takes place in less than 1 ms and can be described as “bumpless”.

The principle of SHP is outlined in the figures below.

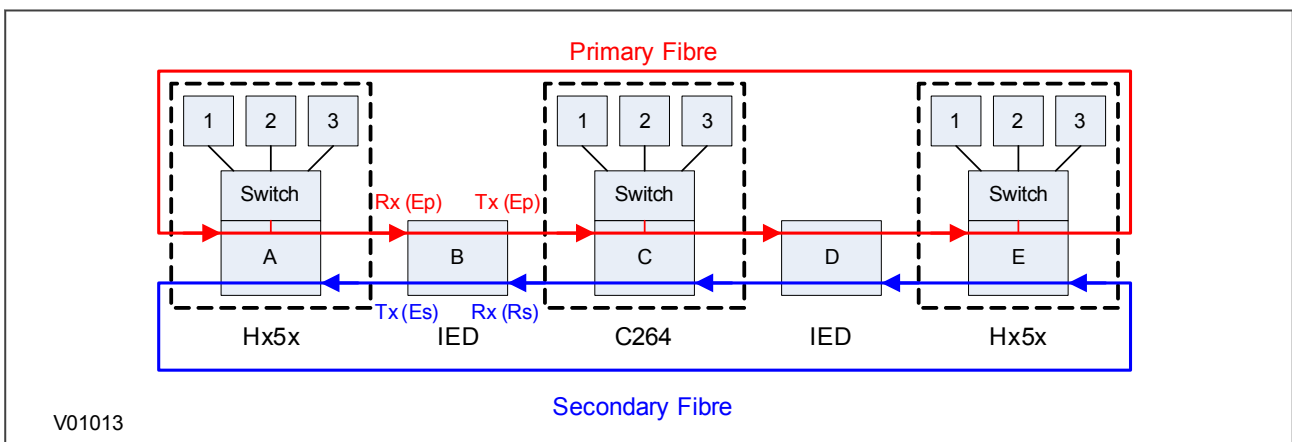


Figure 163: Redundant Ethernet ring architecture with IED, bay computer and Ethernet switches

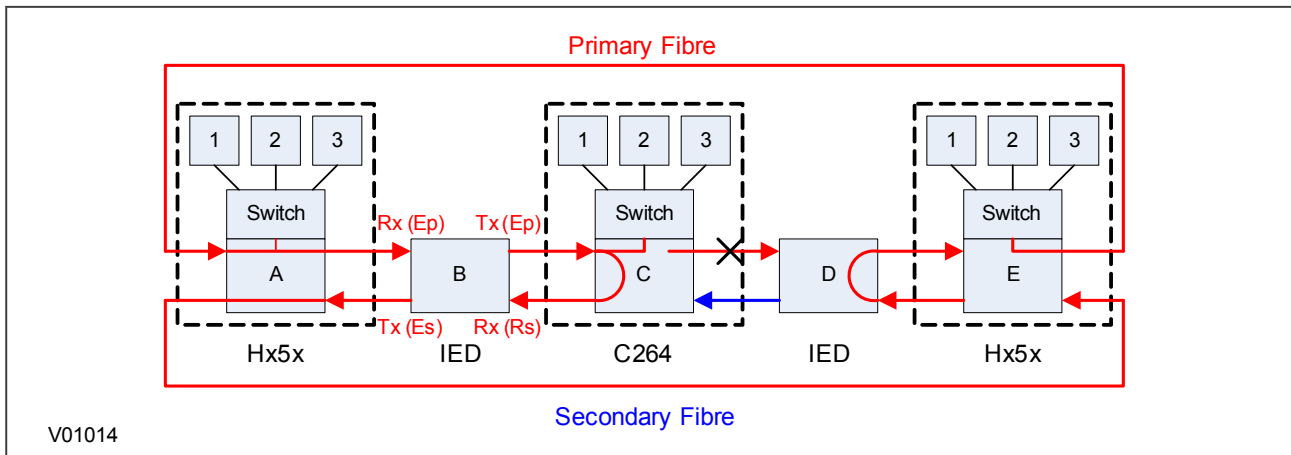


Figure 164: Redundant Ethernet ring architecture with IED, bay computer and Ethernet switches after failure

5.6 DUAL HOMING PROTOCOL

The Dual Homing Protocol (DHP) implemented in the REB is a proprietary protocol. It is designed, primarily to be used on PACiS systems that employ the C264-SWD212 and/or H36x multimode switches.

DHP addresses the constraints of critical time applications such as the GOOSE messaging of IEC 61850.

DHP is applied to double-star network topologies. If a connection between two devices is broken, the network continues to operate correctly.

The Dual Homing Manager (DHM) handles topologies where a device is connected to two independent networks, one being the "main" path, the other being the "backup" path. Both are active at the same time.

Internet frames from a sending device are sent by the DHM to both networks. Receiving devices apply a "duplicate discard" principle. This means that when both networks are operational, the REB receives two copies of the same Ethernet frame. If both links are healthy, frames are received on both, and the DHM uses the first frame received. The second frame is discarded. If one link fails, frames received on the healthy link are used.

DHP delivers a typical recovery time of less than 1 ms. The mechanism is outlined in the figures below.

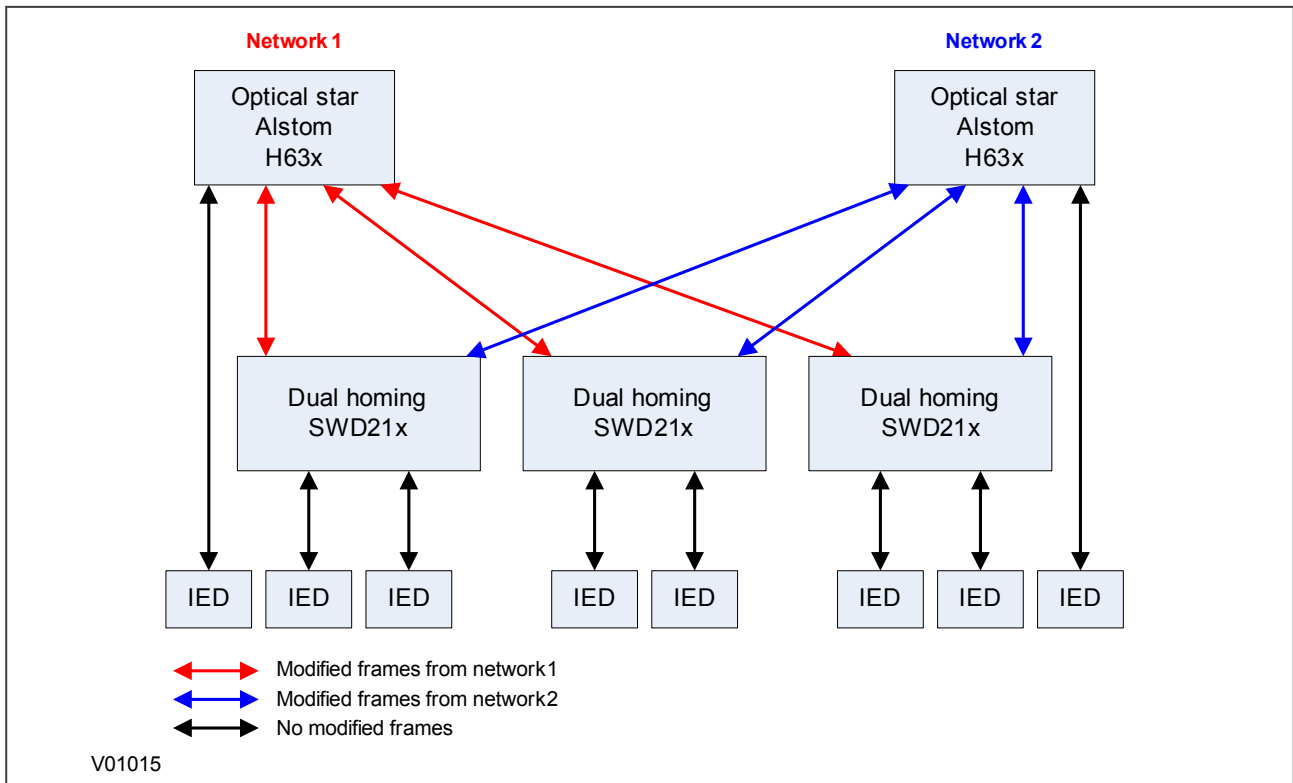


Figure 165: Dual homing mechanism

The H36x is a repeater with a standard 802.3 Ethernet switch, plus the DHM.

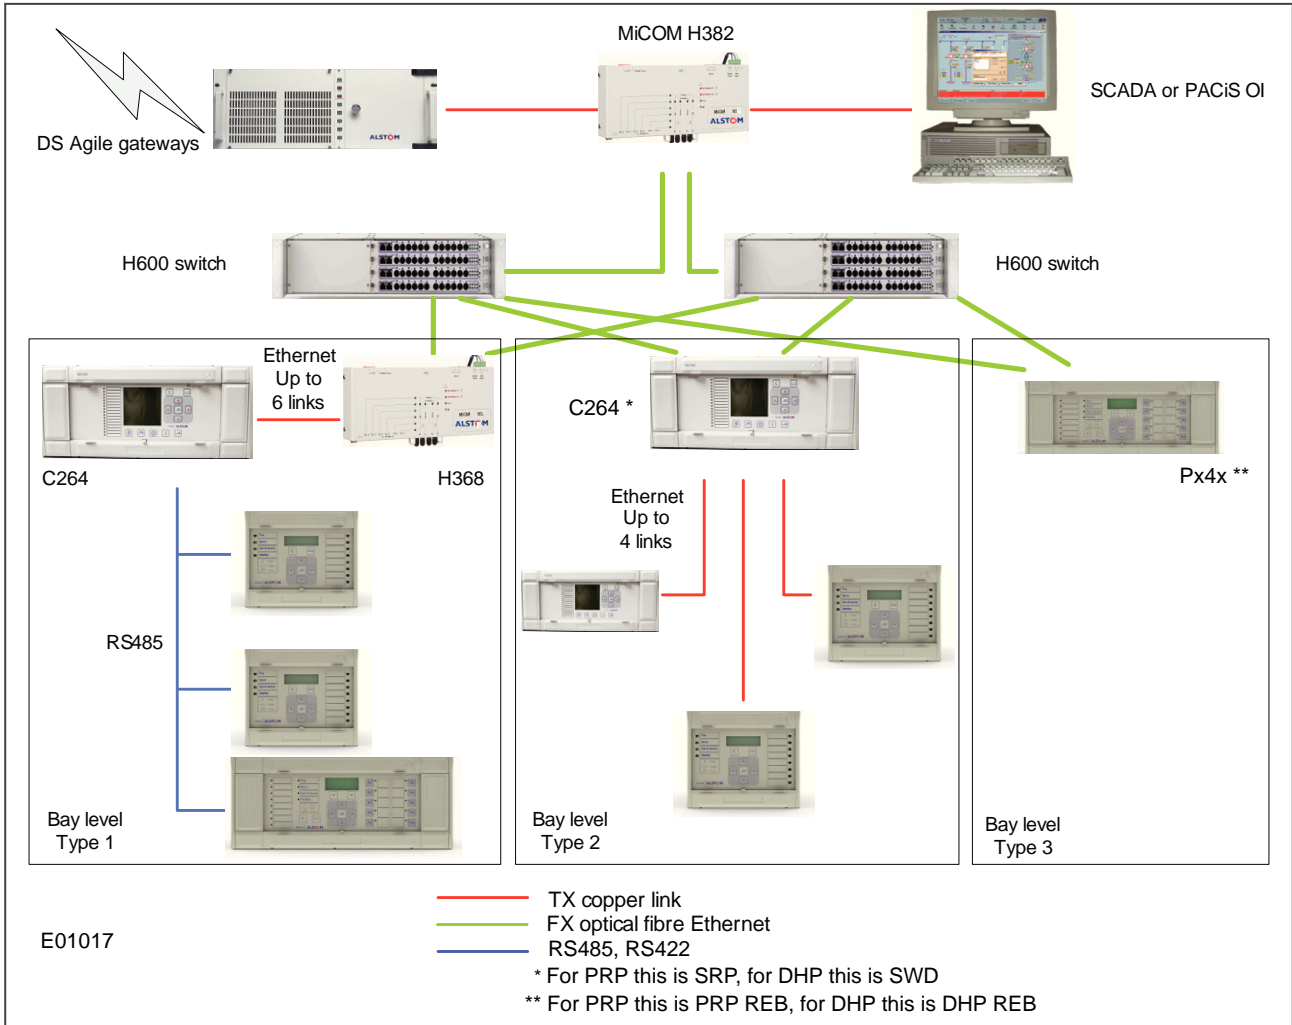


Figure 166: Application of Dual Homing Star at substation level

5.7 CONFIGURING IP ADDRESSES

An IP address is a logical address assigned to devices in a computer network that uses the Internet Protocol (IP) for communication between nodes. IP addresses are stored as binary numbers but they are represented using Decimal Dot Notation, where four sets of decimal numbers are separated by dots as follows:

XXX.XXX.XXX.XXX

For example:

10.86.254.85

An IP address in a network is usually associated with a subnet mask. The subnet mask defines which network the device belongs to. A subnet mask has the same form as an IP address.

For example:

255.255.255.0

Both the IED and the REB each have their own IP address. The following diagram shows the IED as IP1 and the REB as IP2.

Note:
IP1 and IP2 are different but use the same subnet mask.

The switch IP address must be configured through the Ethernet network.

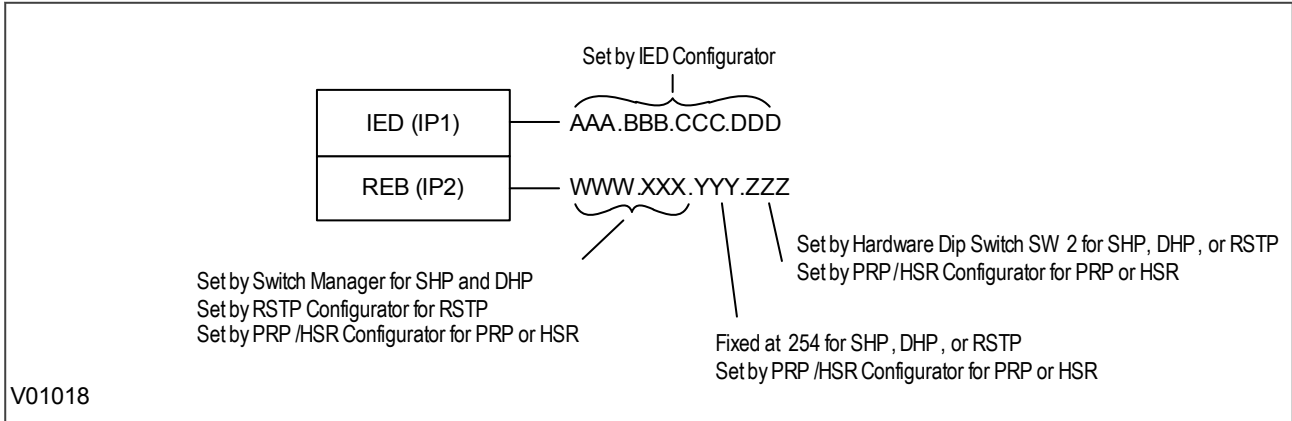


Figure 167: IED and REB IP address configuration

5.7.1 CONFIGURING THE IED IP ADDRESS

If you are using IEC 61850, set the IED IP address using the IEC 61850 Configurator software. In the IEC 61850 Configurator, set **Media** to **Single Copper or Redundant Fibre**.

If you are using DNP3 over Ethernet, set the IED IP address by editing the DNP3 file, using the DNP3 Configurator software. In the DNP3 Configurator, set **Ethernet Media** to **Copper**, even though the redundant Ethernet network uses fibre optic cables.

5.7.2 CONFIGURING THE REB IP ADDRESS

The board IP address must be configured before connecting the IED to the network to avoid an IP address conflict. The way you configure the IP address depends on the redundancy protocol you have chosen.

PRP/HSR

If using PRP or HSR, you configure the REB IP address using the PRP/HSR Configurator software.

RSTP

If using RSTP, the first two octets are set by the RSTP configurator or an SNMP MIB browser. The third octet is fixed at 254 (FE hex, 11111110 binary), and the fourth octet is set by the on-board dip switch.

SHP or DHP

If using SHP or DHP the first two octets are set by the Switch Manager software or an SNMP MIB browser. The third octet is fixed at 254 (FE hex, 11111110 binary), and the fourth octet is set by the on-board dip switch.


Note:
An H35 (SHP) or H36 (DHP) network device is needed in the network to configure the REB IP address if you are using SNMP.

5.7.2.1 CONFIGURING THE LAST OCTET (SHP, DHP, RSTP)

If using SHP, DHP or RSTP, the last octet is configured using board address switch SW2 on the board. Remove the IED front cover to gain access to the board address switch.


Warning:
Configure the hardware settings before the device is installed.

1. Refer to the safety section of the IED.
2. Switch off the IED. Disconnect the power and all connections.
3. Before removing the front cover, take precautions to prevent electrostatic discharge damage according to the ANSI/ESD-20.20 -2007 standard.
4. Wear a 1 M Ω earth strap and connect it to the earth (ground) point on the back of the IED.

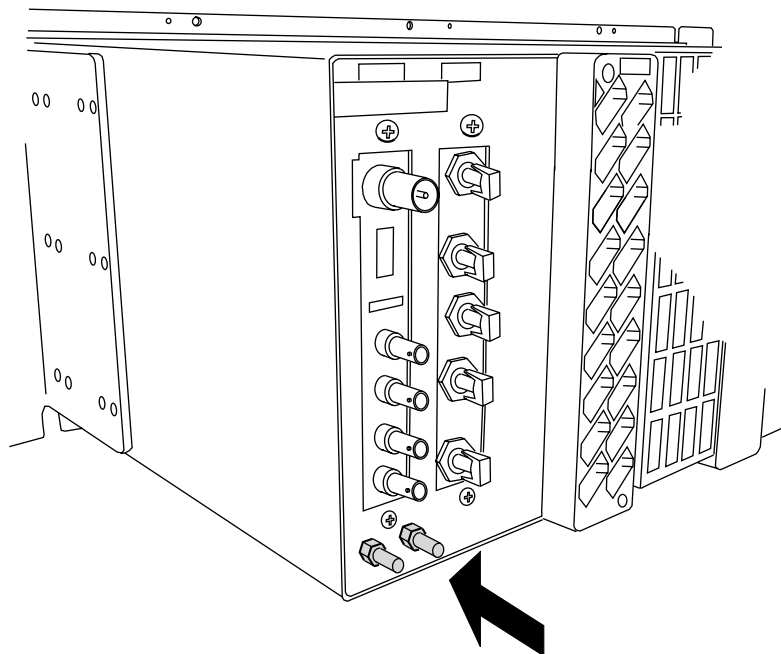


E01019

5. Lift the upper and lower flaps. Remove the six screws securing the front panel and pull the front panel outwards.

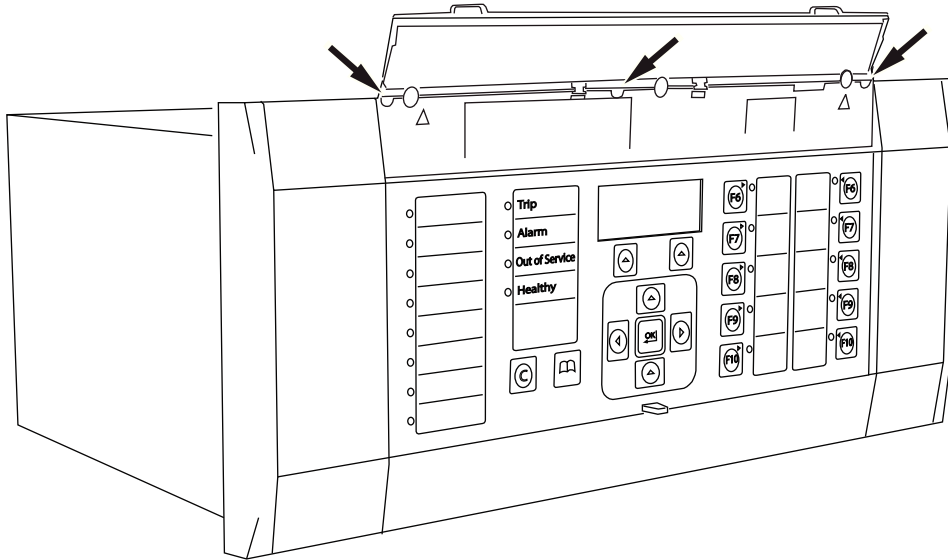


E01020

6. Press the levers either side of the connector to disconnect the ribbon cable from the front panel.

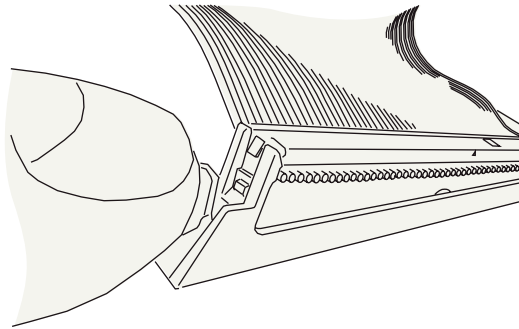

E01021

- Remove the redundant Ethernet board. Set the last octet of IP address using the DIP switches. The available range is 1 to 127.

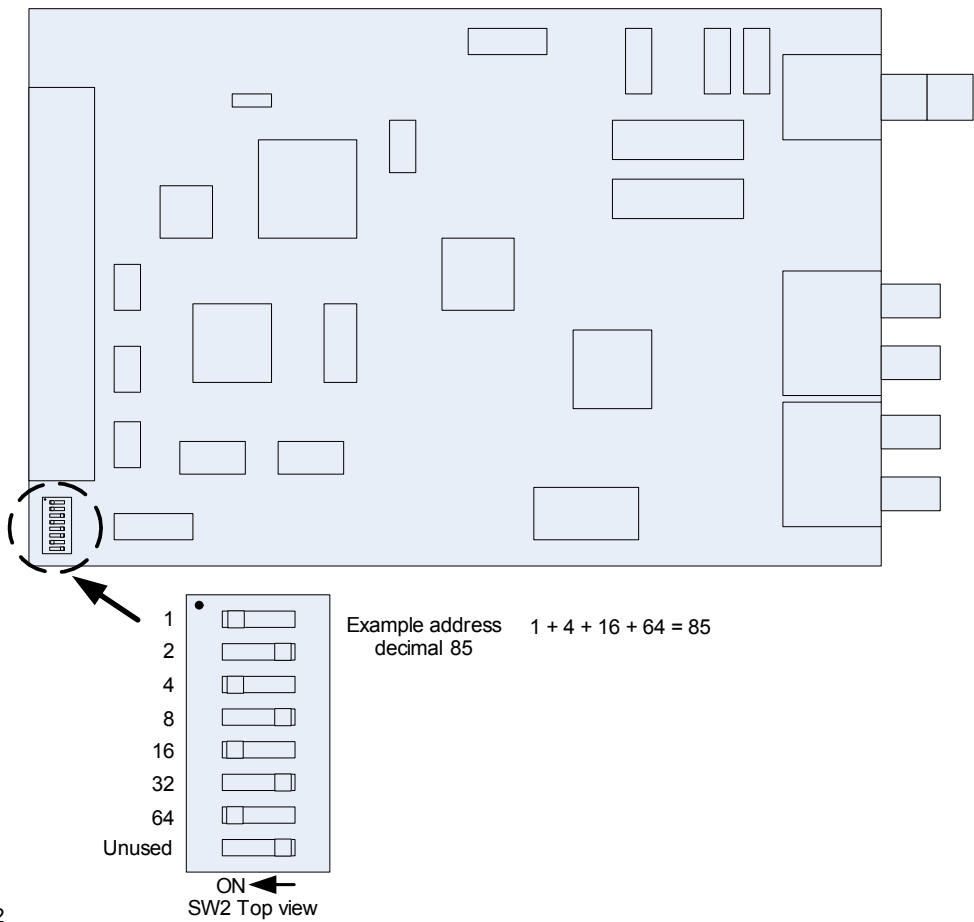

- Once you have set the IP address, reassemble the IED, following these instructions in the reverse order.

Warning:
 Take care not to damage the pins of the ribbon cable connector on the front panel when reinserting the ribbon cable.

5.8 PRP/HSR CONFIGURATOR

The PRP/HSR Configurator tool is intended for MiCOM Px4x IEDs with redundant Ethernet using PRP (Parallel Redundancy Protocol), or HSR (High-availability Seamless Redundancy). This tool is used to identify IEDs, switch between PRP and HSR or configure their parameters, configure the redundancy IP address, or configure the SNTP IP address.

5.8.1 CONNECTING THE IED TO A PC

Connect the IED to the PC on which the Configurator tool is used. This connection is done through an Ethernet switch or through a media converter.

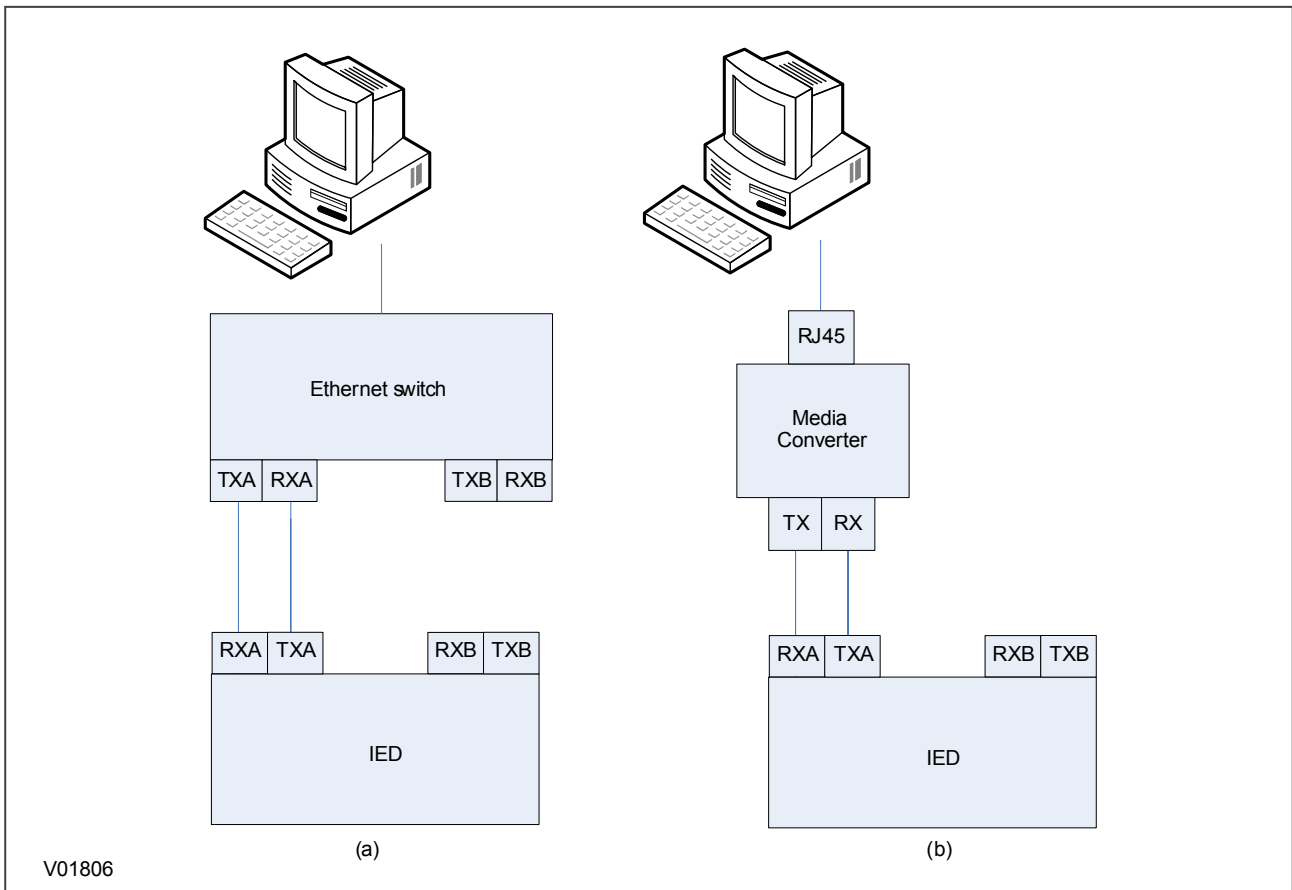


Figure 168: Connection using (a) an Ethernet switch and (b) a media converter

5.8.2 INSTALLING THE CONFIGURATOR

To install the configurator:

1. Double click the WinPcap installer.
2. Double click the Configurator installer.
3. Click **Next** and follow the on-screen instructions.

5.8.3 STARTING THE CONFIGURATOR

To start the configurator:

1. Select the Configurator from the Windows **Programs** menu.
2. The Login screen appears. For user mode login, enter the **Login name** as **User** and click **OK** with no password.
3. If the login screen does not appear, check all network connections.
4. The main window appears. In the bottom right-hand corner of the main window, click the **Language** button to select the language.
5. The **Network Board** drop-down list shows the Network Board, IP Address and MAC Address of the PC in which the Configurator is running.

5.8.4 PRP/HSR DEVICE IDENTIFICATION

To configure the redundant Ethernet board, go to the main window and click the **Identify Device** button. A list of devices are shown with the following details:

- Device address
- MAC address
- Version number of the firmware
- SNTP IP address
- Date & time of the real-time clock, from the board.

Select the device you wish to configure. The MAC address of the selected device is highlighted.

5.8.5 SELECTING THE DEVICE MODE

You must now select the device mode that you wish to use. This will be either PRP or HSR. To do this, select the appropriate radio button then click the **Update** button. You will be asked to confirm a device reboot. Click **OK** to confirm.

5.8.6 PRP/HSR IP ADDRESS CONFIGURATION

To change the network address component of the IP address:

1. From the main window click the **IP Config** button. The **Device setup** screen appears.
2. Enter the required board IP address and click **OK**. This is the redundancy network address, not the IEC 61850 IP address.
3. The board network address is updated and displayed in the main window.

5.8.7 SNTP IP ADDRESS CONFIGURATION

To Configure the SNTP server IP address:

1. From the main window click the **SNTP Config** button. The **Device setup** screen appears.
2. Enter the required **MAC SNTP address** and server **IP SNTP Address**. Click **OK**.
3. The updated MAC and IP SNTP addresses appear in the main screen.

5.8.8 CHECK FOR CONNECTED EQUIPMENT

To check what devices are connected to the device being monitored:

1. From the main window, select the device.
2. Click the **Equipment** button.
3. At the bottom of the main window, a box shows the ports where devices are connected and their MAC addresses.

5.8.9 PRP CONFIGURATION

To view or configure the PRP Parameters:

1. Ensure that you have set the device mode to **PRP**.
2. Click the **PRP/HSR Config** button. The **PRP Config** screen appears.
3. To view the available parameters, click the **Get PRP Parameters** button.
4. To change the parameters, click the **Set Parameters** button and modify their values.

If you need to restore the default values of the parameters, click the **Restore Defaults** button.

The configurable parameters are as follows:

- **Multicast Address:** Use this field to configure the multicast destination address. All DANPs in the network must be configured to operate with the same multicast address for the purpose of network supervision.
- **Node Forget Time:** This is the time after which a node entry is cleared in the nodes table.
- **Life Check Interval:** This defines how often a node sends a PRP_Supervision frame. All DANPs shall be configured with the same Life Check Interval.

5.8.10 HSR CONFIGURATION

To view or configure the HSR Parameters:

1. Click the **PRP/HSR Config** button. The **HSR Config** screen appears.
2. To view the available parameters in the board that is connected, click the **Retrieve HSR Parameters from IED** button.
3. To change the parameters, click the **Set Parameters** button and modify their values.

If you need to restore the default values of the parameters, click the **Restore Defaults** button.

The configurable parameters are as follows:

- **Multicast Address:** Use this field to configure the multicast destination address. All DANPs in the network must be configured to operate with the same multicast address for the purpose of network supervision.
- **Node Forget Time:** This is the time after which a node entry is cleared in the nodes table.
- **Life Check Interval:** This defines how often a node sends a PRP_Supervision frame. All DANPs must be configured with the same Life Check Interval.
- **Proxy Node Table Forget Time:** This is the time after which a node entry is cleared in the ProxyTable
- **Proxy Node Table Max Entries:** This is the maximum number of entries in the ProxyTable
- **Entry Forget Time:** This is the time after which an entry is removed from the duplicates
- **Node Reboot Interval:** This is the minimum time during which a node that reboots remains silent

5.8.11 FILTERING DATABASE

The Filtering Database is used to determine how frames are forwarded or filtered across the on-board Ethernet switch. Filtering information specifies the set of ports to which frames received from a specific port are forwarded. The Ethernet switch examines each received frame to see if the frame's destination address matches a source address listed in the Filtering Database. If there is a match, the device uses the filtering/forwarding information for that source address to determine how to forward or filter the frame. Otherwise the frame is forwarded to all the ports in the Ethernet switch (broadcast).

General tab

The Filtering Database contains two types of entry; static and dynamic. The Static Entries are the source addresses entered by an administrator. The Dynamic Entries are the source addresses learnt by the switch process. The Dynamic Entries are removed from the Filtering Database after the Ageing Time. The Database holds a maximum of 1024 entries.

1. To access the forwarding database functions, if required, click the Filtering Database button in the main window.
2. To view the Forwarding Database Size, Number of Static Entries and Number of Dynamic Entries, click **Read Database Info**.
3. To set the Ageing Time, enter the number of seconds in the text box and click the **Set** button.

Filtering Entries tab

The Filtering Database configuration pages are used to view, add or delete entries from the Filtering Database. This feature is available only for the administrator. This Filtering Database is mainly used during the testing to verify the PRP/HSR functionality. To add an entry in the forwarding database, click the **Filtering Entries** tab. Configure as follows:

1. Select the Port Number and MAC Address
2. Set the Entry type (Dynamic or Static)
3. Set the cast type (Unicast or Multicast)
4. Set theMGMT and Rate Limit
5. Click the **Create** button. The new entry appears in the forwarding database.

To delete an entry from the forwarding database, select the entry and click the **Delete Entry** button.

Goose Filtering tab

This page configures the source MACs from which GOOSE messages will be allowed or blocked. The filtering can be configured by either the MAC address range boxes or by selecting or unselecting the individual MAC addresses in the MAC table. After you have defined the addresses to be allowed or blocked you need to update the table and apply the filter:

- **Update Table:** This updates the MAC table according to the filtering range entered in the MAC address range boxes.
- **Apply Filter:** This applies the filtering configuration in the MAC table to the HSR/PRP board.

5.8.12 END OF SESSION

To finish the session:

1. In the main window, click the **Quit** button, a new screen appears.
2. If a database backup is required, click **Yes**, a new screen appears.
3. Click the ... button to browse the path. Enter the name in the text box.

5.9 RSTP CONFIGURATOR

The RSTP Configurator tool is intended for MiCOM Px4x IEDs with redundant Ethernet using RSTP (Rapid Spanning Tree Protocol). This tool is used to identify IEDs, configure the redundancy IP address, configure the SNTP IP address and configure the RSTP parameters.

5.9.1 CONNECTING THE IED TO A PC

Connect the IED to the PC on which the Configurator tool is used. This connection is done through an Ethernet switch or through a media converter.

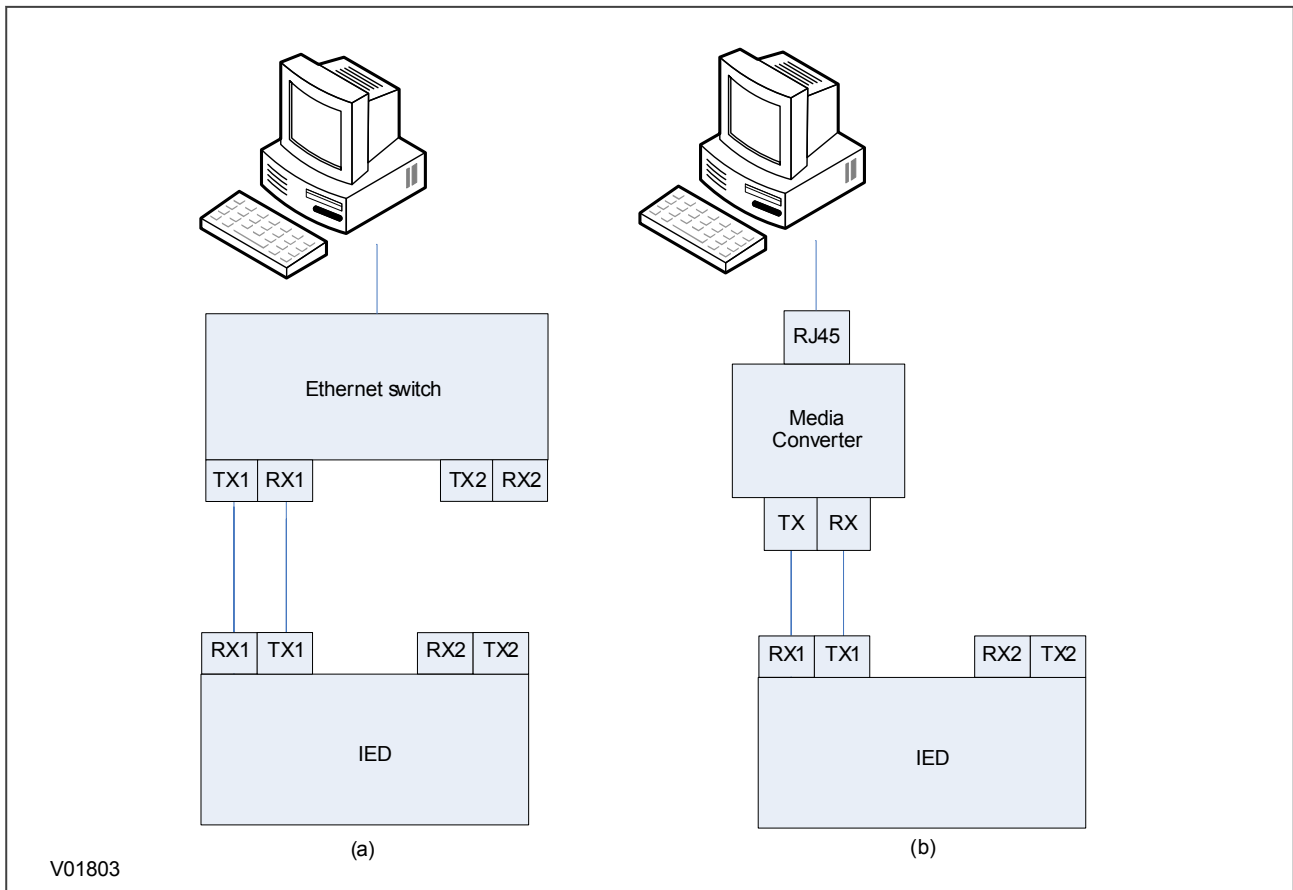


Figure 169: Connection using (a) an Ethernet switch and (b) a media converter

5.9.2 INSTALLING THE CONFIGURATOR

To install the configurator:

1. Double click the WinPcap installer.
2. Double click the Configurator installer.
3. Click **Next** and follow the on-screen instructions.

5.9.3 STARTING THE CONFIGURATOR

To start the configurator:

1. Select the Configurator from the Windows **Programs** menu.
2. The Login screen appears. For user mode login, enter the **Login name** as **User** and click **OK** with no password.
3. If the login screen does not appear, check all network connections.
4. The main window appears. In the bottom right-hand corner of the main window, click the **Language** button to select the language.
5. The **Network Board** drop-down list shows the Network Board, IP Address and MAC Address of the PC in which the Configurator is running.

5.9.4 RSTP DEVICE IDENTIFICATION

To configure the redundant Ethernet board, go to the main window and click **Identify Device**.

Note:

Due to the time needed to establish the RSTP protocol, wait 25 seconds between connecting the PC to the IED and clicking the Identify Device button.

The redundant Ethernet board connected to the PC is identified and its details are listed.

- Device address
- MAC address
- Version number of the firmware
- SNTP IP address
- Date & time of the real-time clock, from the board.

5.9.5 RSTP IP ADDRESS CONFIGURATION

To change the network address component of the IP address,

1. From the main window click the **IP Config** button.
2. The **Device Setup** screen appears showing the **IP Base Address**. This is the board redundancy network address, not the IEC 61850 IP address.
3. Enter the required board IP address. The first two octets can be configured. The third octet is always 254. The last octet is set using the DIP switches (SW2) on the redundant Ethernet board, next to the ribbon connector.
4. Click **OK**. The board network address is updated and displayed in the main window.

5.9.6 SNTP IP ADDRESS CONFIGURATION

To Configure the SNTP server IP address:

1. From the main window click the **SNTP Config** button. The **Device setup** screen appears.
2. Enter the required **MAC SNTP address** and server **IP SNTP Address**. Click **OK**.
3. The updated MAC and IP SNTP addresses appear in the main screen.

5.9.7 CHECK FOR CONNECTED EQUIPMENT

To check what devices are connected to the device being monitored:

1. From the main window, select the device.
2. Click the **Equipment** button.
3. At the bottom of the main window, a box shows the ports where devices are connected and their MAC addresses.

5.9.8 RSTP CONFIGURATION

1. To view or configure the RSTP Bridge Parameters, from the main window, click the device address to select the device. The selected device MAC address appears highlighted.
2. Click the **RSTP Config** button. The **RSTP Config** screen appears.
3. To view the available parameters in the board that is connected, click the **Get RSTP Parameters** button.
4. To set the configurable parameters such as Bridge Max Age, Bridge Hello Time, Bridge Forward Delay, and Bridge Priority, modify the parameter values according to the following table and click **Set RSTP Parameters**.

S.No	Parameter	Default value (second)	Minimum value (second)	Maximum value (second)
1	Bridge Max Age	20	6	40
2	Bridge Hello Time	2	1	10
3	Bridge Forward Delay	15	4	30
4	Bridge Priority	32768	0	61440

5.9.8.1 BRIDGE PARAMETERS

To read the RSTP bridge parameters from the board,

1. From the main window click the device address to select the device. The **RSTP Config** window appears and the default tab is **Bridge Parameters**.
2. Click the **Get RSTP Parameters** button. This displays all the RSTP bridge parameters from the Ethernet board.
3. To modify the RSTP parameters, enter the values and click **Set RSTP Parameters**.
4. To restore the default values, click **Restore Default** and click **Set RSTP Parameters**.

The grayed parameters are read-only and cannot be modified.

Note:

When assigning the bridge priority, make sure the root of the network is the Ethernet switch, not the IEDs. This reduces the number of hops to reach all devices in the network. Also make sure the priority values for all IEDs are higher than that of the switch.

5.9.8.2 PORT PARAMETERS

This function is useful if you need to view the parameters of each port.

1. From the main window, click the device address to select the device. The **RSTP Config** window appears.
2. Select the **Port Parameters** tab, then click **Get Parameters** to read the port parameters. Alternatively, select the port numbers to read the parameters.

5.9.8.3 PORT STATES

This is used to see which ports of the board are enabled or disabled.

1. From the main window, click the device address to select the device. The **RSTP Config** window appears.
2. Select the **Port States** tab then click the **Get Port States** button. This lists the ports of the Ethernet board. A tick shows they are enabled.

5.9.9 END OF SESSION

To finish the session:

1. In the main window, click the **Quit** button, a new screen appears.
2. If a database backup is required, click **Yes**, a new screen appears.
3. Click the ... button to browse the path. Enter the name in the text box.

5.10 SWITCH MANAGER

Switch Manager is used to manage Ethernet ring networks and MiCOM H35x-V2 and H36x-V2 SNMP facilities. It is a set of tools used to manage, optimize, diagnose and supervise your network. It also handles the version software of the switch.

The Switch Manager tool is also intended for MiCOM Px4x IEDs with redundant Ethernet using Self Healing Protocol (SHP) and Dual Homing Protocol (DHP). This tool is used to identify IEDs and Alstom Switches, and to configure the redundancy IP address for the Alstom proprietary Self Healing Protocol and Dual Homing Protocol.

Switch hardware

Alstom switches are stand-alone devices (H3xx, H6x families) or embedded in a computer device rack, for example MiCOM C264 (SWDxxx, SWRxxx, SWUxxx Ethernet boards) or PC board (MiCOM H14x, MiCOM H15x, MiCOM H16x).

Switch range

There are 3 types of Alstom switches:

- Standard switches: SWU (in C264), H14x (PCI), H34x, H6x
- Redundant Ring switches: SWR (in C264), H15x (PCI), H35x,
- Redundant Dual Homing switches: SWD (in C264), H16x (PCI), H36x

Switch Manager allows you to allocate an IP addresses for Alstom switches. Switches can then be synchronized using the Simple Network Time Protocol (SNTP) or they can be administrated using the Simple Network Management Protocol (SNMP).

All switches have a single 6-byte MAC address.

Redundancy Management

Standard Ethernet does not support a loop at the OSI link layer (layer 2 of the 7 layer model). A mesh topology cannot be created using a standard Hub and switch. Redundancy needs separate networks using hardware in routers or software in dedicated switches using STP (Spanning Tree Protocol). However, this redundancy mechanism is too slow for one link failure in electrical automation networks.

Alstom has developed its own Redundancy ring and star mechanisms using two specific Ethernet ports of the redundant switches. This redundancy works between Alstom switches of the same type. The two redundant Ethernet connections between Alstom switches create one private redundant Ethernet LAN.

The Ethernet ports dedicated to the redundancy are optical Ethernet ports. The Alstom redundancy mechanism uses a single specific address for each Ethernet switch of the private LAN. This address is set using DIP switches or jumpers.

Switch Manager monitors the redundant address of the switches and the link topology between switches.

5.10.1 INSTALLATION

Switch Manager requirements

- PC with Windows XP or later
- Ethernet port
- 200 MB hard disk space
- PC IP address configured in Windows in same IP range as switch

Network IP address

IP addressing is needed for time synchronization of Alstom switches and for SNMP management.

Switch Manager is used to define IP addresses of Alstom switches. These addresses must be in the range of the system IP, depending on the IP mask of the engineering PC for substation maintenance.

Alstom switches have a default multicast so the 3rd word of the IP address is always 254.

Installation procedure

Run **Setup.exe** and follow the on-screen instructions.

5.10.2 SETUP

1. Make sure the PC has one Ethernet port connected to the Alstom switch.
2. Configure the PC's Ethernet port on the same subnet as the Alstom switch.
3. Select **User** or **Admin** mode. In User mode enter the user name as **User**, leave the password blank and click **OK**. In Admin mode you can not upload the firmware on the Ethernet repeaters.
4. In Admin mode enter the user name as **Admin**, enter the password and click **OK**. All functions are available including Expert Maintenance facilities.
5. Click the **Language** button in the bottom right of the screen and select your language.
6. If several Ethernet interfaces are used, in the **Network** board drop-down box, select the PC Network board connected to the Alstom switch. The IP and MAC addresses are displayed below the drop-down box.
7. Periodically click the **Ring Topology** button (top left) to display or refresh the list of Alstom switches that are connected.

5.10.3 NETWORK SETUP

To configure the network options:

1. From the main window click the **Settings** button. The Network Setup screen appears.
2. Enter the required board IP address. The first two octets can be configured. The third octet is always 254. The last octet is set using the DIP switches (SW2) on the redundant Ethernet board, next to the ribbon connector.
3. Click **OK**. The board network address is updated and displayed in the main window.
4. From the main window click the **SNTP Config** button. The Device setup screen appears.
5. Enter the required **MAC SNTP Address** and server **IP SNTP Address**. Click **OK**.
6. The updated MAC and IP SNTP addresses appear in the main screen.
7. Click the **Saturation** button. A new screen appears.
8. Set the saturation level and click **OK**. The default value is 300.

5.10.4 BANDWIDTH USED

To show how much bandwidth is used in the ring,

Click the **Ring%** button, at the bottom of the main window. The percentage of bandwidth used in the ring is displayed.

5.10.5 RESET COUNTERS

To reset the switch counters,

1. Click **Switch Counter Reset**.
2. Click **OK**.

5.10.6 CHECK FOR CONNECTED EQUIPMENT

To check what devices are connected to the device being monitored:

1. From the main window, select the device.
2. Click the **Equipment** button.
3. At the bottom of the main window, a box shows the ports where devices are connected and their MAC addresses.

5.10.7 MIRRORING FUNCTION

Port mirroring is a method of monitoring network traffic that forwards a copy of each incoming and outgoing packet from one port of the repeater to another port where the data can be studied. Port mirroring is managed locally and a network administrator uses it as a diagnostic tool.

To set up port mirroring:

1. Select the address of the device in the main window.
2. Click the Mirroring button, a new screen appears.
3. Click the checkbox to assign a mirror port. A mirror port copies the incoming and outgoing traffic of the port.

5.10.8 PORTS ON/OFF

To enable or disable ports:

1. Select the address of the device in the main window.
2. Click **Ports On/Off**, a new screen appears.
3. Click the checkbox to enable or disable a port. A disabled port has an empty checkbox.

5.10.9 VLAN

The Virtual Local Area Network (VLAN) is a technique used to split an interconnected physical network into several networks. This technique can be used at all ISO/OSI levels. The VLAN switch is mainly at OSI level 1 (physical VLAN) which allows communication only between some Ethernet physical ports.

Ports on the switch can be grouped into Physical VLANs to limit traffic flooding. This is because it is limited to ports belonging to that VLAN and not to other ports.

Port-based VLANs are VLANs where the packet forwarding decision is based on the destination MAC address and its associated port. You must define outgoing ports allowed for each port when using port-based VLANs. The VLAN only governs the outgoing traffic so is unidirectional. Therefore, if you wish to allow two subscriber ports to talk to each other, you must define the egress port for both ports. An egress port is an outgoing port, through which a data packet leaves.

To assign a physical VLAN to a set of ports:

1. Select the address of the device in the main window.
2. Click the **VLAN** button, a new screen appears.
3. Use the checkboxes to select which ports will be in the same VLAN. By default all the ports share the same VLAN.

5.10.10 END OF SESSION

To finish the session:

1. In the main window, click the **Quit** button, a new screen appears.
2. If a database backup is required, click **Yes**, a new screen appears.
3. Click the ... button to browse the path. Enter the name in the text box.

6 SIMPLE NETWORK MANAGEMENT PROTOCOL (SNMP)

Simple Network Management Protocol (SNMP) is a network protocol designed to manage devices in an IP network. The MiCOM P40 Modular products can provide up to two SNMP interfaces on Ethernet models; one to the IED's Main Processor for device level status information, and another directly to the redundant Ethernet board (where applicable) for specific Ethernet network level information.

Two versions of SNMP are supported: Version 2c, and a secure implementation of version 3 that includes cyber-security. Only the Main Processor SNMP interface supports Version 3.

6.1 SNMP MANAGEMENT INFORMATION BASES

SNMP uses a Management Information Base (MIB), which contains information about parameters to supervise. The MIB format is a tree structure, with each node in the tree identified by a numerical Object Identifier (OID). Each OID identifies a variable that can be read using SNMP with the appropriate software. The information in the MIB is standardized.

Each device in a network (workstation, server, router, bridge, etc.) maintains a MIB that reflects the status of the managed resources on that system, such as the version of the software running on the device, the IP address assigned to a port or interface, the amount of free hard drive space, or the number of open files. The MIB does not contain static data, but is instead an object-oriented, dynamic database that provides a logical collection of managed object definitions. The MIB defines the data type of each managed object and describes the object.

6.2 MAIN PROCESSOR MIBS STRUCTURE

The Main Processor MIB uses a private OID with a specific Alstom Grid number assigned by the IANA. Some items in this MIB also support SNMP traps (where indicated). These are items that can automatically notify a host without being read.

Address										Name	Trigger Trap?
0										ROOT NODE	
	1									ISO	
		3								Org	
			6							DOD	
				1						Internet	
					4					Private	
						1				Enterprise	
							43534			Alstom Grid (IANA No)	
								1		Px4x	
									1	System Data	
									1	Description	YES
									2	Plant Reference	YES
									3	Model Number	NO
									4	Serial Number	NO
									5	Frequency	NO
									6	Plant Status	YES
									7	Active Group	YES
									8	Software Ref.1	NO
									9	Software Ref.2	NO

Address										Name	Trigger Trap?
									10	Access Level (UI)	YES
								2		Date and Time	
									1	Date Time	NO
									2	IRIG-B Status	YES
									3	Battery Status	YES
									4	Active Sync source	YES
									5	SNTP Server 1	NO
									6	SNTP Server 2	NO
									7	SNTP Status	YES
									8	PTP Status	YES
								3		System Alarms	
									1	Invalid Message Format	YES
									2	Main Protection Fail	YES
									3	Comms Changed	YES
									4	Max Prop. Alarm	YES
									5	9-2 Sample Alarm	YES
									6	9-2LE Cfg Alarm	YES
									7	Battery Fail	YES
									8	Rear Communication Fail	YES
									9	GOOSE IED Missing	YES
									10	Intermicom loopback	YES
									11	Intermicom message fail	YES
									12	Intermicom data CD fail	YES
									13	Intermicom Channel fail	YES
									14	Backup setting fail	YES
									15	User Curve commit to flash failure	YES
									16	SNTP time Sync fail	YES
									17	PTP failure alarm	YES
								4		Device Mode	
									1	IED Mod/Beh	YES
									2	Simulation Mode of Subscription	YES

6.3 REDUNDANT ETHERNET BOARD MIB STRUCTURE

The Redundant Ethernet board MIB uses three types of OID:

- sysDescr
- sysUpTime
- sysName

MIB structure for RSTP, DHP and SHP

Address										Name
0										CCITT
	1									ISO

Address											Name
		3									Org
			6								DOD
				1							Internet
					2						mgmt
						1					Mib-2
							1				sys
								1			sysDescr
									3		sysUpTime
										4	sysName
Remote Monitoring											
							16				RMON
								1			statistics
									1		etherstat
										1	etherStatsEntry
										9	etherStatsUndersizePkts
										10	etherStatsOversizePkts
										12	etherStatsJabbers
										13	etherStatsCollisions
										14	etherStatsPkts64Octets
										15	etherStatsPkts65to127Octets
										16	etherStatsPkts128to255Octets
										17	etherStatsPkts256to511Octets
										18	etherStatsPkts512to1023Octets

MIB structure for PRP/HSR

Address											Name
0											ITU
	1										ISO
		0									Standard
			62439								IECHighavailability
				3							PRP
					1						linkRedundancyEntityObjects
						0					IreConfiguration
							0				IreConfigurationGeneralGroup
								1			IreManufacturerName
									2		IreInterfaceCount
										1	IreConfigurationInterfaceGroup
										0	IreConfigurationInterfaces
										1	IreInterfaceConfigTable
										1	IreInterfaceConfigEntry
										1	IreInterfaceConfigIndex
										2	IreRowStatus
										3	IreNodeType

Address										Name	
										4	IreNodeName
										5	IreVersionName
										6	IreMacAddressA
										7	IreMacAddressB
										8	IreAdapterAdminStateA
										9	IreAdapterAdminStateB
										10	IreLinkStatusA
										11	IreLinkStatusB
										12	IreDuplicateDiscard
										13	IreTransparentReception
										14	IreHsrLREMode
										15	IreSwitchingEndNode
										16	IreRedBoxIdentity
										17	IreSanA
										18	IreSanB
										19	IreEvaluateSupervision
										20	IreNodesTableClear
										21	IreProxyNodeTableClear
											IreStatistics
											IreStatisticsInterfaceGroup
											IreStatisticsInterfaces
											IreInterfaceStats Table
										1	IreInterfaceStatsIndex
										2	IreCntTotalSentA
										3	IreCntTotalSentB
										4	IreCntErrWrongLANA
										5	IreCntErrWrongLANB
										6	IreCntReceivedA
										7	IreCntReceivedB
										8	IreCntErrorsA
										9	IreCntErrorsB
										10	IreCntNodes
										11	IreOwnRxCntA
										12	IreOwnRxCntB
											IreProxyNodeTable
											IreProxyNodeEntry
										1	reProxyNodeIndex
										2	reProxyNodeMacAddress
											Org
											Dod
											Internet
											mgmt
											mib-2

Address						Name	
				1			System
					1		sysDescr
					3		sysUpTime
					5		sysName
					7		sysServices
				2			interfaces
				2			ifTable
					1		ifEntry
						1	ifIndex
						2	ifDescr
						3	ifType
						4	ifMtu
						5	ifSpeed
						6	ifPhysAddress
						7	ifAdminStatus
						8	ifOpenStatus
						9	ifLastChange
						10	ifInOctets
						11	ifInUcastPkts
						12	ifInNUcastPkts
						13	ifInDiscards
						14	ifInErrors
						15	ifInUnknownProtos
						16	ifOutOctets
						17	ifOutUcastPkts
						18	ifOutNUcastPkts
						19	ifOutDiscards
						20	ifOutErrors
						21	ifOutQLen
						22	ifSpecific
				16			rmon
					1		statistics
						1	etherStatsTable
						1	etherStatsEntry
						1	etherStatsIndex
						2	etherStatsDataSource
						3	etherStatsDropEvents
						4	etherStatsOctets
						5	etherStatsPkts
						6	etherStatsBroadcastPkts
						7	etherStatsMulticastPkts
						8	etherStatsCRCAlignErrors
						9	etherStatsUndersizePkts

Address										Name	
										10	etherStatsOversizePkts
										11	etherStatsFragments
										12	etherStatsJabbers
										13	etherStatsCollisions
										14	etherStatsPkts64Octets
										15	etherStatsPkts65to127Octets
										16	etherStatsPkts128to255Octets
										17	etherStatsPkts256to511Octets
										18	etherStatsPkts512to1023Octets
										19	etherStatsPkts1024to1518Octets
										20	etherStatsOwner
										21	etherStatsStatus

6.4 ACCESSING THE MIB

Various SNMP client software tools can be used. We recommend using an SNMP MIB browser, which can perform the basic SNMP operations such as GET, GETNEXT and RESPONSE.

Note:

There are two IP addresses visible when communicating with the Redundant Ethernet Card via the fibre optic ports: Use the one for the IED itself to the Main Processor SNMP interface, and use the one for the on-board Ethernet switch to access the Redundant Ethernet Board SNMP interface. See the configuration chapter for more information.

6.5 MAIN PROCESSOR SNMP CONFIGURATION

You configure the main processor SNMP interface using the HMI panel. Two different versions are available; SNMPv2c and SNMPv3:

To enable the main processor SNMP interface:

1. Select the COMMUNICATIONS column and scroll to the SNMP PARAMETERS heading
2. You can select either v2C, V3 or both. Selecting None will disable the main processor SNMP interface.

SNMP Trap Configuration

SNMP traps allow for unsolicited reporting between the IED and up to two SNMP managers with unique IP addresses. The device MIB details what information can be reported using Traps. To configure the SNMP Traps:

1. Move down to the cell **Trap Dest. IP 1** and enter the IP address of the first destination SNMP manager. Setting this cell to `0.0.0.0` disables the first Trap interface.
2. Move down to the cell **Trap Dest. IP 2** and enter the IP address of the second destination SNMP manager. Setting this cell to `0.0.0.0` disables the Second Trap interface.

SNMP V3 Security Configuration

SNMPv3 provides a higher level of security via authentication and privacy protocols. The IED adopts a secure SNMPv3 implementation with a user-based security model (USM).

Authentication is used to check the identity of users, privacy allows for encryption of SNMP messages. Both are optional, however you must enable authentication in order to enable privacy. To configure these security options:

1. If SNMPv3 has been enabled, set the **Security Level** setting. There are three levels; without authentication and without privacy (*noAuthNoPriv*), with authentication but without privacy (*authNoPriv*), and with authentication and with privacy (*authPriv*).
2. If Authentication is enabled, use the **Auth Protocol** setting to select the authentication type. There are two options: *HMAC-MD5-96* or *HMAC-SHA-96*.
3. Using the **Auth Password** setting, enter the 8-character password to be used by the IED for authentication.
4. If privacy is enabled, use the **Encrypt Protocol** setting to set the 8-character password that will be used by the IED for encryption.

SNMP V2C Security Configuration

SNMPv2c implements authentication between the master and agent using a parameter called the **Community Name**. This is effectively the password but it is not encrypted during transmission (this makes it inappropriate for some scenarios in which case version 3 should be used instead). To configure the SNMP 2c security:

1. If SNMPv2c has been enabled, use the **Community Name** setting to set the password that will be used by the IED and SNMP manager for authentication. This may be between one and 8 characters.

7 DATA PROTOCOLS

The products supports a wide range of protocols to make them applicable to many industries and applications. The exact data protocols supported by a particular product depend on its chosen application, but the following table gives a list of the data protocols that are typically available.

SCADA data protocols

Data Protocol	Layer 1 protocol	Description
Courier	K-Bus, RS232, RS485, Ethernet	Standard for SCADA communications developed by Alstom Grid.
MODBUS	RS485	Standard for SCADA communications developed by Modicon.
IEC 60870-5-103	RS485	IEC standard for SCADA communications
DNP 3.0	RS485, Ethernet	Standard for SCADA communications developed by Harris. Used mainly in North America.
IEC 61850	Ethernet	IEC standard for substation automation. Facilitates interoperability.

The relationship of these protocols to the lower level physical layer protocols are as follows:

Data Protocols	IEC 60870-5-103			
	MODBUS	IEC 61850		
	DNP3.0	DNP3.0		
	Courier	Courier	Courier	Courier
Data Link Layer	EIA(RS)485	Ethernet	EIA(RS)232	K-Bus
Physical Layer	Copper or Optical Fibre			

7.1 COURIER

This section should provide sufficient detail to enable understanding of the Courier protocol at a level required by most users. For situations where the level of information contained in this manual is insufficient, further publications (R6511 and R6512) containing in-depth details about the protocol and its use, are available on request.

Courier is an Alstom Grid proprietary communication protocol. Courier uses a standard set of commands to access a database of settings and data in the IED. This allows a master to communicate with a number of slave devices. The application-specific elements are contained in the database rather than in the commands used to interrogate it, meaning that the master station does not need to be preconfigured. Courier also provides a sequence of event (SOE) and disturbance record extraction mechanism.

7.1.1 PHYSICAL CONNECTION AND LINK LAYER

Courier can be used with three physical layer protocols: K-Bus, EIA(RS)232 or EIA(RS)485.

Several connection options are available for Courier

- The front serial RS232 port (for connection to Settings application software on, for example, a laptop)
- Rear Port 1 (RP1) - for permanent SCADA connection via RS485 or K-Bus
- Optional fibre port (RP1 in slot A) - for permanent SCADA connection via optical fibre
- Optional Rear Port 2 (RP2) - for permanent SCADA connection via RS485, K-Bus, or RS232

For either of the rear ports, both the IED address and baud rate can be selected using the front panel menu or by the settings application software.

7.1.2 COURIER DATABASE

The Courier database is two-dimensional and resembles a table. Each cell in the database is referenced by a row and column address. Both the column and the row can take a range from 0 to 255 (0000 to FFFF Hexadecimal). Addresses in the database are specified as hexadecimal values, for example, 0A02 is column 0A row 02. Associated settings or data are part of the same column. Row zero of the column has a text string to identify the contents of the column and to act as a column heading.

The product-specific menu databases contain the complete database definition.

7.1.3 SETTINGS CATEGORIES

There are two main categories of settings in protection IEDs:

- Control and support settings
- Protection settings

With the exception of the Disturbance Recorder settings, changes made to the control and support settings are implemented immediately and stored in non-volatile memory. Changes made to the Protection settings and the Disturbance Recorder settings are stored in 'scratchpad' memory and are not immediately implemented. These need to be committed by writing to the **Save Changes** cell in the *CONFIGURATION* column.

7.1.4 SETTING CHANGES

Courier provides two mechanisms for making setting changes. Either method can be used for editing any of the settings in the database.

Method 1

This uses a combination of three commands to perform a settings change:

First, enter Setting mode: This checks that the cell is settable and returns the limits.

1. Preload Setting: This places a new value into the cell. This value is echoed to ensure that setting corruption has not taken place. The validity of the setting is not checked by this action.
2. Execute Setting: This confirms the setting change. If the change is valid, a positive response is returned. If the setting change fails, an error response is returned.
3. Abort Setting: This command can be used to abandon the setting change.

This is the most secure method. It is ideally suited to on-line editors because the setting limits are extracted before the setting change is made. However, this method can be slow if many settings are being changed because three commands are required for each change.

Method 2

The Set Value command can be used to change a setting directly. The response to this command is either a positive confirm or an error code to indicate the nature of a failure. This command can be used to implement a setting more rapidly than the previous method, however the limits are not extracted. This method is therefore most suitable for off-line setting editors such as MiCOM S1 Agile, or for issuing preconfigured control commands.

7.1.5 EVENT EXTRACTION

You can extract events either automatically (rear serial port only) or manually (either serial port). For automatic extraction, all events are extracted in sequential order using the Courier event mechanism. This includes fault and maintenance data if appropriate. The manual approach allows you to select events, faults, or maintenance data as desired.

7.1.5.1 AUTOMATIC EVENT RECORD EXTRACTION

This method is intended for continuous extraction of event and fault information as it is produced. It is only supported through the rear Courier port.

When new event information is created, the **Event** bit is set in the **Status** byte. This indicates to the Master device that event information is available. The oldest, non-extracted event can be extracted from the IED using the **Send Event** command. The IED responds with the event data.

Once an event has been extracted, the **Accept Event** command can be used to confirm that the event has been successfully extracted. When all events have been extracted, the **Event** bit is reset. If there are more events still to be extracted, the next event can be accessed using the **Send Event** command as before.

7.1.5.2 MANUAL EVENT RECORD EXTRACTION

The *VIEW RECORDS* column (location 01) is used for manual viewing of event, fault, and maintenance records. The contents of this column depend on the nature of the record selected. You can select events by event number and directly select a fault or maintenance record by number.

Event Record Selection ('Select Event' cell: 0101)

This cell can be set the number of stored events. For simple event records (Type 0), cells 0102 to 0105 contain the event details. A single cell is used to represent each of the event fields. If the event selected is a fault or maintenance record (Type 3), the remainder of the column contains the additional information.

Fault Record Selection ('Select Fault' cell: 0105)

This cell can be used to select a fault record directly, using a value between 0 and 4 to select one of up to five stored fault records. (0 is the most recent fault and 4 is the oldest). The column then contains the details of the fault record selected.

Maintenance Record Selection ('Select Maint' cell: 01F0)

This cell can be used to select a maintenance record using a value between 0 and 4. This cell operates in a similar way to the fault record selection.

If this column is used to extract event information, the number associated with a particular record changes when a new event or fault occurs.

Event Types

The IED generates events under certain circumstances such as:

- Change of state of output contact
- Change of state of opto-input
- Protection element operation
- Alarm condition
- Setting change
- Password entered/timed-out

Event Record Format

The IED returns the following fields when the Send Event command is invoked:

- Cell reference
- Time stamp
- Cell text
- Cell value

The Menu Database contains tables of possible events, and shows how the contents of the above fields are interpreted. Fault and Maintenance records return a Courier Type 3 event, which contains the above fields plus two additional fields:

- Event extraction column
- Event number

These events contain additional information, which is extracted from the IED using the *RECORDER EXTRACTION* column B4. Row 01 of the *RECORDER EXTRACTION* column contains a **Select Record** setting that allows the fault or maintenance record to be selected. This setting should be set to the event number value returned in the record. The extended data can be extracted from the IED by uploading the text and data from the column.

7.1.6 DISTURBANCE RECORD EXTRACTION

The stored disturbance records are accessible through the Courier interface. The records are extracted using the *RECORDER EXTRACTION* column (B4).

The **Select Record** cell can be used to select the record to be extracted. Record 0 is the oldest non-extracted record. Older records which have been already been extracted are assigned positive values, while younger records are assigned negative values. To help automatic extraction through the rear port, the IED sets the **Disturbance** bit of the **Status** byte, whenever there are non-extracted disturbance records.

Once a record has been selected, using the above cell, the time and date of the record can be read from the **Trigger Time** cell (B402). The disturbance record can be extracted using the block transfer mechanism from cell B40B and saved in the COMTRADE format. The settings application software automatically does this.

7.1.7 PROGRAMMABLE SCHEME LOGIC SETTINGS

The programmable scheme logic (PSL) settings can be uploaded from and downloaded to the IED using the block transfer mechanism.

The following cells are used to perform the extraction:

- **Domain** cell (B204): Used to select either PSL settings (upload or download) or PSL configuration data (upload only)
- **Sub-Domain** cell (B208): Used to select the Protection Setting Group to be uploaded or downloaded.
- **Version** cell (B20C): Used on a download to check the compatibility of the file to be downloaded.
- **Transfer Mode** cell (B21C): Used to set up the transfer process.
- **Data Transfer** cell (B120): Used to perform upload or download.

The PSL settings can be uploaded and downloaded to and from the IED using this mechanism. The settings application software must be used to edit the settings. It also performs checks on the validity of the settings before they are transferred to the IED.

7.1.8 TIME SYNCHRONISATION

The time and date can be set using the time synchronization feature of the Courier protocol. The device will correct for the transmission delay. The time synchronization message may be sent as either a global command or to any individual IED address. If the time synchronization message is sent to an individual address, then the device will respond with a confirm message. If sent as a global command, the (same) command must be sent twice. A time synchronization Courier event will be generated/produced whether the time-synchronization message is sent as a global command or to any individual IED address.

If the clock is being synchronized using the IRIG-B input then it will not be possible to set the device time using the Courier interface. An attempt to set the time using the interface will cause the device to create an event with the current date and time taken from the IRIG-B synchronized internal clock.

7.1.9 COURIER CONFIGURATION

To configure the device:

1. Select the *CONFIGURATION* column and check that the **Comms settings** cell is set to *Visible*.
2. Select the *COMMUNICATIONS* column.
3. Move to the first cell down (**RP1 protocol**). This is a non-settable cell, which shows the chosen communication protocol – in this case *Courier*.

COMMUNICATIONS
RP1 Protocol
Courier

4. Move down to the next cell (**RP1 Address**). This cell controls the address of the RP1 port on the device. Up to 32 IEDs can be connected to one spur. It is therefore necessary for each IED to have a unique address so that messages from the master control station are accepted by one IED only. Courier uses an integer number between 1 and 254 for the Relay Address. It is set to 255 by default, which has to be changed. It is important that no two IEDs share the same address.

COMMUNICATIONS
RP1 Address
100

5. Move down to the next cell (**RP1 InactivTimer**). This cell controls the inactivity timer. The inactivity timer controls how long the IED waits without receiving any messages on the rear port before revoking any password access that was enabled and discarding any changes. For the rear port this can be set between 1 and 30 minutes.

COMMUNICATIONS
RP1 Inactivtimer
10.00 mins.

6. If the optional fibre optic connectors are fitted, the **RP1 PhysicalLink** cell is visible. This cell controls the physical media used for the communication (Copper or Fibre optic).

COMMUNICATIONS
RP1 PhysicalLink
Copper

7. Move down to the next cell (**RP1 Card Status**). This cell is not settable. It displays the status of the chosen physical layer protocol for RP1.

COMMUNICATIONS
RP1 Card Status
K-Bus OK

8. Move down to the next cell (**RP1 Port Config**). This cell controls the type of serial connection. Select between K-Bus or RS485.

```

COMMUNICATIONS
RP1 Port Config
K-Bus

```

9. If using EIA(RS)485, the next cell (**RP1 Comms Mode**) selects the communication mode. The choice is either IEC 60870 FT1.2 for normal operation with 11-bit modems, or 10-bit no parity. If using K-Bus this cell will not appear.

```

COMMUNICATIONS
RP1 Comms Mode
IEC 60870 FT1.2

```

10. If using EIA(RS)485, the next cell down controls the baud rate. Three baud rates are supported; 9600, 19200 and 38400. If using K-Bus this cell will not appear as the baud rate is fixed at 64 kbps.

```

COMMUNICATIONS
RP1 Baud rate
19200

```

7.2 IEC 60870-5-103

The specification IEC 60870-5-103 (Telecontrol Equipment and Systems Part 5 Section 103: Transmission Protocols), defines the use of standards IEC 60870-5-1 to IEC 60870-5-5, which were designed for communication with protection equipment

This section describes how the IEC 60870-5-103 standard is applied to the Px40 platform. It is not a description of the standard itself. The level at which this section is written assumes that the reader is already familiar with the IEC 60870-5-103 standard.

This section should provide sufficient detail to enable understanding of the standard at a level required by most users.

The IEC 60870-5-103 interface is a master/slave interface with the device as the slave device. The device conforms to compatibility level 2, as defined in the IEC 60870-5-103 standard.

The following IEC 60870-5-103 facilities are supported by this interface:

- Initialization (reset)
- Time synchronization
- Event record extraction
- General interrogation
- Cyclic measurements
- General commands
- Disturbance record extraction
- Private codes

7.2.1 PHYSICAL CONNECTION AND LINK LAYER

Two connection options are available for IEC 60870-5-103:

- Rear Port 1 (RP1) - for permanent SCADA connection via RS485
- Optional fibre port (RP1 in slot A) - for permanent SCADA connection via optical fibre

If the optional fibre optic port is fitted, a menu item appears in which the active port can be selected. However the selection is only effective following the next power up.

The IED address and baud rate can be selected using the front panel menu or by the settings application software.

7.2.2 INITIALISATION

Whenever the device has been powered up, or if the communication parameters have been changed a reset command is required to initialize the communications. The device will respond to either of the two reset commands; Reset CU or Reset FCB (Communication Unit or Frame Count Bit). The difference between the two commands is that the Reset CU command will clear any unsent messages in the transmit buffer, whereas the Reset FCB command does not delete any messages.

The device will respond to the reset command with an identification message ASDU 5. The Cause of Transmission (COT) of this response will be either Reset CU or Reset FCB depending on the nature of the reset command. The content of ASDU 5 is described in the IEC 60870-5-103 section of the Menu Database, available from Alstom Grid separately if required.

In addition to the above identification message, it will also produce a power up event.

7.2.3 TIME SYNCHRONISATION

The time and date can be set using the time synchronization feature of the IEC 60870-5-103 protocol. The device will correct for the transmission delay as specified in IEC 60870-5-103. If the time synchronization message is sent as a send/confirm message then the device will respond with a confirm message. A time synchronization Class 1 event will be generated/produced whether the time-synchronization message is sent as a send confirm or a broadcast (send/no reply) message.

If the clock is being synchronized using the IRIG-B input then it will not be possible to set the device time using the IEC 60870-5-103 interface. An attempt to set the time via the interface will cause the device to create an event with the current date and time taken from the IRIG-B synchronized internal clock.

7.2.4 SPONTANEOUS EVENTS

Events are categorized using the following information:

- Function type
- Information Number

The IEC 60870-5-103 profile in the Menu Database contains a complete listing of all events produced by the device.

7.2.5 GENERAL INTERROGATION (GI)

The GI request can be used to read the status of the device, the function numbers, and information numbers that will be returned during the GI cycle. These are shown in the IEC 60870-5-103 profile in the Menu Database.

7.2.6 CYCLIC MEASUREMENTS

The device will produce measured values using ASDU 9 on a cyclical basis, this can be read from the device using a Class 2 poll (note ADSU 3 is not used). The rate at which the device produces new measured values can be controlled using the measurement period setting. This setting can be edited from the front panel menu or using MiCOM S1 Agile. It is active immediately following a change.

The device transmits its measurands at 2.4 times the rated value of the analogue value.

7.2.7 COMMANDS

A list of the supported commands is contained in the Menu Database. The device will respond to other commands with an ASDU 1, with a cause of transmission (COT) indicating 'negative acknowledgement'.

7.2.8 TEST MODE

It is possible to disable the device output contacts to allow secondary injection testing to be performed using either the front panel menu or the front serial port. The IEC 60870-5-103 standard interprets this as 'test mode'. An event will be produced to indicate both entry to and exit from test mode. Spontaneous events and cyclic measured data transmitted whilst the device is in test mode will have a COT of 'test mode'.

7.2.9 DISTURBANCE RECORDS

The disturbance records are stored in uncompressed format and can be extracted using the standard mechanisms described in IEC 60870-5-103.

Note:
IEC 60870-5-103 only supports up to 8 records.

7.2.10 COMMAND/MONITOR BLOCKING

The device supports a facility to block messages in the monitor direction (data from the device) and also in the command direction (data to the device). Messages can be blocked in the monitor and command directions using one of the two following methods

- The menu command **RP1 CS103Blocking** in the *COMMUNICATIONS* column
- The DDB signals Monitor Blocked and Command Blocked

7.2.11 IEC 60870-5-103 CONFIGURATION

To configure the device:

1. Select the *CONFIGURATION* column and check that the **Comms settings** cell is set to *Visible*.
2. Select the *COMMUNICATIONS* column.
3. Move to the first cell down (**RP1 protocol**). This is a non-settable cell, which shows the chosen communication protocol – in this case *IEC 60870-5-103*.

COMMUNICATIONS
RP1 Protocol
IEC 60870-5-103

4. Move down to the next cell (**RP1 Address**). This cell controls the IEC 60870-5-103 address of the IED. Up to 32 IEDs can be connected to one spur. It is therefore necessary for each IED to have a unique address so that messages from the master control station are accepted by one IED only. IEC 60870-5-103 uses an integer number between 0 and 254 for the address. It is important that no two IEDs have the same IEC 60870 5 103 address. The IEC 60870-5-103 address is then used by the master station to communicate with the IED.


```

COMMUNICATIONS
RP1 address
162

```

5. Move down to the next cell (**RP1 Baud Rate**). This cell controls the baud rate to be used. Two baud rates are supported by the IED, *9600 bits/s* and *19200 bits/s*. Make sure that the baud rate selected on the IED is the same as that set on the master station.

```

COMMUNICATIONS
RP1 Baud rate
9600 bits/s

```

6. Move down to the next cell (**RP1 Meas Period**). The next cell down controls the period between IEC 60870-5-103 measurements. The IEC 60870-5-103 protocol allows the IED to supply measurements at regular intervals. The interval between measurements is controlled by this cell, and can be set between 1 and 60 seconds.

```

COMMUNICATIONS
RP1 Meas Period
30.00 s

```

7. If the optional fibre optic connectors are fitted, the **RP1 PhysicalLink** cell is visible. This cell controls the physical media used for the communication (Copper or Fibre optic).

```

COMMUNICATIONS
RP1 PhysicalLink
Copper

```

8. The next cell down (**RP1 CS103Blcking**) can be used for monitor or command blocking.

```

COMMUNICATIONS
RP1 CS103Blcking
Disabled

```

9. There are three settings associated with this cell; these are:

Setting:	Description:
Disabled	No blocking selected.
Monitor Blocking	When the monitor blocking DDB Signal is active high, either by energising an opto input or control input, reading of the status information and disturbance records is not permitted. When in this mode the device returns a "Termination of general interrogation" message to the master station.
Command Blocking	When the command blocking DDB signal is active high, either by energising an opto input or control input, all remote commands will be ignored (i.e. CB Trip/Close, change setting group etc.). When in this mode the device returns a "negative acknowledgement of command" message to the master station.

7.3 DNP 3.0

This section describes how the DNP 3.0 standard is applied in the product. It is not a description of the standard itself. The level at which this section is written assumes that the reader is already familiar with the DNP 3.0 standard.

The descriptions given here are intended to accompany the device profile document that is included in the Menu Database document. The DNP 3.0 protocol is not described here, please refer to the documentation available from the user group. The device profile document specifies the full details of the DNP 3.0 implementation. This is the standard format DNP 3.0 document that specifies which objects; variations and qualifiers are supported. The device profile document also specifies what data is available from the device using DNP 3.0. The IED operates as a DNP 3.0 slave and supports subset level 2, as described in the DNP 3.0 standard, plus some of the features from level 3.

The DNP 3.0 protocol is defined and administered by the DNP Users Group. For further information on DNP 3.0 and the protocol specifications, please see the DNP website (www.dnp.org).

7.3.1 PHYSICAL CONNECTION AND LINK LAYER

DNP 3.0 can be used with two physical layer protocols: EIA(RS)485, or Ethernet.

Several connection options are available for DNP 3.0

- Rear Port 1 (RP1) - for permanent SCADA connection via RS485
- Optional fibre port (RP1 in slot A) - for permanent SCADA connection via optical fibre
- An RJ45 connection on an optional Ethernet board - for permanent SCADA Ethernet connection
- A fibre connection on an optional Ethernet board - for permanent SCADA Ethernet connection

The IED address and baud rate can be selected using the front panel menu or by the settings application software.

When using a serial interface, the data format is: 1 start bit, 8 data bits, 1 stop bit and optional configurable parity bit.

7.3.2 OBJECT 1 BINARY INPUTS

Object 1, binary inputs, contains information describing the state of signals in the IED, which mostly form part of the digital data bus (DDB). In general these include the state of the output contacts and opto-inputs, alarm signals, and protection start and trip signals. The 'DDB number' column in the device profile document provides the DDB numbers for the DNP 3.0 point data. These can be used to cross-reference to the DDB definition list. See the relevant Menu Database document. The binary input points can also be read as change events using Object 2 and Object 60 for class 1-3 event data.

7.3.3 OBJECT 10 BINARY OUTPUTS

Object 10, binary outputs, contains commands that can be operated using DNP 3.0. Therefore the points accept commands of type pulse on (null, trip, close) and latch on/off as detailed in the device profile in the relevant Menu Database document, and execute the command once for either command. The other fields are ignored (queue, clear, trip/close, in time and off time).

There is an additional image of the Control Inputs. Described as Alias Control Inputs, they reflect the state of the Control Input, but with a dynamic nature.

- If the Control Input DDB signal is already SET and a new DNP SET command is sent to the Control Input, the Control Input DDB signal goes momentarily to RESET and then back to SET.
- If the Control Input DDB signal is already RESET and a new DNP RESET command is sent to the Control Input, the Control Input DDB signal goes momentarily to SET and then back to RESET.

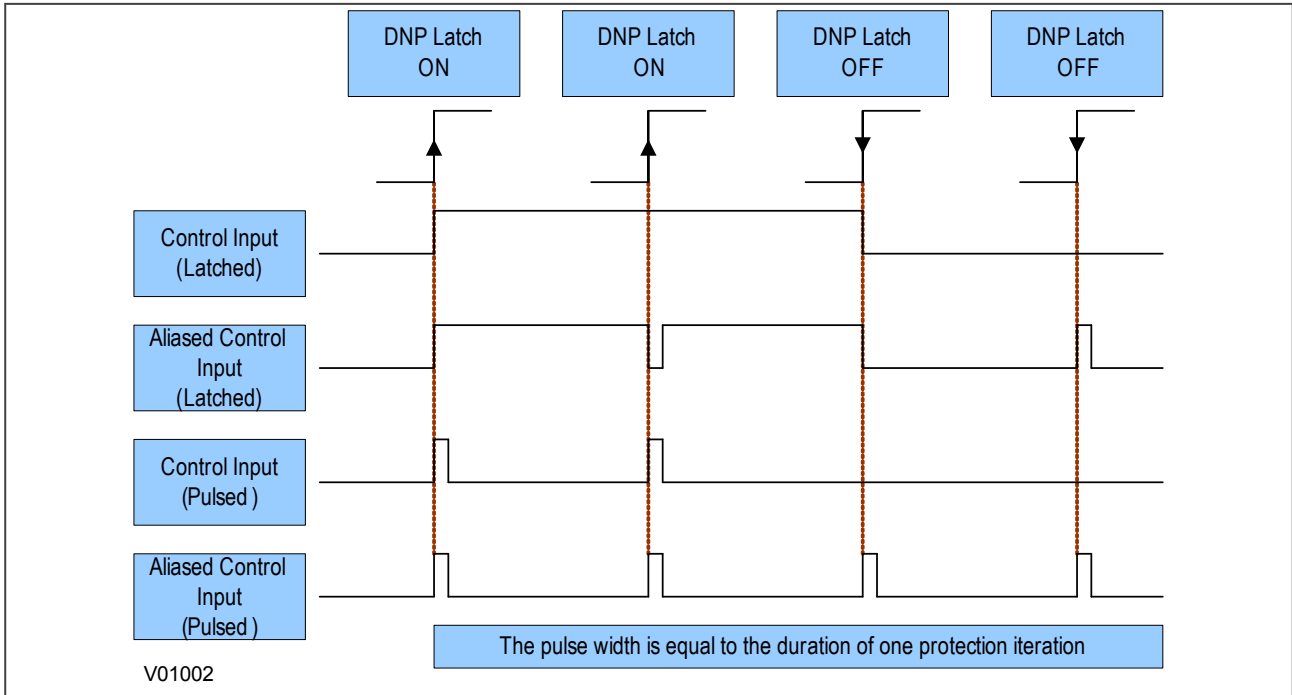


Figure 170: Control input behaviour

Many of the IED's functions are configurable so some of the Object 10 commands described in the following sections may not be available. A read from Object 10 reports the point as off-line and an operate command to Object 12 generates an error response.

Examples of Object 10 points that maybe reported as off-line are:

- Activate setting groups: Ensure setting groups are enabled
- CB trip/close: Ensure remote CB control is enabled
- Reset NPS thermal: Ensure NPS thermal protection is enabled
- Reset thermal O/L: Ensure thermal overload protection is enabled
- Reset RTD flags: Ensure RTD Inputs is enabled
- Control inputs: Ensure control inputs are enabled

7.3.4 OBJECT 20 BINARY COUNTERS

Object 20, binary counters, contains cumulative counters and measurements. The binary counters can be read as their present 'running' value from Object 20, or as a 'frozen' value from Object 21. The running counters of object 20 accept the read, freeze and clear functions. The freeze function takes the current value of the object 20 running counter and stores it in the corresponding Object 21 frozen counter. The freeze and clear function resets the Object 20 running counter to zero after freezing its value.

Binary counter and frozen counter change event values are available for reporting from Object 22 and Object 23 respectively. Counter change events (Object 22) only report the most recent change, so the maximum number of events supported is the same as the total number of counters. Frozen counter change events (Object 23) are generated whenever a freeze operation is performed and a change has occurred since the previous freeze command. The frozen counter event queues store the points for up to two freeze operations.

7.3.5 OBJECT 30 ANALOGUE INPUT

Object 30, analogue inputs, contains information from the IED's measurements columns in the menu. All object 30 points can be reported as 16 or 32-bit integer values with flag, 16 or 32-bit integer values without flag, as well as short floating point values.

Analogue values can be reported to the master station as primary, secondary or normalized values (which takes into account the IED's CT and VT ratios), and this is settable in the *COMMUNICATIONS* column in the IED. Corresponding deadband settings can be displayed in terms of a primary, secondary or normalized value. Deadband point values can be reported and written using Object 34 variations.

The deadband is the setting used to determine whether a change event should be generated for each point. The change events can be read using Object 32 or Object 60. These events are generated for any point which has a value changed by more than the deadband setting since the last time the data value was reported.

Any analogue measurement that is unavailable when it is read is reported as offline. For example, the frequency would be offline if the current and voltage frequency is outside the tracking range of the IED. All Object 30 points are reported as secondary values in DNP 3.0 (with respect to CT and VT ratios).

7.3.6 OBJECT 40 ANALOGUE OUTPUT

The conversion to fixed-point format requires the use of a scaling factor, which is configurable for the various types of data within the IED such as current, voltage, and phase angle. All Object 40 points report the integer scaling values and Object 41 is available to configure integer scaling quantities.

7.3.7 OBJECT 50 TIME SYNCHRONISATION

Function codes 1 (read) and 2 (write) are supported for Object 50 (time and date) variation 1. The DNP Need Time function (the duration of time waited before requesting another time sync from the master) is supported, and is configurable in the range 1 - 30 minutes.

If the clock is being synchronized using the IRIG-B input then it will not be possible to set the device time using the Courier interface. An attempt to set the time using the interface will cause the device to create an event with the current date and time taken from the IRIG-B synchronized internal clock.

7.3.8 DNP3 DEVICE PROFILE

This section describes the specific implementation of DNP version 3.0 within Alstom Grid MiCOM P40 Agile IEDs for both compact and modular ranges.

The devices use the DNP 3.0 Slave Source Code Library version 3 from Triangle MicroWorks Inc.

This document, in conjunction with the DNP 3.0 Basic 4 Document Set, and the DNP Subset Definitions Document, provides complete information on how to communicate with the devices using the DNP 3.0 protocol.

This implementation of DNP 3.0 is fully compliant with DNP 3.0 Subset Definition Level 2. It also contains many Subset Level 3 and above features.

7.3.8.1 DNP3 DEVICE PROFILE TABLE

The following table provides the device profile in a similar format to that defined in the DNP 3.0 Subset Definitions Document. While it is referred to in the DNP 3.0 Subset Definitions as a "Document", it is just one component of a total interoperability guide. This table, in combination with the subsequent Implementation and Points List tables should provide a complete interoperability/configuration guide for the device.

The following table provides the device profile in a similar format to that defined in the DNP 3.0 Subset Definitions Document. While it is referred to in the DNP 3.0 Subset Definitions as a "Document", it is just one component of a total interoperability guide. This table, in combination with the subsequent Implementation and Points List tables should provide a complete interoperability/configuration guide for the device.

DNP 3.0 Device Profile Document	
Vendor Name:	ALSTOM GRID

DNP 3.0 Device Profile Document	
Device Name:	MiCOM P40Agile Protection Relays – compact and modular range
Models Covered:	All models
Highest DNP Level Supported*: *This is the highest DNP level FULLY supported. Parts of level 3 are also supported	For Requests: Level 2 For Responses: Level 2
Device Function:	Slave
<p>Notable objects, functions, and/or qualifiers supported in addition to the highest DNP levels supported (the complete list is described in the DNP 3.0 Implementation Table):</p> <p>For static (non-change event) object requests, request qualifier codes 00 and 01 (start-stop), 07 and 08 (limited quantity), and 17 and 28 (index) are supported in addition to the request qualifier code 06 (no range (all points))</p> <p>Static object requests sent with qualifiers 00, 01, 06, 07, or 08 will be responded with qualifiers 00 or 01</p> <p>Static object requests sent with qualifiers 17 or 28 will be responded with qualifiers 17 or 28</p> <p>For change-event object requests, qualifiers 17 or 28 are always responded</p> <p>16-bit and 32-bit analogue change events with time may be requested</p> <p>The read function code for Object 50 (time and date) variation 1 is supported</p> <p>Analogue Input Deadbands, Object 34, variations 1 through 3, are supported</p> <p>Floating Point Analogue Output Status and Output Block Objects 40 and 41 are supported</p> <p>Sequential file transfer, Object 70, variations 2 through 7, are supported</p> <p>Device Attribute Object 0 is supported</p>	
Maximum Data Link Frame Size (octets):	Transmitted: 292 Received: 292
Maximum Application Fragment Size (octets)	Transmitted: Configurable (100 to 2048). Default 2048 Received: 249
Maximum Data Link Retries:	Fixed at 2
Maximum Application Layer Retries:	None
Requires Data Link Layer Confirmation:	Configurable to Never or Always
Requires Application Layer Confirmation:	When reporting event data (Slave devices only) When sending multi-fragment responses (Slave devices only)
Timeouts while waiting for:	
Data Link Confirm:	Configurable
Complete Application Fragment:	None
Application Confirm:	Configurable
Complete Application Response:	None
Others:	
Data Link Confirm Timeout:	Configurable from 0 (Disabled) to 120s, default 10s.
Application Confirm Timeout:	Configurable from 1 to 120s, default 2s.
Select/Operate Arm Timeout:	Configurable from 1 to 10s, default 10s.
Need Time Interval (Set IIN1-4):	Configurable from 1 to 30, default 10min.
Application File Timeout	60 s
Analog Change Event Scan Period:	Fixed at 0.5s
Counter Change Event Scan Period	Fixed at 0.5s
Frozen Counter Change Event Scan Period	Fixed at 1s
Maximum Delay Measurement Error:	2.5 ms
Time Base Drift Over a 10-minute Interval:	7 ms
Sends/Executes Control Operations:	
Write Binary Outputs:	Never

DNP 3.0 Device Profile Document	
Select/Operate:	Always
Direct Operate:	Always
Direct Operate - No Ack:	Always
Count > 1	Never
Pulse On	Always
Pulse Off	Sometimes
Latch On	Always
Latch Off	Always
Queue	Never
Clear Queue	Never
Note: Paired Control points will accept Pulse On/Trip and Pulse On/Close, but only single point will accept the Pulse Off control command.	
Reports Binary Input Change Events when no specific variation requested:	Configurable to send one or the other
Reports time-tagged Binary Input Change Events when no specific variation requested:	Binary input change with time
Sends Unsolicited Responses:	Never
Sends Static Data in Unsolicited Responses:	Never No other options are permitted
Default Counter Object/Variation:	Configurable, Point-by-point list attached Default object: 20 Default variation: 1
Counters Roll Over at:	32 bits
Sends multi-fragment responses:	Yes
Sequential File Transfer Support:	
Append File Mode	No
Custom Status Code Strings	No
Permissions Field	Yes
File Events Assigned to Class	No
File Events Send Immediately	Yes
Multiple Blocks in a Fragment	No
Max Number of Files Open	1

7.3.8.2 DNP3 IMPLEMENTATION TABLE

The implementation table provides a list of objects, variations and control codes supported by the device:

Object			Request (Library will parse)				Response (Library will respond with)			
Object Number	Variation Number	Description	Function Codes (dec)		Qualifier Codes (hex)		Function Codes (dec)		Qualifier Codes (hex)	
1	0	Binary Input (Variation 0 is used to request default variation)	1 22	(read) (assign class)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)				
1	1 (default - see note 1)	Binary Input	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)

Object			Request (Library will parse)				Response (Library will respond with)			
Object Number	Variation Number	Description	Function Codes (dec)		Qualifier Codes (hex)		Function Codes (dec)		Qualifier Codes (hex)	
1	2	Binary Input with Flag	1	(read)	00, 01 06 07, 08 17, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
2	0	Binary Input Change - Any Variation	1	(read)	06 07, 08	(no range, or all) (limited qty)				
2	1	Binary Input Change without Time	1	(read)	06 07, 08	(no range, or all) (limited qty)	129	response	17, 28	(index)
2	2	Binary Input Change with Time	1	(read)	06 07, 08	(no range, or all) (limited qty)	129	response	17, 28	(index)
10	0	Binary Output Status - Any Variation	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)				
10	2 (default - see note 1)	Binary Output Status	1	(read)	00, 01 06 07, 08 17, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
12	1	Control Relay Output Block	3 4 5 6	(select) (operate) (direct op) (dir. op, noack)	17, 28	(index)	129	response		echo of request
20	0	Binary Counter - Any Variation	1 22	(read) (assign class)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)				
			7 8 9 10	(freeze) (freeze noack) (freeze clear) (frz. cl. Noack)	00, 01 06 07, 08	(start-stop) (no range, or all) (limited qty)				
20	1	32-Bit Binary Counter with Flag	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
20	2	16-Bit Binary Counter with Flag	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
20	5 (default - see note 1)	32-Bit Binary Counter without Flag	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
20	6	16-Bit Binary Counter without Flag	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
21	0	Frozen Counter - Any Variation	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)				
21	1	32-Bit Frozen Counter with Flag	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
21	2	16-Bit Frozen Counter with Flag	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
21	5	32-Bit Frozen Counter with Time of Freeze	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 1)
21	6	16-Bit Frozen Counter with Time of Freeze	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) 17, 28 (index - see note 1)

Object			Request (Library will parse)				Response (Library will respond with)			
Object Number	Variation Number	Description	Function Codes (dec)		Qualifier Codes (hex)		Function Codes (dec)		Qualifier Codes (hex)	
21	9 (default - see note 1)	32-Bit Frozen Counter without Flag	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
21	10	16-Bit Frozen Counter without Flag	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
22	0	Counter Change Event - Any Variation	1	(read)	06 07, 08	(no range, or all) (limited qty)				
22	1 (default - see note 1)	32-Bit Counter Change Event without Time	1	(read)	06 07, 08	(no range, or all) (limited qty)	129	response	17, 28	(index)
22	2	16-Bit Counter Change Event without Time	1	(read)	06 07, 08	(no range, or all) (limited qty)	129	response	17, 28	(index)
22	5	32-Bit Counter Change Event with Time	1	(read)	06 07, 08	(no range, or all) (limited qty)	129	response	17, 28	(index)
22	6	16-Bit Counter Change Event with Time	1	(read)	06 07, 08	(no range, or all) (limited qty)	129	response	17, 28	(index)
23	0	Frozen Counter Event (Variation 0 is used to request default variation)	1	(read)	06 07, 08	(no range, or all) (limited qty)				
23	1 (default - see note 1)	32-Bit Frozen Counter Event	1	(read)	06 07, 08	(no range, or all) (limited qty)	129	response	17, 28	(index)
23	2	16-Bit Frozen Counter Event	1	(read)	06 07, 08	(no range, or all) (limited qty)	129	response	17, 28	(index)
23	5	32-Bit Frozen Counter Event with Time	1	(read)	06 07, 08	(no range, or all) (limited qty)	129	response	17, 28	(index)
23	6	16-Bit Frozen Counter Event with Time	1	(read)	06 07, 08	(no range, or all) (limited qty)	129	response	17, 28	(index)
30	0	Analog Input - Any Variation	1 22	(read) (assign class)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)				
30	1	32-Bit Analog Input	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
30	2	16-Bit Analog Input	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
30	3 (default - see note 1)	32-Bit Analog Input without Flag	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
30	4	16-Bit Analog Input without Flag	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
30	5	Short floating point	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
32	0	Analog Change Event - Any Variation	1	(read)	06 07, 08	(no range, or all) (limited qty)				
32	1 (default - see note 1)	32-Bit Analog Change Event without Time	1	(read)	06 07, 08	(no range, or all) (limited qty)	129	response	17, 28	(index)
32	2	16-Bit Analog Change Event without Time	1	(read)	06 07, 08	(no range, or all) (limited qty)	129	response	17, 28	(index)
32	3	32-Bit Analog Change Event with Time	1	(read)	06 07, 08	(no range, or all) (limited qty)	129	response	17, 28	(index)
32	4	16-Bit Analog Change Event with Time	1	(read)	06 07, 08	(no range, or all) (limited qty)	129	response	17, 28	(index)

Object			Request (Library will parse)				Response (Library will respond with)			
Object Number	Variation Number	Description	Function Codes (dec)		Qualifier Codes (hex)		Function Codes (dec)		Qualifier Codes (hex)	
32	5	Short floating point Analog Change Event without Time	1	(read)	06 07, 08	(no range, or all) (limited qty)	129	response	17, 28	(index)
32	7	Short floating point Analog Change Event with Time	1	(read)	06 07, 08	(no range, or all) (limited qty)	129	response	17, 28	(index)
34	0	Analog Input Deadband (Variation 0 is used to request default variation)	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)				
34	1	16 Bit Analog Input Deadband	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
			2	(write)	00, 01 07, 08 17, 27, 28	(start-stop) (limited qty) (index)				
34	2 (default - see note 1)	32 Bit Analog Input Deadband	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
			2	(write)	00, 01 07, 08 17, 27, 28	(start-stop) (limited qty) (index)				
34	3	Short Floating Point Analog Input Deadband	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
			2	(write)	00, 01 07, 08 17, 27, 28	(start-stop) (limited qty) (index)				
40	0	Analog Output Status (Variation 0 is used to request default variation)	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)				
40	1 (default - see note 1)	32-Bit Analog Output Status	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
40	2	16-Bit Analog Output Status	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
40	3	Short Floating Point Analog Output Status	1	(read)	00, 01 06 07, 08 17, 27, 28	(start-stop) (no range, or all) (limited qty) (index)	129	response	00, 01 17, 28	(start-stop) (index - see note 2)
41	1	32-Bit Analog Output Block	3 4 5 6	(select) (operate) (direct op) (dir. op, noack)	17, 28 27	(index) (index)	129	response		echo of request
41	2	16-Bit Analog Output Block	3 4 5 6	(select) (operate) (direct op) (dir. op, noack)	17, 28 27	(index) (index)	129	response		echo of request
41	3	Short Floating Point Analog Output Block	3 4 5 6	(select) (operate) (direct op) (dir. op, noack)	17, 27, 28	(index)	129	response		echo of request
50	1 (default - see note 1)	Time and Date	1	(read)	07	(limited qty = 1)	129	response	07	(limited qty = 1)
			2	(write)	07	(limited qty = 1)				
60	0	Not defined								
60	1	Class 0 Data	1	(read)	06	(no range, or all)				
60	2	Class 1 Data	1	(read)	06 07, 08	(no range, or all) (limited qty)				
			22	(assign class)	06	(no range, or all)				

Object			Request (Library will parse)				Response (Library will respond with)			
Object Number	Variation Number	Description	Function Codes (dec)		Qualifier Codes (hex)		Function Codes (dec)		Qualifier Codes (hex)	
60	3	Class 2 Data	1	(read)	06 07, 08	(no range, or all) (limited qty)				
			22	(assign class)	06	(no range, or all)				
60	4	Class 3 Data	1	(read)	06 07, 08	(no range, or all) (limited qty)				
			22	(assign class)	06	(no range, or all)				
70	0	File Event - Any Variation	1	(read)	06 07, 08	(no range, or all) (limited qty)				
			22	(assign class)	06	(no range, or all)				
70	2	File Authentication	29	(authenticate)	5b	(free-format)	129	response		5B (free-format)
70	3	File Command	25 27	(open) (delete)	5b	(free-format)				
70	4	File Command Status	26 30	(close) (abort)	5b	(free-format)	129	response		5B (free-format)
70	5	File Transfer	1	(read)	5b	(free-format)	129	response		5B (free-format)
70	6	File Transfer Status					129	response		5B (free-format)
70	7	File Descriptor	28	(get file info)	5b	(free-format)	129	response		5B (free-format)
80	1	Internal Indications	1	(read)	00, 01	(start-stop)	129	response	00, 01	(start-stop)
		No Object (function code only)	13	(cold restart)						
		No Object (function code only)	14	(warm restart)						
		No Object (function code only)	23	(delay meas.)						

Note:

A Default variation refers to the variation responded to when variation 0 is requested and/or in class 0, 1, 2, or 3 scans.

Note:

For static (non-change-event) objects, qualifiers 17 or 28 are only responded to when a request is sent with qualifiers 17 or 28, respectively. Otherwise, static object requests sent with qualifiers 00, 01, 06, 07, or 08, will be responded to with qualifiers 00 or 01. For change-event objects, qualifiers 17 or 28 are always responded to.

7.3.8.3 DNP3 INTERNAL INDICATIONS

The following table lists the DNP3.0 Internal Indications (IIN) and identifies those that are supported by the device.

The IIN form an information element used to convey the internal states and diagnostic results of a device. This information can be used by a receiving station to perform error recovery or other suitable functions. The IIN is a two-octet field that follows the function code in all responses from the device. When a request cannot be processed due to formatting errors or the requested data is not available, the IIN is always returned with the appropriate bits set.

Bit	Indication	Description	Supported
Octet 1			

Bit	Indication	Description	Supported
0	All stations message received	Set when a request is received with the destination address of the all stations address (6553510). It is cleared after the next response (even if a response to a global request is required). This IIN is used to let the master station know that a "broadcast" message was received by the relay.	Yes
1	Class 1 data available	Set when data that has been configured as Class 1 data is ready to be sent to the master. The master station should request this class data from the relay when this bit is set in a response.	Yes
2	Class 2 data available	Set when data that has been configured as Class 2 data is ready to be sent to the master. The master station should request this class data from the relay when this bit is set in a response.	Yes
3	Class 3 data available	Set when data that has been configured as Class 3 data is ready to be sent to the master. The master station should request this class data from the relay when this bit is set in a response.	Yes
4	Time-synchronization required	The relay requires time synchronization from the master station (using the Time and Date object). This IIN is cleared once the time has been synchronized. It can also be cleared by explicitly writing a 0 into this bit of the Internal Indication object.	Yes
5	Local	Set when some or all of the relays digital output points (Object 10/12) are in the Local state. That is, the relays control outputs are NOT accessible through the DNP protocol. This IIN is clear when the relay is in the Remote state. That is, the relays control outputs are fully accessible through the DNP protocol.	No
6	Device in trouble	Set when an abnormal condition exists in the relay. This IIN is only used when the state cannot be described by a combination of one or more of the other IIN bits.	No
7	Device restart	Set when the device software application restarts. This IIN is cleared when the master station explicitly writes a 0 into this bit of the Internal Indications object.	Yes
Octet 2			
0	Function code not implemented	The received function code is not implemented within the relay.	Yes
1	Requested object(s) unknown	The relay does not have the specified objects or there are no objects assigned to the requested class. This IIN should be used for debugging purposes and usually indicates a mismatch in device profiles or configuration problems.	Yes
2	Out of range	Parameters in the qualifier, range or data fields are not valid or out of range. This is a 'catch-all' for application request formatting errors. It should only be used for debugging purposes. This IIN usually indicates configuration problems.	Yes
3	Buffer overflow	Event buffer(s), or other application buffers, have overflowed. The master station should attempt to recover as much data as possible and indicate to the user that there may be lost data. The appropriate error recovery procedures should be initiated by the user.	Yes
4	Already executing	The received request was understood but the requested operation is already executing.	
5	Bad configuration	Set to indicate that the current configuration in the relay is corrupt. The master station may download another configuration to the relay.	Yes
6	Reserved	Always returned as zero.	
7	Reserved	Always returned as zero.	

7.3.8.4 DNP3 RESPONSE STATUS CODES

When the device processes Control Relay Output Block (Object 12) requests, it returns a set of status codes; one for each point contained within the original request. The complete list of codes appears in the following table:

Code Number	Identifier Name	Description
0	Success	The received request has been accepted, initiated, or queued.
1	Timeout	The request has not been accepted because the 'operate' message was received after the arm timer (Select Before Operate) timed out. The arm timer was started when the select operation for the same point was received.
2	No select	The request has not been accepted because no previous matching 'select' request exists. (An 'operate' message was sent to activate an output that was not previously armed with a matching 'select' message).
3	Format error	The request has not been accepted because there were formatting errors in the control request ('select', 'operate', or 'direct operate').
4	Not supported	The request has not been accepted because a control operation is not supported for this point.
5	Already active	The request has not been accepted because the control queue is full or the point is already active.
6	Hardware error	The request has not been accepted because of control hardware problems.
7	Local	The request has not been accepted because local access is in progress.
8	Too many operations	The request has not been accepted because too many operations have been requested.
9	Not authorized	The request has not been accepted because of insufficient authorization.
127	Undefined	The request not been accepted because of some other undefined reason.

Note:

Code numbers 10 through to 126 are reserved for future use.

7.3.9 DNP3 CONFIGURATION

To configure the device:

1. Select the *CONFIGURATION* column and check that the **Comms settings** cell is set to *Visible*.
2. Select the *COMMUNICATIONS* column.
3. Move to the first cell down (**RP1 protocol**). This is a non-settable cell, which shows the chosen communication protocol – in this case *DNP3.0*.

<p>COMMUNICATIONS RP1 Protocol DNP3.0</p>
--

4. Move down to the next cell (**RP1 Address**). This cell controls the DNP3.0 address of the IED. Up to 32 IEDs can be connected to one spur, therefore it is necessary for each IED to have a unique address so that messages from the master control station are accepted by only one IED. DNP3.0 uses a decimal number between 1 and 65519 for the Relay Address. It is important that no two IEDs have the same address.

COMMUNICATIONS
RP1 Address
1

5. Move down to the next cell (**RP1 Baud Rate**). This cell controls the baud rate to be used. Six baud rates are supported by the IED 1200 bps, 2400 bps, 4800 bps, 9600 bps, 19200 bps and 38400 bps. Make sure that the baud rate selected on the IED is the same as that set on the master station.

COMMUNICATIONS
RP1 Baud rate
9600 bits/s

6. Move down to the next cell (**RP1 Parity**). This cell controls the parity format used in the data frames. The parity can be set to be one of *None*, *Odd* or *Even*. Make sure that the parity format selected on the IED is the same as that set on the master station.

COMMUNICATIONS
RP1 Parity
None

7. If the optional fibre optic connectors are fitted, the **RP1 PhysicalLink** cell is visible. This cell controls the physical media used for the communication (Copper or Fibre optic).

COMMUNICATIONS
RP1 PhysicalLink
Copper

8. Move down to the next cell (**RP1 Time Sync**). This cell affects the time synchronisation request from the master by the IED. It can be set to *enabled* or *disabled*. If enabled it allows the DNP3.0 master to synchronise the time on the IED.

COMMUNICATIONS
RP1 Time Sync
Enabled

7.3.9.1 DNP3 CONFIGURATOR

A PC support package for DNP3.0 is available as part of the supplied settings application software (MiCOM S1 Agile) to allow configuration of the device's DNP3.0 response. The configuration data is uploaded from the device to the PC in a block of compressed format data and downloaded in a similar manner after modification. The new DNP3.0 configuration takes effect after the download is complete. To restore the default configuration at any time, from the *CONFIGURATION* column, select the **Restore Defaults** cell then select *All Settings*.

In MiCOM S1 Agile, the DNP3.0 data is shown in three main folders, one folder each for the point configuration, integer scaling and default variation (data format). The point configuration also includes screens for binary inputs, binary outputs, counters and analogue input configuration.

7.4 IEC 61850

This section describes how the IEC 61850 standard is applied to Alstom Grid products. It is not a description of the standard itself. The level at which this section is written assumes that the reader is already familiar with the IEC 61850 standard.

IEC 61850 is the international standard for Ethernet-based communication in substations. It enables integration of all protection, control, measurement and monitoring functions within a substation, and additionally provides the means for interlocking and inter-tripping. It combines the convenience of Ethernet with the security that is so essential in substations today.

There are two editions of IEC 61850; IEC 61850 edition 1 and IEC 61850 edition 2. The edition which this product supports depends on your exact model. An additional section for edition 2 models is documented later in this chapter if applicable.

7.4.1 BENEFITS OF IEC 61850

The standard provides:

- Standardised models for IEDs and other equipment within the substation
- Standardised communication services (the methods used to access and exchange data)
- Standardised formats for configuration files
- Peer-to-peer communication

The standard adheres to the requirements laid out by the ISO OSI model and therefore provides complete vendor interoperability and flexibility on the transmission types and protocols used. This includes mapping of data onto Ethernet, which is becoming more and more widely used in substations, in favour of RS485. Using Ethernet in the substation offers many advantages, most significantly including:

- Ethernet allows high-speed data rates (currently 100 Mbps, rather than tens of kbps or less used by most serial protocols)
- Ethernet provides the possibility to have multiple clients
- Ethernet is an open standard in every-day use
- There is a wide range of Ethernet-compatible products that may be used to supplement the LAN installation (hubs, bridges, switches)

7.4.2 IEC 61850 INTEROPERABILITY

A major benefit of IEC 61850 is interoperability. IEC 61850 standardizes the data model of substation IEDs, which allows interoperability between products from multiple vendors.

An IEC 61850-compliant device may be interoperable, but this does not mean it is interchangeable. You cannot simply replace a product from one vendor with that of another without reconfiguration. However the terminology is pre-defined and anyone with prior knowledge of IEC 61850 should be able to integrate a new device very quickly without having to map all of the new data. IEC 61850 brings improved substation communications and interoperability to the end user, at a lower cost.

7.4.3 THE IEC 61850 DATA MODEL

The data model of any IEC 61850 IED can be viewed as a hierarchy of information, whose nomenclature and categorization is defined and standardized in the IEC 61850 specification.

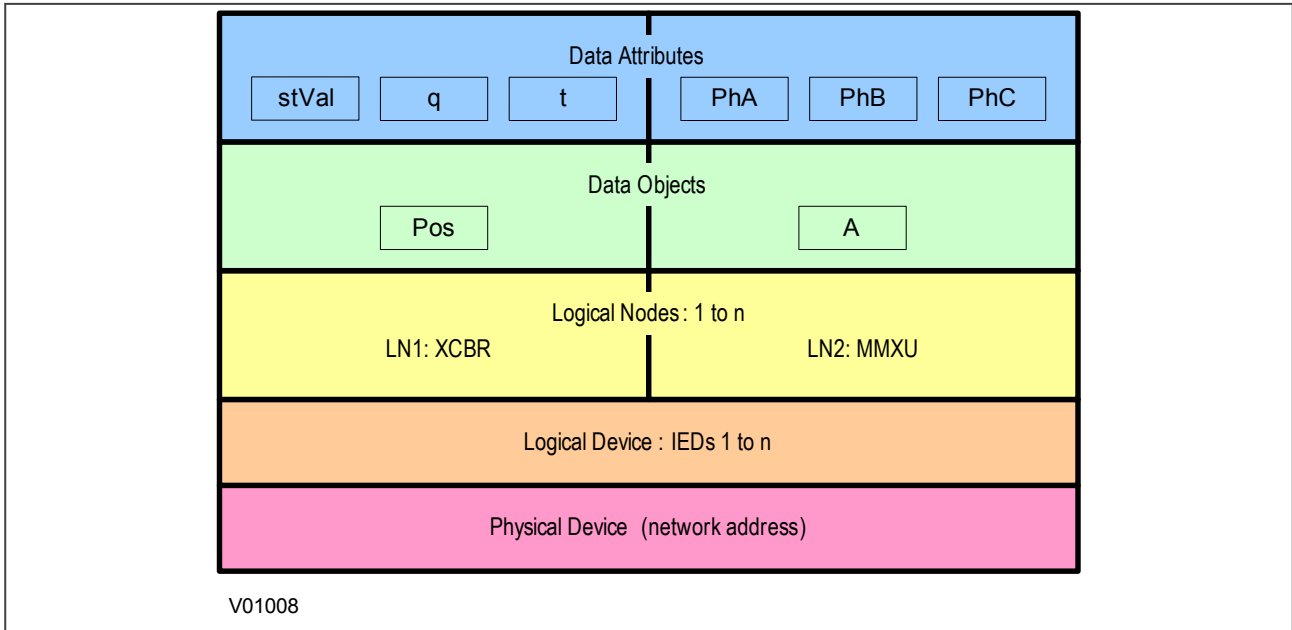


Figure 171: Data model layers in IEC 61850

The levels of this hierarchy can be described as follows:

Data Frame format

Layer	Description
Physical Device	Identifies the actual IED within a system. Typically the device's name or IP address can be used (for example Feeder_1 or 10.0.0.2).
Logical Device	Identifies groups of related Logical Nodes within the Physical Device. For the MiCOM IEDs, 5 Logical Devices exist: Control, Measurements, Protection, Records, System.
Wrapper/Logical Node Instance	Identifies the major functional areas within the IEC 61850 data model. Either 3 or 6 characters are used as a prefix to define the functional group (wrapper) while the actual functionality is identified by a 4 character Logical Node name suffixed by an instance number. For example, XCBR1 (circuit breaker), MMXU1 (measurements), FrqPTOF2 (overfrequency protection, stage 2).
Data Object	This next layer is used to identify the type of data you will be presented with. For example, Pos (position) of Logical Node type XCBR.
Data Attribute	This is the actual data (measurement value, status, description, etc.). For example, stVal (status value) indicating actual position of circuit breaker for Data Object type Pos of Logical Node type XCBR.

7.4.4 IEC 61850 IN MICOM IEDS

IEC 61850 is implemented by use of a separate Ethernet card. This Ethernet card manages the majority of the IEC 61850 implementation and data transfer to avoid any impact on the performance of the protection functions.

To communicate with an IEC 61850 IED on Ethernet, it is necessary only to know its IP address. This can then be configured into either:

- An IEC 61850 client (or master), for example a bay computer (MiCOM C264)
- An HMI
- An MMS browser, with which the full data model can be retrieved from the IED, without any prior knowledge of the IED

The IEC 61850 compatible interface standard provides capability for the following:

- Read access to measurements
- Refresh of all measurements at the rate of once per second.
- Generation of non-buffered reports on change of status or measurement
- SNTP time synchronization over an Ethernet link. (This is used to synchronize the IED's internal real time clock.
- GOOSE peer-to-peer communication
- Disturbance record extraction by file transfer. The record is extracted as an ASCII format COMTRADE file
- Controls (Direct and Select Before Operate)

Note:

Setting changes are not supported in the current IEC 61850 implementation. Currently these setting changes are carried out using the settings application software.

7.4.5 IEC 61850 DATA MODEL IMPLEMENTATION

The data model naming adopted in the IEDs has been standardised for consistency. Therefore the Logical Nodes are allocated to one of the five Logical Devices, as appropriate.

The data model is described in the Model Implementation Conformance Statement (MICS) document, which is available as a separate document.

7.4.6 IEC 61850 COMMUNICATION SERVICES IMPLEMENTATION

The IEC 61850 communication services which are implemented in the IEDs are described in the Protocol Implementation Conformance Statement (PICS) document, which is available as a separate document.

7.4.7 IEC 61850 PEER-TO-PEER (GOOSE) COMMUNICATIONS

The implementation of IEC 61850 Generic Object Oriented Substation Event (GOOSE) enables faster communication between IEDs offering the possibility for a fast and reliable system-wide distribution of input and output data values. The GOOSE model uses multicast services to deliver event information. Multicast messaging means that messages are sent to selected devices on the network. The receiving devices can specifically accept frames from certain devices and discard frames from the other devices. It is also known as a publisher-subscriber system. When a device detects a change in one of its monitored status points it publishes a new message. Any device that is interested in the information subscribes to the data it contains.

7.4.8 MAPPING GOOSE MESSAGES TO VIRTUAL INPUTS

Each GOOSE signal contained in a subscribed GOOSE message can be mapped to any of the virtual inputs within the PSL. The virtual inputs allow the mapping to internal logic functions for protection control, directly to output contacts or LEDs for monitoring.

An IED can subscribe to all GOOSE messages but only the following data types can be decoded and mapped to a virtual input:

- BOOLEAN
- BSTR2
- INT16
- INT32
- INT8

- UINT16
- UINT32
- UINT8

7.4.8.1 IEC 61850 GOOSE CONFIGURATION

All GOOSE configuration is performed using the IEC 61850 Configurator tool available in the MiCOM S1 Agile software application.

All GOOSE publishing configuration can be found under the **GOOSE Publishing** tab in the configuration editor window. All GOOSE subscription configuration parameters are under the **External Binding** tab in the configuration editor window.

Settings to enable GOOSE signalling and to apply Test Mode are available using the HMI.

7.4.9 ETHERNET FUNCTIONALITY

IEC 61850 **Associations** are unique and made between the client and server. If Ethernet connectivity is lost for any reason, the associations are lost, and will need to be re-established by the client. The IED has a **TCP_KEEPLIVE** function to monitor each association, and terminate any which are no longer active.

The IED allows the re-establishment of associations without disruption of its operation, even after its power has been removed. As the IED acts as a server in this process, the client must request the association. Uncommitted settings are cancelled when power is lost, and reports requested by connected clients are reset. The client must re-enable these when it next creates the new association to the IED.

7.4.10 IEC 61850 CONFIGURATION

You cannot configure the device for IEC 61850 edition 1 using the HMI panel on the product. For this you must use the IEC 61850 Configurator, which is part of the settings application software. If the device is compatible with edition 2, however, you can configure it with the HMI. To configure IEC61850 edition 2 using the HMI, you must first enable the IP From HMI setting, after which you can set the media (copper or fibre), IP address, subnet mask and gateway address.

IEC 61850 allows IEDs to be directly configured from a configuration file. The IED's system configuration capabilities are determined from an IED Capability Description file (ICD), supplied with the product. By using ICD files from the products to be installed, you can design, configure and test (using simulation tools), a substation's entire protection scheme before the products are installed into the substation.

To help with this process, the settings application software provides an IEC 61850 Configurator tool, which allows the pre-configured IEC 61850 configuration file to be imported and transferred to the IED. As well as this, you can manually create configuration files for all products, based on their original IED capability description (ICD file).

Other features include:

- The extraction of configuration data for viewing and editing.
- A sophisticated error checking sequence to validate the configuration data before sending to the IED.

Note:

Some configuration data is available in the IEC61850 CONFIG. column, allowing read-only access to basic configuration data.

7.4.10.1 IEC 61850 CONFIGURATION BANKS

There are two configuration banks:

- Active Configuration Bank
- Inactive Configuration Bank

Any new configuration sent to the IED is automatically stored in the inactive configuration bank, therefore not immediately affecting the current configuration.

Following an upgrade, the IEC 61850 Configurator tool can be used to transmit a command, which authorises activation of the new configuration contained in the inactive configuration bank. This is done by switching the active and inactive configuration banks. The capability of switching the configuration banks is also available using the *IEC61850 CONFIG*. column of the HMI.

The SCL Name and Revision attributes of both configuration banks are available in the *IEC61850 CONFIG*. column of the HMI.

7.4.10.2 IEC 61850 NETWORK CONNECTIVITY

Configuration of the IP parameters and SNTP (Simple Network Time Protocol) time synchronisation parameters is performed by the IEC 61850 Configurator tool. If these parameters are not available using an SCL (Substation Configuration Language) file, they must be configured manually.

Every IP address on the Local Area Network must be unique. Duplicate IP addresses result in conflict and must be avoided. Most IEDs check for a conflict on every IP configuration change and at power up and they raise an alarm if an IP conflict is detected.

The IED can be configured to accept data from other networks using the **Gateway** setting. If multiple networks are used, the IP addresses must be unique across networks.

7.4.11 IEC 61850 EDITION 2

Many parts of the IEC 61850 standard have now been released as the second edition. This offers some significant enhancements including:

- Improved interoperability
- Many new logical nodes
- Better defined testing; it is now possible to perform off-line testing and simulation of functions

Edition 2 implementation requires use of version 3.2 of the IEC 61850 configurator, which is installed with version 1.2 of MiCOM S1 Agile.

7.4.11.1 BACKWARD COMPATIBILITY

IEC61850 System - Backward compatibility

An Edition 1 IED can operate with an Edition 2 IEC 61850 system, provided that the Edition 1 IEDs do not subscribe to GOOSE messages with data objects or data attributes which are only available in Edition 2.

The following figure explains this concept:

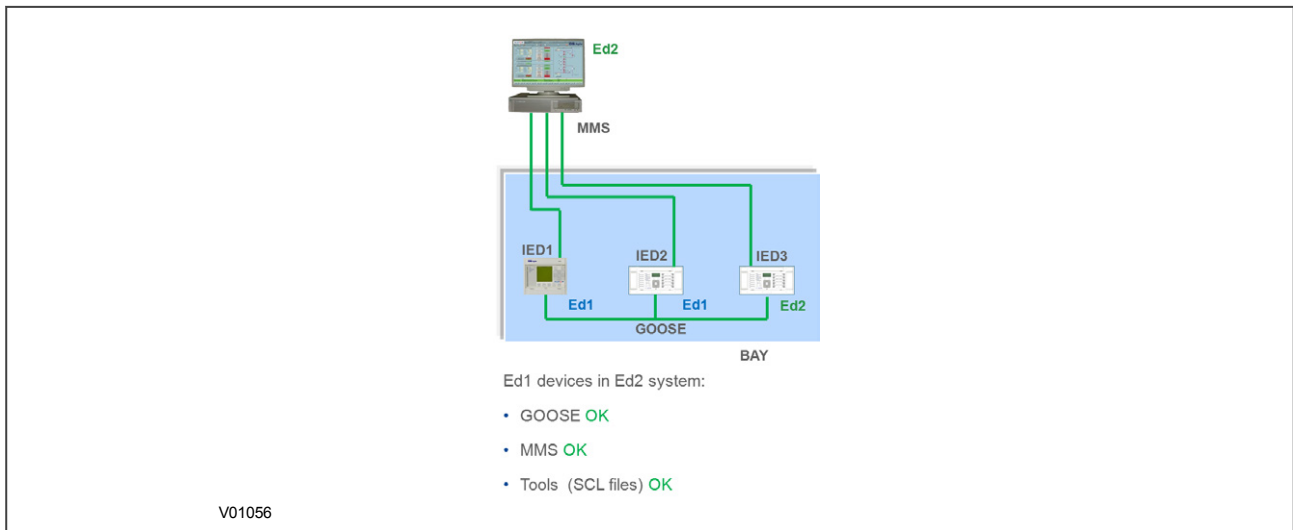


Figure 172: Edition 2 system - backward compatibility

An Edition 2 IED cannot normally operate within an Edition 1 IEC 61850 system. An Edition 2 IED can work for GOOSE messaging in a mixed system, providing the client is compatible with Edition 2.

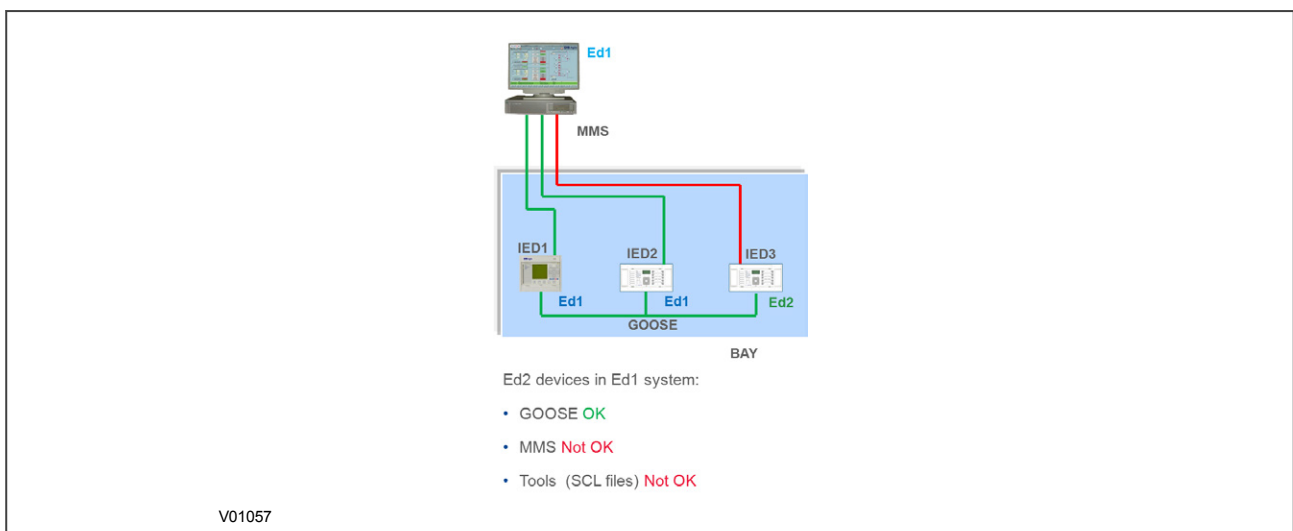


Figure 173: Edition 1 system - forward compatibility issues

7.4.11.2 EDITION-2 COMMON DATA CLASSES

The following common data classes (CDCs) are new to Edition 2 and therefore should not be used in GOOSE control blocks in mixed Edition 1 and Edition 2 systems

- Histogram (HST)
- Visible string status (VSS)
- Object reference setting (ORG)
- Controllable enumerated status (ENC)
- Controllable analogue process value (APC)
- Binary controlled analogue process value (BAC)
- Enumerated status setting (ENG)
- Time setting group (TSG)

- Currency setting group (CUG)
- Visible string setting (VSG)
- Curve shape setting (CSG)

Of these, only ENS and ENC types are available from a MiCOM P40 IED when publishing GOOSE messages, so Data Objects using these Common Data Classes should not be published in mixed Edition 1 and Edition 2 systems.

For compatibility between Edition 1 and Edition 2 IEDs, SCL files using SCL schema version 2.1 must be used. For a purely Edition 2 system, use the schema version 3.1.

7.4.11.3 STANDBY PROTECTION REDUNDANCY

With digital substation architectures, measurements can be shared freely on the process bus across the substation and between different devices without any additional wiring. This is because there are no longer any electrical connections to instruments transformers that restrict the location of IEDs.

The new IEC 61850 Edition 2 test modes enable the introduction of standby protection IEDs at any location within the substation, which has access to both station and process buses. In the case of failure, these devices can temporarily replace the protection functions inside other IEDs.

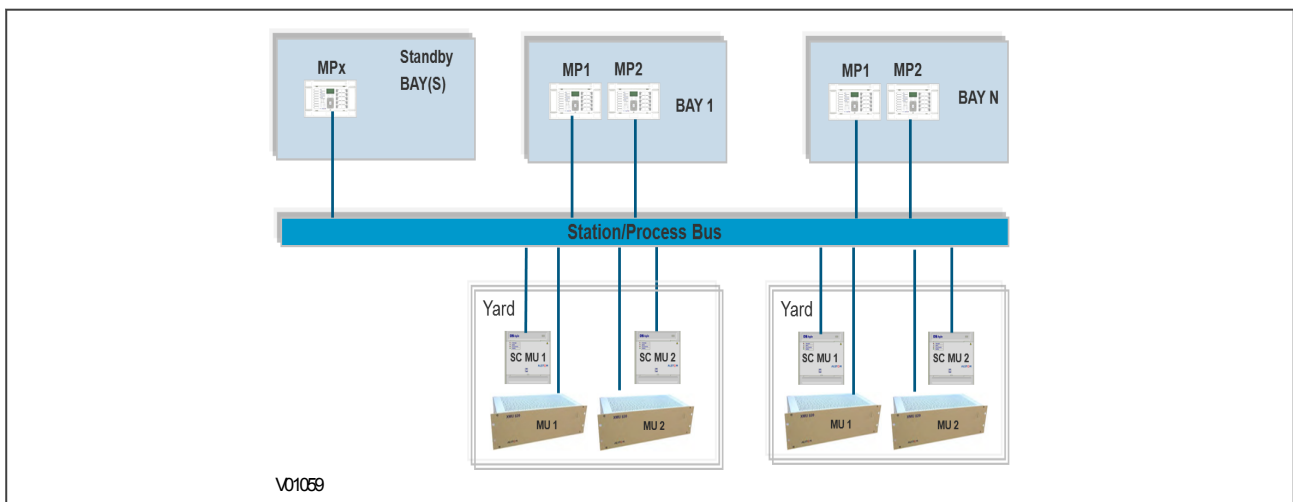


Figure 174: Example of Standby IED

See the example below. If a failure occurs in the Bay 1 protection IED (MP2), we could disable this device and activate a standby protection IED to replace its functionality.

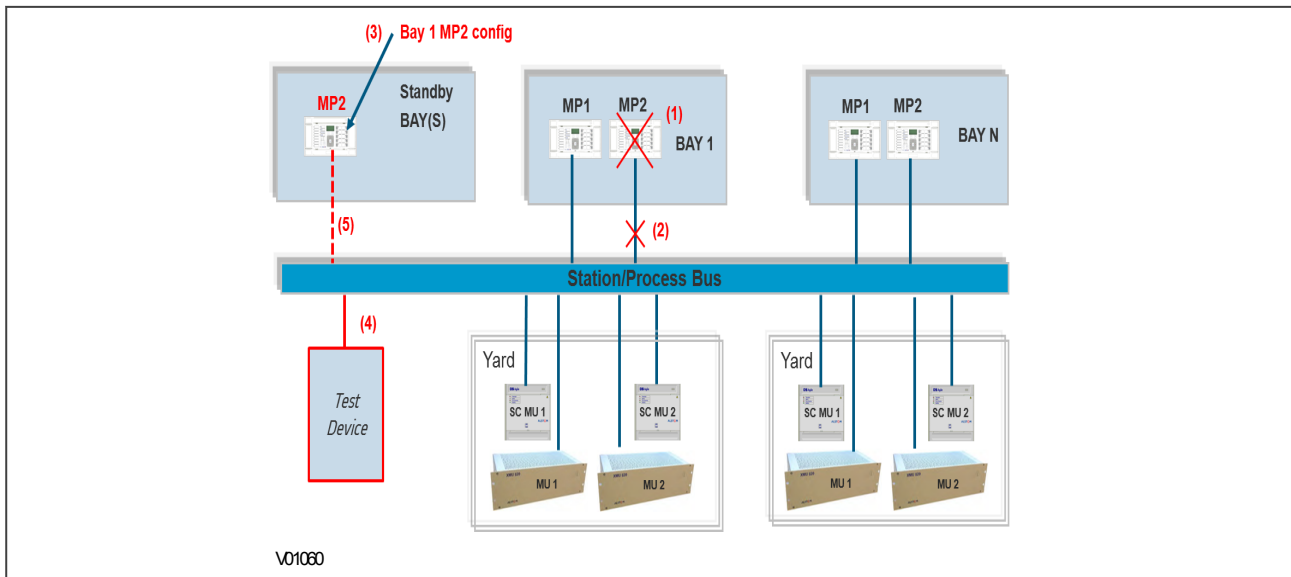


Figure 175: Standby IED Activation Process

The following sequence would occur under this scenario:

1. During the installation phase, a spare standby IED is installed in the substation. This can remain inactive, until it is needed to replace functions in one of several bays. The device is connected to the process bus, but does not have any subscriptions enabled.
2. If a failure occurs (in this example, bay 1), first isolate the faulty device by disabling its process bus and station bus interfaces. You do this by turning off the attached network interfaces.
3. Retrieve the configuration that the faulty device normally uses, and load this into the standby redundant IED.
4. Place the IED into the "Test Blocked" mode, as defined in IEC 61850-7-4 Edition Two. This allows test signals to be injected into the network, which will check that the configuration is correct. GOOSE signals issued by the device will be flagged as "test" so that subscribing switchgear controllers know not to trip during this testing. In this way the protection can be tested all the way up to the switchgear control merging units without having to operate primary circuit breakers, or by carrying out any secondary injection.
5. Take the standby IED out of "Test-Blocked" mode and activate it so that it now replaces the protection functions that were disabled from the initial device failure.

The standby IED reduces downtime in the case of device failure, as protection functions can be restored quickly before the faulted device is replaced.

8 READ ONLY MODE

With IEC 61850 and Ethernet/Internet communication capabilities, security has become an important issue. For this reason, all relevant Alstom Grid IEDs have been adapted to comply with the latest cyber-security standards.

In addition to this, a facility is provided which allows you to enable or disable the communication interfaces. This feature is available for products using Courier, IEC 60870-5-103, or IEC 61850.

8.1 IEC 60870-5-103 PROTOCOL BLOCKING

If Read-Only Mode is enabled for RP1 or RP2 with IEC 60870-5-103, the following commands are blocked at the interface:

- Write parameters (=change setting) (private ASDUs)
- General Commands (ASDU20), namely:
 - INF16 auto-recloser on/off
 - INF19 LED reset
 - Private INFs (for example: CB open/close, Control Inputs)

The following commands are still allowed:

- Poll Class 1 (Read spontaneous events)
- Poll Class 2 (Read measurands)
- GI sequence (ASDU7 'Start GI', Poll Class 1)
- Transmission of Disturbance Records sequence (ASDU24, ASDU25, Poll Class 1)
- Time Synchronisation (ASDU6)
- General Commands (ASDU20), namely:
 - INF23 activate characteristic 1
 - INF24 activate characteristic 2
 - INF25 activate characteristic 3
 - INF26 activate characteristic 4

Note:

For IEC 60870-5-103, Read Only Mode function is different from the existing Command block feature.

8.2 COURIER PROTOCOL BLOCKING

If Read-Only Mode is enabled for RP1 or RP2 with Courier, the following commands are blocked at the interface:

- Write settings
- All controls, including:Reset Indication (Trip LED)
 - Operate Control Inputs
 - CB operations
 - Auto-reclose operations
 - Reset demands
 - Clear event/fault/maintenance/disturbance records
 - Test LEDs & contacts

The following commands are still allowed:

- Read settings, statuses, measurands
- Read records (event, fault, disturbance)
- Time Synchronisation
- Change active setting group

8.3 IEC 61850 PROTOCOL BLOCKING

If Read-Only Mode is enabled for the Ethernet interfacing with IEC 61850, the following commands are blocked at the interface:

- All controls, including:
 - Enable/disable protection
 - Operate Control Inputs
 - CB operations (Close/Trip, Lock)
 - Reset LEDs

The following commands are still allowed:

- Read statuses, measurands
- Generate reports
- Extract disturbance records
- Time synchronisation
- Change active setting group

8.4 READ-ONLY SETTINGS

The following settings are available for enabling or disabling Read Only Mode.

- RP1 Read Only
- RP2 Read Only (only for products that have RP2)
- NIC Read Only (where Ethernet is available)

8.5 READ-ONLY DDB SIGNALS

The remote read only mode is also available in the PSL using three dedicated DDB signals:

- RP1 Read Only
- RP2 Read Only (only for products that have RP2)
- NIC Read Only (where Ethernet is available)

Using the PSL, these signals can be activated by opto-inputs, Control Inputs and function keys if required.

9 TIME SYNCHRONISATION

In modern protection schemes it is necessary to synchronise the IED's real time clock so that events from different devices can be time stamped and placed in chronological order. This is achieved in various ways depending on the chosen options and communication protocols.

- Using the IRIG-B input (if fitted)
- Using the SNTP time protocol (for Ethernet IEC 61850 versions + DNP3 OE)
- By using the time synchronisation functionality inherent in the data protocols

9.1 DEMODULATED IRIG-B

IRIG stands for Inter Range Instrumentation Group, which is a standards body responsible for standardising different time code formats. There are several different formats starting with IRIG-A, followed by IRIG-B and so on. The letter after the "IRIG" specifies the resolution of the time signal in pulses per second (PPS). IRIG-B, the one which we use has a resolution of 100 PPS. IRIG-B is used when accurate time-stamping is required.

The following diagram shows a typical GPS time-synchronised substation application. The satellite RF signal is picked up by a satellite dish and passed on to receiver. The receiver receives the signal and converts it into time signal suitable for the substation network. IEDs in the substation use this signal to govern their internal clocks and event recorders.

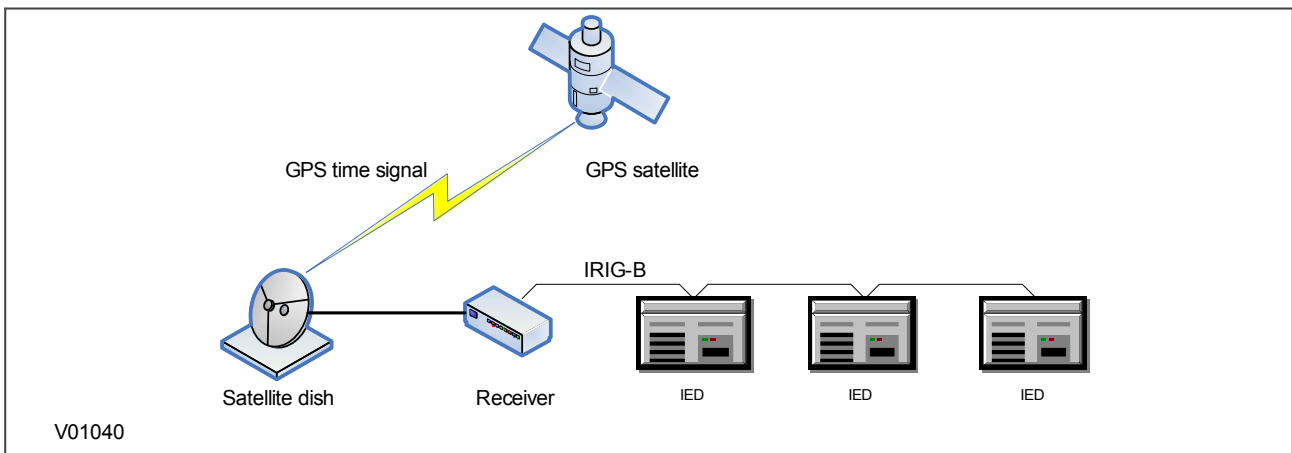


Figure 176: GPS Satellite timing signal

The IRIG-B time code signal is a sequence of one second time frames. Each frame is split up into ten 100 mS slots as follows:

- Time-slot 1: Seconds
- Time-slot 2: Minutes
- Time-slot 3: Hours
- Time-slot 4: Days
- Time-slot 5 and 6: Control functions
- Time-slots 7 to 10: Straight binary time of day

The first four time-slots define the time in BCD (Binary Coded Decimal). Time-slots 5 and 6 are used for control functions, which control deletion commands and allow different data groupings within the synchronisation strings. Time-slots 7-10 define the time in SBS (Straight Binary Second of day).

9.1.1 IRIG-B IMPLEMENTATION

Depending on the chosen hardware options, the product can be equipped with an IRIG-B input for time synchronisation purposes. The IRIG-B interface is implemented either on a dedicated card, or together with other communication functionality such as Ethernet. The IRIG-B connection is presented by a connector is a BNC connector. IRIG-B signals are usually presented as an RF-modulated signal. There are two types of input to our IRIG-B boards: demodulated or modulated. A board that accepts a demodulated input is used where the IRIG-B signal has already been demodulated by another device before being fed to the IED. A board that accepts a modulated input has an on-board demodulator.

To set the device to use IRIG-B, use the setting **IRIG-B Sync** cell in the *DATE AND TIME* column.

The IRIG-B status can be viewed in the **IRIG-B Status** cell in the *DATE AND TIME* column.

9.2 SNTP

SNTP is used to synchronise the clocks of computer systems over packet-switched, variable-latency data networks, such as IP. SNTP can be used as the time synchronisation method for models using IEC 61850 over Ethernet.

The device is synchronised by the main SNTP server. This is achieved by entering the IP address of the SNTP server into the IED using the IEC 61850 Configurator software described in the settings application software manual. A second server is also configured with a different IP address for backup purposes.

This function issues an alarm when there is a loss of time synchronisation on the SNTP server. This could be because there is no response or no valid clock signal.

The HMI menu does not contain any configurable settings relating to SNTP, as the only way to configure it is using the IEC 61850 Configurator. However it is possible to view some parameters in the *COMMUNICATIONS* column under the sub-heading SNTP parameters. Here you can view the SNTP server addresses and the SNTP poll rate in the cells **SNTP Server 1**, **SNTP Server 2** and **SNTP Poll rate** respectively.

The SNTP time synchronisation status is displayed in the **SNTP Status** cell in the *DATE AND TIME* column.

9.2.1 LOSS OF SNTP SERVER SIGNAL ALARM

This function issues an alarm when there is a loss of time synchronization on the SNTP server. It is issued when the SNTP sever has not detected a valid time synchronisation response within its 5 second window. This is because there is no response or no valid clock. The alarm is mapped to IEC 61850.

9.3 IEEE 1588 PRECISION TIME PROTOCOL

The MiCOM P40 modular products support the IEEE C37.238 (Power Profile) of IEEE 1588 Precision Time Protocol (PTP) as a slave-only clock. This can be used to replace or supplement IRIG-B and SNTP time synchronisation so that the IED can be synchronised using Ethernet messages from the substation LAN without any additional physical connections being required.

A dedicated DDB signal (**PTP Failure**) his provided to indicate failure of failure of PTP.

9.3.1 ACCURACY AND DELAY CALCULATION

A time synchronisation accuracy of within 5 ms is possible. Both peer-to-peer or end-to-end mode delay measurement can be used.

In peer-to-peer mode, delays are measured between each link in the network and are compensated for. This provides greater accuracy, but requires that every device between the Grand Master and Slaves supports the peer-to-peer delay measurement.

In end-to-end mode, delays are only measured between each Grand Master and Slave. The advantage of this mode is that the requirements for the switches on the network are lower; they do not need to

independently calculate delays. The main disadvantage is that more inaccuracy is introduced, because the method assumes that forward and reverse delays are always the same, which may not always be correct.

When using end-to-end mode, the IED can be connected in a ring or line topology using RSTP or Self Healing Protocol without any additional Transparent Clocks. But because the IED is a slave-only device, additional inaccuracy is introduced. The additional error will be less than 1ms for a network of eight devices.

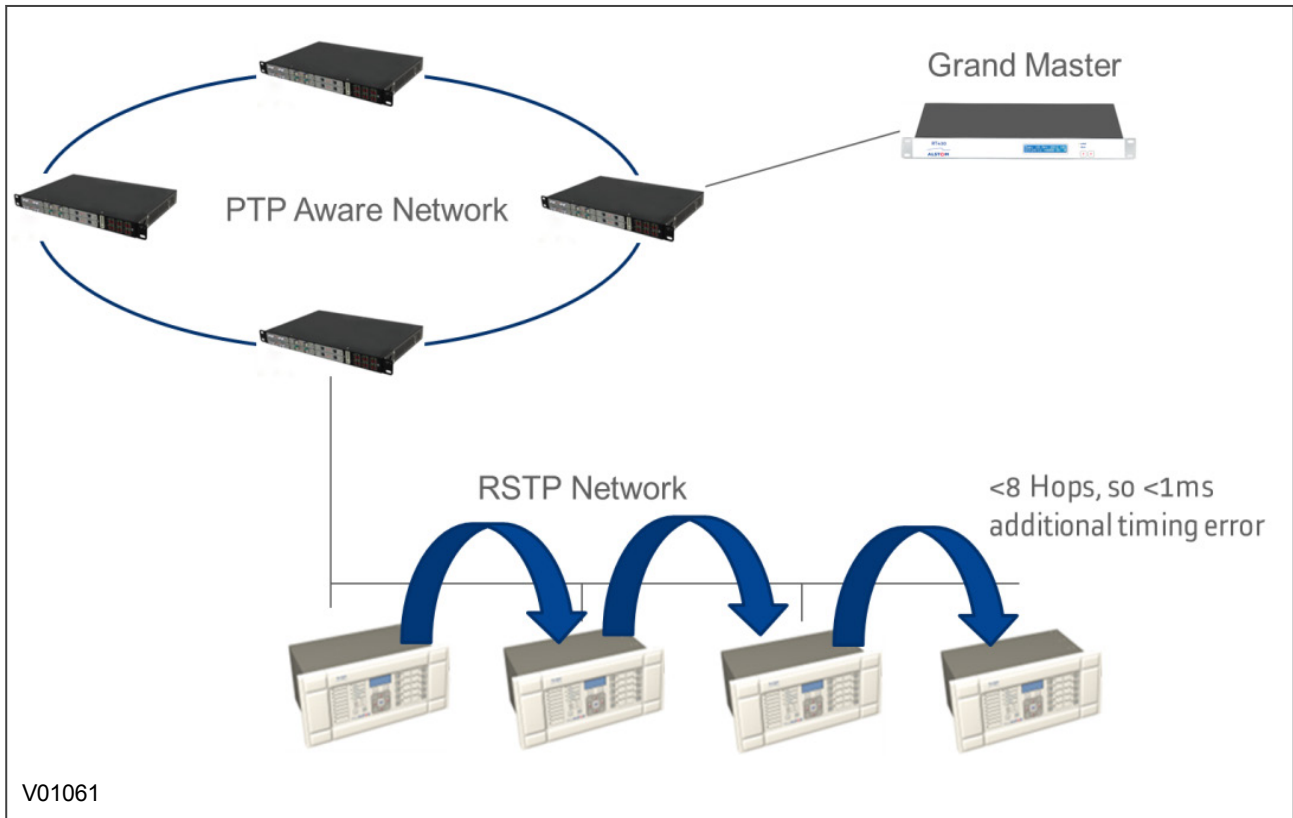


Figure 177: Timing error using ring or line topology

9.3.2 PTP DOMAINS

PTP traffic can be segregated into different domains using Boundary Clocks. These allow different PTP clocks to share the same network while maintaining independent synchronisation within each grouped set.

9.4 TIME SYNCHRONISATION USING THE COMMUNICATION PROTOCOLS

All communication protocols have in-built time synchronisation mechanisms. If an external time synchronisation mechanism such as IRIG-B, SNTP, or IEEE 1588 PTP is not used to synchronise the devices, the time synchronisation mechanism within the relevant serial protocol is used. The real time is usually defined in the master station and communicated to the relevant IEDs via one of the rear serial ports using the chosen protocol. It is also possible to define the time locally using settings in the *DATE AND TIME* column.

The time synchronisation for each protocol is described in the relevant protocol description section.

CYBER-SECURITY

CHAPTER 15

1 OVERVIEW

In the past, substation networks were traditionally isolated and the protocols and data formats used to transfer information between devices were often proprietary.

For these reasons, the substation environment was very secure against cyber-attacks. The terms used for this inherent type of security are:

- Security by isolation (if the substation network is not connected to the outside world, it cannot be accessed from the outside world).
- Security by obscurity (if the formats and protocols are proprietary, it is very difficult to interpret them).

The increasing sophistication of protection schemes, coupled with the advancement of technology and the desire for vendor interoperability, has resulted in standardisation of networks and data interchange within substations. Today, devices within substations use standardised protocols for communication. Furthermore, substations can be interconnected with open networks, such as the internet or corporate-wide networks, which use standardised protocols for communication. This introduces a major security risk making the grid vulnerable to cyber-attacks, which could in turn lead to major electrical outages.

Clearly, there is now a need to secure communication and equipment within substation environments. This chapter describes the security measures that have been put in place for our range of Intelligent Electronic Devices (IEDs).

Note:

Cyber-security compatible devices do not enforce NERC compliance, they merely facilitate it. It is the responsibility of the user to ensure that compliance is adhered to as and when necessary.

This chapter contains the following sections:

Overview	397
The Need for Cyber-Security	398
Standards	399
Cyber-Security Implementation	403

2 THE NEED FOR CYBER-SECURITY

Cyber-security provides protection against unauthorised disclosure, transfer, modification, or destruction of information or information systems, whether accidental or intentional. To achieve this, there are several security requirements:

- Confidentiality (preventing unauthorised access to information)
- Integrity (preventing unauthorised modification)
- Availability / Authentication (preventing the denial of service and assuring authorised access to information)
- Non-repudiation (preventing the denial of an action that took place)
- Traceability / Detection (monitoring and logging of activity to detect intrusion and analyse incidents)

The threats to cyber-security may be unintentional (e.g. natural disasters, human error), or intentional (e.g. cyber-attacks by hackers).

Good cyber-security can be achieved with a range of measures, such as closing down vulnerability loopholes, implementing adequate security processes and procedures and providing technology to help achieve this.

Examples of vulnerabilities are:

- Indiscretions by personnel (users keep passwords on their computer)
- Bad practice (users do not change default passwords, or everyone uses the same password to access all substation equipment)
- Bypassing of controls (users turn off security measures)
- Inadequate technology (substation is not firewalled)

Examples of availability issues are:

- Equipment overload, resulting in reduced or no performance
- Expiry of a certificate preventing access to equipment

To help tackle these issues, standards organisations have produced various standards. Compliance with these standards significantly reduces the threats associated with lack of cyber-security.

3 STANDARDS

There are several standards, which apply to substation cyber-security. The standards currently applicable to Alstom Grid IEDs are NERC and IEEE1686.

Standard	Country	Description
NERC CIP (North American Electric Reliability Corporation)	USA	Framework for the protection of the grid critical Cyber Assets
BDEW (German Association of Energy and Water Industries)	Germany	Requirements for Secure Control and Telecommunication Systems
ANSI ISA 99	USA	ICS oriented then Relevant for EPU completing existing standard and identifying new topics such as patch management
IEEE 1686	International	International Standard for substation IED cyber-security capabilities
IEC 62351	International	Power system data and Comm. protocol
ISO/IEC 27002	International	Framework for the protection of the grid critical Cyber Assets
NIST SP800-53 (National Institute of Standards and Technology)	USA	Complete framework for SCADA SP800-82and ICS cyber-security
CPNI Guidelines (Centre for the Protection of National Infrastructure)	UK	Clear and valuable good practices for Process Control and SCADA security

3.1 NERC COMPLIANCE

The North American Electric Reliability Corporation (NERC) created a set of standards for the protection of critical infrastructure. These are known as the CIP standards (Critical Infrastructure Protection). These were introduced to ensure the protection of 'Critical Cyber Assets', which control or have an influence on the reliability of North America's electricity generation and distribution systems.

These standards have been compulsory in the USA for several years now. Compliance auditing started in June 2007, and utilities face extremely heavy fines for non-compliance.

NERC CIP standards

CIP standard	Description
CIP-002-1 Critical Cyber Assets	Define and document the Critical Assets and the Critical Cyber Assets
CIP-003-1 Security Management Controls	Define and document the Security Management Controls required to protect the Critical Cyber Assets
CIP-004-1 Personnel and Training	Define and Document Personnel handling and training required protecting Critical Cyber Assets
CIP-005-1 Electronic Security	Define and document logical security perimeters where Critical Cyber Assets reside. Define and document measures to control access points and monitor electronic access
CIP-006-1 Physical Security	Define and document Physical Security Perimeters within which Critical Cyber Assets reside
CIP-007-1 Systems Security Management	Define and document system test procedures, account and password management, security patch management, system vulnerability, system logging, change control and configuration required for all Critical Cyber Assets
CIP-008-1 Incident Reporting and Response Planning	Define and document procedures necessary when Cyber-security Incidents relating to Critical Cyber Assets are identified
CIP-009-1 Recovery Plans	Define and document Recovery plans for Critical Cyber Assets

3.1.1 CIP 002

CIP 002 concerns itself with the identification of:

- Critical assets, such as overhead lines and transformers
- Critical cyber assets, such as IEDs that use routable protocols to communicate outside or inside the Electronic Security Perimeter; or are accessible by dial-up

Power utility responsibilities:	Alstom Grid's contribution:
Create the list of the assets	We can help the power utilities to create this asset register automatically. We can provide audits to list the Cyber assets

3.1.2 CIP 003

CIP 003 requires the implementation of a cyber-security policy, with associated documentation, which demonstrates the management's commitment and ability to secure its Critical Cyber Assets.

The standard also requires change control practices whereby all entity or vendor-related changes to hardware and software components are documented and maintained.

Power utility responsibilities:	Alstom Grid's contribution:
To create a Cyber-security Policy	We can help the power utilities to have access control to its critical assets by providing centralized Access control. We can help the customer with its change control by providing a section in the documentation where it describes changes affecting the hardware and software.

3.1.3 CIP 004

CIP 004 requires that personnel with authorized cyber access or authorized physical access to Critical Cyber Assets, (including contractors and service vendors), have an appropriate level of training.

Power utility responsibilities:	Alstom Grid's contribution:
To provide appropriate training of its personnel	We can provide cyber-security training

3.1.4 CIP 005

CIP 005 requires the establishment of an Electronic Security Perimeter (ESP), which provides:

- The disabling of ports and services that are not required
- Permanent monitoring and access to logs (24x7x365)
- Vulnerability Assessments (yearly at a minimum)
- Documentation of Network Changes

Power utility responsibilities:	Alstom Grid's contribution:
To monitor access to the ESP To perform the vulnerability assessments To document network changes	To disable all ports not used in the IED To monitor and record all access to the IED

3.1.5 CIP 006

CIP 006 states that Physical Security controls, providing perimeter monitoring and logging along with robust access controls, must be implemented and documented. All cyber assets used for Physical Security are considered critical and should be treated as such:

Power utility responsibilities:	Alstom Grid's contribution:
Provide physical security controls and perimeter monitoring. Ensure that people who have access to critical cyber assets don't have criminal records.	Alstom Grid cannot provide additional help with this aspect.

3.1.6 CIP 007

CIP 007 covers the following points:

- Test procedures
- Ports and services
- Security patch management
- Antivirus
- Account management
- Monitoring
- An annual vulnerability assessment should be performed

Power utility responsibilities:	Alstom Grid's contribution:
To provide an incident response team and have appropriate processes in place	Test procedures, we can provide advice and help on testing. Ports and services, our devices can disable unused ports and services Security patch management, we can provide assistance Antivirus, we can provide advise and assistance Account management, we can provide advice and assistance Monitoring, our equipment monitors and logs access

3.1.7 CIP 008

CIP 008 requires that an incident response plan be developed, including the definition of an incident response team, their responsibilities and associated procedures.

Power utility responsibilities:	Alstom Grid's contribution:
To provide an incident response team and have appropriate processes in place.	Alstom Grid cannot provide additional help with this aspect.

3.1.8 CIP 009

CIP 009 states that a disaster recovery plan should be created and tested with annual drills.

Power utility responsibilities:	Alstom Grid's contribution:
To implement a recovery plan	To provide guidelines on recovery plans and backup/restore documentation

3.2 IEEE 1686-2007

IEEE 1686-2007 is an IEEE Standard for substation IEDs' cyber-security capabilities. It proposes practical and achievable mechanisms to achieve secure operations.

The following features described in this standard apply:

- Passwords are 8 characters long and can contain upper-case, lower-case, numeric and special characters.
- Passwords are never displayed or transmitted to a user.

- IED functions and features are assigned to different password levels. The assignment is fixed.
- The audit trail is recorded, listing events in the order in which they occur, held in a circular buffer.
- Records contain all defined fields from the standard and record all defined function event types where the function is supported.
- No password defeat mechanism exists. Instead a secure recovery password scheme is implemented.
- Unused ports (physical and logical) may be disabled.

4 CYBER-SECURITY IMPLEMENTATION

The Alstom Grid IEDs have always been and will continue to be equipped with state-of-the-art security measures. Due to the ever-evolving communication technology and new threats to security, this requirement is not static. Hardware and software security measures are continuously being developed and implemented to mitigate the associated threats and risks.

This section describes the current implementation of cyber-security. This is valid for the release of platform software to which this manual pertains. This current cyber-security implementation is known as Cyber-security Phase 1.

At the IED level, these cyber-security measures have been implemented:


- NERC-compliant default display
- Four-level access
- Enhanced password security
- Password recovery procedure
- Disabling of unused physical and logical ports
- Inactivity timer
- Security events management

External to the IEDs, the following cyber-security measures have been implemented:

- Antivirus
- Security patch management


4.1 NERC-COMPLIANT DISPLAY

For the device to be NERC-compliant, it must provide the option for a NERC-compliant default display. The default display that is implemented in our cyber-security concept contains a warning that the IED can be accessed by authorised users. You can change this if required with the **User Banner** setting in the *SECURITY CONFIG* column.

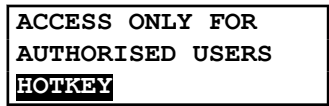

ACCESS ONLY FOR
AUTHORISED USERS
HOTKEY

If you try to change the default display from the NERC-compliant one, a further warning is displayed:

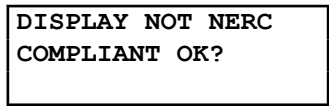

DISPLAY NOT NERC
COMPLIANT OK?

The default display navigation map shows how NERC-compliance is achieved with the product's default display concept.

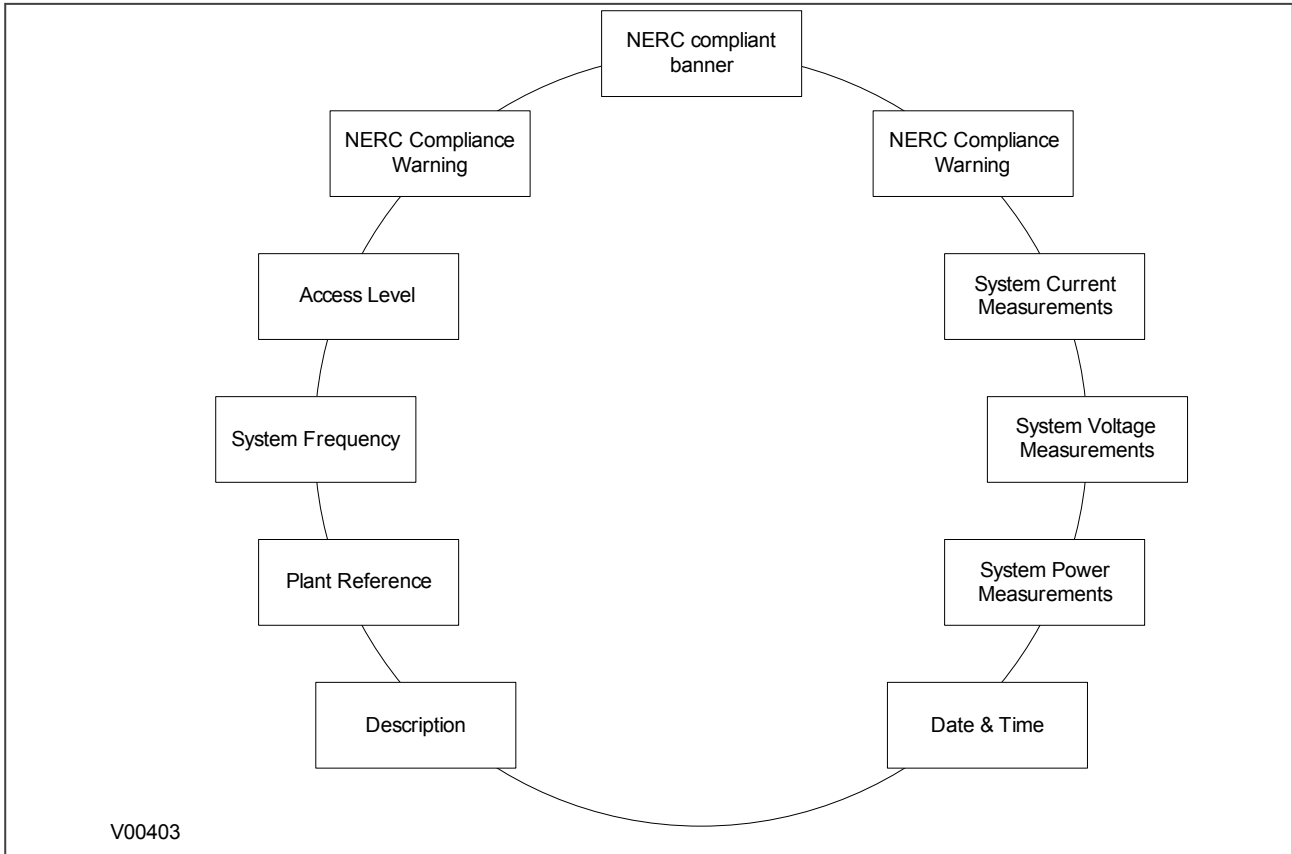


Figure 178: Default display navigation

4.2 FOUR-LEVEL ACCESS

The menu structure contains four levels of access, three of which are password protected.

Password levels

Level	Meaning	Read Operation	Write Operation
0	Read Some Write Minimal	SYSTEM DATA column: Description Plant Reference Model Number Serial Number S/W Ref. Access Level Security Feature SECURITY CONFIG column: User Banner Attempts Remain Blk Time Remain Fallback PW level Security Code (UI only)	Password Entry LCD Contrast (UI only)

Level	Meaning	Read Operation	Write Operation
1	Read All Write Few	All data and settings are readable. Poll Measurements	All items writeable at level 0. Level 1 Password setting Extract Disturbance Record Select Event, Main and Fault (upload) Extract Events (e.g. via MiCOM S1 Studio)
2	Read All Write Some	All data and settings are readable. Poll Measurements	All items writeable at level 1. Setting Cells that change visibility (Visible/Invisible). Setting Values (Primary/Secondary) selector Commands: Reset Indication Reset Demand Reset Statistics Reset CB Data / counters Level 2 Password setting
3	Read All Write All	All data and settings are readable. Poll Measurements	All items writeable at level 2. Change all Setting cells Operations: Extract and download Setting file. Extract and download PSL Extract and download MCL61850 (IEC61850 CONFIG) Auto-extraction of Disturbance Recorder Courier/Modbus Accept Event (auto event extraction, e.g. via A2R) Commands: Change Active Group setting Close / Open CB Change Comms device address. Set Date & Time Switch MCL banks / Switch Conf. Bank in UI (IEC61850 CONFIG) Enable / Disable Device ports (in SECURITY CONFIG column) Level 3 password setting

4.2.1 BLANK PASSWORDS

A blank password is effectively a zero-length password. Through the front panel it is entered by confirming the password entry without actually entering any password characters. Through a communications port the Courier and Modbus protocols each have a means of writing a blank password to the IED. A blank password disables the need for a password at the level that this password is applied.

Blank passwords have a slightly different validation procedure. If a blank password is entered through the front panel, the following text is displayed, after which the procedure is the same as already described:

**BLANK PASSWORD
ENTERED CONFIRM**

Blank passwords cannot be configured if the lower level password is not blank.

Blank passwords affect the fall back level after inactivity timeout or logout.

The 'fallback level' is the password level adopted by the IED after an inactivity timeout, or after the user logs out. This will be either the level of the highest-level password that is blank, or level 0 if no passwords are blank.

4.2.2 PASSWORD RULES

- Default passwords are blank for Level 1 and are AAAA for Levels 2 and 3
- Passwords may be any length between 0 and 8 characters long
- Passwords may or may not be NERC compliant
- Passwords may contain any ASCII character in the range ASCII code 33 (21 Hex) to ASCII code 122 (7A Hex) inclusive
- Only one password is required for all the IED interfaces

4.2.3 ACCESS LEVEL DDBS

The 'Access level' cell is in the 'System data' column (address 00D0). Also the current level of access for each interface is available for use in the Programming Scheme Logic (PSL) by mapping to these Digital Data Bus (DDB) signals:

- **HMI Access Lvl 1**
- **HMI Access Lvl 2**
- **FPort AccessLvl1**
- **FPort AccessLvl2**
- **RPrt1 AccessLvl1**
- **RPrt1 AccessLvl2**
- **RPrt2 AccessLvl1**
- **RPrt2 AccessLvl2**

Each pair of DDB signals indicates the access level as follows:

- Level 1 off, Level 2 off = 0
- Level 1 on, Level 2 off = 1
- Level 1 off, Level 2 on = 2
- Level 1 on, Level 2 on = 3

Key:

HMI = Human Machine Interface

FPort = Front Port

RPrt = Rear Port

Lvl = Level

4.3 ENHANCED PASSWORD SECURITY

Cyber-security requires strong passwords and validation for NERC compliance.

4.3.1 PASSWORD STRENGTHENING


NERC compliant passwords have the following requirements:

- At least one upper-case alpha character
- At least one lower-case alpha character
- At least one numeric character
- At least one special character (%,\$...)
- At least six characters long

4.3.2 PASSWORD VALIDATION

The IED checks for NERC compliance. If the password is entered through the front panel, this is briefly displayed on the LCD.


If the entered password is NERC compliant, the following text is displayed.

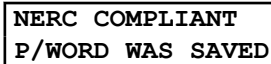

NERC COMPLIANT
P/WORD WAS SAVED


If the password entered is not NERC-compliant, the user is required to actively confirm this, in which case the non-compliance is logged.

If the entered password is not NERC compliant, the following text is displayed:

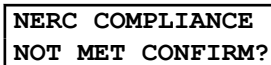


NERC COMPLIANCE
NOT MET CONFIRM?

On confirmation, the non-compliant password is stored and the following acknowledgement message is displayed for 2 seconds.

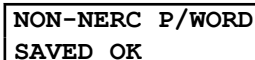

NON-NERC P/WORD
SAVED OK

If the action is cancelled, the password is rejected and the following message is displayed for 2 seconds.



NON-NERC P/WORD
NOT SAVE

If the password is entered through a communications port using Courier or Modbus protocols, the device will store the password, irrespective of whether it is NERC-compliant or not. It then uses appropriate response codes to inform the client of the NERC-compliance status. You can then choose to enter a new NERC-compliant password or accept the non-NERC compliant password just entered.

4.3.3 PASSWORD BLOCKING

You are locked out temporarily, after a defined number of failed password entry attempts. Each invalid password entry attempt decrements the 'Attempts Remain' data cell by 1. When the maximum number of attempts has been reached, access is blocked. If the attempts timer expires, or the correct password is entered *before* the 'attempt count' reaches the maximum number, then the 'attempts count' is reset to 0.

An attempt is only counted if the attempted password uses only characters in the valid range, but the attempted password is not correct (does not match the corresponding password in the IED). Any attempt where one or more characters of the attempted password are not in the valid range will not be counted.

Once the password entry is blocked, a 'blocking timer' is started. Attempts to access the interface while the 'blocking timer' is running results in an error message, irrespective of whether the correct password is entered or not. Once the 'blocking timer' has expired, access to the interface is unblocked and the attempts counter is reset to zero.

If you try to enter the password while the interface is blocked, the following message is displayed for 2 seconds.

NOT ACCEPTED
ENTRY IS BLOCKED

A similar response occurs if you try to enter the password through a communications port.

The parameters can then be configured using the **Attempts Count**, **Attempts Timer** and **Blocking Timer** settings in the *SYSTEM CONFIG* column.

Password blocking configuration

Setting	Cell col row	Units	Default Setting	Available Setting
Attempts Limit	25 02		3	0 to 3 step 1
Attempts Timer	25 03	Minutes	2	1 to 3 step 1
Blocking Timer	25 04	Minutes	5	1 to 30 step 1

4.4 PASSWORD RECOVERY

If you mislay a device's password, they can be recovered. To obtain the recovery password you must contact the Contact Centre and supply the Serial Number and its Security Code. The Contact Centre will use these items to generate a Recovery Password.

The security code is a 16-character string of upper case characters. It is a read-only parameter. The device generates its own security code randomly. A new code is generated under the following conditions:

- On power up
- Whenever settings are set back to default
- On expiry of validity timer (see below)
- When the recovery password is entered

As soon as the security code is displayed on the LCD, a validity timer is started. This validity timer is set to 72 hours and is not configurable. This provides enough time for the contact centre to manually generate and send a recovery password. The Service Level Agreement (SLA) for recovery password generation is one working day, so 72 hours is sufficient time, even allowing for closure of the contact centre over weekends and bank holidays.

To prevent accidental reading of the IED security code, the cell will initially display a warning message:

PRESS ENTER TO
READ SEC. CODE

The security code is displayed on confirmation. The validity timer is then started. The security code can only be read from the front panel.

4.4.1 PASSWORD RECOVERY

The recovery password is intended for recovery only. It is not a replacement password that can be used continually. It can only be used once – for password recovery.

Entry of the recovery password causes the IED to reset all passwords back to default. This is all it is designed to do. After the passwords have been set back to default, it is up to the user to enter new

passwords. Each password should be appropriate for its intended function, ensuring NERC compliance, if required.

On this action, the following message is displayed:

```
PASSWORDS HAVE  
BEEN SET TO  
DEFAULT
```

The recovery password can be applied through any interface, local or remote. It will achieve the same result irrespective of which interface it is applied through.

4.4.2 PASSWORD ENCRYPTION

The IED supports encryption for passwords entered remotely. The encryption key can be read from the IED through a specific cell available only through communication interfaces, not the front panel. Each time the key is read the IED generates a new key that is valid only for the next password encryption write. Once used, the key is invalidated and a new key must be read for the next encrypted password write. The encryption mechanism is otherwise transparent to the user.

4.5 DISABLING PHYSICAL PORTS

It is possible to disable unused physical ports. A level 3 password is needed to perform this action.

To prevent accidental disabling of a port, a warning message is displayed according to whichever port is required to be disabled. For example if rear port 1 is to be disabled, the following message appears:

```
REAR PORT 1 TO BE  
DISABLED . CONFIRM
```

The following ports can be disabled, depending on the model.

- Front port (**Front Port** setting)
- Rear port 1 (**Rear Port 1** setting)
- Rear port 2 (**Rear Port 2** setting)
- Ethernet port (**Ethernet** setting)

Note:

It is not possible to disable a port from which the disabling port command originates.

Note:

We do not generally advise disabling the physical Ethernet port.

4.6 DISABLING LOGICAL PORTS

It is possible to disable unused logical ports. A level 3 password is needed to perform this action.

Note:

The port disabling setting cells are not provided in the settings file. It is only possible to do this using the HMI front panel.

The following protocols can be disabled:

- IEC 61850 (**IEC61850** setting)
- DNP3 Over Ethernet (**DNP3 OE** setting)
- Courier Tunneling (**Courier Tunnel** setting)

Note:

If any of these protocols are enabled or disabled, the Ethernet card will reboot.

4.7 SECURITY EVENTS MANAGEMENT

To implement NERC-compliant cyber-security, a range of Event records need to be generated. These log security issues such as the entry of a non-NERC-compliant password, or the selection of a non-NERC-compliant default display.

Security event values

Event Value	Display
PASSWORD LEVEL UNLOCKED	USER LOGGED IN ON {int} LEVEL {n}
PASSWORD LEVEL RESET	USER LOGGED OUT ON {int} LEVEL {n}
PASSWORD SET BLANK	P/WORD SET BLANK BY {int} LEVEL {p}
PASSWORD SET NON-COMPLIANT	P/WORD NOT-NERC BY {int} LEVEL {p}
PASSWORD MODIFIED	PASSWORD CHANGED BY {int} LEVEL {p}
PASSWORD ENTRY BLOCKED	PASSWORD BLOCKED ON {int}
PASSWORD ENTRY UNBLOCKED	P/WORD UNBLOCKED ON {int}
INVALID PASSWORD ENTERED	INV P/W ENTERED ON <int}
PASSWORD EXPIRED	P/WORD EXPIRED ON {int}
PASSWORD ENTERED WHILE BLOCKED	P/W ENT WHEN BLK ON {int}
RECOVERY PASSWORD ENTERED	RCVY P/W ENTERED ON {int}
IED SECURITY CODE READ	IED SEC CODE RD ON {int}
IED SECURITY CODE TIMER EXPIRED	IED SEC CODE EXP -
PORT DISABLED	PORT DISABLED BY {int} PORT {prt}
PORT ENABLED	PORT ENABLED BY {int} PORT {prt}
DEF. DISPLAY NOT NERC COMPLIANT	DEF DSP NOT-NERC
PSL SETTINGS DOWNLOADED	PSL STNG D/LOAD BY {int} GROUP {grp}

Event Value	Display
DNP SETTINGS DOWNLOADED	DNP STNG D/LOAD BY {int}
TRACE DATA DOWNLOADED	TRACE DAT D/LOAD BY {int}
IEC61850 CONFIG DOWNLOADED	IED CONFG D/LOAD BY {int}
USER CURVES DOWNLOADED	USER CRV D/LOAD BY {int} GROUP {crv}
PSL CONFIG DOWNLOADED	PSL CONFG D/LOAD BY {int} GROUP {grp}
SETTINGS DOWNLOADED	SETTINGS D/LOAD BY {int} GROUP {grp}
PSL SETTINGS UPLOADED	PSL STNG UPLOAD BY {int} GROUP {grp}
DNP SETTINGS UPLOADED	DNP STNG UPLOAD BY {int}
TRACE DATA UPLOADED	TRACE DAT UPLOAD BY {int}
IEC61850 CONFIG UPLOADED	IED CONFG UPLOAD BY {int}
USER CURVES UPLOADED	USER CRV UPLOAD BY {int} GROUP {crv}
PSL CONFIG UPLOADED	PSL CONFG UPLOAD BY {int} GROUP {grp}
SETTINGS UPLOADED	SETTINGS UPLOAD BY {int} GROUP {grp}
EVENTS HAVE BEEN EXTRACTED	EVENTS EXTRACTED BY {int} {nov} EVNTS
ACTIVE GROUP CHANGED	ACTIVE GRP CHNGE BY {int} GROUP {grp}
CS SETTINGS CHANGED	C & S CHANGED BY {int}
DR SETTINGS CHANGED	DR CHANGED BY {int}
SETTING GROUP CHANGED	SETTINGS CHANGED BY {int} GROUP {grp}
POWER ON	POWER ON -
SOFTWARE_DOWNLOADED	S/W DOWNLOADED -

where:

- int is the interface definition (UI, FP, RP1, RP2, TNL, TCP)
- prt is the port ID (FP, RP1, RP2, TNL, DNP3, IEC, ETHR)
- grp is the group number (1, 2, 3, 4)
- crv is the Curve group number (1, 2, 3, 4)

- n is the new access level (0, 1, 2, 3)
- p is the password level (1, 2, 3)
- nov is the number of events (1 – nnn)

Each new event has an incremented unique number, therefore missing events appear as 'gap' in the sequence. The unique identifier forms part of the event record that is read or uploaded from the IED.

Note:

It is no longer possible to clear Event, Fault, Maintenance, and Disturbance Records.

4.8 LOGGING OUT

If you have been configuring the IED, you should 'log out'. Do this by going up to the top of the menu tree. When you are at the Column Heading level and you press the Up button, you may be prompted to log out with the following display:

```
DO YOU WANT TO  
LOG OUT?
```

You will only be asked this question if your password level is higher than the fallback level.

If you confirm, the following message is displayed for 2 seconds:

```
LOGGED OUT  
Access Level #
```

Where # is the current fallback level.

If you decide not to log out, the following message is displayed for 2 seconds.

```
LOGOUT CANCELLED  
Access Level #
```

where # is the current access level.

INSTALLATION

CHAPTER 16

1 CHAPTER OVERVIEW

This chapter provides information about installing the product.

This chapter contains the following sections:

Chapter Overview	415
Handling the Goods	416
Mounting the Device	417
Cables and Connectors	422
Case Dimensions	427

2 HANDLING THE GOODS

Our products are of robust construction but require careful treatment before installation on site. This section discusses the requirements for receiving and unpacking the goods, as well as associated considerations regarding product care and personal safety.



Caution:
Before lifting or moving the equipment you should be familiar with the Safety Information chapter of this manual.

2.1 RECEIPT OF THE GOODS

On receipt, ensure the correct product has been delivered. Unpack the product immediately to ensure there has been no external damage in transit. If the product has been damaged, make a claim to the transport contractor and notify us promptly.

For products not intended for immediate installation, repack them in their original delivery packaging.

2.2 UNPACKING THE GOODS

When unpacking and installing the product, take care not to damage any of the parts and make sure that additional components are not accidentally left in the packing or lost. Do not discard any CDROMs or technical documentation. These should accompany the unit to its destination substation and put in a dedicated place.

The site should be well lit to aid inspection, clean, dry and reasonably free from dust and excessive vibration. This particularly applies where installation is being carried out at the same time as construction work.

2.3 STORING THE GOODS

If the unit is not installed immediately, store it in a place free from dust and moisture in its original packaging. Keep any de-humidifier bags included in the packing. The de-humidifier crystals lose their efficiency if the bag is exposed to ambient conditions. Restore the crystals before replacing it in the carton. Ideally regeneration should be carried out in a ventilating, circulating oven at about 115°C. Bags should be placed on flat racks and spaced to allow circulation around them. The time taken for regeneration will depend on the size of the bag. If a ventilating, circulating oven is not available, when using an ordinary oven, open the door on a regular basis to let out the steam given off by the regenerating silica gel.

On subsequent unpacking, make sure that any dust on the carton does not fall inside. Avoid storing in locations of high humidity. In locations of high humidity the packaging may become impregnated with moisture and the de-humidifier crystals will lose their efficiency.

The device can be stored between -25° to +70°C for unlimited periods or between -40°C to + 85°C for up to 96 hours (see technical specifications).

2.4 DISMANTLING THE GOODS

If you need to dismantle the device, always observe standard ESD (Electrostatic Discharge) precautions. The minimum precautions to be followed are as follows:

- Use an antistatic wrist band earthed to a suitable earthing point.
- Avoid touching the electronic components and PCBs.

3 MOUNTING THE DEVICE

The products are dispatched either individually or as part of a panel or rack assembly.

Individual products are normally supplied with an outline diagram showing the dimensions for panel cut-outs and hole centres.

The products are designed so the fixing holes in the mounting flanges are only accessible when the access covers are open.

If you use a P991 or MMLG test block with the product, when viewed from the front, position the test block on the right-hand side of the associated product. This minimises the wiring between the product and test block, and allows the correct test block to be easily identified during commissioning and maintenance tests.

If you need to test the product for correct operation during installation, open the lower access cover, hold the battery in place and pull the red tab to remove the battery isolation strip.

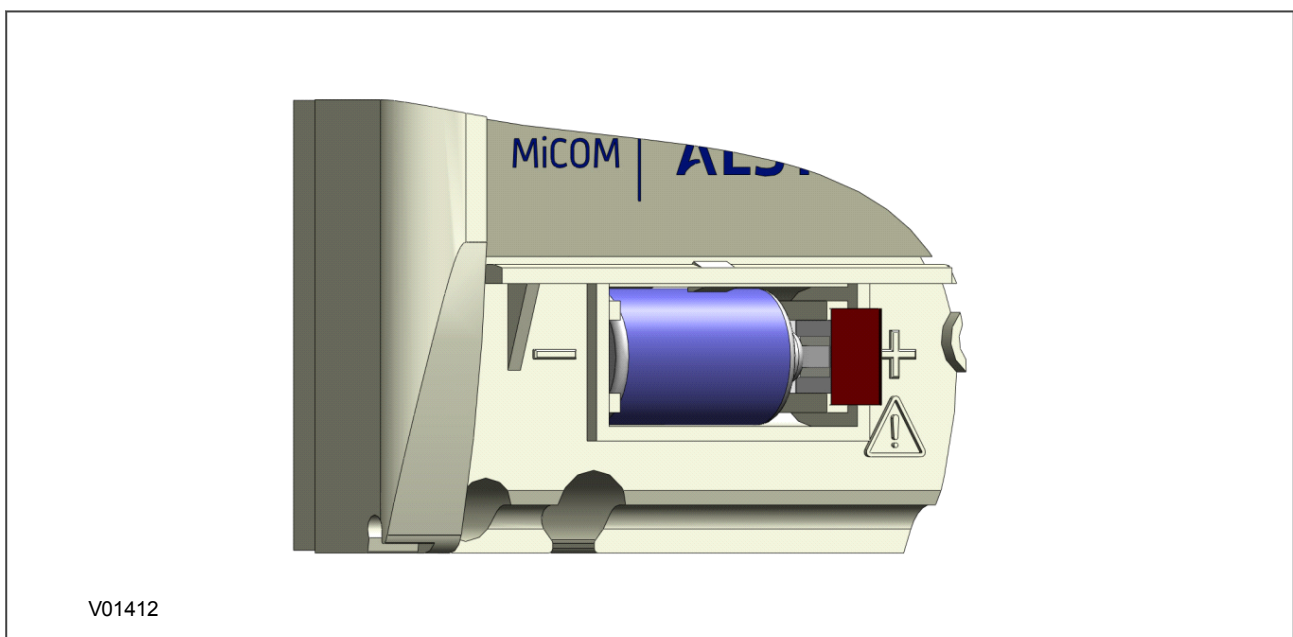


Figure 179: Location of battery isolation strip

3.1 FLUSH PANEL MOUNTING

Panel-mounted devices are flush mounted into panels using M4 SEMS Taptite self-tapping screws with captive 3 mm thick washers (also known as a SEMS unit).



Caution:
Do not use conventional self-tapping screws, because they have larger heads and could damage the faceplate.

Alternatively, you can use tapped holes if the panel has a minimum thickness of 2.5 mm.

For applications where the product needs to be semi-projection or projection mounted, a range of collars are available.

If several products are mounted in a single cut-out in the panel, mechanically group them horizontally or vertically into rigid assemblies before mounting in the panel.



Caution:
Do not fasten products with pop rivets because this makes them difficult to remove if repair becomes necessary.

If the product is mounted on a BS EN60529 IP52 compliant panel, fit a metallic sealing strip between adjoining products (part no GN2044 001) and fit a sealing ring around the complete assembly, according to the following table.

Width	Sealing ring for single tier	Sealing ring for double tier
10TE	GJ9018 002	GJ9018 018
15TE	GJ9018 003	GJ9018 019
20TE	GJ9018 004	GJ9018 020
25TE	GJ9018 005	GJ9018 021
30TE	GJ9018 006	GJ9018 022
35TE	GJ9018 007	GJ9018 023
40TE	GJ9018 008	GJ9018 024
45TE	GJ9018 009	GJ9018 025
50TE	GJ9018 010	GJ9018 026
55TE	GJ9018 011	GJ9018 027
60TE	GJ9018 012	GJ9018 028

Width	Sealing ring for single tier	Sealing ring for double tier
65TE	GJ9018 013	GJ9018 029
70TE	GJ9018 014	GJ9018 030
75TE	GJ9018 015	GJ9018 031
80TE	GJ9018 016	GJ9018 032

3.2 RACK MOUNTING

Panel-mounted variants can also be rack mounted using single-tier rack frames (our part number FX0021 101), as shown in the figure below. These frames are designed with dimensions in accordance with IEC 60297 and are supplied pre-assembled ready to use. On a standard 483 mm (19 inch) rack this enables combinations of case widths up to a total equivalent of size 80TE to be mounted side by side.

The two horizontal rails of the rack frame have holes drilled at approximately 26 mm intervals. Attach the products by their mounting flanges using M4 Taptite self-tapping screws with captive 3 mm thick washers (also known as a SEMS unit).



Caution:
Risk of damage to the front cover molding. Do not use conventional self-tapping screws, including those supplied for mounting MiDOS products because they have slightly larger heads.

Once the tier is complete, the frames are fastened into the racks using mounting angles at each end of the tier.

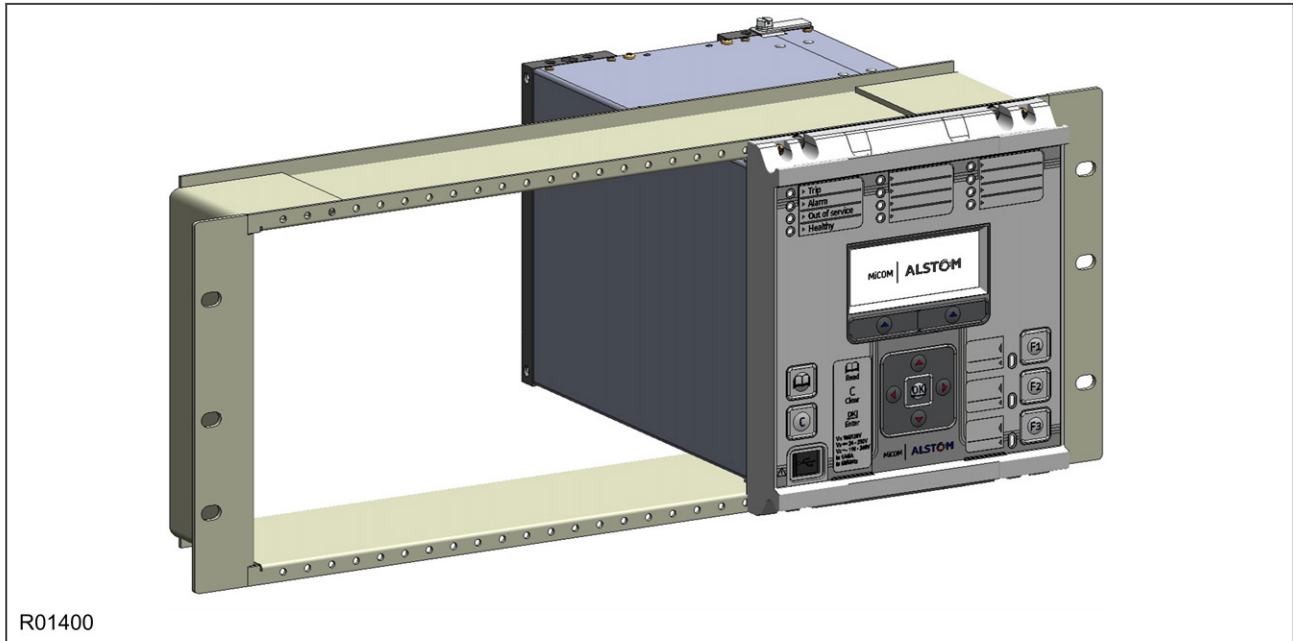


Figure 180: Rack mounting of products

Products can be mechanically grouped into single tier (4U) or multi-tier arrangements using the rack frame. This enables schemes using products from different product ranges to be pre-wired together before mounting.

Use blanking plates to fill any empty spaces. The spaces may be used for installing future products or because the total size is less than 80TE on any tier. Blanking plates can also be used to mount ancillary components. The part numbers are as follows:

Case size summation	Blanking plate part number
5TE	GJ2028 101
10TE	GJ2028 102
15TE	GJ2028 103
20TE	GJ2028 104
25TE	GJ2028 105
30TE	GJ2028 106

Case size summation	Blanking plate part number
35TE	GJ2028 107
40TE	GJ2028 108

4 CABLES AND CONNECTORS

This section describes the type of wiring and connections that should be used when installing the device. For pin-out details please refer to the Hardware Design chapter or the wiring diagrams.



Caution:
Before carrying out any work on the equipment you should be familiar with the Safety Section and the ratings on the equipment's rating label.

4.1 TERMINAL BLOCKS

The device may use one or more of the terminal block types shown in the following diagram. The terminal blocks are fastened to the rear panel with screws.

- Heavy duty (HD) terminal blocks for CT and VT circuits
- Medium duty (MD) terminal blocks for the power supply, relay outputs and rear communications port
- MiDOS terminal blocks for CT and VT circuits
- RTD/CLIO terminal block for connection to analogue transducers

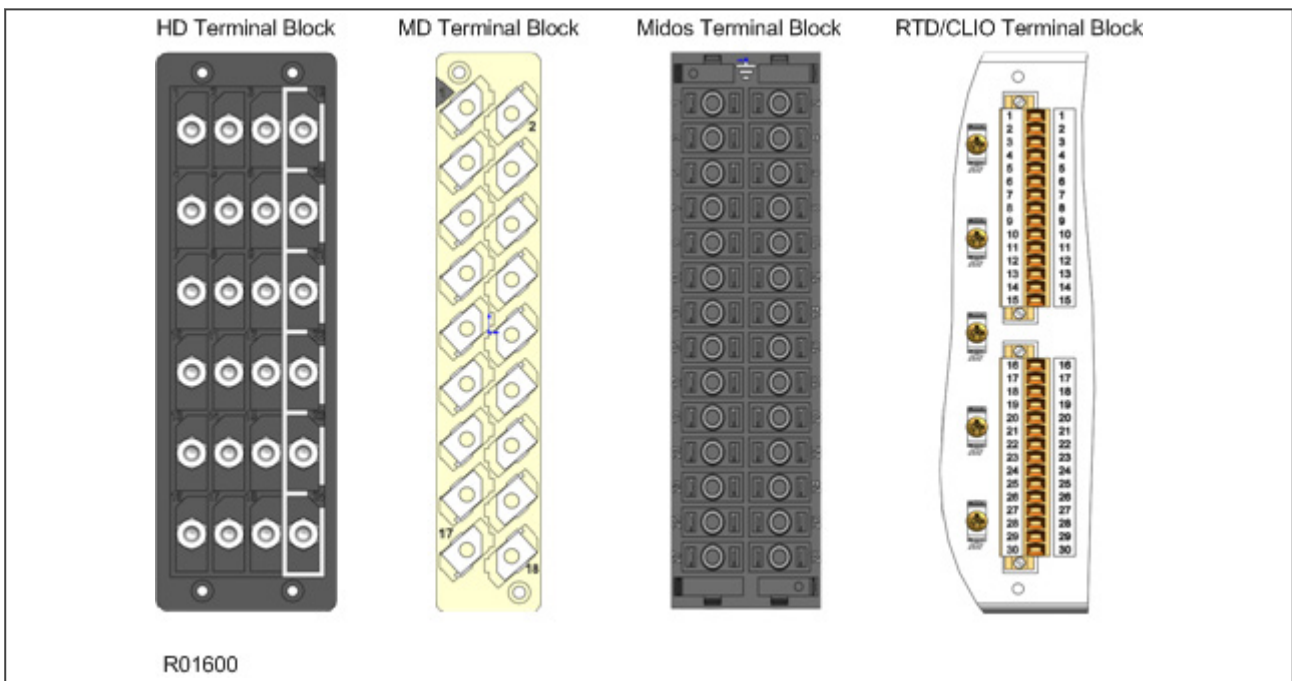


Figure 181: Terminal block types

MiCOM products are supplied with sufficient M4 screws for making connections to the rear mounted terminal blocks using ring terminals, with a recommended maximum of two ring terminals per terminal.

If required, M4 90° crimp ring terminals can be supplied in three different sizes depending on wire size. Each type is available in bags of 100.

Part number	Wire size	Insulation color
ZB9124 901	0.25 - 1.65 mm ² (22 – 16 AWG)	Red
ZB9124 900	1.04 - 2.63 mm ² (16 – 14 AWG)	Blue

4.2 POWER SUPPLY CONNECTIONS

These should be wired with 1.5 mm PVC insulated multi-stranded copper wire terminated with M4 ring terminals.

The wire should have a minimum voltage rating of 300 V RMS.



Caution:
Protect the auxiliary power supply wiring with a maximum 16 A high rupture capacity (HRC) type NIT or TIA fuse.

4.3 EARTH CONNECTION

Every device must be connected to the cubicle earthing bar using the M4 earth terminal.

Use a wire size of at least 2.5 mm² terminated with a ring terminal.

Due to the physical limitations of the ring terminal, the maximum wire size you can use is 6.0 mm² using ring terminals that are not pre-insulated. If using pre insulated ring terminals, the maximum wire size is reduced to 2.63 mm² per ring terminal. If you need a greater cross-sectional area, use two wires in parallel, each terminated in a separate ring terminal.

The wire should have a minimum voltage rating of 300 V RMS.

Note:

To prevent any possibility of electrolytic action between brass or copper ground conductors and the rear panel of the product, precautions should be taken to isolate them from one another. This could be achieved in several ways, including placing a nickel-plated or insulating washer between the conductor and the product case, or using tinned ring terminals.

4.4 CURRENT TRANSFORMERS

Current transformers would generally be wired with 2.5 mm² PVC insulated multi-stranded copper wire terminated with M4 ring terminals.

Due to the physical limitations of the ring terminal, the maximum wire size you can use is 6.0 mm² using ring terminals that are not pre-insulated. If using pre insulated ring terminals, the maximum wire size is reduced to 2.63 mm² per ring terminal. If you need a greater cross-sectional area, use two wires in parallel, each terminated in a separate ring terminal.

The wire should have a minimum voltage rating of 300 V RMS.



Caution:
Current transformer circuits must never be fused.

Note:

If there are CTs present, spring-loaded shorting contacts ensure that the terminals into which the CTs connect are shorted before the CT contacts are broken.

Note:

For 5A CT secondaries, we recommend using 2 x 2.5 mm² PVC insulated multi-stranded copper wire.

4.5 VOLTAGE TRANSFORMER CONNECTIONS

Voltage transformers should be wired with 2.5 mm² PVC insulated multi-stranded copper wire terminated with M4 ring terminals.

The wire should have a minimum voltage rating of 300 V RMS.

4.6 WATCHDOG CONNECTIONS

These should be wired with 1 mm PVC insulated multi-stranded copper wire terminated with M4 ring terminals.

The wire should have a minimum voltage rating of 300 V RMS.

4.7 EIA(RS)485 AND K-BUS CONNECTIONS

For connecting the EIA(RS485) / K-Bus ports, use 2-core screened cable with a maximum total length of 1000 m or 200 nF total cable capacitance.

To guarantee the performance specifications, you must ensure continuity of the screen, when daisy chaining the connections.

Two-core screened twisted pair cable should be used. It is important to avoid circulating currents, which can cause noise and interference, especially when the cable runs between buildings. For this reason, the screen should be continuous and connected to ground at one end only, normally at the master connection point.

The K-Bus signal is a differential signal and there is no signal ground connection. If a signal ground connection is present in the bus cable then it must be ignored. At no stage should this be connected to the cable's screen or to the product's chassis. This is for both safety and noise reasons.

A typical cable specification would be:

- Each core: 16/0.2 mm² copper conductors, PVC insulated
- Nominal conductor area: 0.5 mm² per core
- Screen: Overall braid, PVC sheathed

4.8 IRIG-B CONNECTION

The IRIG-B input and BNC connector have a characteristic impedance of 50 ohms. We recommend that connections between the IRIG-B equipment and the product are made using coaxial cable of type RG59LSF with a halogen free, fire retardant sheath.

4.9 OPTO-INPUT CONNECTIONS

These should be wired with 1 mm² PVC insulated multi-stranded copper wire terminated with M4 ring terminals.

Each opto-input has a selectable preset ½ cycle filter. This makes the input immune to noise induced on the wiring. This can, however slow down the response. If you need to switch off the ½ cycle filter, either use double pole switching on the input, or screened twisted cable on the input circuit.



Caution:
Protect the opto-inputs and their wiring with a maximum 16 A high rupture capacity (HRC) type NIT or TIA fuse.

4.10 OUTPUT RELAY CONNECTIONS

These should be wired with 1 mm PVC insulated multi-stranded copper wire terminated with M4 ring terminals.

4.11 ETHERNET METALLIC CONNECTIONS

If the device has a metallic Ethernet connection, it can be connected to either a 10Base-T or a 100Base-TX Ethernet hub. Due to noise sensitivity, we recommend this type of connection only for short distance connections, ideally where the products and hubs are in the same cubicle. For increased noise immunity, CAT 6 (category 6) STP (shielded twisted pair) cable and connectors can be used.

The connector for the Ethernet port is a shielded RJ-45. The pin-out is as follows:

Pin	Signal name	Signal definition
1	TXP	Transmit (positive)
2	TXN	Transmit (negative)
3	RXP	Receive (positive)
4	-	Not used
5	-	Not used
6	RXN	Receive (negative)
7	-	Not used
8	-	Not used

4.12 ETHERNET FIBRE CONNECTIONS

We recommend the use of fibre-optic connections for permanent connections in a substation environment. The 100 Mbps fibre optic port uses type ST connectors (one for Tx and one for Rx), compatible with 50/125 µm or 62.5/125 µm multimode fibres at 1300 nm wavelength.

Note:

For models equipped with redundant Ethernet connections the product must be partially dismantled to set the fourth octet of the second IP address. This ideally, should be done before installation.

4.13 RS232 CONNECTION

Short term connections to the EIA(RS)232 port, located behind the bottom access cover, can be made using a screened multi-core communication cable up to 15 m long, or a total capacitance of 2500 pF. The cable should be terminated at the product end with a standard 9-pin D-type male connector.

4.14 DOWNLOAD/MONITOR PORT

Short term connections to the download/monitor port, located behind the bottom access cover, can be made using a screened 25-core communication cable up to 4 m long. The cable should be terminated at the product end with a 25-pin D-type male connector.

4.15 GPS FIBRE CONNECTION

Some products use a GPS 1 PPS timing signal. If applicable, this is connected to a fibre-optic port on the coprocessor board in slot B. The fibre-optic port uses an ST type connector, compatible with fibre multimode 50/125 µm or 62.5/125 µm – 850 nm.

4.16 FIBRE COMMUNICATION CONNECTIONS

The fibre optic port consists of one or two channels using ST type connectors (one for Tx and one for Rx). The type of fibre used depends on the option selected.

850 nm and 1300 nm multimode systems use 50/125 μm or 62.5/125 μm multimode fibres. 1300 nm and 1550 nm single mode systems use 9/125 μm single mode fibres.

5 CASE DIMENSIONS

Not all products are available in all case sizes.

5.1 CASE DIMENSIONS 40TE

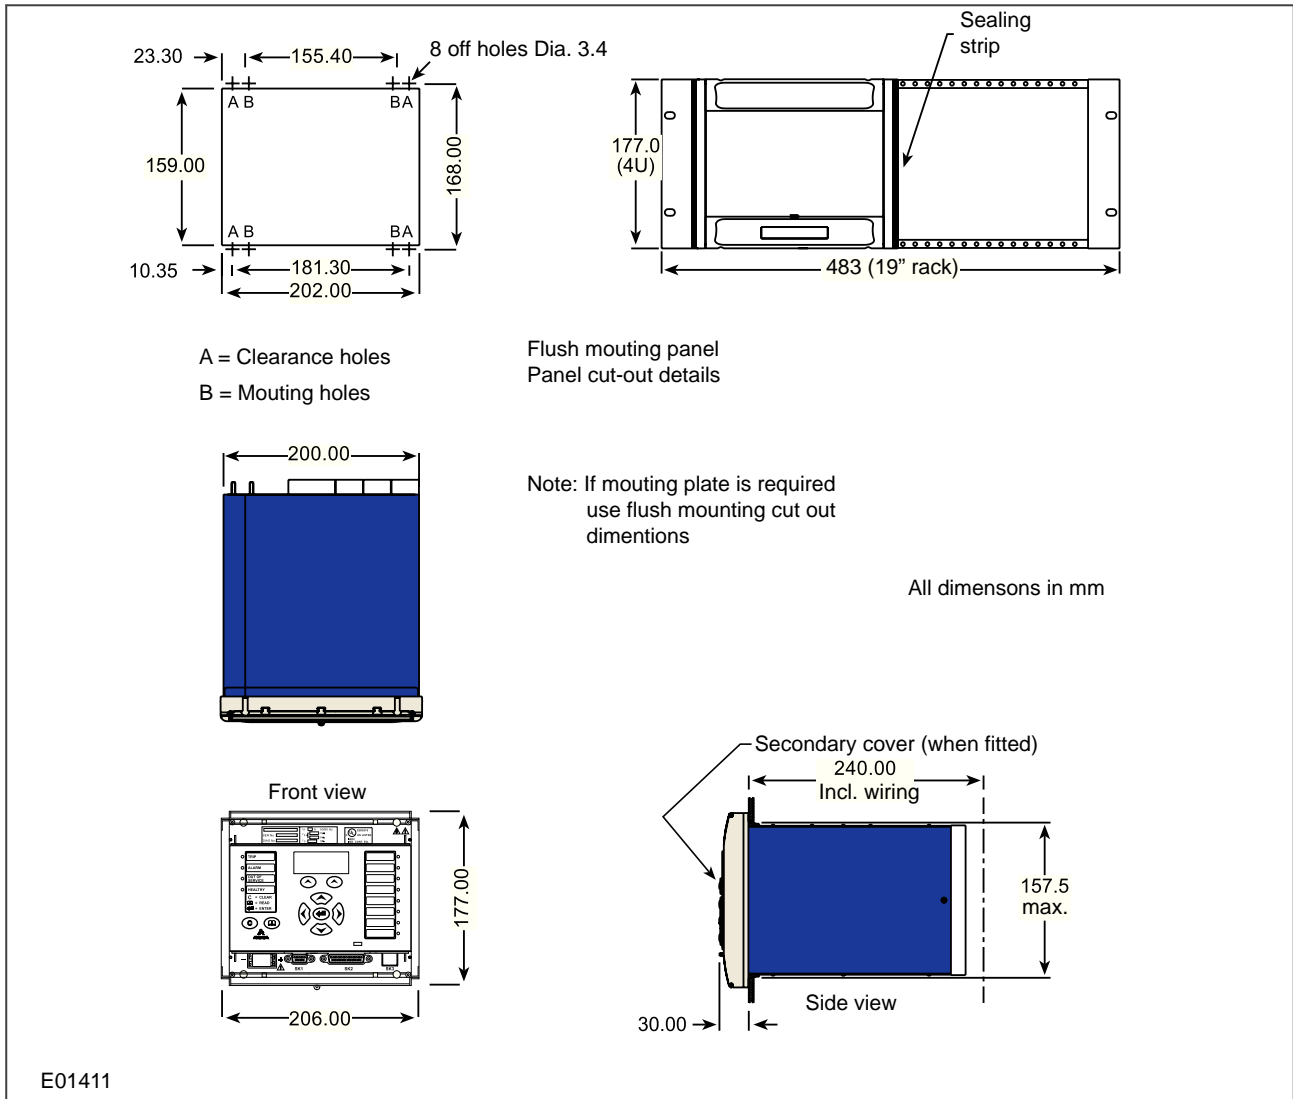


Figure 182: 40TE case dimensions

5.2 CASE DIMENSIONS 60TE

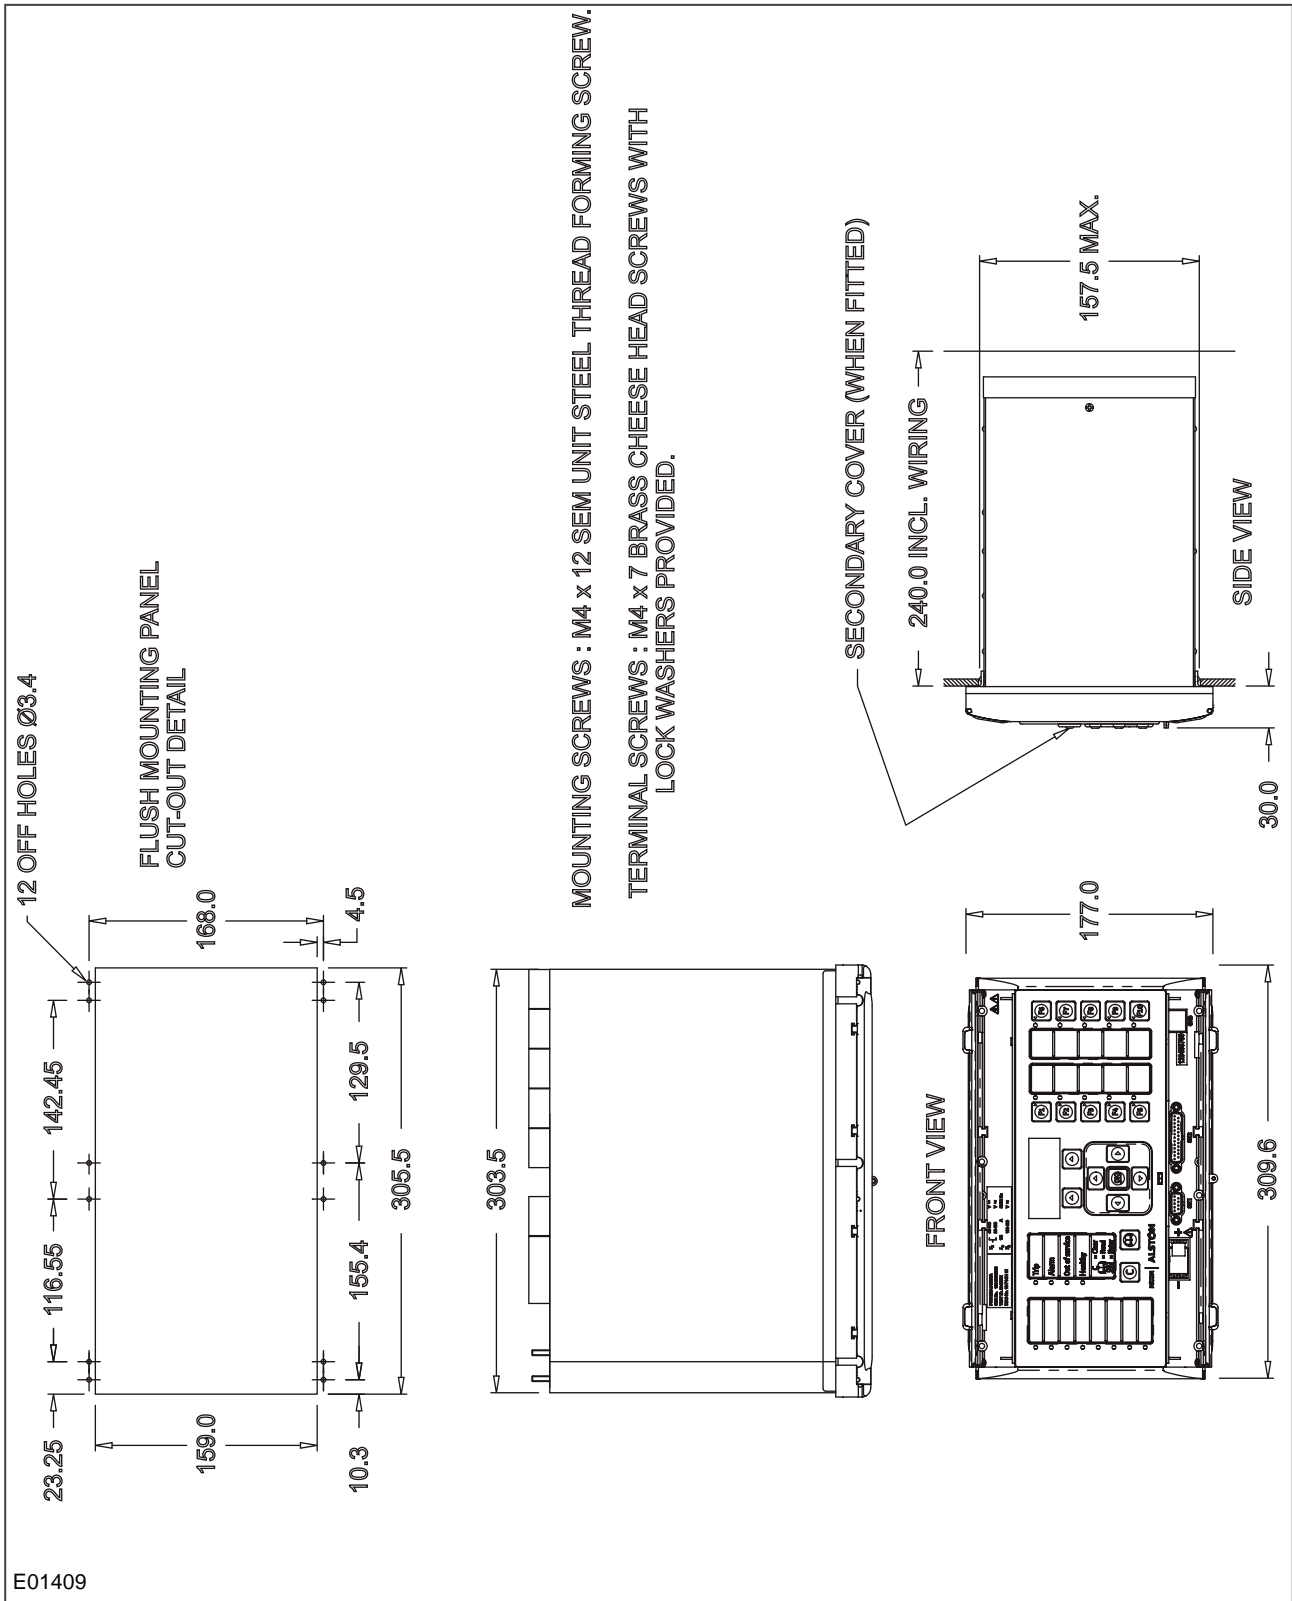


Figure 183: 60TE case dimensions

5.3 CASE DIMENSIONS 80TE

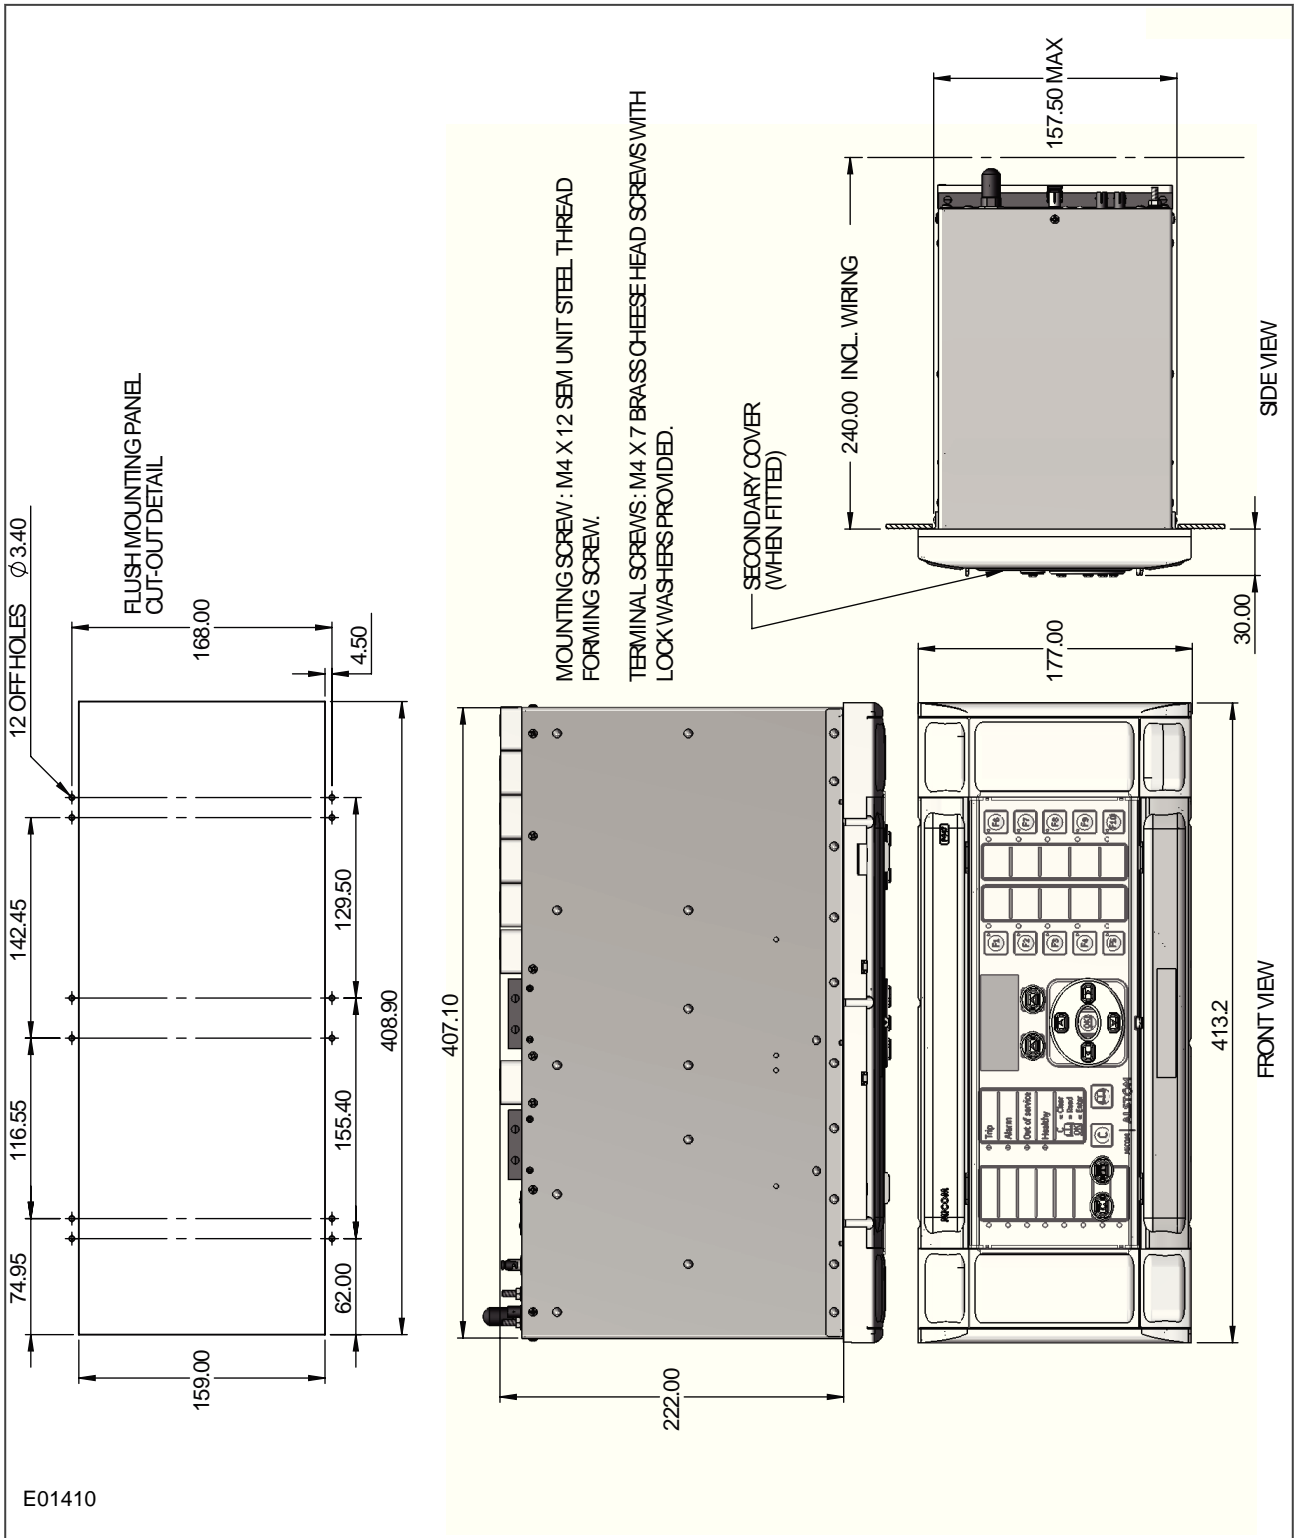


Figure 184: 80TE case dimensions

COMMISSIONING INSTRUCTIONS

CHAPTER 17

1 CHAPTER OVERVIEW

This chapter contains the following sections:

Chapter Overview	433
General Guidelines	434
Commissioning Test Menu	435
Commissioning Equipment	439
Product Checks	440
Electrical Intermicom Communication Loopback	449
Setting Checks	451
Protection Timing Checks	453
System Check and Check Synchronism	455
Check Trip and Autoreclose Cycle	456
Onload Checks	457
Final Checks	459

2 GENERAL GUIDELINES

Alstom Grid IEDs are self-checking devices and will raise an alarm in the unlikely event of a failure. This is why the commissioning tests are less extensive than those for non-numeric electronic devices or electro-mechanical relays.

To commission the devices, you (the commissioning engineer) do not need to test every function. You need only verify that the hardware is functioning correctly and that the application-specific software settings have been applied. You can check the settings by extracting them using the settings application software, or by means of the front panel interface (HMI panel).

The menu language is user-selectable, so you can change it for commissioning purposes if required.

Note:

Remember to restore the language setting to the customer's preferred language on completion.



Caution:

Before carrying out any work on the equipment you should be familiar with the contents of the Safety Section or Safety Guide SFTY/4LM as well as the ratings on the equipment's rating label.



Warning:

With the exception of the CT shorting contacts check, do not disassemble the device during commissioning.

3 COMMISSIONING TEST MENU

The IED provides several test facilities under the *COMMISSION TESTS* menu heading. There are menu cells that allow you to monitor the status of the opto-inputs, output relay contacts, internal Digital Data Bus (DDB) signals and user-programmable LEDs. This section describes these commissioning test facilities.

3.1 OPTO I/P STATUS CELL (OPTO-INPUT STATUS)

This cell can be used to monitor the status of the opto-inputs while they are sequentially energised with a suitable DC voltage. The cell is a binary string that displays the status of the opto-inputs where '1' means energised and '0' means de-energised. If you move the cursor along the binary numbers, the corresponding label text is displayed for each logic input.

3.2 RELAY O/P STATUS CELL (RELAY OUTPUT STATUS)

This cell can be used to monitor the status of the relay outputs. The cell is a binary string that displays the status of the relay outputs where '1' means energised and '0' means de-energised. If you move the cursor along the binary numbers, the corresponding label text is displayed for each relay output.

The cell indicates the status of the output relays when the IED is in service. You can check for relay damage by comparing the status of the output contacts with their associated bits.

Note:

When the **Test Mode** cell is set to *Contacts Blocked*, the relay output status indicates which contacts would operate if the IED was in-service. It does not show the actual status of the output relays, as they are blocked.

3.3 TEST PORT STATUS CELL

This cell displays the status of the DDB signals that have been allocated in the **Monitor Bit** cells. If you move the cursor along the binary numbers, the corresponding DDB signal text string is displayed for each monitor bit.

By using this cell with suitable monitor bit settings, the state of the DDB signals can be displayed as various operating conditions or sequences are applied to the IED. This allows you to test the Programmable Scheme Logic (PSL).

3.4 MONITOR BIT 1 TO 8 CELLS

The eight Monitor Bit cells allows you to select eight DDB signals that can be observed in the Test Port Status cell or downloaded via the front port.

Each Monitor Bit cell can be assigned to a particular DDB signal. You set it by entering the required DDB signal number from the list of available DDB signals.

The pins of the monitor/download port used for monitor bits are as follows:

Monitor Bit	1	2	3	4	5	6	7	8
Monitor/Download Port Pin	11	12	15	13	20	21	23	24

The signal ground is available on pins 18, 19, 22 and 25.



Caution:
The monitor/download port is not electrically isolated against induced voltages on the communications channel. It should therefore only be used for local communications.

3.5 TEST MODE CELL

This cell allows you to perform secondary injection testing. It also lets you test the output contacts directly by applying menu-controlled test signals.

To go into test mode, select the *Test Mode* option in the **Test Mode** cell. This takes the IED out of service causing an alarm condition to be recorded and the **Out of Service** LED to illuminate. This also freezes any information stored in the *CB CONDITION* column. In IEC 60870-5-103 versions, it changes the Cause of Transmission (COT) to Test Mode.

In Test Mode, the output contacts are still active. To disable the output contacts you must select the *Contacts Blocked* option.

Once testing is complete, return the device back into service by setting the **Test Mode** Cell back to *Disabled*.



Caution:
When the cell is in Test Mode, the Scheme Logic still drives the output relays, which could result in tripping of circuit breakers. To avoid this, set the Test Mode cell to *Contacts Blocked*.

Note:

Test mode and Contacts Blocked mode can also be selected by energising an opto-input mapped to the Test Mode signal, and the Contact Block signal respectively.

3.6 TEST PATTERN CELL

The **Test Pattern** cell is used to select the output relay contacts to be tested when the **Contact Test** cell is set to *Apply Test*. The cell has a binary string with one bit for each user-configurable output contact, which can be set to '1' to operate the output and '0' to not operate it.

3.7 CONTACT TEST CELL

When the *Apply Test* command in this cell is issued, the contacts set for operation change state. Once the test has been applied, the command text on the LCD will change to **No Operation** and the contacts will remain in the Test state until reset by issuing the *Remove Test* command. The command text on the LCD will show **No Operation** after the *Remove Test* command has been issued.

Note:

When the Test Mode cell is set to Contacts Blocked the Relay O/P Status cell does not show the current status of the output relays and therefore cannot be used to confirm operation of the output relays. Therefore it will be necessary to monitor the state of each contact in turn.

3.8 TEST LEADS CELL

When the *Apply Test* command in this cell is issued, the user-programmable LEDs illuminate for approximately 2 seconds before switching off, and the command text on the LCD reverts to **No Operation**.

3.9 TEST AUTORECLOSE CELL

Where the IED provides an auto-reclose function, this cell will be available for testing the sequence of circuit breaker trip and auto-reclose cycles.

The *3 Pole Test* command causes the device to perform the first three phase trip/reclose cycle so that associated output contacts can be checked for operation at the correct times during the cycle. Once the trip output has operated the command text will revert to *No Operation* whilst the rest of the auto-reclose cycle is performed. To test subsequent three-phase autoreclose cycles, you repeat the *3 Pole Test* command.

Note:

The default settings for the programmable scheme logic has the AR Trip Test signals mapped to the Trip Input signals. If the programmable scheme logic has been changed, it is essential that these signals retain this mapping for the Test Autoreclose facility to work.

3.10 STATIC TEST MODE

Static Test Mode can be set to Enabled or Disabled. When the Static Test mode is enabled it allows older injection test sets to be used to commission and test the device.

Modern dynamic secondary injection test sets are able to accurately mimic real power system faults. The test sets mimic an instantaneous fault “shot”, with the real rate of rise of current, and the decaying DC exponential component. Dynamic injection test sets are available, which cater for all three phases, providing a six signal set of analogue inputs: Va, Vb, Vc, Ia, Ib, Ic. Such injection test sets can be used with the device, with no special testing limitations.

Conversely, older test sets, also known as Static Simulators, may not properly provide or simulate:

- A healthy pre-fault voltage
- A real fault shot (instead a gradually varying current or voltage would be used)
- The rate of rise of current and DC components
- A complete set of three-phase analogue inputs
- Real dynamic step changes in current and voltage.

The IED relies on voltage memory and delta step changes in a real power system, therefore certain functions are disabled or bypassed to allow injection testing. Selecting the Static Mode test option bypasses the delta phase selectors, and power swing detection.

For the tests, the delta directional line is replaced by a conventional distance directional line. Extra filtering of distance comparators is used so the filtering slows to use a fixed one cycle window. Memory polarising is replaced by cross-polarising from unfaulted phases.

Note:

Trip times may be up to ½ cycle longer when tested in the static mode, due to the nature of the test voltage and current, and the slower filtering. This is normal, and perfectly acceptable.

3.11 LOOPBACK MODE

Loopback Mode can be used to test InterMiCOM⁶⁴ signalling.

Note:

If the cell is set to *Internal*, only the IED software is checked. If the cell is set to *External*, both the software and hardware are checked.

When the device is switched into Loopback Mode, it automatically uses generic addresses 0-0. It responds as if it is connected to a remote device. The sent and received IM⁶⁴ signals continue to be routed to and from the signals defined in the programmable logic.

Note:

Loopback mode can also be selected by energising an opto-input mapped to the Loopback signal.

3.12 IM64 TEST PATTERN

This cell is used with the **IM64 Test Mode** cell to set a 16-bit pattern (8 bits per channel), which is transmitted whenever the **IM64 Test Mode** cell is set to *Enabled*. The **IM64 TestPattern** cell has a binary string with one bit for each user-defined Inter-MiCOM command. These can be set to '1' to operate the IM64 output under test conditions and '0' for no operation.

3.13 IM64 TEST MODE

When the *Enable* command in this cell is issued, the InterMiCOM⁶⁴ commands change to reflect the state of the values set in the **IM64 TestPattern** cell. If the cell is set to *Disabled*, the InterMiCOM⁶⁴ commands reflect the state of the signals generated by the protection and control functions.

3.14 RED AND GREEN LED STATUS CELLS

These cells contain binary strings that indicate which of the user-programmable red and green LEDs are illuminated when accessing from a remote location. A '1' indicates that a particular LED is illuminated.

Note:

When the status in both **Red LED Status** and **Green LED Status** cells is '1', this indicates the LEDs illumination is yellow.

3.15 USING A MONITOR PORT TEST BOX

A test box containing eight LEDs and a switchable audible indicator is available. It is housed in a small plastic box with a 25-pin male D-connector that plugs directly into the monitor/download port. There is also a 25-pin female D-connector which allows other connections to be made to the monitor/download port while the monitor/download port test box is in place.

Each LED corresponds to one of the monitor bit pins on the monitor/download port. **Monitor Bit 1** is on the left-hand side when viewed from the front of the IED. The audible indicator can be selected to sound if a voltage appears on any of the eight monitor pins. Alternatively it can be set to remain silent, using only the LEDs.

4 COMMISSIONING EQUIPMENT

4.1 MINIMUM EQUIPMENT REQUIRED

As a minimum, the following equipment is required:

- Multifunctional current and voltage injection test set (where applicable)
- Multimeter with suitable AC current range, and DC voltage ranges of 0 - 440 V and 0 - 250 V respectively
- Continuity tester
- A portable PC, installed with appropriate software

4.2 OPTIONAL EQUIPMENT REQUIRED

- Current clamp meter
- Multi-finger test plug:
 - P992 for test block type P991
 - MMLB for test block type MMLG blocks
- Electronic or brushless insulation tester with a DC output not exceeding 500 V
- KITZ K-Bus - EIA(RS)232 protocol converter for testing EIA(RS)485 K-Bus port, if applicable
- EIA(RS)485 to EIA(RS)232 converter for testing EIA(RS)485 Courier/MODBUS/IEC60870-5-103/DNP3 port, if applicable
- A portable printer (for printing a setting record from the portable PC).
- Phase angle meter (where applicable)
- Phase rotation meter
- Fibre optic power meter (where applicable)
- Fibre optic test leads (where applicable)

5 PRODUCT CHECKS

These product checks are designed to ensure that the device has not been physically damaged prior to commissioning, is functioning correctly and that all input quantity measurements are within the stated tolerances.

If the application-specific settings have been applied to the IED prior to commissioning, you should make a copy of the settings. This will allow you to restore them at a later date if necessary. This can be done by:

- Obtaining a setting file from the customer.
- Extracting the settings from the IED itself, using a portable PC with appropriate setting software.

If the customer has changed the password that prevents unauthorised changes to some of the settings, either the revised password should be provided, or the original password restored before testing.

Note:

If the password has been lost, a recovery password can be obtained from Alstom Grid.

5.1 PRODUCT CHECKS WITH THE IED DE-ENERGISED



Warning:

The following group of tests should be carried out without the auxiliary supply being applied to the IED and, if applicable, with the trip circuit isolated.

The current and voltage transformer connections must be isolated from the IED for these checks. If a P991 test block is provided, the required isolation can be achieved by inserting test plug type P992. This open circuits all wiring routed through the test block.

Before inserting the test plug, you should check the scheme diagram to ensure that this will not cause damage or a safety hazard (the test block may, for example, be associated with protection current transformer circuits). The sockets in the test plug, which correspond to the current transformer secondary windings, must be linked before the test plug is inserted into the test block.



Warning:

Never open-circuit the secondary circuit of a current transformer since the high voltage produced may be lethal and could damage insulation.

If a test block is not provided, the voltage transformer supply to the IED should be isolated by means of the panel links or connecting blocks. The line current transformers should be short-circuited and disconnected from the IED terminals. Where means of isolating the auxiliary supply and trip circuit (for example isolation links, fuses and MCB) are provided, these should be used. If this is not possible, the wiring to these circuits must be disconnected and the exposed ends suitably terminated to prevent them from being a safety hazard.

5.1.1 VISUAL INSPECTION



Warning:
Check the rating information under the top access cover on the front of the IED.

Warning:
Check that the IED being tested is correct for the line or circuit.

Warning:
Record the circuit reference and system details.

Warning:
Check the CT secondary current rating and record the CT tap which is in use.

Carefully examine the IED to see that no physical damage has occurred since installation.

Ensure that the case earthing connections (bottom left-hand corner at the rear of the IED case) are used to connect the IED to a local earth bar using an adequate conductor.

5.1.2 CURRENT TRANSFORMER SHORTING CONTACTS

Check the current transformer shorting contacts to ensure that they close when the heavy-duty terminal block is disconnected from the current input board.

The heavy-duty terminal blocks are fastened to the rear panel using four crosshead screws. These are located two at the top and two at the bottom.

Note:
Use a magnetic bladed screwdriver to minimise the risk of the screws being left in the terminal block or lost.

Pull the terminal block away from the rear of the case and check with a continuity tester that all the shorting switches being used are closed.

5.1.3 INSULATION

Insulation resistance tests are only necessary during commissioning if explicitly requested.

Isolate all wiring from the earth and test the insulation with an electronic or brushless insulation tester at a DC voltage not exceeding 500 V. Terminals of the same circuits should be temporarily connected together.

The insulation resistance should be greater than 100 M Ω at 500 V.

On completion of the insulation resistance tests, ensure all external wiring is correctly reconnected to the IED.

5.1.4 EXTERNAL WIRING



Caution:
Check that the external wiring is correct according to the relevant IED and scheme diagrams. Ensure that phasing/phase rotation appears to be as expected.

5.1.5 WATCHDOG CONTACTS

Using a continuity tester, check that the Watchdog contacts are in the following states:

Terminals	Contact state with product de-energised
11 - 12 on power supply board	Closed
13 - 14 on power supply board	Open

5.1.6 POWER SUPPLY

Depending on its nominal supply rating, the IED can be operated from either a DC only or an AC/DC auxiliary supply. The incoming voltage must be within the operating range specified below.

Without energising the IED measure the auxiliary supply to ensure it is within the operating range.

Nominal supply rating DC	Nominal supply rating AC RMS	DC operating range	AC operating range
24 - 54 V	N/A	19 to 65 V	N/A
48 - 125 V	30 - 100 V	37 to 150 V	24 - 110 V
110 - 250 V	100 - 240 V	87 to 300 V	80 to 265 V

Note:

The IED can withstand an AC ripple of up to 12% of the upper rated voltage on the DC auxiliary supply.



Warning:
Do not energise the IED or interface unit using the battery charger with the battery disconnected as this can irreparably damage the power supply circuitry.



Caution:
Energise the IED only if the auxiliary supply is within the specified operating ranges. If a test block is provided, it may be necessary to link across the front of the test plug to connect the auxiliary supply to the IED.

5.2 PRODUCT CHECKS WITH THE IED ENERGISED



Warning:
The current and voltage transformer connections must remain isolated from the IED for these checks. The trip circuit should also remain isolated to prevent accidental operation of the associated circuit breaker.

The following group of tests verifies that the IED hardware and software is functioning correctly and should be carried out with the supply applied to the IED.

5.2.1 WATCHDOG CONTACTS

Using a continuity tester, check that the Watchdog contacts are in the following states when energised and healthy.

Terminals	Contact state with product energised
11 - 12 on power supply board	Open
13 - 14 on power supply board	Closed

5.2.2 TEST LCD

The Liquid Crystal Display (LCD) is designed to operate in a wide range of substation ambient temperatures. For this purpose, the IEDs have an **LCD Contrast** setting. The contrast is factory pre-set, but it may be necessary to adjust the contrast to give the best in-service display.

To change the contrast, you can increment or decrement the **LCD Contrast** cell in the *CONFIGURATION* column.



Caution:

Before applying a contrast setting, make sure that it will not make the display so light or dark such that menu text becomes unreadable. It is possible to restore the visibility of a display by downloading a setting file, with the LCD Contrast set within the typical range of 7 - 11.

5.2.3 DATE AND TIME

The date and time is stored in memory, which is backed up by an auxiliary battery situated at the front of the device behind the lower access cover. When delivered, this battery is isolated to prevent battery drain during transportation and storage.

Before setting the date and time, ensure that the isolation strip has been removed. With the lower access cover open, the battery isolation strip can be identified by a red tab protruding from the positive side of the battery compartment. Pull the red tab to remove the isolation strip.

The method for setting the date and time depends on whether an IRIG-B signal is being used or not. The IRIG-B signal will override the time, day and month settings, but not the initial year setting. For this reason, you must ensure you set the correct year, even if the device is using IRIG-B to maintain the internal clock.

You set the Date and Time by one of the following methods:

- Using the front panel to set the **Date and Time** cells respectively
- By sending a courier command to the **Date/Time** cell (Courier reference 0801)

Note:

If the auxiliary supply fails, the time and date will be maintained by the auxiliary battery. Therefore, when the auxiliary supply is restored, you should not have to set the time and date again. To test this, remove the IRIG-B signal, and then remove the auxiliary supply. Leave the device de-energised for approximately 30 seconds. On re energisation, the time should be correct.

When using IRIG-B to maintain the clock, the IED must first be connected to the satellite clock equipment (usually a P594), which should be energised and functioning.

1. Set the IRIG-B Sync cell in the *DATE AND TIME* column to *Enabled*.
2. Ensure the IED is receiving the IRIG-B signal by checking that cell IRIG-B Status reads *Active*.
3. Once the IRIG-B signal is active, adjust the time offset of the universal co coordinated time (satellite clock time) on the satellite clock equipment so that local time is displayed.
4. Check that the time, date and month are correct in the Date/Time cell. The IRIG-B signal does not contain the current year so it will need to be set manually in this cell.
5. Reconnect the IRIG-B signal.

If the time and date is not being maintained by an IRIG-B signal, ensure that the IRIG-B Sync cell in the *DATE AND TIME* column is set to *Disabled*.

1. Set the date and time to the correct local time and date using Date/Time cell or using the serial protocol.

5.2.4 TEST LEDS

On power-up, all LEDs should first flash yellow. Following this, the green "Healthy" LED should illuminate indicating that the device is healthy.

The IED's non-volatile memory stores the states of the alarm, the trip, and the user-programmable LED indicators (if configured to latch). These indicators may also illuminate when the auxiliary supply is applied.

If any of these LEDs are ON then they should be reset before proceeding with further testing. If the LEDs successfully reset (the LED goes off), no testing is needed for that LED because it is obviously operational.

5.2.5 TEST ALARM AND OUT-OF-SERVICE LEDS

The alarm and out of service LEDs can be tested using the *COMMISSION TESTS* menu column.

1. Set the **Test Mode** cell to *Contacts Blocked*.
 2. Check that the out of service LED illuminates continuously and the alarm LED flashes.
- It is not necessary to return the **Test Mode** cell to *Disabled* at this stage because the test mode will be required for later tests.

5.2.6 TEST TRIP LED

The trip LED can be tested by initiating a manual circuit breaker trip. However, the trip LED will operate during the setting checks performed later. Therefore no further testing of the trip LED is required at this stage.

5.2.7 TEST USER-PROGRAMMABLE LEDS

To test these LEDs, set the Test LEDs cell to *Apply Test*. Check that all user-programmable LEDs illuminate.

5.2.8 TEST FIELD VOLTAGE SUPPLY

The IED generates a field voltage of nominally 48 V that can be used to energise the opto-inputs (alternatively the substation battery may be used).

1. Measure the field voltage across the terminals 7 and 9 of the power supply terminal block
2. Check that the field voltage is within the range 40 V to 60 V when no load is connected and that the polarity is correct.
3. Repeat for terminals 8 and 10.

5.2.9 TEST OPTO-INPUTS

This test checks that all the opto-inputs on the IED are functioning correctly.

The opto-inputs should be energised one at a time. For terminal numbers, please see the external connection diagrams in the "Wiring Diagrams" chapter. Ensuring correct polarity, connect the supply voltage to the appropriate terminals for the input being tested.

The status of each opto-input can be viewed using either the **Opto I/P Status** cell in the *SYSTEM DATA* column, or the **Opto I/P Status** cell in the *COMMISSION TESTS* column.

A '1' indicates an energised input and a '0' indicates a de-energised input. When each opto-input is energised, one of the characters on the bottom line of the display changes to indicate the new state of the input.

5.2.10 TEST OUTPUT RELAYS

This test checks that all the output relays are functioning correctly.

1. Ensure that the IED is still in test mode by viewing the **Test Mode** cell in the *COMMISSION TESTS* column. Ensure that it is set to *Contacts Blocked*.
2. The output relays should be energised one at a time. To select output relay 1 for testing, set the Test Pattern cell as appropriate.
3. Connect a continuity tester across the terminals corresponding to output relay 1 as shown in the external connection diagram.
4. To operate the output relay set the Contact Test cell to *Apply Test*.
5. Check the operation with the continuity tester.
6. Measure the resistance of the contacts in the closed state.
7. Reset the output relay by setting the Contact Test cell to *Remove Test*.
8. Repeat the test for the remaining output relays.
9. Return the IED to service by setting the Test Mode cell in the *COMMISSION TESTS* menu to *Disabled*.

5.2.11 TEST SERIAL COMMUNICATION PORT RP1

You need only perform this test if the IED is to be accessed from a remote location with a serial connection. The test will vary depending on the communications protocol used.

It is not the intention of this test to verify the operation of the complete communication link between the IED and the remote location, just the IED's rear communication port and, if applicable, the protocol converter.

5.2.11.1 CHECK PHYSICAL CONNECTIVITY

The rear communication port RP1 is presented on terminals 16, 17 and 18 of the power supply terminal block. Screened twisted pair cable is used to make a connection to the port. The cable screen should be connected to pin 16 and pins 17 and 18 are for the communication signal:

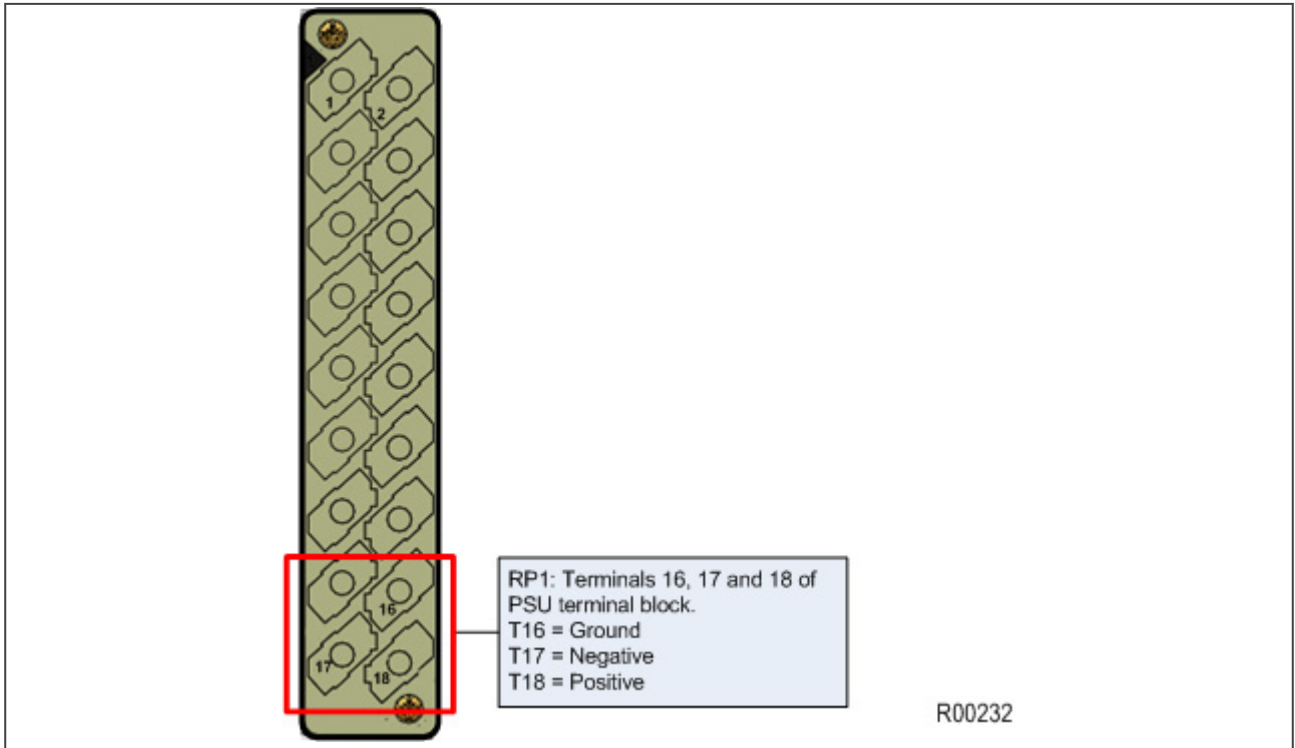


Figure 185: RP1 physical connection

For K-Bus applications, pins 17 and 18 are not polarity sensitive and it does not matter which way round the wires are connected. EIA(RS)485 is polarity sensitive, so you must ensure the wires are connected the correct way round (pin 18 is positive, pin 17 is negative).

If K-Bus is being used, a Kitz protocol converter (KITZ101, KITZ102 OR KITZ201) will have been installed to convert the K-Bus signals into RS232. Likewise, if RS485 is being used, an RS485-RS232 converter will have been installed. In the case where a protocol converter is being used, a laptop PC running appropriate software (such as MiCOM S1 Agile) can be connected to the incoming side of the protocol converter. An example for K-bus to RS232 conversion is shown below. RS485 to RS232 would follow the same principle, only using a RS485-RS232 converter.

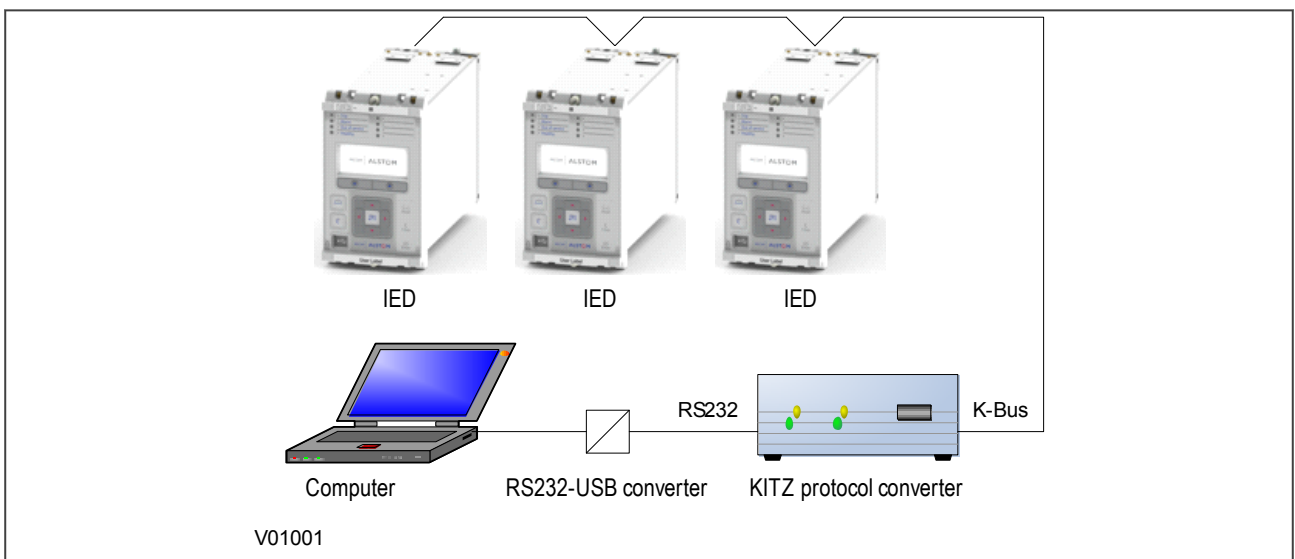


Figure 186: Remote communication using K-bus

Fibre Connection

Some models have an optional fibre optic communications port fitted (on a separate communications board). The communications port to be used is selected by setting the Physical Link cell in the *COMMUNICATIONS* column, the values being *Copper* or *K-Bus* for the RS485/K-bus port and *Fibre Optic* for the fibre optic port.

5.2.11.2 CHECK LOGICAL CONNECTIVITY

The logical connectivity depends on the chosen data protocol, but the principles of testing remain the same for all protocol variants:

1. Ensure that the communications baud rate and parity settings in the application software are set the same as those on the protocol converter.
2. For Courier models, ensure that you have set the correct RP1 address
3. Check that communications can be established with this IED using the portable PC/Master Station.

5.2.12 TEST SERIAL COMMUNICATION PORT RP2

RP2 is an optional second serial port board providing additional serial connectivity. It provides two 9-pin D-type serial port connectors SK4 and SK5. Both ports are configured as DTE (Data Terminal Equipment) ports. That means they can be connected to communications equipment such as a modem with a straight-through cable.

SK4 can be configured as an EIA(RS232), EIA(RS485), or K-Bus connection for Courier protocol only, whilst SK5 is fixed to EIA(RS)232 for InterMiCOM signalling only.

It is not the intention of this test to verify the operation of the complete communication link between the IED and the remote location, just the IED's rear communication port and, if applicable, the protocol converter.

The only checks that need to be made are as follows:

1. Set the **RP2 Port Config** cell in the *COMMUNICATIONS* column to the required physical protocol; (K-Bus, EIA(RS)485, or EIA(RS)232).
2. Set the IED's Courier address to the correct value (it must be between 1 and 254).

5.2.13 TEST ETHERNET COMMUNICATION

For products that employ Ethernet communications, we recommend that testing be limited to a visual check that the correct ports are fitted and that there is no sign of physical damage.

If there is no board fitted or the board is faulty, a NIC link alarm will be raised (providing this option has been set in the **NIC Link Report** cell in the *COMMUNICATIONS* column).

5.3 SECONDARY INJECTION TESTS

Secondary injection testing is carried out to verify the integrity of the VT and CT readings. All devices leave the factory set for operation at a system frequency of 50 Hz. If operation at 60 Hz is required, you must set this in the Frequency cell in the *SYSTEM DATA* column.

The PMU must be installed and connected to a 1pps fibre optic synchronising signal and a demodulated IRIG-B signal, provided by a device such as a P594 or a REASON RT430.

Connect the current and voltage outputs of the test set to the appropriate terminals of the first voltage and current channel and apply nominal voltage and current with the current lagging the voltage by 90 degrees.

5.3.1 TEST CURRENT INPUTS

This test verifies that the current measurement inputs are configured correctly.

1. Using secondary injection test equipment such as an Omicron, apply and measure nominal rated current to each CT in turn.
2. Check its magnitude using a multi-meter or test set readout. Check this value against the value displayed on the HMI panel (usually in *MEASUREMENTS 1* column).
3. Record the displayed value. The measured current values will either be in primary or secondary Amperes. If the Local Values cell in the *MEASURE'T SETUP* column is set to 'Primary', the values displayed should be equal to the applied current multiplied by the corresponding current transformer ratio (set in the *CT AND VT RATIOS* column). If the Local Values cell is set to Secondary, the value displayed should be equal to the applied current.

Note:

If a PC connected to the IED using the rear communications port is being used to display the measured current, the process will be similar. However, the setting of the Remote Values cell in the MEASURE'T SETUP column will determine whether the displayed values are in primary or secondary Amperes.

The measurement accuracy of the IED is +/- 1%. However, an additional allowance must be made for the accuracy of the test equipment being used.

5.3.2 TEST VOLTAGE INPUTS

This test verifies that the voltage measurement inputs are configured correctly.

1. Using secondary injection test equipment such as an Omicron, apply and measure the rated voltage to each voltage transformer input in turn.
2. Check its magnitude using a multimeter or test set readout. Check this value against the value displayed on the HMI panel (usually in *MEASUREMENTS 1* column).
3. Record the value displayed. The measured voltage values will either be in primary or secondary Volts. If the Local Values cell in the *MEASURE'T SETUP* column is set to 'Primary', the values displayed should be equal to the applied voltage multiplied by the corresponding voltage transformer ratio (set in the *CT AND VT RATIOS* column). If the Local Values cell is set to Secondary, the value displayed should be equal to the applied voltage.

Note:

If a PC connected to the IED using the rear communications port is being used to display the measured current, the process will be similar. However, the setting of the Remote Values cell in the MEASURE'T SETUP column will determine whether the displayed values are in primary or secondary Amperes.

The measurement accuracy of the IED is +/- 1%. However, an additional allowance must be made for the accuracy of the test equipment being used.

6 ELECTRICAL INTERMICOM COMMUNICATION LOOPBACK

If the IED is used in a scheme with standard InterMiCOM communication (Electrical Teleprotection), you need to configure a loopback for testing purposes.

6.1 SETTING UP THE LOOPBACK

The communication path may include various connectors and signal converters before leaving the substation. We therefore advise making the loopback as close as possible to where the communication link leaves the substation. This way, as much of the wiring as possible and all associated communication signal converters are included in the test.

1. Set *CONFIGURATION > InterMiCOM* to *Enabled*.
2. Set *INTERMICOM COMMS > Ch Statistics* and *Ch Diagnostics* to *Visible*.
3. Check that *INTERMICOM COMMS > IM H/W Status* displays OK. This means the InterMiCOM hardware is fitted and initialised.

6.2 LOOPBACK TEST

INTERMICOM COMMS > Loopback Mode allows you to test the InterMiCOM channel. In normal service it must be disabled. *INTERMICOM COMMS > Loopback Status* shows the status of the InterMiCOM loopback mode.

Note:

If *INTERMICOM COMMS > Loopback Mode* is set to *Internal*, only the internal software of the device is checked. This is useful for testing functionality if no communications connections are made. Use the 'External' setting during commissioning because it checks both the software and hardware. When the IED is switched into either *Internal* or *External Loopback Mode* it automatically inhibits InterMiCOM messages to the PSL by setting all eight InterMiCOM message command states to zero.

Set *INTERMICOM COMMS > Loopback Mode* to *External* and form a communications loopback by connecting the transmit signal (pin 2) to the receive signal (pin 3).

Note:

The DCD signal must be held high (by connecting pin 1 to pin 4) if the connected equipment does not support DCD.

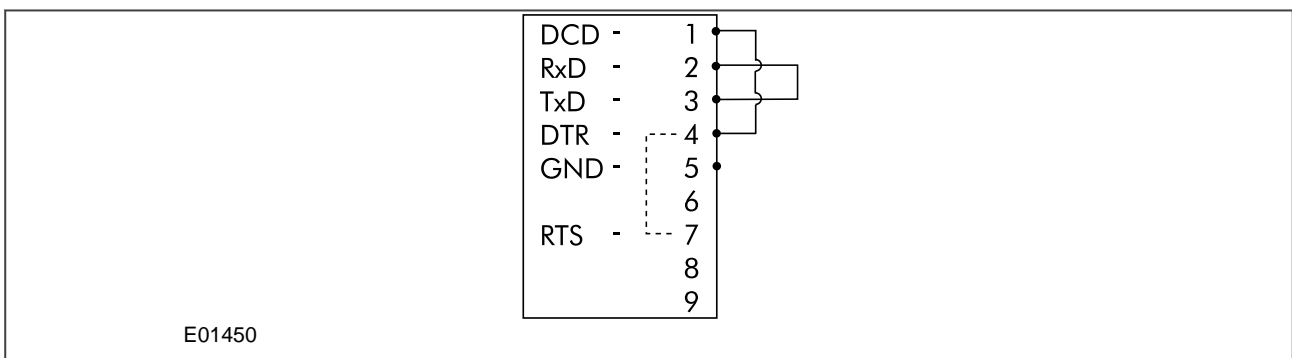


Figure 187: InterMicom loopback testing

The loopback mode is shown on the front panel by an Alarm LED and the message IM Loopback on the LCD.

Check that all connections are correct and the software is working correctly.

Check that *INTERMICOM COMMS* > **Loopback Status** shows OK.

6.2.1 INTERMICOM COMMAND BITS

To test the InterMiCOM command bits, go to the *INTERMICOM COMMS* column and do the following:

1. Enter any test pattern in the **Test Pattern** cell in the by scrolling through and changing selected bits between 1 and 0. The entered pattern is transmitted through the loopback.
2. Check that the **IM Output Status** cell matches the applied Test Pattern.
3. Check that all 8 bits in the **IM Input Status** cell are zero.

6.2.2 INTERMICOM CHANNEL DIAGNOSTICS

Check that the following cells in the *INTERMICOM COMMS* column all read **OK**.

- **Data CD Status**
- **FrameSync Status**
- **Message Status**
- **Channel Status**

6.2.3 SIMULATING A CHANNEL FAILURE

1. Simulate a failure of the communications link by breaking a connection and checking that some of these cells show **Fail**.
2. Restore the communications loopback and ensure that the four diagnostic cells display **OK**.

Note:

*Some or all of these cells show **Fail** depending on the communications configuration and the way the link has failed.*

7 SETTING CHECKS

The setting checks ensure that all of the application-specific settings (both the IED's function and programmable scheme logic settings) have been correctly applied.

Note:

If applicable, the trip circuit should remain isolated during these checks to prevent accidental operation of the associated circuit breaker.

7.1 APPLY APPLICATION-SPECIFIC SETTINGS

There are two different methods of applying the settings to the IED

- Transferring settings to the IED from a pre-prepared setting file using MiCOM S1 Agile
- Enter the settings manually using the IED's front panel HMI

7.1.1 TRANSFERRING SETTINGS FROM A SETTINGS FILE

This is the preferred method for transferring function settings. It is much faster and there is a lower margin for error.

1. Connect a PC running the Settings Application Software to the IED's front port, or a rear Ethernet port. Alternatively connect to the rear Courier communications port, using a KITZ protocol converter if necessary.
2. Power on the IED
3. Enter the IP address of the device if it is Ethernet enabled
4. Right-click the appropriate device name in the System Explorer pane and select **Send**
5. In the **Send to** dialog select the setting files and click **Send**

Note:

*The device name may not already exist in the system shown in **System Explorer**. In this case, perform a **Quick Connect** to the IED, then manually add the settings file to the device name in the system. Refer to the Settings Application Software help for details of how to do this.*

7.1.2 ENTERING SETTINGS USING THE HMI

1. Starting at the default display, press the Down cursor key to show the first column heading.
2. Use the horizontal cursor keys to select the required column heading.
3. Use the vertical cursor keys to view the setting data in the column.
4. To return to the column header, either press the Up cursor key for a second or so, or press the **Cancel** key once. It is only possible to move across columns at the column heading level.
5. To return to the default display, press the Up cursor key or the Cancel key from any of the column headings. If you use the auto-repeat function of the Up cursor key, you cannot go straight to the default display from one of the column cells because the auto-repeat stops at the column heading.
6. To change the value of a setting, go to the relevant cell in the menu, then press the **Enter** key to change the cell value. A flashing cursor on the LCD shows that the value can be changed. You may be prompted for a password first.
7. To change the setting value, press the vertical cursor keys. If the setting to be changed is a binary value or a text string, select the required bit or character to be changed using the left and right cursor keys.

8. Press the **Enter** key to confirm the new setting value or the **Clear** key to discard it. The new setting is automatically discarded if it is not confirmed within 15 seconds.
9. For protection group settings and disturbance recorder settings, the changes must be confirmed before they are used. When all required changes have been entered, return to the column heading level and press the down cursor key. Before returning to the default display, the following prompt appears.

Update settings?
ENTER or CLEAR

10. Press the **Enter** key to accept the new settings or press the **Clear** key to discard the new settings.

Note:

If the menu time-out occurs before the setting changes have been confirmed, the setting values are also discarded. Control and support settings are updated immediately after they are entered, without the Update settings prompt. It is not possible to change the PSL using the IED's front panel HMI.



Caution:

Where the installation needs application-specific PSL, the relevant .psl files, must be transferred to the IED, for each and every setting group that will be used. If you do not do this, the factory default PSL will still be resident. This may have severe operational and safety consequences.

8 PROTECTION TIMING CHECKS

There is no need to check every protection function. Only one protection function needs to be checked as the purpose is to verify the timing on the processor is functioning correctly.

8.1 OVERCURRENT CHECK

If the overcurrent protection function is being used, test the overcurrent protection for stage 1.

1. Check for any possible dependency conditions and simulate as appropriate.
2. In the *CONFIGURATION* column, disable all protection elements other than the one being tested.
3. Make a note of which elements need to be re-enabled after testing.
4. Connect the test circuit.
5. Perform the test.
6. Check the operating time.

8.2 CONNECTING THE TEST CIRCUIT

1. Use the PSL to determine which output relay will operate when an overcurrent trip occurs.
2. Use the output relay assigned to **Trip Output A**.
3. Use the PSL to map the protection stage under test directly to an output relay.

Note:

If using the default PSL, use output relay 3 as this is already mapped to the DDB signal Trip Command Out.

Note:

If the timer does not stop when the current is applied and stage 1 has been set for directional operation, the connections may be incorrect for the direction of operation set. Try again with the current connections reversed.

8.3 PERFORMING THE TEST

1. Ensure that the timer is reset.
2. Apply a current of twice the setting shown in the **I>1 Current Set** cell in the *OVERCURRENT* column.
3. Note the time displayed when the timer stops.
4. Check that the red trip LED has illuminated.

8.4 CHECK THE OPERATING TIME

Check that the operating time recorded by the timer is within the range shown below.

For all characteristics, allowance must be made for the accuracy of the test equipment being used.

Characteristic	Operating time at twice current setting and time multiplier/ time dial setting of 1.0	
	Nominal (seconds)	Range (seconds)
DT	I>1 Time Delay setting	Setting $\pm 2\%$
IEC S Inverse	10.03	9.53 - 10.53
IEC V Inverse	13.50	12.83 - 14.18
IEC E Inverse	26.67	24.67 - 28.67
UK LT Inverse	120.00	114.00 - 126.00

Characteristic	Operating time at twice current setting and time multiplier/ time dial setting of 1.0	
	Nominal (seconds)	Range (seconds)
IEEE M Inverse	3.8	3.61 - 4.0
IEEE V Inverse	7.03	6.68 - 7.38
IEEE E Inverse	9.50	9.02 - 9.97
US Inverse	2.16	2.05 - 2.27
US ST Inverse	12.12	11.51 - 12.73

Note:

With the exception of the definite time characteristic, the operating times given are for a Time Multiplier Setting (TMS) or Time Dial Setting (TDS) of 1. For other values of TMS or TDS, the values need to be modified accordingly.

Note:

For definite time and inverse characteristics there is an additional delay of up to 0.02 second and 0.08 second respectively. You may need to add this the IED's acceptable range of operating times.

**Caution:**

On completion of the tests, you must restore all settings to customer specifications.

9 SYSTEM CHECK AND CHECK SYNCHRONISM

This function performs a comparison between the line voltage and the bus voltage.

For a single circuit breaker application, there are two voltage inputs to compare:

- one from the voltage transformer input from the line side of the circuit breaker (Main VT)
- one from the VT on the bus side of the circuit breaker (CS VT).

For a dual circuit breaker installation (breaker-and-a-half switch or mesh/ring bus), three VT inputs are required:

- one from the common point of the two circuit breakers, identified as the line (Main VT)
- one from the bus side of CB1 (CB1 CS VT)
- one from the bus side of CB2 (CB2 CS VT)

In most cases the line VT input is three phase, whereas the bus VTs are single phase.

The bus VT inputs are normally single phase so the system voltage checks are made on single phases and the VT may be connected to either a phase-to-phase or phase to neutral voltage.

For these reasons, the IED has to be programmed with the appropriate connection. The **CS Input** setting in the **CT AND VT RATIOS** column can be set to A-N, B-N, C-N, A-B, B-C or C-A according to the application.

The single-phase bus VT inputs each have associated phase shift and voltage magnitude compensation settings to compensate for healthy voltage angle and magnitude differences between the check sync VT input and the selected main VT reference phase. These are:

- **CB1 CS VT PhShft, CB1 CS VT Mag, CB2 CS VT PhShft, CB2 CS VT Mag**

Any voltage measurements or comparisons using bus VT inputs are made using the compensated values.

Each circuit breaker controlled can have two stages of check synchronism enabled according to the settings:

- **Sys Checks CB1, CB1 CS1 Status, CB1 CS2 Status, Sys Checks CB2, CB2 CS1 Status, CB1 CS2 Status**

When the system voltage check conditions are satisfied, the relevant DDB signals are asserted high as follows:

- DDB (883): **CB1 CS1 OK**
- DDB (884): **CB1 CS2 OK**
- DDB (1577): **CB2 CS1 OK**
- DDB (1463): **CB2 CS2 OK**

These DDB signals should be mapped to the monitor/download port and used to indicate that the system check synchronism condition has been satisfied.

9.1 CHECK SYNCHRONISM PASS

1. Taking note of the check synchronism settings, identify the appropriate VT input terminals and inject voltage signals that should satisfy the system voltage check synchronism criteria.
2. Check that the DDB signals are asserted high.

9.2 CHECK SYNCHRONISM FAIL

1. Change the voltage signals so that the criteria are not satisfied
2. Check that the appropriate DDB signals are driven low

10 CHECK TRIP AND AUTORECLOSE CYCLE

If the auto-reclose function is being used, the circuit breaker trip and auto reclose cycle can be tested automatically by using the application-specific settings.

To test the trip and close operation without operating the breaker, the following conditions must be satisfied:

- The **CB Healthy** DDB signal should either not be mapped, or if it is mapped it must be asserted high.
 - The CB status inputs (52A, etc.) should either not be mapped, or if they are mapped they should be activated to mimic the circuit breaker operation.
 - Some models can be configured for single-pole tripping. If configured for single pole tripping, either set *CT/VT RATIO > VT Connected* to *No*, or apply appropriate voltage signals to prevent the pole dead logic from converting to 3-pole tripping.
1. To test the first three-phase auto-reclose cycle, set *COMMISSION TESTS > Test Autoreclose* to *Trip 3 Pole*. The IED performs a trip/reclose cycle.
 2. Repeat this operation to test the subsequent three-phase auto-reclose cycles.
 3. Check all output relays (used for such as circuit breaker tripping and closing, or blocking other devices) operate at the correct times during the trip/close cycle.

Check the auto-reclose cycles for single phase trip conditions one at a time by sequentially setting *COMMISSION TESTS > Test Autoreclose* to *Trip Pole A*, *Trip Pole B* and *Trip Pole C*.

11 ONLOAD CHECKS



Warning:
Onload checks are potentially very dangerous and may only be carried out by qualified and authorised personnel.

Onload checks can only be carried out if there are no restrictions preventing the energisation of the plant, and the other devices in the group have already been commissioned.

Remove all test leads and temporary shorting links, then replace any external wiring that has been removed to allow testing.



Warning:
If any external wiring has been disconnected for the commissioning process, replace it in accordance with the relevant external connection or scheme diagram.

11.1 CONFIRM VOLTAGE CONNECTIONS

1. Using a multimeter, measure the voltage transformer secondary voltages to ensure they are correctly rated.
2. Check that the system phase rotation is correct using a phase rotation meter.
3. Compare the values of the secondary phase voltages with the measured voltage magnitude values, which can be found in the *MEASUREMENTS 1* menu column.

Cell in MEASUREMENTS 1 Column	Corresponding VT ratio in CT/VT RATIOS column
VAB MAGNITUDE	Main VT Primary / Main VT Sec'y
VBC MAGNITUDE	
VCA MAGNITUDE	
VAN MAGNITUDE	
VBN MAGNITUDE	
VCN MAGNITUDE	
C/S Voltage Mag	CS VT Primary / CS VT Secondary

If the **Local Values** cell is set to *Secondary*, the values displayed should be equal to the applied secondary voltage. The values should be within 1% of the applied secondary voltages. However, an additional allowance must be made for the accuracy of the test equipment being used.

If the **Local Values** cell is set to *Primary*, the values displayed should be equal to the applied secondary voltage multiplied the corresponding voltage transformer ratio set in the *CT & VT RATIOS* column. The values should be within 1% of the expected values, plus an additional allowance for the accuracy of the test equipment being used.

11.2 CONFIRM CURRENT CONNECTIONS

1. Measure the current transformer secondary values for each input either by:
 - a. reading from the device's HMI panel (providing it has first been verified by a secondary injection test)
 - b. using a current clamp meter
2. Check that the current transformer polarities are correct by measuring the phase angle between the current and voltage, either against a phase meter already installed on site and known to be correct or by determining the direction of power flow by contacting the system control centre.
3. Ensure the current flowing in the neutral circuit of the current transformers is negligible.

If the **Local Values** cell is set to *Secondary*, the values displayed should be equal to the applied secondary voltage. The values should be within 1% of the applied secondary voltages. However, an additional allowance must be made for the accuracy of the test equipment being used.

If the **Local Values** cell is set to *Primary*, the values displayed should be equal to the applied secondary voltage multiplied the corresponding voltage transformer ratio set in the *CT & VT RATIOS* column. The values should be within 1% of the expected values, plus an additional allowance for the accuracy of the test equipment being used.

11.3 ON-LOAD DIRECTIONAL TEST

This test ensures that directional overcurrent and fault locator functions have the correct forward/reverse response to fault and load conditions. For this test you must first know the actual direction of power flow on the system. If you do not already know this you must determine it using adjacent instrumentation or protection already in-service.

- For load current flowing in the Forward direction (power export to the remote line end), the **A Phase Watts** cell in the *MEASUREMENTS 2* column should show positive power signing.
- For load current flowing in the Reverse direction (power import from the remote line end), the **A Phase Watts** cell in the *MEASUREMENTS 2* column should show negative power signing.

Note:

This check applies only for Measurement Modes 0 (default), and 2. This should be checked in the MEASURE'T SETUP column (Measurement Mode = 0 or 2). If measurement modes 1 or 3 are used, the expected power flow signing would be opposite to that shown above.

In the event of any uncertainty, check the phase angle of the phase currents with respect to their phase voltage.

12 FINAL CHECKS

1. Remove all test leads and temporary shorting leads.
2. If you have had to disconnect any of the external wiring in order to perform the wiring verification tests, replace all wiring, fuses and links in accordance with the relevant external connection or scheme diagram.
3. The settings applied should be carefully checked against the required application-specific settings to ensure that they are correct, and have not been mistakenly altered during testing.
4. Ensure that all protection elements required have been set to **Enabled** in the *CONFIGURATION* column.
5. Ensure that the IED has been restored to service by checking that the **Test Mode** cell in the *COMMISSION TESTS* column is set to 'Disabled'.
6. If the IED is in a new installation or the circuit breaker has just been maintained, the circuit breaker maintenance and current counters should be zero. These counters can be reset using the **Reset All Values** cell. If the required access level is not active, the device will prompt for a password to be entered so that the setting change can be made.
7. If the menu language has been changed to allow accurate testing it should be restored to the customer's preferred language.
8. If a P991/MMLG test block is installed, remove the P992/MMLB test plug and replace the cover so that the protection is put into service.
9. Ensure that all event records, fault records, disturbance records, alarms and LEDs and communications statistics have been reset.

Note:

Remember to restore the language setting to the customer's preferred language on completion.

MAINTENANCE AND TROUBLESHOOTING

CHAPTER 18

1 CHAPTER OVERVIEW

The Maintenance and Troubleshooting chapter provides details of how to maintain and troubleshoot products based on the Px4x and P40Agile platforms. Always follow the warning signs in this chapter. Failure to do so may result injury or defective equipment.



Caution:

Before carrying out any work on the equipment you should be familiar with the contents of the Safety Section or the Safety Guide SFTY/4LM and the ratings on the equipment's rating label.

The troubleshooting part of the chapter allows an error condition on the IED to be identified so that appropriate corrective action can be taken.

If the device develops a fault, it is usually possible to identify which module needs replacing. It is not possible to perform an on-site repair to a faulty module.

If you return a faulty unit or module to the manufacturer or one of their approved service centres, you should include a completed copy of the Repair or Modification Return Authorization (RMA) form.

This chapter contains the following sections:

Chapter Overview	463
Maintenance	464
Troubleshooting	473

2 MAINTENANCE

2.1 MAINTENANCE CHECKS

In view of the critical nature of the application, Alstom Grid products should be checked at regular intervals to confirm they are operating correctly. Alstom Grid products are designed for a life in excess of 20 years.

The devices are self-supervising and so require less maintenance than earlier designs of protection devices. Most problems will result in an alarm, indicating that remedial action should be taken. However, some periodic tests should be carried out to ensure that they are functioning correctly and that the external wiring is intact. It is the responsibility of the customer to define the interval between maintenance periods. If your organisation has a Preventative Maintenance Policy, the recommended product checks should be included in the regular program. Maintenance periods depend on many factors, such as:

- The operating environment
- The accessibility of the site
- The amount of available manpower
- The importance of the installation in the power system
- The consequences of failure

Although some functionality checks can be performed from a remote location, these are predominantly restricted to checking that the unit is measuring the applied currents and voltages accurately, and checking the circuit breaker maintenance counters. For this reason, maintenance checks should also be performed locally at the substation.



Caution:
Before carrying out any work on the equipment you should be familiar with the contents of the Safety Section or the Safety Guide SFTY/4LM and the ratings on the equipment's rating label.

2.1.1 ALARMS

First check the alarm status LED to see if any alarm conditions exist. If so, press the Read key repeatedly to step through the alarms.

After dealing with any problems, clear the alarms. This will clear the relevant LEDs.

2.1.2 OPTO-ISOLATORS

Check the opto-inputs by repeating the commissioning test detailed in the Commissioning chapter.

2.1.3 OUTPUT RELAYS

Check the output relays by repeating the commissioning test detailed in the Commissioning chapter.

2.1.4 MEASUREMENT ACCURACY

If the power system is energised, the measured values can be compared with known system values to check that they are in the expected range. If they are within a set range, this indicates that the A/D conversion and the calculations are being performed correctly. Suitable test methods can be found in Commissioning chapter.

Alternatively, the measured values can be checked against known values injected into the device using the test block, (if fitted) or injected directly into the device's terminals. Suitable test methods can be found in the Commissioning chapter. These tests will prove the calibration accuracy is being maintained.

2.2 REPLACING THE DEVICE

If your product should develop a fault while in service, depending on the nature of the fault, the watchdog contacts will change state and an alarm condition will be flagged. In the case of a fault, you can replace either the complete device or just the faulty PCB, identified by the in-built diagnostic software.

If possible you should replace the complete device, as this reduces the chance of damage due to electrostatic discharge and also eliminates the risk of fitting an incompatible replacement PCB. However, we understand it may be difficult to remove an installed product and you may be forced to replace the faulty PCB on-site. The case and rear terminal blocks are designed to allow removal of the complete device, without disconnecting the scheme wiring.



Caution:
Replacing PCBs requires the correct on-site environment (clean and dry) as well as suitably trained personnel.



Caution:
If the repair is not performed by an approved service centre, the warranty will be invalidated.



Caution:
Before carrying out any work on the equipment, you should be familiar with the contents of the Safety Information section of this guide or the Safety Guide SFTY/4LM, as well as the ratings on the equipment's rating label. This should ensure that no damage is caused by incorrect handling of the electronic components.



Warning:
Before working at the rear of the device, isolate all voltage and current supplying it.

Note:

The current transformer inputs are equipped with integral shorting switches which will close for safety reasons, when the terminal block is removed.

To replace the complete device:

1. Carefully disconnect the cables not connected to the terminal blocks (e.g. IRIG-B, fibre optic cables, earth), as appropriate, from the rear of the device.
2. Remove the terminal block screws using a magnetic screwdriver to minimise the risk of losing the screws or leaving them in the terminal block.
3. Without exerting excessive force or damaging the scheme wiring, pull the terminal blocks away from their internal connectors.
4. Remove the terminal block screws that fasten the device to the panel and rack. These are the screws with the larger diameter heads that are accessible when the access covers are fitted and open.
5. Withdraw the device from the panel and rack. Take care, as the device will be heavy due to the internal transformers.
6. To reinstall the device, follow the above instructions in reverse, ensuring that each terminal block is relocated in the correct position and the chassis ground, IRIG-B and fibre optic connections are replaced. The terminal blocks are labelled alphabetically with 'A' on the left hand side when viewed from the rear.

Once the device has been reinstalled, it should be re-commissioned as set out in the Commissioning chapter.



Caution:

If the top and bottom access covers have been removed, some more screws with smaller diameter heads are made accessible. Do NOT remove these screws, as they secure the front panel to the device.

Note:

There are four possible types of terminal block: RTD/CLIO input, heavy duty, medium duty, and MiDOS. The terminal blocks are fastened to the rear panel with slotted or cross-head screws depending on the type of terminal block. Not all terminal block types are present on all products.

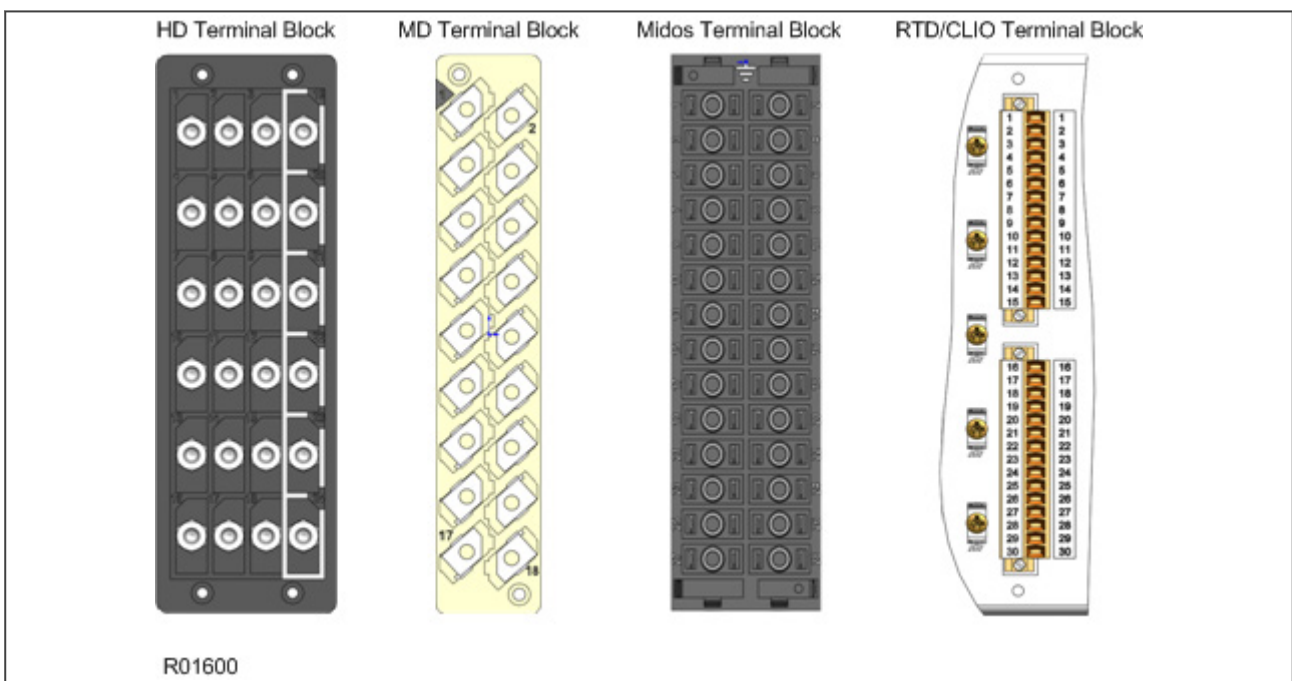


Figure 188: Possible terminal block types

2.3 REPAIRING THE DEVICE

If your product should develop a fault while in service, depending on the nature of the fault, the watchdog contacts will change state and an alarm condition will be flagged. In the case of a fault, either the complete unit or just the faulty PCB, identified by the in-built diagnostic software, should be replaced.

Replacement of printed circuit boards and other internal components must be undertaken by approved Service Centres. Failure to obtain the authorization of after-sales engineers prior to commencing work may invalidate the product warranty.

We recommend that you entrust any repairs to Automation Support teams, which are available world-wide.

2.4 REMOVING THE FRONT PANEL



Warning:

Before removing the front panel to replace a PCB, you must first remove the auxiliary power supply and wait 5 seconds for the internal capacitors to discharge. You should also isolate voltage and current transformer connections and trip circuit.



Caution:

Before removing the front panel, you should be familiar with the contents of the Safety Information section of this guide or the Safety Guide SFTY/4LM, as well as the ratings on the equipment's rating label.

To remove the front panel:

1. Open the top and bottom access covers. You must open the hinged access covers by more than 90° before they can be removed.
2. If fitted, remove the transparent secondary front cover.
3. Apply outward pressure to the middle of the access covers to bow them and disengage the hinge lug, so the access cover can be removed. The screws that fasten the front panel to the case are now accessible.
4. Undo and remove the screws. The 40TE case has four cross-head screws fastening the front panel to the case, one in each corner, in recessed holes. The 60TE/80TE cases have an additional two screws, one midway along each of the top and bottom edges of the front plate.
5. When the screws have been removed, pull the complete front panel forward to separate it from the metal case. The front panel is connected to the rest of the circuitry by a 64-way ribbon cable.
6. The ribbon cable is fastened to the front panel using an IDC connector; a socket on the cable and a plug with locking latches on the front panel. Gently push the two locking latches outwards which eject the connector socket slightly. Remove the socket from the plug to disconnect the front panel.



Caution:

Do not remove the screws with the larger diameter heads which are accessible when the access covers are fitted and open. These screws hold the relay in its mounting (panel or cubicle).



Caution:

The internal circuitry is now exposed and is not protected against electrostatic discharge and dust ingress. Therefore ESD precautions and clean working conditions must be maintained at all times.

2.5 REPLACING PCBs

1. To replace any of the PCBs, first remove the front panel.
2. Once the front panel has been removed, the PCBs are accessible. The numbers above the case outline identify the guide slot reference for each printed circuit board. Each printed circuit board has a label stating the corresponding guide slot number to ensure correct relocation after removal. To serve as a reminder of the slot numbering there is a label on the rear of the front panel metallic screen.
3. Remove the 64-way ribbon cable from the PCB that needs replacing
4. Remove the PCB in accordance with the board-specific instructions detailed later in this section.

Note:

To ensure compatibility, always replace a faulty PCB with one of an identical part number.

2.5.1 REPLACING THE MAIN PROCESSOR BOARD

The main processor board is situated in the front panel. This board contains application-specific settings in its non-volatile memory. You may wish to take a backup copy of these settings. This could save time in the re-commissioning process.

To replace the main processor board:

1. Remove front panel.
2. Place the front panel with the user interface face down and remove the six screws from the metallic screen, as shown in the figure below. Remove the metal plate.
3. Remove the two screws either side of the rear of the battery compartment recess. These are the screws that hold the main processor board in position.
4. Carefully disconnect the ribbon cable. Take care as this could easily be damaged by excessive twisting.
5. Replace the main processor board
6. Reassemble the front panel using the reverse procedure. Make sure the ribbon cable is reconnected to the main processor board and that all eight screws are refitted.
7. Refit the front panel.
8. Refit and close the access covers then press the hinge assistance T-pieces so they click back into the front panel moulding.
9. Once the unit has been reassembled, carry out the standard commissioning procedure as defined in the Commissioning chapter.

Note:

After replacing the main processor board, all the settings required for the application need to be re-entered. This may be done either manually or by downloading a settings file.

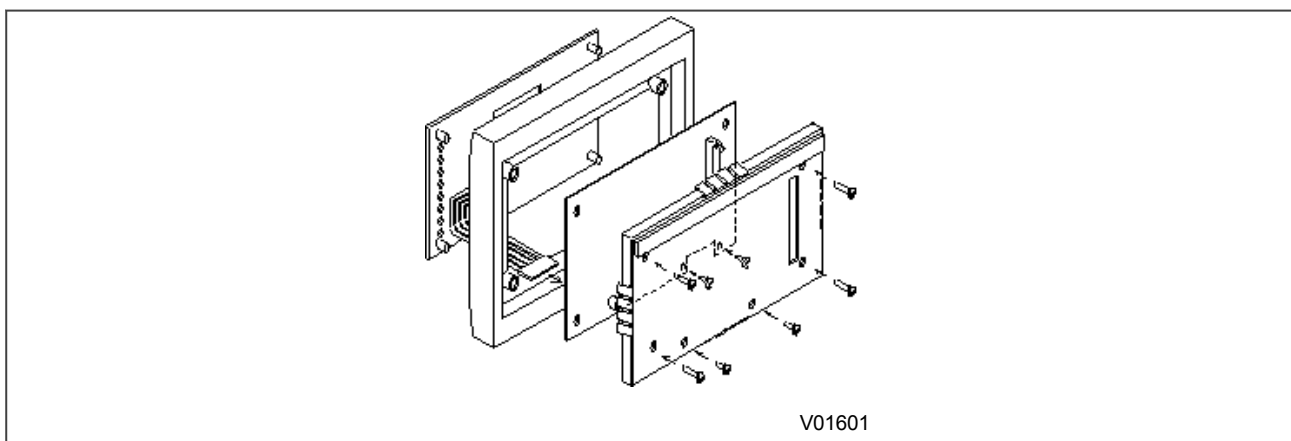


Figure 189: Front panel assembly

2.5.2 REPLACEMENT OF COMMUNICATIONS BOARDS

Most products will have at least one communications board of some sort fitted. There are several different boards available offering various functionality, depending on the application. Some products may even be fitted two boards of different types.

To replace a faulty communications board:

1. Remove front panel.
2. Disconnect all connections at the rear.
3. The board is secured in the relay case by two screws, one at the top and another at the bottom. Remove these screws carefully as they are not captive in the rear panel.
4. Gently pull the communications board forward and out of the case.
5. Before fitting the replacement PCB check that the number on the round label next to the front edge of the PCB matches the slot number into which it will be fitted. If the slot number is missing or incorrect, write the correct slot number on the label.
6. Fit the replacement PCB carefully into the correct slot. Make sure it is pushed fully back and that the securing screws are refitted.
7. Reconnect all connections at the rear.
8. Refit the front panel.
9. Refit and close the access covers then press the hinge assistance T-pieces so they click back into the front panel moulding.
10. Once the unit has been reassembled, commission it according to the Commissioning chapter.

2.5.3 REPLACEMENT OF THE INPUT MODULE

Depending on the product, the input module consists of two or three boards fastened together and is contained within a metal housing. One board contains the transformers and one contains the analogue to digital conversion and processing electronics. Some devices have an additional auxiliary transformer contained on a third board.

To replace an input module:

1. Remove front panel.
2. The module is secured in the case by two screws on its right-hand side, accessible from the front, as shown below. Move these screws carefully as they are not captive in the front plate of the module.
3. On the right-hand side of the module there is a small metal tab which brings out a handle (on some modules there is also a tab on the left). Grasp the handle(s) and pull the module firmly forward, away from the rear terminal blocks. A reasonable amount of force is needed due to the friction between the contacts of the terminal blocks.
4. Remove the module from the case. The module may be heavy, because it contains the input voltage and current transformers.
5. Slot in the replacement module and push it fully back onto the rear terminal blocks. To check that the module is fully inserted, make sure the v-shaped cut-out in the bottom plate of the case is fully visible.
6. Refit the securing screws.
7. Refit the front panel.
8. Refit and close the access covers then press the hinge assistance T-pieces so they click back into the front panel moulding.
9. Once the unit has been reassembled, commission it according to the Commissioning chapter.



Caution:
With non-mounted IEDs, the case needs to be held firmly while the module is withdrawn. Withdraw the input module with care as it suddenly comes loose once the friction of the terminal blocks is overcome.

Note:

If individual boards within the input module are replaced, recalibration will be necessary. We therefore recommend replacement of the complete module to avoid on-site recalibration.

2.5.4 REPLACEMENT OF THE POWER SUPPLY BOARD



Caution:
Before removing the front panel, you should be familiar with the contents of the Safety Information section of this guide or the Safety Guide SFTY/4LM, as well as the ratings on the equipment's rating label.

The power supply board is fastened to an output relay board with push fit nylon pillars. This doubled-up board is secured on the extreme left hand side, looking from the front of the unit.

1. Remove front panel.
2. Pull the power supply module forward, away from the rear terminal blocks and out of the case. A reasonable amount of force is needed due to the friction between the contacts of the terminal blocks.
3. Separate the boards by pulling them apart carefully. The power supply board is the one with two large electrolytic capacitors.
4. Before reassembling the module, check that the number on the round label next to the front edge of the PCB matches the slot number into which it will be fitted. If the slot number is missing or incorrect, write the correct slot number on the label
5. Reassemble the module with a replacement PCB. Push the inter-board connectors firmly together. Fit the four push fit nylon pillars securely in their respective holes in each PCB.
6. Slot the power supply module back into the housing. Push it fully back onto the rear terminal blocks.
7. Refit the front panel.
8. Refit and close the access covers then press the hinge assistance T-pieces so they click back into the front panel moulding.
9. Once the unit has been reassembled, commission it according to the Commissioning chapter.

2.5.5 REPLACEMENT OF THE I/O BOARDS

There are several different types of I/O boards, which can be used, depending on the product and application. Some boards have opto-inputs, some have relay outputs and others have a mixture of both.

1. Remove front panel.
2. Gently pull the board forward and out of the case
3. If replacing the I/O board, make sure the setting of the link above IDC connector on the replacement board is the same as the one being replaced.
4. Before fitting the replacement board check the number on the round label next to the front edge of the board matches the slot number into which it will be fitted. If the slot number is missing or incorrect, write the correct slot number on the label.
5. Carefully slide the replacement board into the appropriate slot, ensuring that it is pushed fully back onto the rear terminal blocks.

6. Refit the front panel.
7. Refit and close the access covers then press at the hinge assistance T-pieces so they click back into the front panel moulding.
8. Once the unit has been reassembled, commission it according to the Commissioning chapter.

2.6 RECALIBRATION

Recalibration is not needed when a PCB is replaced, unless it is one of the boards in the input module. If any of the boards in the input module is replaced, the unit must be recalibrated.

Although recalibration is needed when a board inside the input module is replaced, it is not needed if the input module is replaced in its entirety.

Although it is possible to carry out recalibration on site, this requires special test equipment and software. We therefore recommend that the work be carried out by the manufacturer, or entrusted to an approved service centre.

2.7 CHANGING THE BATTERY

Each IED has a battery to maintain status data and the correct time when the auxiliary supply voltage fails. The data maintained includes event, fault and disturbance records and the thermal state at the time of failure.

As part of the product's continuous self-monitoring, an alarm is given if the battery condition becomes poor. Nevertheless, you should change the battery periodically to ensure reliability.

To replace the battery:

1. Open the bottom access cover on the front of the relay.
2. Gently remove the battery. If necessary, use a small insulated screwdriver.
3. Make sure the metal terminals in the battery socket are free from corrosion, grease and dust.
4. Remove the replacement battery from its packaging and insert it in the battery holder, ensuring correct polarity.
5. Ensure that the battery is held securely in its socket and that the battery terminals make good contact with the socket terminals.
6. Close the bottom access cover.



Caution:

Only use a type ½AA Lithium battery with a nominal voltage of 3.6 V and safety approvals such as UL (Underwriters Laboratory), CSA (Canadian Standards Association) or VDE (Vereinigung Deutscher Elektrizitätswerke).

Note:

Events, disturbance and maintenance records will be lost if the battery is replaced whilst the IED is de-energised.

2.7.1 POST MODIFICATION TESTS

To ensure that the replacement battery maintains the time and status data if the auxiliary supply fails, scroll across to the *DATE AND TIME* cell, then scroll down to Battery Status which should read Healthy.

2.7.2 BATTERY DISPOSAL

Dispose of the removed battery according to the disposal procedure for Lithium batteries in the country in which the relay is installed.

2.8 CLEANING



Warning:
Before cleaning the device, ensure that all AC and DC supplies and transformer connections are isolated, to prevent any chance of an electric shock while cleaning.

Only clean the equipment with a lint-free cloth dampened with clean water. Do not use detergents, solvents or abrasive cleaners as they may damage the product's surfaces and leave a conductive residue.

3 TROUBLESHOOTING

3.1 SELF-DIAGNOSTIC SOFTWARE

The device includes several self-monitoring functions to check the operation of its hardware and software while in service. If there is a problem with the hardware or software, it should be able to detect and report the problem, and attempt to resolve the problem by performing a reboot. In this case, the device would be out of service for a short time, during which the 'Healthy' LED on the front of the device is switched OFF and the watchdog contact at the rear is ON. If the restart fails to resolve the problem, the unit takes itself permanently out of service; the 'Healthy' LED stays OFF and watchdog contact stays ON.

If a problem is detected by the self-monitoring functions, the device attempts to store a maintenance record to allow the nature of the problem to be communicated to the user.

The self-monitoring is implemented in two stages: firstly a thorough diagnostic check which is performed on boot-up, and secondly a continuous self-checking operation, which checks the operation of the critical functions whilst it is in service.

3.2 POWER-UP ERRORS

If the IED does not appear to power up, use the following to determine whether the fault is in the external wiring, auxiliary fuse, IED power supply module or IED front panel.

Test	Check	Action
1	Measure the auxiliary voltage on terminals 1 and 2. Verify the voltage level and polarity against the rating label on the front. Terminal 1 is -dc, 2 is +dc	If the auxiliary voltage is correct, go to test 2. Otherwise check the wiring and fuses in the auxiliary supply.
2	Check the LEDs and LCD backlight switch on at power-up. Also check the N/O (normally open) watchdog contact for closing.	If the LEDs and LCD backlight switch on, or the contact closes and no error code is displayed, the error is probably on the main processor board in the front panel. If the LEDs and LCD backlight do not switch on and the contact does not close, go to test 3.
3	Check the output (nominally 48 V DC)	If there is no field voltage, the fault is probably in the IED power supply module.

3.3 ERROR MESSAGE OR CODE ON POWER-UP

The IED performs a self-test during power-up. If it detects an error, a message appears on the LCD and the power-up sequence stops. If the error occurs when the IED application software is running, a maintenance record is created and the device reboots.

Test	Check	Action
1	Is an error message or code permanently displayed during power up?	If the IED locks up and displays an error code permanently, go to test 2. If the IED prompts for user input, go to test 4. If the IED reboots automatically, go to test 5.
2	Record displayed error, and then remove and re-apply IED auxiliary supply.	Record whether the same error code is displayed when the IED is rebooted. If no error code is displayed, contact the local service centre stating the error code and IED information. If the same code is displayed, go to test 3.

Test	Check	Action
3	<p>Error Code Identification</p> <p>The following text messages (in English) are displayed if a fundamental problem is detected, preventing the system from booting:</p> <p>Bus Fail – address lines SRAM Fail – data lines FLASH Fail format error FLASH Fail checksum Code Verify Fail</p> <p>The following hex error codes relate to errors detected in specific IED modules:</p>	These messages indicate that a problem has been detected on the IED's main processor board in the front panel.
3.1	0c140005/0c0d0000	Input Module (including opto-isolated inputs)
3.2	0c140006/0c0e0000	Output IED Cards
3.3	The last four digits provide details on the actual error.	Other error codes relate to hardware or software problems on the main processor board. Contact with details of the problem for a full analysis.
4	The IED displays a message for corrupt settings and prompts for the default values to be restored for the affected settings.	The power-up tests have detected corrupted IED settings. Restore the default settings to allow the power-up to complete, and then reapply the application-specific settings.
5	The IED resets when the power-up is complete. A record error code is displayed	<p>Error 0x0E080000, programmable scheme logic error due to excessive execution time. Restore the default settings by powering up with both horizontal cursor keys pressed, then confirm restoration of defaults at the prompt using the Enter key. If the IED powers up successfully, check the programmable logic for feedback paths.</p> <p>Other error codes relate to software errors on the main processor board, contact .</p>

3.4 OUT OF SERVICE LED ON AT POWER-UP

Test	Check	Action
1	Using the IED menu, confirm the Commission Test or Test Mode setting is Enabled. If it is not Enabled, go to test 2.	If the setting is Enabled, disable the test mode and make sure the Out of Service LED is OFF.
2	Select the <i>VIEW RECORDS</i> column then view the last maintenance record from the menu.	<p>Check for the H/W Verify Fail maintenance record. This indicates a discrepancy between the IED model number and the hardware. Examine the Maint Data cell. This indicates the causes of the failure using bit fields:</p> <p>Bit Meaning</p>
		0 The application type field in the model number does not match the software ID
		1 The application field in the model number does not match the software ID
		2 The variant 1 field in the model number does not match the software ID
		3 The variant 2 field in the model number does not match the software ID
		4 The protocol field in the model number does not match the software ID
		5 The language field in the model number does not match the software ID
		6 The VT type field in the model number is incorrect (110 V VTs fitted)
		7 The VT type field in the model number is incorrect (440 V VTs fitted)

Test	Check	Action
		8 The VT type field in the model number is incorrect (no VTs fitted)

3.5 ERROR CODE DURING OPERATION

The IED performs continuous self-checking. If the IED detects an error it displays an error message, logs a maintenance record and after a short delay resets itself. A permanent problem (for example due to a hardware fault) is usually detected in the power-up sequence. In this case the IED displays an error code and halts. If the problem was transient, the IED reboots correctly and continues operation. By examining the maintenance record logged, the nature of the detected fault can be determined.

3.5.1 BACKUP BATTERY

If the IED's self-check detects a failure of the lithium battery, the IED displays an alarm message and logs a maintenance record but the IED does not reset.

To prevent the IED from issuing an alarm when there is a battery failure, select *DATE AND TIME* then **Battery Alarm** then *Disabled*. The IED can then be used without a battery and no battery alarm message appears.

3.6 MAL-OPERATION DURING TESTING

3.6.1 FAILURE OF OUTPUT CONTACTS

An apparent failure of the relay output contacts can be caused by the configuration. Perform the following tests to identify the real cause of the failure. The self-tests verify that the coils of the output relay contacts have been energized. An error is displayed if there is a fault in the output relay board.

Test	Check	Action
1	Is the Out of Service LED ON?	If this LED is ON, the relay may be in test mode or the protection has been disabled due to a hardware verify error.
2	Examine the Contact status in the Commissioning section of the menu.	If the relevant bits of the contact status are operated, go to test 4; if not, go to test 3.
3	Examine the fault record or use the test port to check the protection element is operating correctly.	If the protection element does not operate, check the test is correctly applied. If the protection element operates, check the programmable logic to make sure the protection element is correctly mapped to the contacts.
4	Using the Commissioning or Test mode function, apply a test pattern to the relevant relay output contacts. Consult the correct external connection diagram and use a continuity tester at the rear of the relay to check the relay output contacts operate.	If the output relay operates, the problem must be in the external wiring to the relay. If the output relay does not operate the output relay contacts may have failed (the self-tests verify that the relay coil is being energized). Ensure the closed resistance is not too high for the continuity tester to detect.

3.6.2 FAILURE OF OPTO-INPUTS

The opto-isolated inputs are mapped onto the IED's internal DDB signals using the programmable scheme logic. If an input is not recognised by the scheme logic, use the **Opto I/P Status** cell in the *COMMISSION TESTS* column to check whether the problem is in the opto-input itself, or the mapping of its signal to the scheme logic functions.

If the device does not correctly read the opto-input state, test the applied signal. Verify the connections to the opto-input using the wiring diagram and the nominal voltage settings in the *OPTO CONFIG* column. To do this:

1. Select the nominal voltage for all opto-inputs by selecting one of the five standard ratings in the **Global Nominal V** cell.
2. Select *Custom* to set each opto-input individually to a nominal voltage.
3. Using a voltmeter, check that the voltage on its input terminals is greater than the minimum pick-up level (See the Technical Specifications chapter for opto pick-up levels).

If the signal is correctly applied, this indicates failure of an opto-input, which may be situated on standalone opto-input board, or on an opto-input board that is part of the input module. Separate opto-input boards can simply be replaced. If, however, the faulty opto-input board is part of the input module, the complete input module should be replaced. This is because the analogue input module cannot be individually replaced without dismantling the module and recalibration of the IED.

3.6.3 INCORRECT ANALOGUE SIGNALS

If the measured analogue quantities do not seem correct, use the measurement function to determine the type of problem. The measurements can be configured in primary or secondary terms.

1. Compare the displayed measured values with the actual magnitudes at the terminals.
2. Check the correct terminals are used.
3. Check the CT and VT ratios set are correct.
4. Check the phase displacement to confirm the inputs are correctly connected.

3.7 COPROCESSOR BOARD FAILURES

If a coprocessor board is used, this may cause the IED to report one or more of the following alarms:

- Signalling failure alarm (on its own)
- C diff failure (on its own)
- Signalling failure and C diff failure together
- Incompatible IED
- Comms changed
- IEEE C37.94 fail

3.7.1 SIGNALLING FAILURE ALARM (ON ITS OWN)

This indicates that there is a problem with one of the fibre-optic signalling channels. This alarm can occur in dual redundant or three terminal schemes. The fibre may have been disconnected, the device may have been incorrectly configured at one of the ends, or there is a problem with the communications equipment. Further information about the status of the signalling channels can be found in *MEASUREMENTS 4* column.

3.7.2 C DIFF FAILURE ALARM (ON ITS OWN)

This indicates there is a problem with the Coprocessor board. As a result the current differential/distance protection is not available and backup protection will operate, if configured to do so. Further information can be found in the maintenance records.

3.7.3 SIGNALLING FAILURE AND C DIFF FAILURE ALARMS TOGETHER

This indicates that there is a problem with one or both fibre-optic signalling channels. The fibre may have been disconnected, the device may have been incorrectly configured at one of the ends, or there is a problem with the communications equipment. As a result the current differential protection is not available

and backup protection will operate, if configured to do so. Further information about the status of the signalling channels can be found in *MEASUREMENTS 4* column.

3.7.4 INCOMPATIBLE IED

This occurs if the IEDs trying to communicate with each other are of incompatible types.

3.7.5 COMMS CHANGED

This indicates that the **Comms Mode** setting has been changed without a subsequent power off and on.

3.7.6 IEEE C37.94 FAIL

This indicates a Signal Lost, a Path Yellow (indicating a fault on the communications channel) or a mismatch in the number of N*64 channels used on either channel 1 or channel 2. Further information can be found in the *MEASUREMENTS 4* column.

3.8 PSL EDITOR TROUBLESHOOTING

A failure to open a connection could be due to one or more of the following:

- The IED address is not valid (this address is always 1 for the front port)
- Password is not valid
- Communication set-up (COM port, Baud rate, or Framing) is not correct
- Transaction values are not suitable for the IED or the type of connection
- The connection cable is not wired correctly or broken
- The option switches on any protocol converter used may be incorrectly set

3.8.1 DIAGRAM RECONSTRUCTION

Although a scheme can be extracted from an IED, a facility is provided to recover a scheme if the original file is unobtainable.

A recovered scheme is logically correct but much of the original graphical information is lost. Many signals are drawn in a vertical line down the left side of the canvas. Links are drawn orthogonally using the shortest path from A to B. Any annotation added to the original diagram such as titles and notes are lost.

Sometimes a gate type does not appear as expected. For example, a single-input AND gate in the original scheme appears as an OR gate when uploaded. Programmable gates with an inputs-to-trigger value of 1 also appear as OR gates

3.8.2 PSL VERSION CHECK

The PSL is saved with a version reference, time stamp and CRC check (Cyclic Redundancy Check). This gives a visual check whether the default PSL is in place or whether a new application has been downloaded.

3.9 REPAIR AND MODIFICATION PROCEDURE

Please follow these steps to return an Automation product to us:

1. Get the Repair and Modification Return Authorization (RMA) form
An electronic version of the RMA form is available from the following web page:
<http://www.alstom.com/grid/productrepair/>
2. Fill in the RMA form
Fill in only the white part of the form.
Please ensure that all fields marked **(M)** are completed such as:
 - Equipment model
 - Model No. and Serial No.
 - Description of failure or modification required (please be specific)
 - Value for customs (in case the product requires export)
 - Delivery and invoice addresses
 - Contact details
3. Send the RMA form to your local contact
For a list of local service contacts worldwide, visit the following web page:
<http://www.alstom.com/grid/productrepair/>
4. The local service contact provides the shipping information
Your local service contact provides you with all the information needed to ship the product:
 - Pricing details
 - RMA number
 - Repair centre address

If required, an acceptance of the quote must be delivered before going to the next stage.
5. Send the product to the repair centre
 - Address the shipment to the repair centre specified by your local contact
 - Make sure all items are packaged in an anti-static bag and foam protection
 - Make sure a copy of the import invoice is attached with the returned unit
 - Make sure a copy of the RMA form is attached with the returned unit
 - E-mail or fax a copy of the import invoice and airway bill document to your local contact.

TECHNICAL SPECIFICATIONS

CHAPTER 19

1 CHAPTER OVERVIEW

This chapter describes the technical specifications of the product.

This chapter contains the following sections:

Chapter Overview	481
Interfaces	482
Protection Functions	486
Monitoring, Control and Supervision	490
Measurements and Recording	492
Ratings	493
Input / Output Connections	496
Mechanical Specifications	498
Type Tests	499
Environmental Conditions	500
Electromagnetic Compatibility	501
Standards Compliance	504

2 INTERFACES

2.1 FRONT SERIAL PORT

Front serial port (SK1)	
Use	For local connection to laptop for configuration purposes
Standard	EIA(RS)232
Designation	SK1
Connector	9 pin D-type female connector
Isolation	Isolation to ELV level
Protocol	Courier
Constraints	Maximum cable length 15 m

2.2 DOWNLOAD/MONITOR PORT

Front download port (SK2)	
Use	For firmware downloads or monitor connection
Standard	Compatible with IEEE1284-A
Designation	SK2
Connector	25 pin D-type female connector
Isolation	Isolation to ELV level
Protocol	Proprietary
Constraints	Maximum cable length 3 m

2.3 REAR SERIAL PORT 1

Rear serial port 1 (RP1)	
Use	For SCADA communications (multi-drop)
Standard	EIA(RS)485, K-bus
Connector	General purpose block, M4 screws (2 wire)
Cable	Screened twisted pair (STP)
Supported Protocols *	Courier, IEC-60870-5-103, DNP3.0, MODBUS
Isolation	Isolation to SELV level
Constraints	Maximum cable length 1000 m

* Not all models support all protocols - see ordering options

2.4 FIBRE REAR SERIAL PORT 1

Optional fibre rear serial port (RP1)	
Main Use	Serial SCADA communications over fibre
Connector	IEC 874-10 BFOC 2.5 -(ST®) (1 each for Tx and Rx)
Fibre type	Multimode 50/125 µm or 62.5/125 µm
Supported Protocols	Courier, IEC870-5-103, DNP 3.0, MODBUS
Wavelength	850 nm

2.5 REAR SERIAL PORT 2

Optional rear serial port (RP2 /SK4)	
Use	For SCADA communications (multi-drop)
Standard	EIA(RS)485, K-bus, EIA(RS)232
Designation	SK4
Connector	9 pin D-type female connector
Cable	Screened twisted pair (STP)
Supported Protocols	Courier
Isolation	Isolation to SELV level
Constraints	Maximum cable length 1000 m for RS485 and K-bus, 15 m for RS232

2.6 OPTIONAL REAR SERIAL PORT (SK5)

Optional rear serial port (SK5) for teleprotection	
Use	For teleprotection in distance products
Standard	EIA(RS)232
Designation	SK5
Connector	9 pin D-type female connector
Cable	Screened twisted pair (STP)
Supported Protocols	InterMiCOM (IM)
Isolation	Isolation to SELV level
Constraints	Maximum cable length 15 m

2.7 IRIG-B (DEMODULATED)

IRIG-B Interface (Demodulated)	
Use	External clock synchronisation signal
Standard	IRIG 200-98 format B00X
Connector	BNC
Cable type	50 ohm coaxial
Isolation	Isolation to SELV level
Constraints	Maximum cable length 10 m
Input signal	TTL level
Input impedance	10 k ohm at dc
Accuracy	< +/- 1 s per day

2.8 IRIG-B (MODULATED)

IRIG-B Interface (Modulated)	
Use	External clock synchronisation signal
Standard	IRIG 200-98 format B12X
Connector	BNC
Cable type	50 ohm coaxial

IRIG-B Interface (Modulated)	
Isolation	Isolation to SELV level
Constraints	Maximum cable length 10 m
Input signal	peak to peak, 200 mV to 20 mV
Input impedance	6 k ohm at 1000 Hz
Accuracy	< +/- 1 s per day

2.9 REAR ETHERNET PORT COPPER

Rear Ethernet port using CAT 5/6/7 wiring	
Main Use	Substation Ethernet communications
Standard	IEEE 802.3 10BaseT/100BaseTX
Connector	RJ45
Cable type	Screened twisted pair (STP)
Isolation	1.5 kV
Supported Protocols	IEC 61850, DNP3.0 OE
Constraints	Maximum cable length 100 m

2.10 REAR ETHERNET PORT FIBRE

Rear Ethernet port using fibre-optic cabling	
Main Use	Substation Ethernet communications
Connector	IEC 874-10 BFOC 2.5 –(ST®) (1 each for Tx and Rx)
Standard	IEEE 802.3 100 BaseFX
Fibre type	Multimode 50/125 µm or 62.5/125 µm
Supported Protocols	IEC 61850, DNP3.0
Optional Redundancy Protocols Supported	Rapid spanning tree protocol (RSTP) Self-healing protocol (SHP) Dual homing protocol (DHP) Parallel Redundancy Protocol (PRP)
Wavelength	1300 nm

2.10.1 100 BASE FX RECEIVER CHARACTERISTICS

Parameter	Sym	Min.	Typ.	Max.	Unit
Input Optical Power Minimum at Window Edge	PIN Min. (W)		-33.5	-31	dBm avg.
Input Optical Power Minimum at Eye Center	PIN Min. (C)		-34.5	-31.8	Bm avg.
Input Optical Power Maximum	PIN Max.	-14	-11.8		dBm avg.

Conditions: TA = 0°C to 70°C

2.10.2 100 BASE FX TRANSMITTER CHARACTERISTICS

Parameter	Sym	Min.	Typ.	Max.	Unit
Output Optical Power BOL 62.5/125 μm NA = 0.275 Fibre EOL	PO	-19 -20	-16.8	-14	dBm avg.
Output Optical Power BOL 50/125 μm NA = 0.20 Fibre EOL	PO	-22.5 -23.5	-20.3	-14	dBm avg.
Optical Extinction Ratio				10 -10	% dB
Output Optical Power at Logic "0" State	PO			-45	dBm avg.

Conditions: TA = 0°C to 70°C

3 PROTECTION FUNCTIONS

3.1 AUTORECLOSE AND CHECK SYNCHRONISM

Accuracy	
Timers	+/- 20 ms or 2%, whichever is greater

3.2 THREE-PHASE OVERCURRENT PROTECTION

Accuracy	
IDMT pick-up	1.05 x Setting +/-5%
DT pick-up	Setting +/-5%
Drop-off (IDMT and DT)	0.95 x setting +/-5%
IDMT operate	+/-5% of expected operating time or 40 ms, whichever is greater*
IEEE reset	+/-5% or 40 ms, whichever is greater
DT operate	+/-2% of setting or 40 ms, whichever is greater
DT reset	Setting +/-5%
Repeatability	<5%
Characteristic UK	IEC 60255-3 1998
Characteristic US	IEEE C37.112 1996

Note:

*Reference conditions: $TMS = 1$, $TD = 7$, $I > = 1A$, operating range = $2-20I_n$

3.2.1 TRANSIENT OVERREACH AND OVERSHOOT

Additional tolerance due to increasing X/R ratios	+/-5% over the X/R ratio of 1 to 90
Overshoot of overcurrent elements	< 30 ms

3.2.2 THREE-PHASE OVERCURRENT DIRECTIONAL PARAMETERS

Directional boundary pickup (RCA +/-90%)	+/-2°
Directional boundary hysteresis	< 2°
Directional boundary repeatability	<2%

3.3 EARTH FAULT PROTECTION

Accuracy	
IDMT pick-up	1.05 x Setting +/-5%
DT pick-up	Setting +/-5%, or 20 mA, whichever is greater
Drop-off (IDMT and DT)	0.95 x setting +/-5%
IDMT Operate	+/-5% or 40 ms, whichever is greater*

Accuracy	
IEEE reset	+/-10% or 40 ms, whichever is greater
Repeatability	< 5%
DT operate	+/-2% or 50 ms, whichever is greater
DT reset	+/- 5% or 50 ms, whichever is greater

Note:

Reference conditions: TMS = 1, TD = 1, IN> = 1A, operating range = 2-20In

3.3.1 EARTH FAULT DIRECTIONAL PARAMETERS

Zero Sequence Polarising accuracy	
Directional boundary pick-up (RCA +/- 90°)	+/-2°
Hysteresis	<3°
VN> pick-up	Setting+/-10%
VN> drop-off	0.9 x Setting +/-10%

Negative Sequence Polarising accuracy	
Directional boundary pick-up (RCA +/- 90°)	+/-2°
Hysteresis	<3°
VN2> pick-up	Setting+/-10%
VN2> drop-off	0.9 x Setting +/-10%
IN2> pick-up	Setting+/-10%
IN2> drop-off	0.9 x Setting +/-10%

3.4 SENSITIVE EARTH FAULT PROTECTION

IDMT pick-up	1.05 x Setting +/-5%
DT Pick-up	Setting +/- 5%
Drop-off (IDMT + DT)	0.95 x Setting +/-5%
IDMT operate	+/- 5% or 40 ms, whichever is greater*
DT operate	+/- 2% or 50 ms, whichever is greater
DT reset	Setting +/- 5% or 50 ms, whichever is greater
Repeatability	< 5%

Note:

Reference conditions: TMS = 1, TD = 1, IN> setting = 100 mA with operating range of 2-20Is.

3.4.1 SENSITIVE EARTH FAULT PROTECTION DIRECTIONAL ELEMENT

Wattmetric SEF	
Pick-up P = 0 W	ISEF > +/-5% or 5 mA
Pick-up P > 0 W	P > +/-5%

Wattmetric SEF	
Drop-off P = 0 W	0.95 x ISEF > +/- 5% or 5 mA
Drop-off P > 0 W	0.9 x P > +/- 5% or 5 mA
Boundary accuracy	+/-5% with hysteresis < 1°
Repeatability	< 1%

3.5 HIGH IMPEDANCE RESTRICTED EARTH FAULT PROTECTION

High Impedance and Low Impedance	
Pick-up	Setting formula +/- 5%
Drop-off	0.8 x Setting formula +/-5%
Operating time	< 60 ms
High set pick-up	Setting +/- 10%
High set operating time	< 30 ms
Repeatability	< 5%

3.6 NEGATIVE SEQUENCE OVERCURRENT PROTECTION

IDMT pick-up	1.05 x Setting +/-5%
DT pick-up	Setting +/- 5%
Drop-off (IDMT and DT)	0.95 x Setting +/-5%
IDMT operate	+/- 5% or 40 ms, whichever is greater
DT operate	+/- 2% or 60 ms, whichever is greater
DT Reset	Setting +/- 5%

3.6.1 NPSOC DIRECTIONAL PARAMETERS

Directional boundary pick-up (RCA +/-90%)	+/-2°
Directional boundary hysteresis	< 1°
Directional boundary repeatability	< 1%

3.7 CIRCUIT BREAKER FAIL AND UNDERCURRENT PROTECTION

I< Pick-up	Setting +/- 10% or 0.025 I _n , whichever is greater
I< Drop-off	Setting +/- 5% or 20 mA, whichever is greater
Operate time	< 12 ms
Timers	+/- 2% or 20 ms, whichever is greater
Reset time	< 15 ms

3.8 BROKEN CONDUCTOR PROTECTION

Pick-up	Setting +/- 2.5%
Drop-off	0.95 x Setting +/- 2.5%
DT operate	+/- 2% or 40 ms, whichever is greater
Reset time	<25 ms

3.9 THERMAL OVERLOAD PROTECTION

Thermal alarm pick-up	Calculated trip time +/- 10%
Thermal overload pick-up	Calculated trip time +/- 10%
Cooling time accuracy	+/- 15% of theoretical
Repeatability	<5%

Note:

Operating time measured with applied current of 20% above thermal setting.

4 MONITORING, CONTROL AND SUPERVISION

4.1 VOLTAGE TRANSFORMER SUPERVISION

Fast block operation	< 1 cycle
Fast block reset	< 1.5 cycles
Time delay	+/- 2% or 20 ms, whichever is greater

4.2 STANDARD CURRENT TRANSFORMER SUPERVISION

IN> Pick-up	Setting +/- 5%
VN< Pick-up	Setting +/- 5%
IN> Drop-off	0.9 x setting +/- 5%
VN< Drop-off	1.05 x setting +/-5% or 1 V, whichever is greater
Time delay operation	Setting +/-2% or 20 ms, whichever is greater
CTS block operation	< 1 cycle
CTS reset	< 35 ms

4.3 DIFFERENTIAL CURRENT TRANSFORMER SUPERVISION

Accuracy	
I1> Pick-up	Setting +/- 5%
I1> Drop-off	0.9 x setting +/- 5%
I2/I1> Pick-up	Setting +/- 5%
I2/I1> Drop-off	0.9 x setting +/-5%
I2/I1>> Pick-up	Setting +/- 5%
I2/I1 >> Drop-off	0.9 x setting +/-5%
Time delay operation	Setting +/-2% or 20 ms, whichever is greater
CTS block diff operation	< 1 cycle
CTS reset	< 35 ms

4.4 CB STATE AND CONDITION MONITORING

Accuracy	
Timers	+/- 40 ms or 2%, whichever is greater
Broken current accuracy	+/- 5%
Reset time	< 30 ms

4.5 PSL TIMERS

Output conditioner timer	Setting +/- 2% or 50 ms, whichever is greater
Dwell conditioner timer	Setting +/- 2% or 50 ms, whichever is greater
Pulse conditioner timer	Setting +/- 2% or 50 ms, whichever is greater

5 MEASUREMENTS AND RECORDING

5.1 GENERAL

General Measurement Accuracy	
General measurement accuracy	Typically +/- 1%, but +/- 0.5% between 0.2 - 2 In/Vn
Phase	0° to 360° +/- 0.5%
Current (0.05 to 3 In)	+/- 1.0% of reading, or 4mA (1A input), or 20mA (5A input)
Voltage (0.05 to 2 Vn)	+/- 1.0% of reading
Frequency (45 to 65 Hz)	+/- 0.025 Hz
Power (W) (0.2 to 2 Vn and 0.05 to 3 In)	+/- 5.0% of reading at unity power factor
Reactive power (Vars) (0.2 to 2 Vn and 0.05 to 3 In)	+/- 5.0% of reading at zero power factor
Apparent power (VA) (0.2 to 2 Vn and 0.05 to 3 In)	+/- 5.0% of reading
Energy (Wh) (0.2 to 2 Vn and 0.2 to 3 In)	+/- 5.0% of reading at unity power factor
Energy (Varh) (0.2 to 2 Vn and 0.2 to 3In)	+/- 5.0% of reading at zero power factor

5.2 DISTURBANCE RECORDS

Disturbance Records Measurement Accuracy	
Minimum record duration	0.1 s
Maximum record duration	10.5 s
Minimum number of records at 10.5 seconds	8
Magnitude and relative phases accuracy	+/- 5% of applied quantities
Duration accuracy	+/- 2%
Trigger position accuracy	+/- 2% (minimum Trigger 100 ms)

5.3 EVENT, FAULT AND MAINTENANCE RECORDS

Event, Fault & Maintenance Records	
Record location	Battery-backed memory
Viewing method	Front panel display or Settings Application Software
Extraction method	Extracted via the front serial port
Number of Event records	Up to 1024 time tagged event records (newest overwrites oldest)
Number of Fault Records	Up to 15
Number of Maintenance Records	Up to 10
Event time stamp resolution	1 ms

5.4 FAULT LOCATOR

Accuracy	
Fault Location	+/- 2% of line length Reference conditions: solid fault applied on line

6 RATINGS

6.1 AC MEASURING INPUTS

AC Measuring Inputs	
Nominal frequency	50 Hz or 60 Hz (settable)
Operating range	45 to 65 Hz
Phase rotation	ABC or CBA

6.2 CURRENT TRANSFORMER INPUTS

AC Current Inputs	
Nominal current (I _n)	1A or 5A
Nominal burden per phase	< 0.2 VA at I _n
AC current thermal withstand (5A input)	20 A (continuous operation) 150 A (for 10 s) 500 A (for 1 s)
AC current thermal withstand (1A input)	4 A (continuous operation) 30 A (for 10 s) 100 A (for 1 s)
Linearity	Linear up to 64 × I _n (non-offset)

6.3 VOLTAGE TRANSFORMER INPUTS

AC Voltage Inputs	
Nominal voltage	100 V to 120 V
Nominal burden per phase	< 0.1 VA at V _n
Thermal withstand	2 × V _n (continuous operation) 2.6 × V _n (for 10 seconds)
Linearity	Linear up to 200 V (100/120 V supply) Linear up to 800 V (380/400 V supply)

6.4 AUXILIARY SUPPLY VOLTAGE

Nominal operating range	Cortec option (DC only) 24 to 48 V DC Cortec option (rated for AC or DC operation) 48 to 110 V DC 40 to 100 V AC rms Cortec option (rated for AC or DC operation) 110 to 250 V DC 100 to 240 V AC rms
-------------------------	--

Maximum operating range	Cortec option (DC only) 19 to 65 V DC Cortec option (rated for AC or DC operation) 37 to 150 V DC 32 to 110 V AC rms Cortec option (rated for AC or DC operation) 87 to 300 V DC 80 to 265 V AC rms
Frequency range for AC supply	45 to 65 Hz
Ripple	<15% for a DC supply (compliant with IEC 60255-11:2013)
Power up time	< 11 seconds

6.5 NOMINAL BURDEN

Quiescent burden	11 W
2nd rear communications port	1.25 W
Each relay output burden	0.13 W per output relay
Each opto-input burden (24 – 27 V)	0.065 W max
Each opto-input burden (30 – 34 V)	0.065 W max
Each opto-input burden (48 – 54 V)	0.125 W max
Each opto-input burden (110 – 125 V)	0.36 W max
Each opto-input burden (220 – 250 V)	0.9 W max

6.6 POWER SUPPLY INTERRUPTION

Standard	IEC 60255-26:2013 (DC and AC)
24-48V DC SUPPLY 100% interruption without de-energising	20 ms at 24 V (half and full load) 50 ms at 36 V (half and full load) 100 ms at 48 V (half and full load)
48-110V DC SUPPLY 100% interruption without de-energising	20 ms at 37V (half and full load) 50 ms at 60 V (half and full load) 100 ms at 72 V (half load) 100 ms at 85 V (full load) 200 ms at 110 V (half and full load)
110-250V DC SUPPLY 100% interruption without de-energising	20 ms at 87 V (half load) 50 ms at 110 V (half load) 50 ms at 98 V (full load) 100 ms at 160 V (half load) 100 ms at 135 V (full load) 200 ms at 210 V (half load) 200 ms at 174 V (full load)
40-100V AC SUPPLY 100% voltage dip without de-energising	50 ms at 32 V (half load) 10 ms at 32 V (full load)
100-240V AC SUPPLY 100% voltage dip without de-energising	50 ms at 80 V (full and half load)

Note:
Maximum loading = all inputs/outputs energised.

Note:
Quiescent or 1/2 loading = 1/2 of all inputs/outputs energised.

6.7 BATTERY BACKUP

Location	Front panel
Type	1/2 AA, 3.6V Lithium Thionyl Chloride
Battery reference	LS14250
Lifetime	> 10 years (IED energised for 90% of the time)

7 INPUT / OUTPUT CONNECTIONS

7.1 ISOLATED DIGITAL INPUTS

Opto-isolated digital inputs (opto-inputs)	
Compliance	ESI 48-4
Rated nominal voltage	24 to 250 V dc
Operating range	19 to 265 V dc
Withstand	300 V dc
Recognition time with half-cycle ac immunity filter removed	< 2 ms
Recognition time with filter on	< 12 ms

7.1.1 NOMINAL PICKUP AND RESET THRESHOLDS

Nominal battery voltage	Logic levels: 60-80% DO/PU	Logic Levels: 50-70% DO/PU
24/27 V	Logic 0 < 16.2V, Logic 1 > 19.2V	Logic 0 < 12V, Logic 1 > 16.8V
30/34	Logic 0 < 20.4V, Logic 1 > 24V	Logic 0 < 15V, Logic 1 > 21V
48/54	Logic 0 < 32.4V, Logic 1 > 38.4V	Logic 0 < 24V, Logic 1 > 33.6V
110/125	Logic 0 < 75V, Logic 1 > 88V	Logic 0 < 55.V, Logic 1 > 77V
220/250	Logic 0 < 150V, Logic 1 > 176V	Logic 0 < 110V, Logic 1 > 154V

Note:

Filter is required to make the opto-inputs immune to induced AC voltages.

7.2 STANDARD OUTPUT CONTACTS

Compliance	In accordance with IEC 60255-1:2009
Use	General purpose relay outputs for signalling, tripping and alarming
Rated voltage	300 V
Maximum continuous current	10 A
Short duration withstand carry	30 A for 3 s 250 A for 30 ms
Make and break, dc resistive	50 W
Make and break, dc inductive	62.5 W (L/R = 50 ms)
Make and break, ac resistive	2500 VA resistive (cos phi = unity)
Make and break, ac inductive	2500 VA inductive (cos phi = 0.7)
Make and carry, dc resistive	30 A for 3 s, 10000 operations (subject to the above limits)
Make, carry and break, dc resistive	4 A for 1.5 s, 10000 operations (subject to the above limits)
Make, carry and break, dc inductive	0.5 A for 1 s, 10000 operations (subject to the above limits)
Make, carry and break ac resistive	30 A for 200 ms, 2000 operations (subject to the above limits)
Make, carry and break ac inductive	10 A for 1.5 s, 10000 operations (subject to the above limits)

Loaded contact	1000 operations min.
Unloaded contact	10000 operations min.
Operate time	< 5 ms
Reset time	< 10 ms

7.3 HIGH BREAK OUTPUT CONTACTS

Compliance	In accordance with IEC 60255-1:2009
Use	For applications requiring high rupture capacity
Rated voltage	300 V
Maximum continuous current	10 A DC
Short duration withstand carry	30 A DC for 3 s 250 A for 30 ms
Make and break, dc resistive	7500 W
Make and break, dc inductive	2500 W (L/R = 50 ms)
Make and carry, dc resistive	30 A for 3 s, 10000 operations (subject to the above limits)
Make, carry and break, dc resistive	30 A for 3 s, 5000 operations (subject to the above limits) 30 A for 200 ms, 10000 operations (subject to the above limits)
Make, carry and break, dc inductive	10 A for 40 ms, 10000 operations (subject to the above limits) 10 a for 20 ms (250V, 4 shots per second)
Loaded contact	10,000 operations minimum.
Unloaded contact	100,000 operations minimum.
Operate time	< 0.2 ms
Reset time	< 8 ms
MOV Protection	Maximum voltage 330 V DC

7.4 WATCHDOG CONTACTS

Use	Non-programmable contacts for relay healthy/relay fail indication
Breaking capacity, dc resistive	30 W
Breaking capacity, dc inductive	15 W (L/R = 40 ms)
Breaking capacity, ac inductive	375 VA inductive (cos phi = 0.7)

8 MECHANICAL SPECIFICATIONS

8.1 PHYSICAL PARAMETERS

Case Types*	40TE 60TE 80TE
Weight (40TE case)	7 kg – 8 kg (depending on chosen options)
Weight (60TE case)	9 kg – 12 kg (depending on chosen options)
Weight (80TE case)	13 kg - 16 kg (depending on chosen options)
Dimensions in mm (w x h x l) (40TE case)	W: 206.0 mm H: 177.0 mm D: 243.1 mm
Dimensions in mm (w x h x l) (60TE case)	W: 309.6 mm H: 177.0 mm D: 243.1 mm
Dimensions in mm (w x h x l) (80TE case)	W 413.2 mm H 177.0 mm D 243.1 mm
Mounting	Panel, rack, or retrofit

Note:

*Case size is product dependent

8.2 ENCLOSURE PROTECTION

Against dust and dripping water (front face)	IP52 as per IEC 60529:2002
Protection against dust (whole case)	IP50 as per IEC 60529:2002
Protection for sides of the case (safety)	IP30 as per IEC 60529:2002
Protection for rear of the case (safety)	IP10 as per IEC 60529:2002

8.3 MECHANICAL ROBUSTNESS

Vibration test per EN 60255-21-1:1996	Response: class 2, Endurance: class 2
Shock and bump immunity per EN 60255-21-2:1995	Shock response: class 2, Shock withstand: class 1, Bump withstand: class 1
Seismic test per EN 60255-21-3: 1995	Class 2

8.4 TRANSIT PACKAGING PERFORMANCE

Primary packaging carton protection	ISTA 1C
Vibration tests	3 orientations, 7 Hz, amplitude 5.3 mm, acceleration 1.05g
Drop tests	10 drops from 610 mm height on multiple carton faces, edges and corners

9 TYPE TESTS

9.1 INSULATION

Compliance	IEC 60255-27: 2005
Insulation resistance	> 100 M ohm at 500 V DC (Using only electronic/brushless insulation tester)

9.2 CREEPAGE DISTANCES AND CLEARANCES

Compliance	IEC 60255-27: 2005
Pollution degree	3
Overvoltage category	III
Impulse test voltage (not RJ45)	5 kV
Impulse test voltage (RJ45)	1 kV

9.3 HIGH VOLTAGE (DIELECTRIC) WITHSTAND

IEC Compliance	IEC 60255-27: 2005
Between all independent circuits	2 kV ac rms for 1 minute
Between independent circuits and protective earth conductor terminal	2 kV ac rms for 1 minute
Between all case terminals and the case earth	2 kV ac rms for 1 minute
Across open watchdog contacts	1 kV ac rms for 1 minute
Across open contacts of changeover output relays	1 kV ac rms for 1 minute
Between all RJ45 contacts and protective earth	1 kV ac rms for 1 minute
Between all screw-type EIA(RS)485 contacts and protective earth	1 kV ac rms for 1 minute
ANSI/IEEE Compliance	ANSI/IEEE C37.90-2005
Across open contacts of normally open output relays	1.5 kV ac rms for 1 minute
Across open contacts of normally open changeover output relays	1 kV ac rms for 1 minute
Across open watchdog contacts	1 kV ac rms for 1 minute

9.4 IMPULSE VOLTAGE WITHSTAND TEST

Compliance	IEC 60255-27: 2005
Between all independent circuits	Front time: 1.2 μ s, Time to half-value: 50 μ s, Peak value: 5 kV, 0.5 J
Between terminals of all independent circuits	Front time: 1.2 μ s, Time to half-value: 50 μ s, Peak value: 5 kV, 0.5 J
Between all independent circuits and protective earth conductor terminal	Front time: 1.2 μ s, Time to half-value: 50 μ s, Peak value: 5 kV, 0.5 J

Note:

Exceptions are communications ports and normally-open output contacts, where applicable.

10 ENVIRONMENTAL CONDITIONS

10.1 AMBIENT TEMPERATURE RANGE

Ambient Temperature Range	
Compliance	IEC 60255-27: 2005
Test Method	IEC 60068-2-1:2007 and IEC 60068-2-2 2007
Operating temperature range	-25°C to +55°C (continuous)
Storage and transit temperature range	-25°C to +70°C (continuous)

10.2 TEMPERATURE ENDURANCE TEST

Temperature Endurance Test	
Test Method	IEC 60068-2-1: 1993 and 60068-2-2: 2007
Operating temperature range	-40°C (96 hours) +70°C (96 hours)
Storage and transit temperature range	-40°C (96 hours) +70°C (96 hours)

10.3 AMBIENT HUMIDITY RANGE

Ambient Humidity Range	
Compliance	IEC 60068-2-78: 2001 and IEC 60068-2-30: 2005
Durability	56 days at 93% relative humidity and +40°C
Damp heat cyclic	six (12 + 12) hour cycles, 93% RH, +25 to +55°C

10.4 CORROSIVE ENVIRONMENTS

Corrosive Environments	
Compliance	IEC 60068-2-42: 2003, IEC 60068-2-43: 2003
Industrial corrosive environment/poor environmental control, Sulphur Dioxide	21 days exposure to elevated concentrations (25ppm) of SO ₂ at 75% relative humidity and +25°C
Industrial corrosive environment/poor environmental control, Hydrogen Sulphide	21 days exposure to elevated concentrations (10ppm) of H ₂ S at 75% relative humidity and +25°C
Salt mist	IEC 60068-2-52: 1996 KB severity 3

11 ELECTROMAGNETIC COMPATIBILITY

11.1 1 MHZ BURST HIGH FREQUENCY DISTURBANCE TEST

Compliance	IEC 60255-22-1: 2008, Class III, IEC 60255-26:2013
Common-mode test voltage (level 3)	2.5 kV
Differential test voltage (level 3)	1.0 kV

11.2 DAMPED OSCILLATORY TEST

Compliance	EN61000-4-18: 2011: Level 3, 100 kHz and 1 MHz. Level 4: 3 MHz, 10 MHz and 30 MHz, IEC 60255-26:2013
Common-mode test voltage (level 3)	2.5 kV
Common-mode test voltage (level 4)	4.0 kV
Differential mode test voltage	1.0 kV

11.3 IMMUNITY TO ELECTROSTATIC DISCHARGE

Compliance	IEC 60255-22-2: 2009 Class 3 and Class 4, IEC 60255-26:2013
Class 4 Condition	15 kV discharge in air to user interface, display, and exposed metalwork
Class 3 Condition	8 kV discharge in air to all communication ports

11.4 ELECTRICAL FAST TRANSIENT OR BURST REQUIREMENTS

Compliance	IEC 60255-22-4: 2008 and EN61000-4-4:2004. Test severity level III and IV, IEC 60255-26:2013
Applied to communication inputs	Amplitude: 2 kV, burst frequency 5 kHz and 100 KHz (level 4)
Applied to power supply and all other inputs except for communication inputs	Amplitude: 4 kV, burst frequency 5 kHz and 100 KHz (level 4)

11.5 SURGE WITHSTAND CAPABILITY

Compliance	IEEE/ANSI C37.90.1: 2002
Condition 1	4 kV fast transient and 2.5 kV oscillatory applied common mode and differential mode to opto inputs, output relays, CTs, VTs, power supply
Condition 2	4 kV fast transient and 2.5 kV oscillatory applied common mode to communications, IRIG-B

11.6 SURGE IMMUNITY TEST

Compliance	IEC 61000-4-5: 2005 Level 4, IEC 60255-26:2013
Pulse duration	Time to half-value: 1.2/50 μ s
Between all groups and protective earth conductor terminal	Amplitude 4 kV
Between terminals of each group (excluding communications ports, where applicable)	Amplitude 2 kV

11.7 IMMUNITY TO RADIATED ELECTROMAGNETIC ENERGY

Compliance	IEC 60255-22-3: 2007, Class III, IEC 60255-26:2013
Frequency band	80 MHz to 3.0 GHz
Spot tests at	80, 160, 380, 450, 900, 1850, 2150 MHz
Test field strength	10 V/m
Test using AM	1 kHz @ 80%
Compliance	IEEE/ANSI C37.90.2: 2004
Frequency band	80 MHz to 1 GHz
Spot tests at	80, 160, 380, 450 MHz
Waveform	1 kHz @ 80% am and pulse modulated
Field strength	35 V/m

11.8 RADIATED IMMUNITY FROM DIGITAL COMMUNICATIONS

Compliance	IEC 61000-4-3: 2006, Level 4, IEC 60255-26:2013
Frequency bands	800 to 960 MHz, 1.4 to 2.0 GHz
Test field strength	30 V/m
Test using AM	1 kHz / 80%

11.9 RADIATED IMMUNITY FROM DIGITAL RADIO TELEPHONES

Compliance	IEC 61000-4-3: 2006, IEC 60255-26:2013
Frequency bands	900 MHz and 1.89 GHz
Test field strength	10 V/m

11.10 IMMUNITY TO CONDUCTED DISTURBANCES INDUCED BY RADIO FREQUENCY FIELDS

Compliance	IEC 61000-4-6: 2008, Level 3, IEC 60255-26:2013
Frequency bands	150 kHz to 80 MHz

Test disturbance voltage	10 V rms
Test using AM	1 kHz @ 80%
Spot tests	27 MHz and 68 MHz

11.11 MAGNETIC FIELD IMMUNITY

Compliance	IEC 61000-4-8: 2009 Level 5 IEC 61000-4-9/10: 2001 Level 5
IEC 61000-4-8 test	100 A/m applied continuously, 1000 A/m applied for 3 s
IEC 61000-4-9 test	1000 A/m applied in all planes
IEC 61000-4-10 test	100 A/m applied in all planes at 100 kHz/1 MHz with a burst duration of 2 seconds

11.12 CONDUCTED EMISSIONS

Compliance	EN 55022: 2010, IEC 60255-26:2013
Power supply test 1	0.15 - 0.5 MHz, 79 dB μ V (quasi peak) 66 dB μ V (average)
Power supply test 2	0.5 – 30 MHz, 73 dB μ V (quasi peak) 60 dB μ V (average)
RJ45 test 1 (where applicable)	0.15 - 0.5 MHz, 97 dB μ V (quasi peak) 84 dB μ V (average)
RJ45 test 2 (where applicable)	0.5 – 30 MHz, 87 dB μ V (quasi peak) 74 dB μ V (average)

11.13 RADIATED EMISSIONS

Compliance	EN 55022: 2010, IEC 60255-26:2013
Test 1	30 – 230 MHz, 40 dB μ V/m at 10 m measurement distance
Test 2	230 – 1 GHz, 47 dB μ V/m at 10 m measurement distance
Test 3	1 – 2 GHz, 76 dB μ V/m at 10 m measurement distance

11.14 POWER FREQUENCY

Compliance	IEC 60255-22-7:2003, IEC 60255-26:2013
Opto-inputs (Compliance is achieved using the opto-input filter)	300 V common-mode (Class A) 150 V differential mode (Class A)

Note:
Compliance is achieved using the opto-input filter.

12 STANDARDS COMPLIANCE

Compliance with the European Commission Directive on EMC and LVD is demonstrated by self certification against international standards.



12.1 EMC COMPLIANCE: 2004/108/EC

Compliance with EN60255-26:2009 was used to establish conformity.

12.2 PRODUCT SAFETY: 2006/95/EC

Compliance with EN60255-27:2005 was used to establish conformity.

Protective Class

IEC 60255-27: 2005 Class 1 (unless otherwise specified in equipment documentation). This equipment requires a protective conductor (earth) to ensure user safety.

Installation category

IEC 60255-27: 2005 Overvoltage Category 3. Equipment in this category is qualification tested at 5kV peak, 1.2/50 μ S, 500 Ohms, 0.5 J, between all supply circuits and earth and also between independent circuits.

Environment

IEC 60255-27: 2005, IEC 60255-26:2009. The equipment is intended for indoor use only. If it is required for use in an outdoor environment, it must be mounted in a cabinet with the appropriate degree of ingress protection.

12.3 R&TTE COMPLIANCE

Radio and Telecommunications Terminal Equipment (R&TTE) directive 99/5/EC.

Conformity is demonstrated by compliance to both the EMC directive and the Low Voltage directive, to zero volts.

12.4 UL/CUL COMPLIANCE

If marked with this logo, the product is compliant with the requirements of the Canadian and USA Underwriters Laboratories.

The relevant UL file number and ID is shown on the equipment.



WIRING DIAGRAMS

CHAPTER 20

1 CHAPTER OVERVIEW

This chapter contains the wiring diagrams for all possible situations.

This chapter contains the following sections:

Chapter Overview	507
Communication Connections	508
P841B: External Connection Diagram	509
P841B: Model C - External Connection Diagram	510
P841B: Model C - Default Mapping	511
P841B: Model D - External Connection Diagram	512
P841B: Model D - Default Mapping	513
P841B: Model E - External Connection Diagram	514
P841B: Model E - Default Mapping	515

2 COMMUNICATION CONNECTIONS

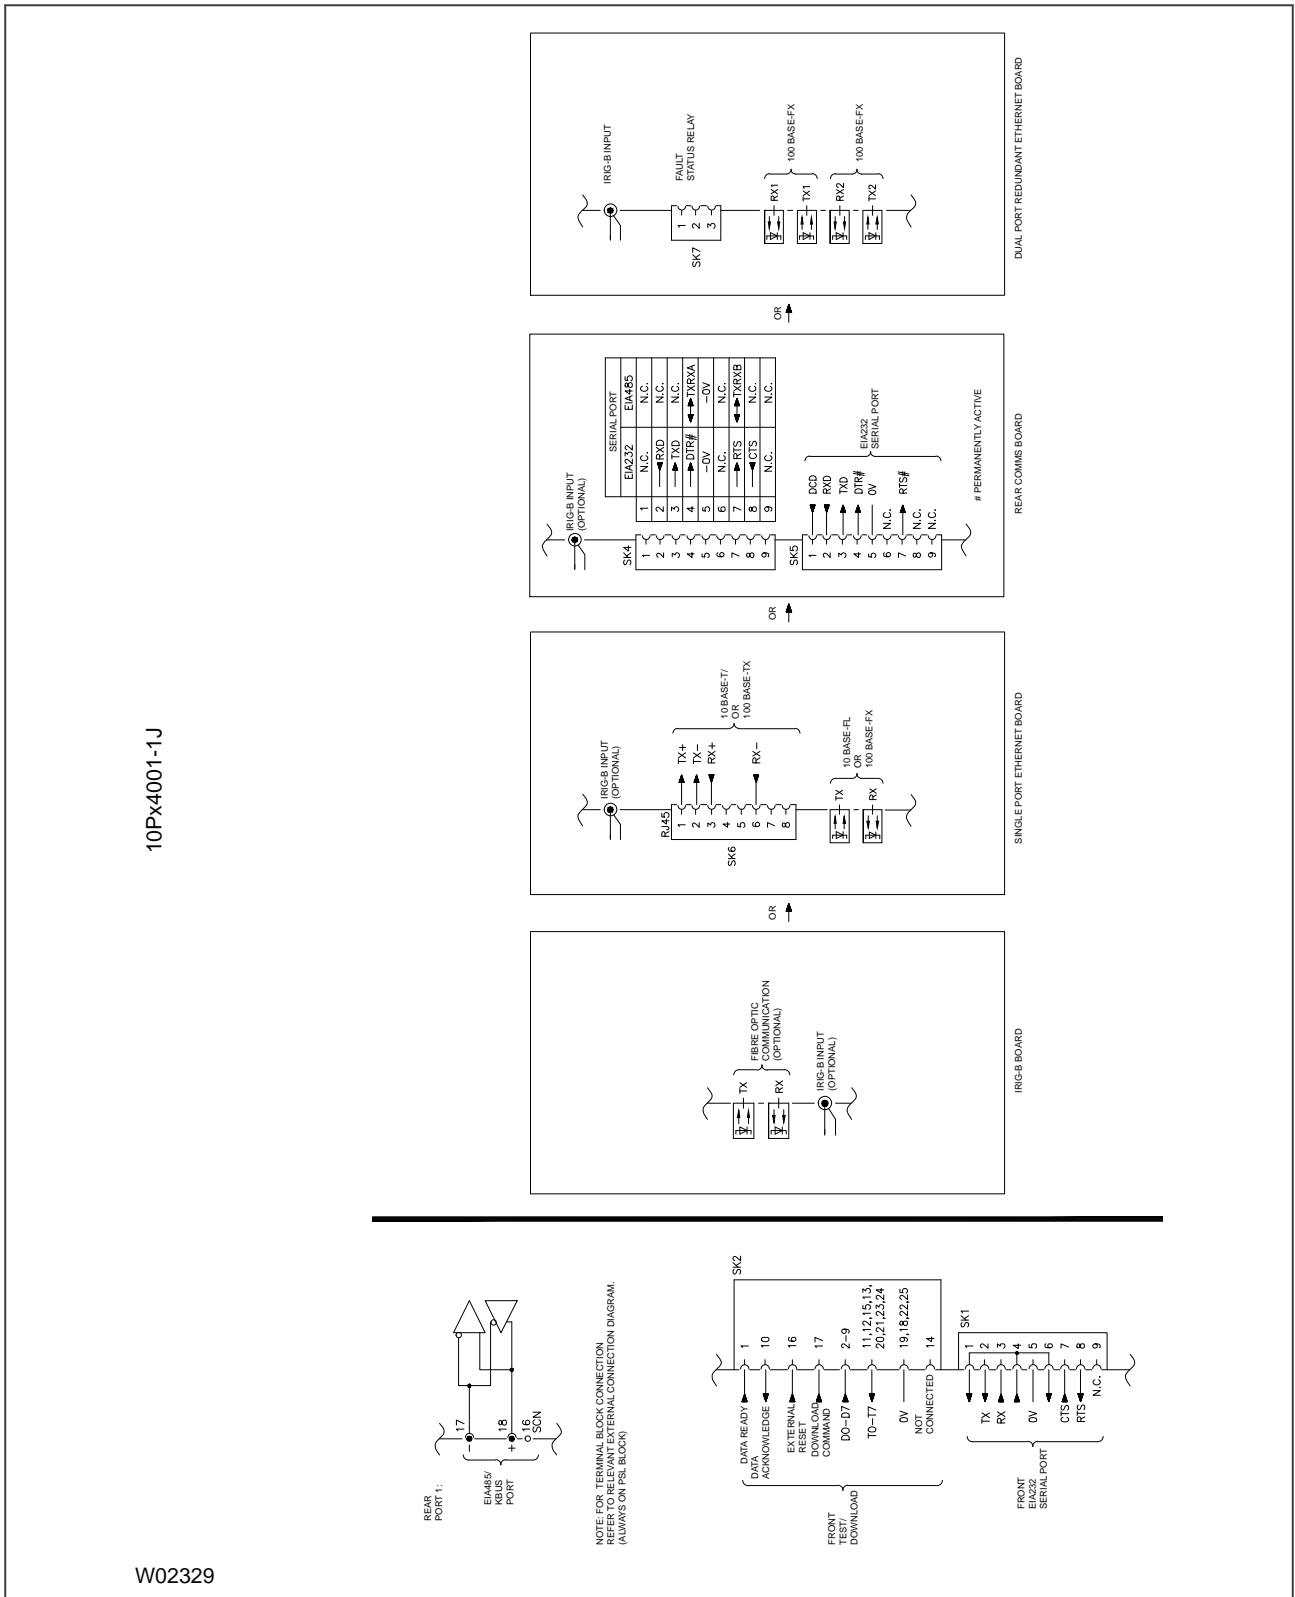


Figure 190: Communication boards (when fitted for single or redundant applications only)

4 P841B: MODEL C - EXTERNAL CONNECTION DIAGRAM


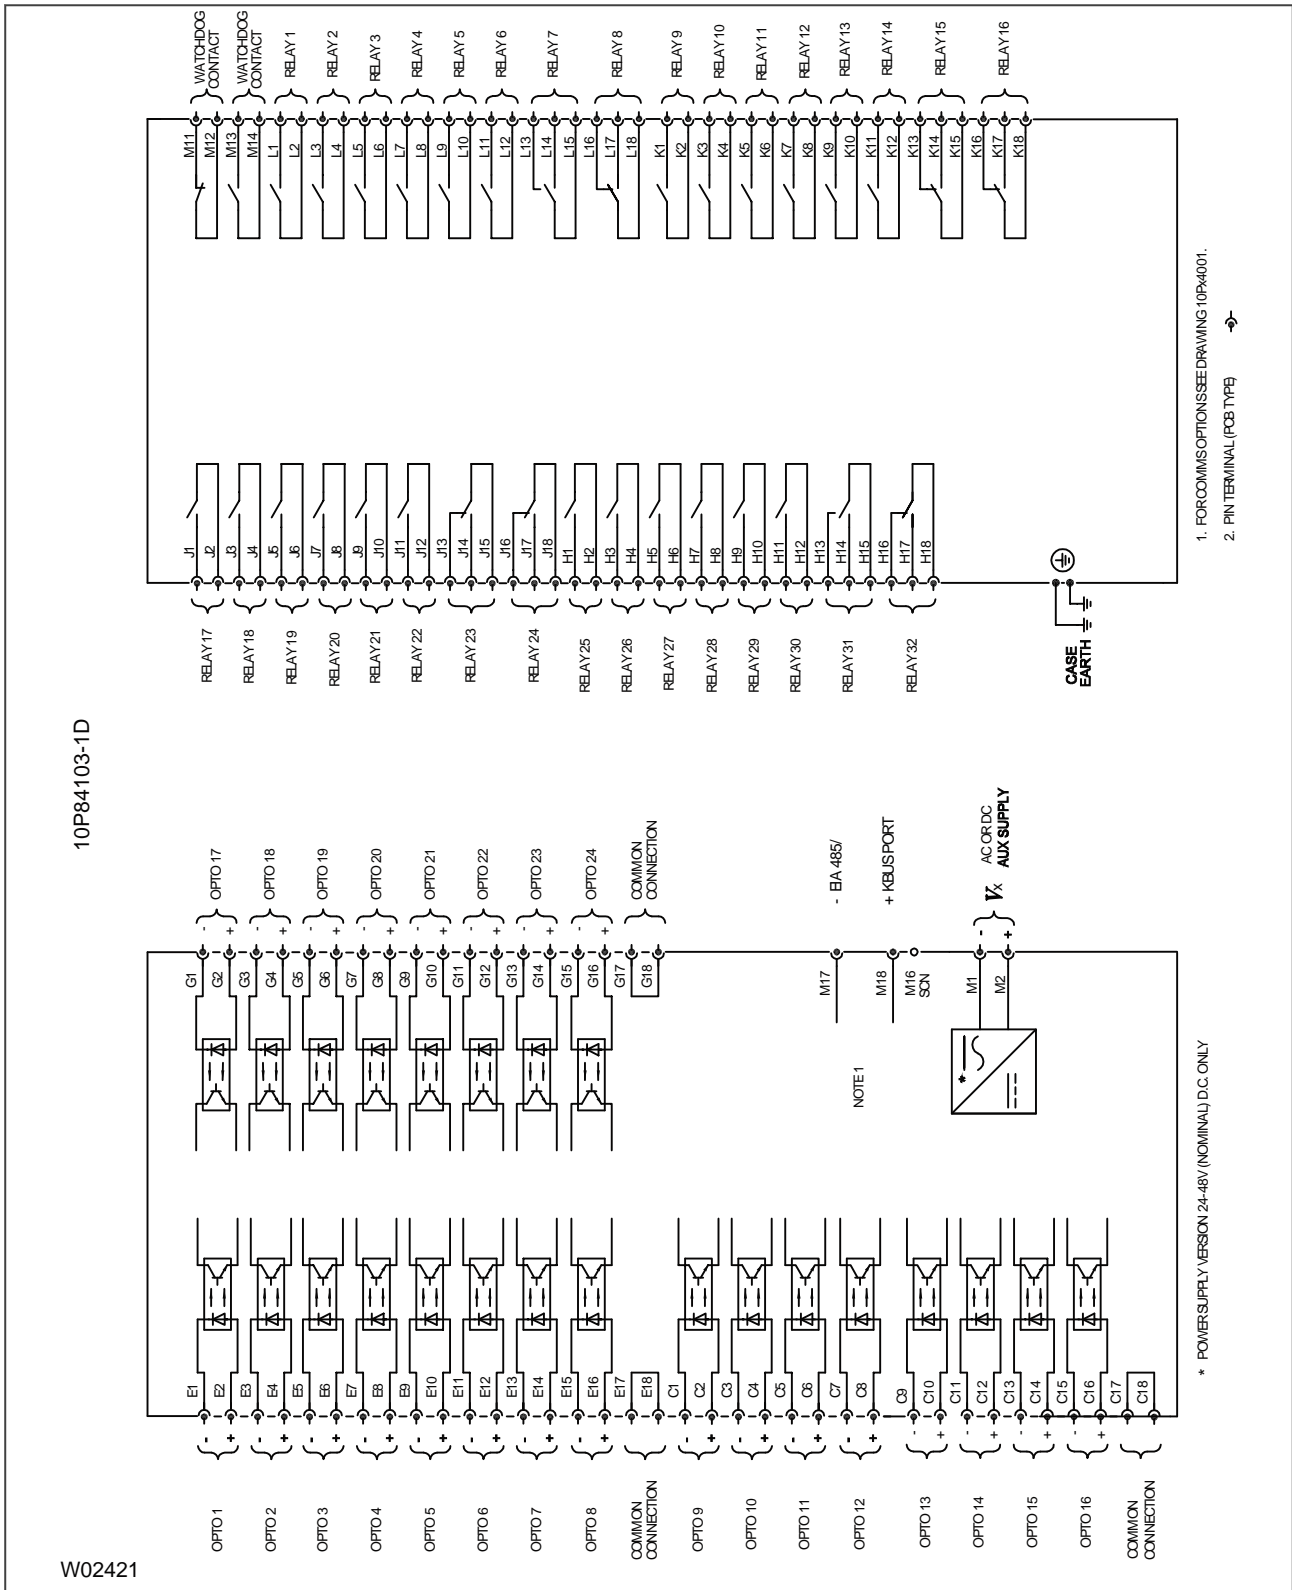


Figure 192: P841B Autoreclose Protection IED with 24 inputs and 32 outputs

5 P841B: MODEL C - DEFAULT MAPPING

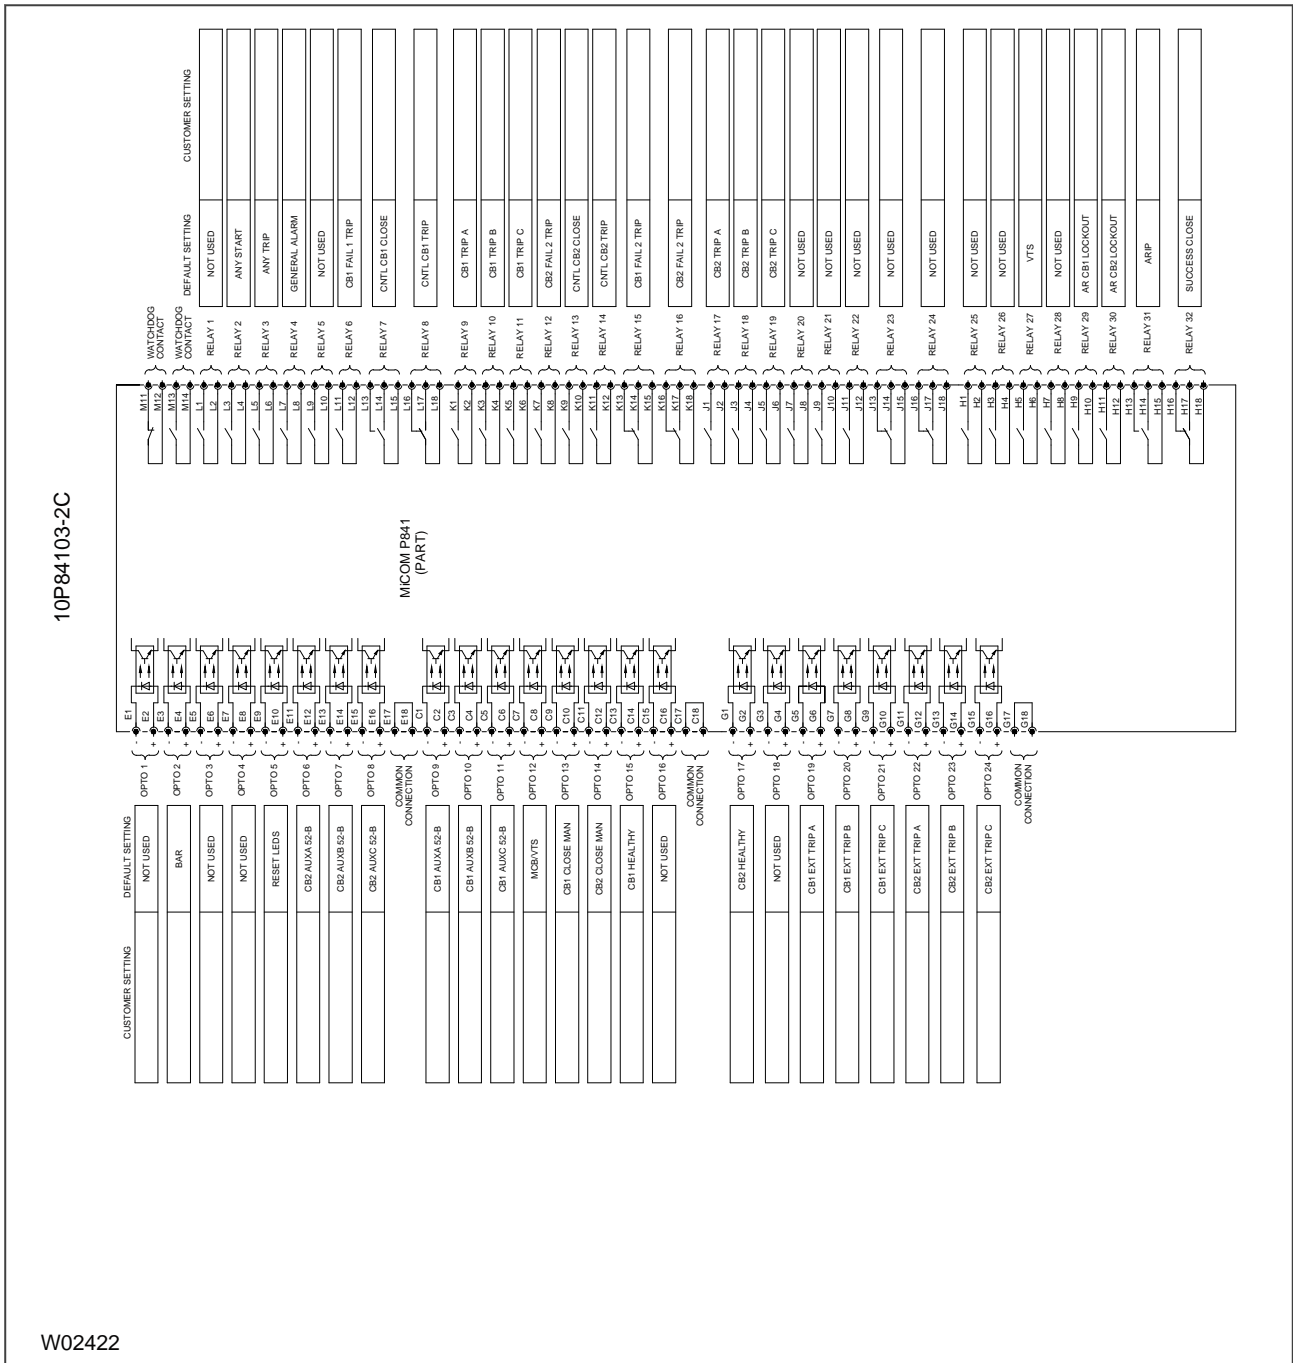

W02422

Figure 193: P841B Autoreclose Protection IED with 24 inputs and 32 outputs

6 P841B: MODEL D - EXTERNAL CONNECTION DIAGRAM

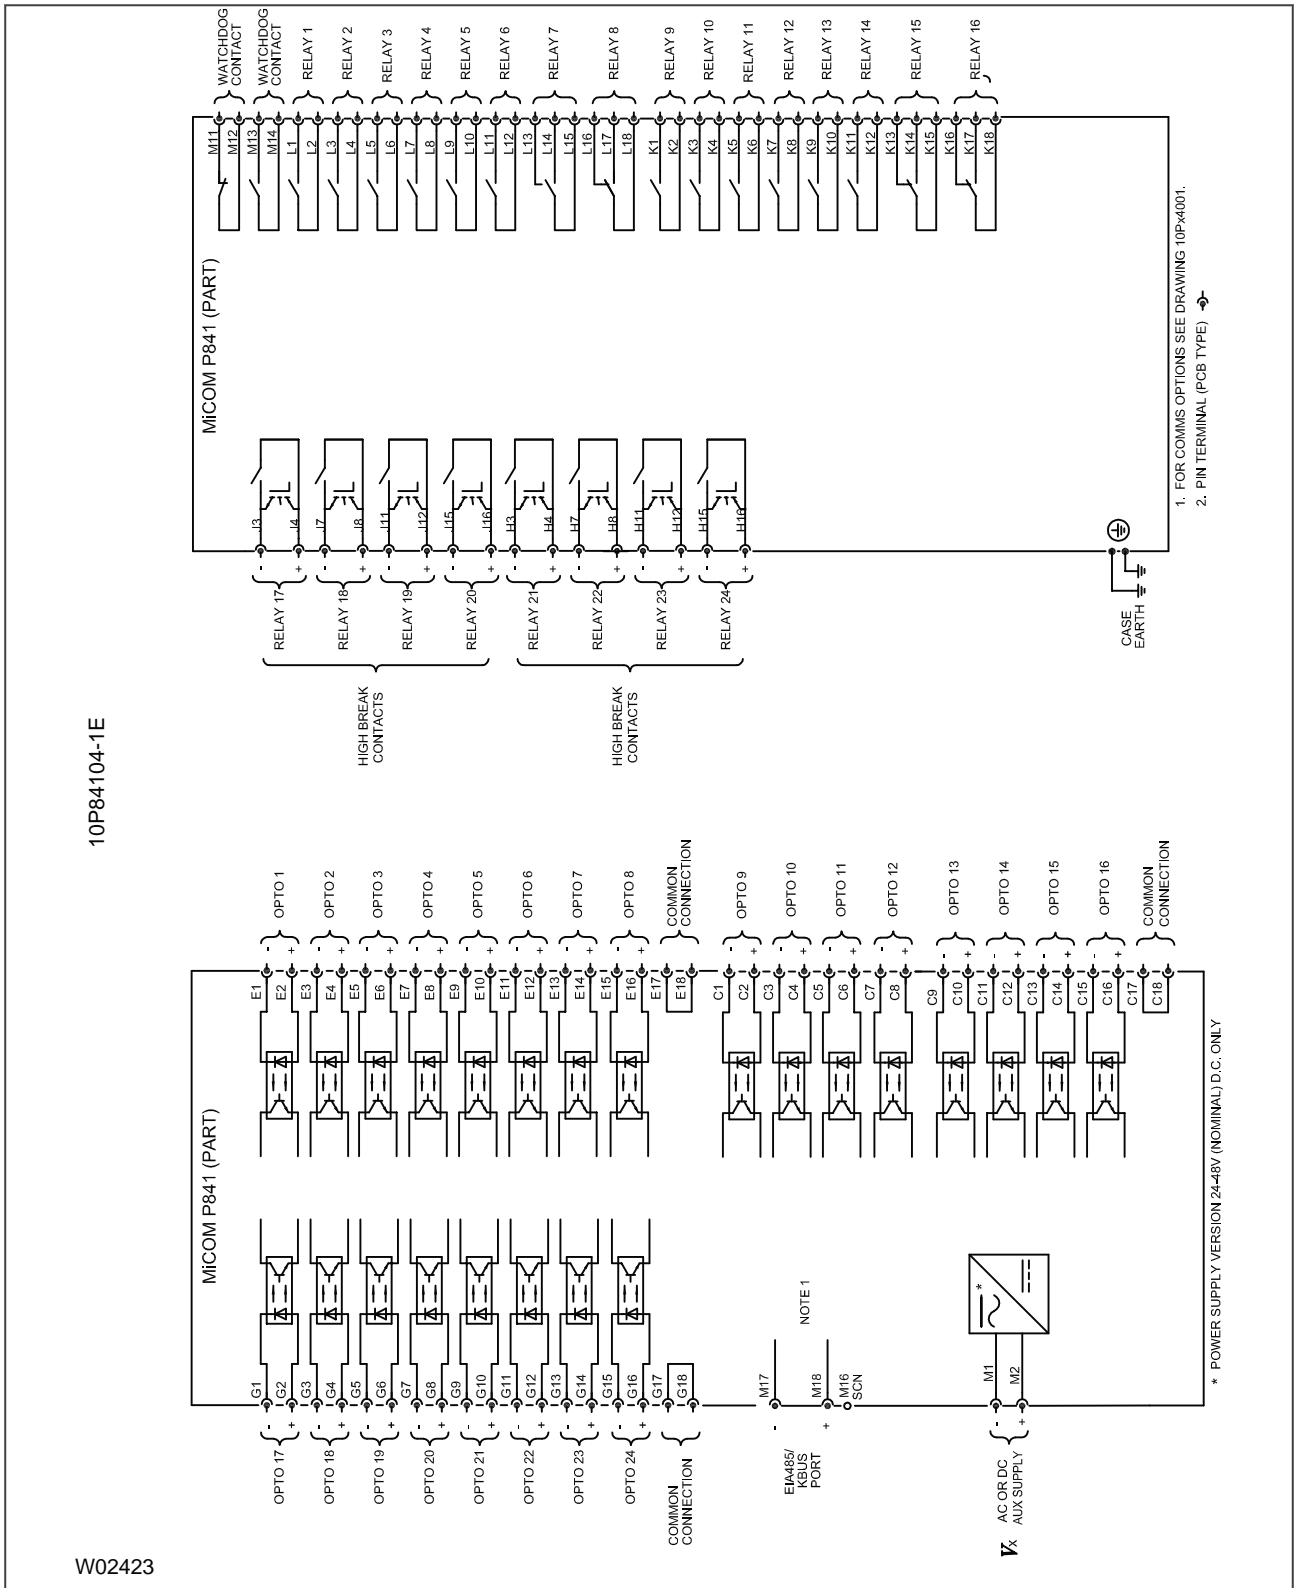


Figure 194: P841B Autoreclose Protection IED with 24 inputs and 16 outputs (including 8 high break)

7 P841B: MODEL D - DEFAULT MAPPING

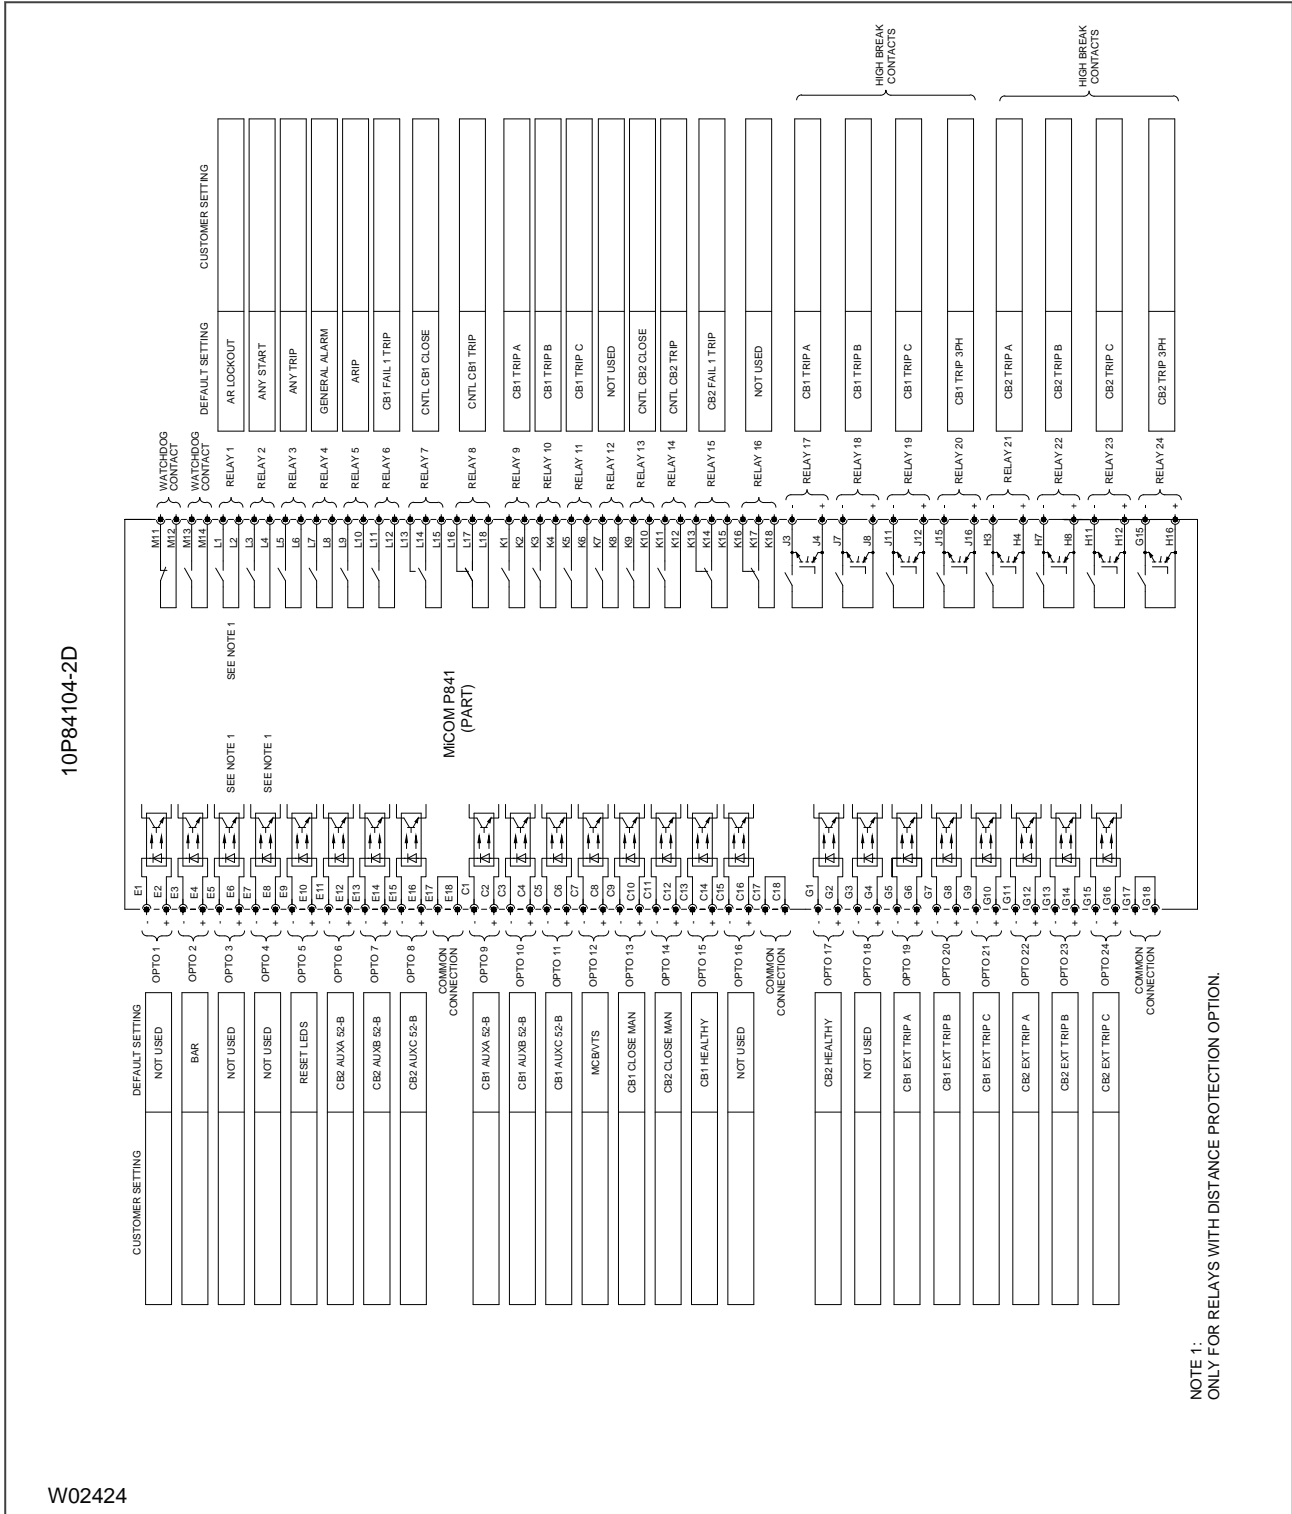


Figure 195: P841B Autoreclose Protection IED with 24 inputs and 16 outputs (including 8 high break)

8 P841B: MODEL E - EXTERNAL CONNECTION DIAGRAM

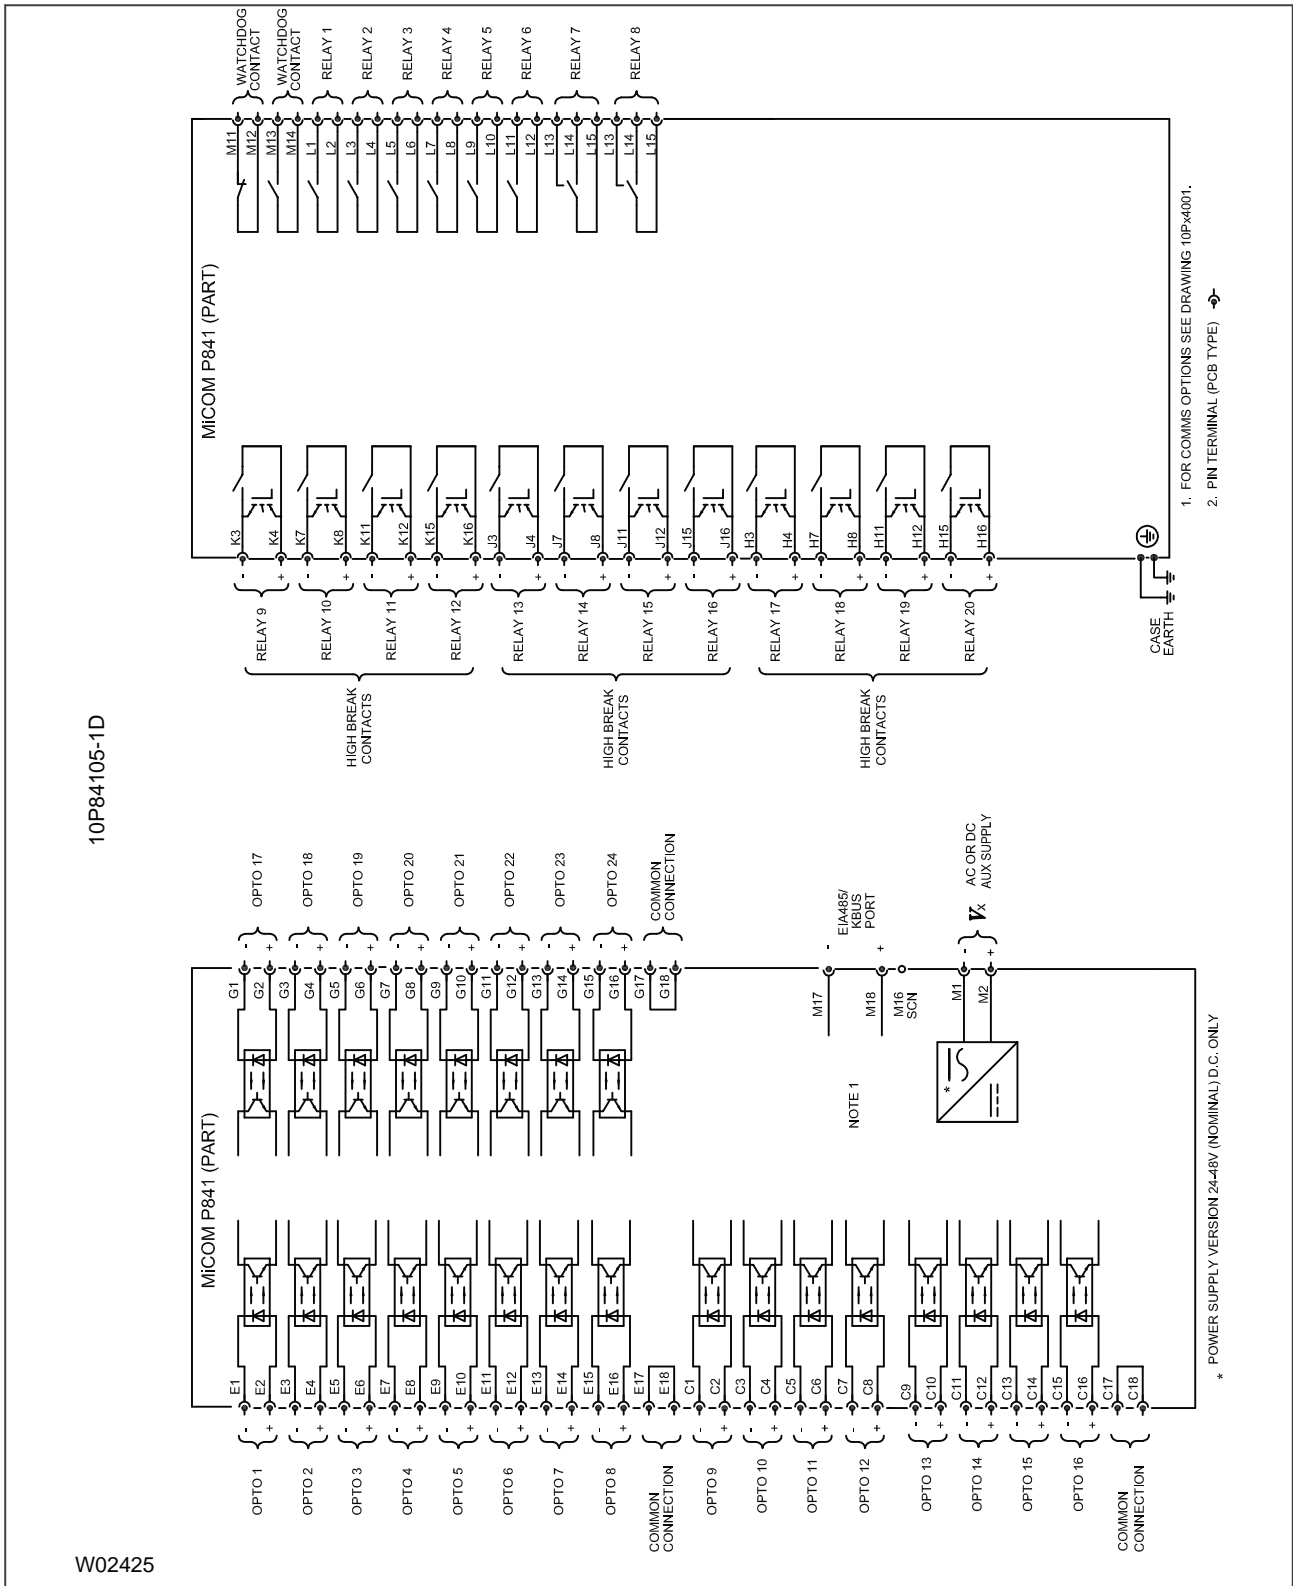


Figure 196: P841B Autoreclose Protection IED with 24 inputs and 8 outputs and 12 high break

9 P841B: MODEL E - DEFAULT MAPPING

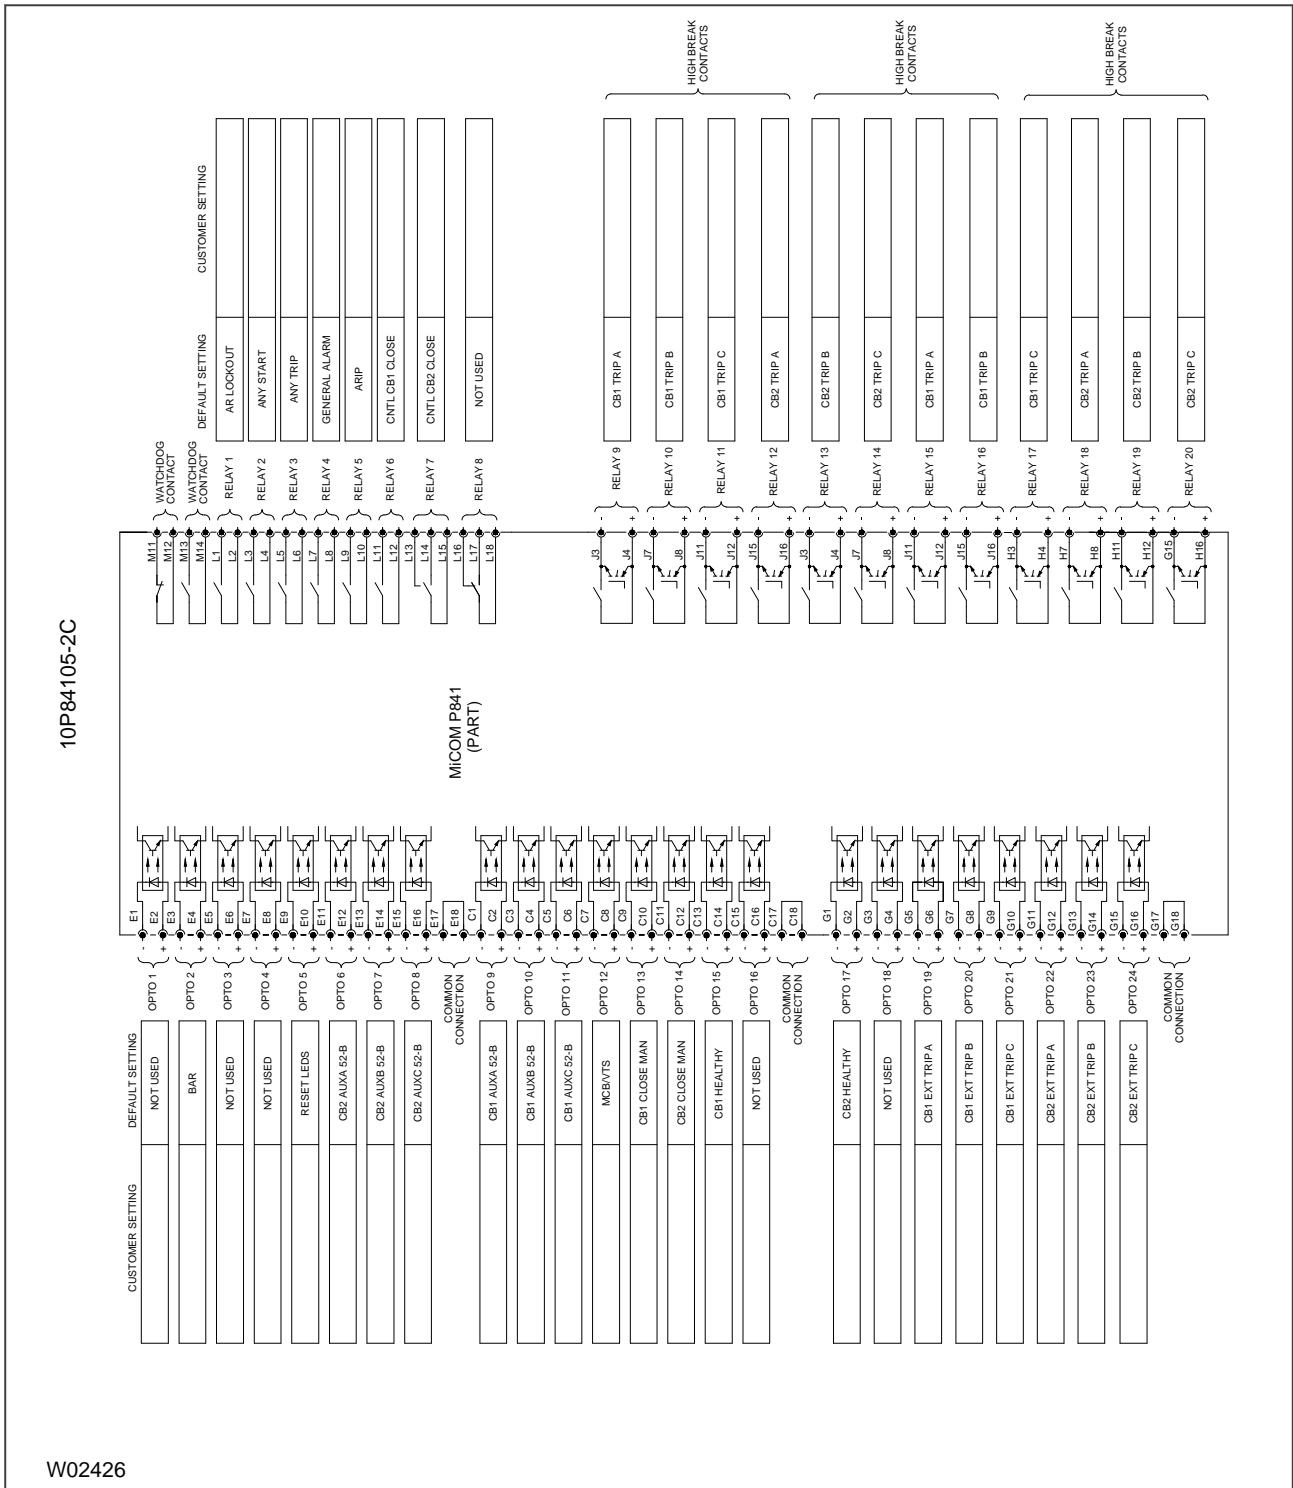


Figure 197: P841B Autoreclose Protection IED with 24 inputs and 8 outputs and 12 high break

ORDERING OPTIONS

APPENDIX A

SETTINGS AND SIGNALS

APPENDIX B

Tables, containing a full list of settings, measurement data and DDB signals for each product model, are provided in a separate interactive PDF file attached as an embedded resource.

Tables are organized into a simple menu system allowing selection by language (where available), model and table type, and may be viewed and/or printed using an up-to-date version of Adobe Reader.

Alstom Grid

© - ALSTOM 2015. All rights reserved.
Information contained in this document is indicative only. No representation or warranty is given or should be relied on that it is complete or correct or will apply to any particular project. This will depend on the technical and commercial circumstances. It is provided without liability and is subject to change without notice.
Reproduction, use or disclosure to third parties, without express written authority, is strictly prohibited.

Alstom Grid Worldwide Contact Centre

www.alstom.com/grid/contactcentre/

Tel: +44 (0) 1785 250 070

www.alstom.com

The ALSTOM logo is located at the bottom right of the page. It consists of the word "ALSTOM" in a bold, blue, sans-serif font. The letter "O" is replaced by a red circle with a white center, creating a stylized eye or target symbol.